

1U 19in Steel Hinged Wall-Mount Bracket for Patch Panels

Product Diagram (WALLMOUNTH1)



Component	Function
1 Mounting Holes (4)	<ul style="list-style-type: none"> Used to mount the Wall-Mount Bracket to a Wall. Maximum weight capacity = 8 kg (17 lb).
2 Hinged Side Panel	<ul style="list-style-type: none"> Used to access the back of the installed Patch Panel.
3 Cage Nut Holes	<ul style="list-style-type: none"> Used to mount a Patch Panel in the Wall-Mount Bracket. Maximum height = 1U.

Package Contents

- Wall-Mount Bracket x 1
- M6 Screws x 4
- M6 Cage Nuts x 4
- Plastic Washers x 4
- M5-25 Flat-head Screws x 2
- Concrete Wall Anchors x 2
- Quick-Start Guide x 1

Requirements

For the latest requirements, please visit www.startech.com/WALLMOUNTH1

- Phillips Head Screwdriver x 1
- (Optional) Cage Nut Tool x 1

Installing the Wall-Mount Bracket

Warnings: If you lack the necessary expertise to attach this product to the wall, consult a professional to install the Wall-Mount Bracket or to provide specific mounting instructions for your wall structure.

Make sure that the type of wall structure and mounting hardware that you are using will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment.

Do not add equipment to the **Wall-Mount Bracket** until it is securely attached to the wall.

Adding Equipment to the Wall-Mount Bracket

Use the included **M6 Cage Nuts, Screws, and Plastic Washers** to install equipment into the **Wall-Mount Bracket**.

1. Insert the **Wing** (side) of an **M6 Cage Nut** into the back of the desired **Cage Nut Hole**.
2. Apply pressure by hand, or with the **Cage Nut Tool**, to insert the second **Wing** of the **M6 Cage Nut** into the desired **Cage Nut Hole**.
3. Repeat steps 1 and 2 to insert the desired number of **Cage Nuts** for the application.
4. Thread a **Plastic Washer** over an **M6 Screw**. Repeat until the desired number of **M6 Screws** have been prepared.
5. Align the **Mounting Holes** in the **Equipment** with the **M6 Cage Nuts** installed in steps 1-3.
6. Insert the assembled **Screws** through the **Mounting Holes** in the **Equipment** and into the **M6 Cage Nuts**.
7. Tighten the **Screws**, using a **Phillips Head Screwdriver**.



Accessing the Back of a Patch Panel

1. While supporting the weight of the **Patch Panel**, use a **Phillips Head Screwdriver** to unscrew two **M6 Screws** from the **Cage Nuts**, leaving the other two **M6 Screws** attached to the side of the **Wall-Mount Bracket** with the **Hinged Side Panel**.

Note: Make sure that there is enough clearance for the **Patch Panel** to free swing away from the **Wall-Mount Bracket**, before accessing the back of the **Patch Panel**.

2. Gently swing the **Patch Panel** away from the **Wall-Mount Bracket** to gain access to the back of the **Patch Panel**.
3. Reattach the two **M6 Screws** removed in step 1.

Product Dimensions

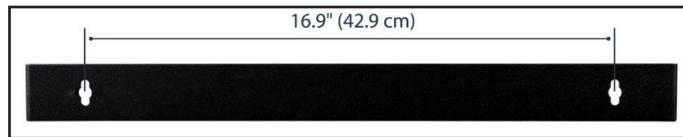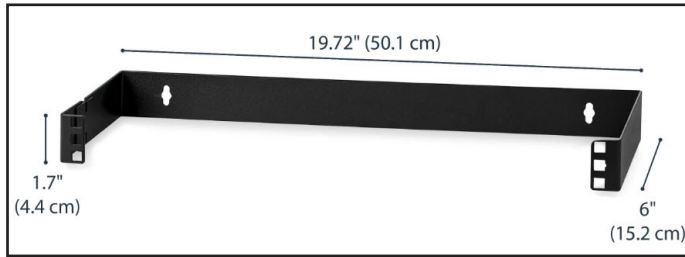

Warnings

- Do not exceed the weight capacity of this product. Overloading this product might result in injury or property damage. This product can support the following weight: 8 kg (17 lb.).
- Make sure that the surface that you are attaching this product to can safely support the combined weight of the equipment and all of the hardware and components.
- Wall structures vary, and it is important to make sure that the type of wall structure and mounting hardware that you are using will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Warranty Information

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

StarTech.com Ltd.
45 Artisans Crescent
London, Ontario
N5V 5E9
Canada

StarTech.com LLP
4490 South Hamilton
Road
Groveport, Ohio
43125
U.S.A.

StarTech.com Ltd.
Unit B, Pinnacle 15
Gowerton Road
Brackmills,
Northampton
NN4 7BW
United Kingdom

StarTech.com Ltd.
Siriusdreef 17-27
2132 WT Hoofddorp
The Netherlands

FR: startech.com/fr
DE: startech.com/de
ES: startech.com/es
NL: startech.com/nl
IT: startech.com/it
JP: startech.com/jp