

Cisco Aironet Very Short 5-GHz Omnidirectional Antenna (AIR-ANT5135SDW-R)

This document outlines the specifications for the Cisco Aironet Very Short 5-GHz Omnidirectional Antenna (AIR-ANT5135SDW-R) and provides instructions for mounting it. The antenna operates in the 5-GHz frequency range and is designed for indoor use.


The following information is provided in this document.

- Technical Specifications, page 2
- System Requirements, page 3
- Safety Precautions, page 4
- Installation Notes, page 4
- Installing the Antenna, page 4
- Obtaining Documentation, Obtaining Support, and Security Guidelines, page 5




Technical Specifications

Antenna type	Omnidirectional		
Operating frequency	5150-5850 MHz		
range			
VSWR	2:1 or less		
Peak gain	3.5 dBi		
Polarization	Linear		
Azimuth plane	Omnidirectional		
(3 dB beamwidth)			
Elevation plane	40°		
(3 dB beamwidth)			
Length	1.7 in. (4.3 cm)		
Diameter	0.75 in. (1.9 cm)		
Connector	RP-TNC jack		
Environment	Indoor only		
Operating temperature	–4° F to 131° F		
	(-20° C to 55° C)		

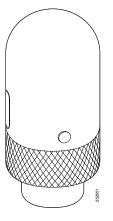

Note The following antenna radiation patterns were obtained with the antenna connected to a Cisco Aironet 3500 Series Access Point.

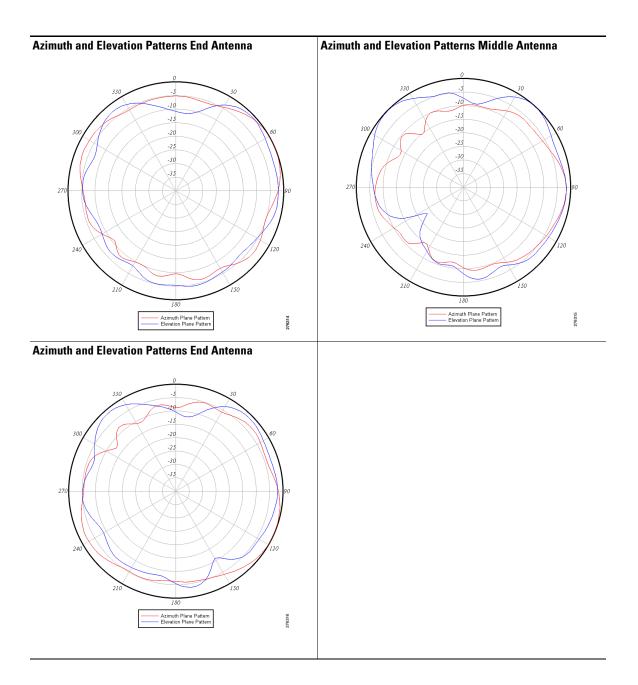

System Requirements

This antenna is designed for indoor use with any 5-GHz Cisco Aironet radio device that uses a RP-TNC connector.

Safety Precautions

There are no specific safety precautions associated with this antenna. Translated versions of the following safety warnings are provided in the *Safety Warnings for Cisco Aironet Antennas*, which is available at http://www.cisco.com.

Installation Notes

Antennas transmit and receive radio signals which are susceptible to RF obstructions and common sources of interference that can reduce throughput and range of the device to which they are connected. Follow these guidelines to ensure the best possible performance:

- Keep the access point away from metal obstructions such as heating and air-conditioning ducts, large ceiling trusses, building superstructures, and major power cabling runs.
- The density of the materials used in a building's construction determines the number of walls the signal can pass through and still maintain adequate signal strength. Consider the following before choosing the location for your antenna:
 - Signals penetrate paper and vinyl walls with little change to signal strength.
 - Signals penetrate only one or two solid and pre-cast concrete walls without degrading signal strength.
 - Signals penetrate three or four concrete and wood block walls without degrading signal strength.
 - Signals penetrate five or six walls constructed of drywall or wood without degrading signal strength.
 - Signals will likely reflect off a thick metal wall and may not penetrate it at all.
 - Signals will likely reflect off a chain link fence or wire mesh spaced between 1 and 1 1/2 in. (2.5 and 3.8 cm). The fence acts as a harmonic reflector that blocks the signal.
- Install the access point away from microwave ovens and 5-GHz cordless phones. These products can
 cause signal interference because they operate in the same frequency range as the device to which
 your antenna is connected.

Installing the Antenna

Align the antenna TNC connector with the TNC connector on the access point. Tighten the antenna hand-tight. Do not over tighten.

Obtaining Documentation, Obtaining Support, and Security Guidelines

For information on obtaining documentation, obtaining support, providing documentation feedback, security guidelines, and also recommended aliases and general Cisco documents, see the monthly *What's New* in Cisco Product Documentation, which also lists all new and revised Cisco technical documentation, at:

http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Obtaining Documentation, Obtaining Support, and Security Guidelines

Obtaining	Documentation,	Obtaining	Support, and	I Security	/ Guidelines

CCDE, CCENT, CCSI, Cisco Eos, Cisco HealthPresence, Cisco Ironport, the Cisco Iogo, Cisco Lumin, Cisco Nexus, Cisco Nurse Connect, Cisco Stackpower, Cisco StadiumVision, Cisco TelePresence, Cisco Unified Computing System, Cisco WebEx, DCE, Flip Channels, Flip for Good, Flip Mino, Flip Video, Flip Video (Design), Flipshare (Design), Flip Ultra, and Welcome to the Human Network are trademarks; Changing the Way We Work, Live, Play, and Learn, Cisco Store, and Flip Gift Card are service marks; and Access Registrar, Aironet, AsyncOS, Bringing the Meeting To You, Catalyst, CCDA, CCDP, CCIE, CCIP, CCNA, CCNP, CCSP, CCVP, Cisco, the Cisco Certified Internetwork Expert Iogo, Cisco IOS, Cisco Press, Cisco Systems Capital, the Cisco Systems Iogo, Cisco Unity, Collaboration Without Limitation, EtherFast, EtherSwitch, Event Center, Fast Step, Follow Me Browsing, FormShare, GigaDrive, HomeLink, Internet Quotient, IOS, iPhone, iQuick Study, IronPort, the IronPort logo, LightStream, Linksys, MediaTone, MeetingPlace, MeetingPlace Chime Sound, MGX, Networkers, Networking Academy, Network Registrar, PCNow, PIX, PowerPanels, ProConnect, ScriptShare, SenderBase, SMARTnet, Spectrum Expert, StackWise, The Fastest Way to Increase Your Internet Quotient, TransPath, WebEx, and the WebEx logo are registered trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

All other trademarks mentioned in this document or website are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (0907R)