

Service
Service
Service



Service Manual



TABLE OF CONTENTS

	Page
Location of pc boards & Version variations	1-2
Technical Specifications	1-3
Measurement setup	1-4
Service Aids, Safety Instruction, etc.	1-5
Instruction for use : FW-C380/22 version excerpt	2-1
Additional Features /21	2-14
Disassembly Instructions & Service positions	3-1
Service Test Programs	3-4
Set Block diagram	4
Set Wiring diagram	5
Front Board	6
ECO6 Tuner Board : Systems Non-Cenelec	7A
ECO6 Tuner Board : Systems Cenelec	7B
ETF7 ND Tape Module	9
3CDC-LC Module	10
3CDC-LC-MB Module	10A
Power 2001 Module (30-70W Version)	11
AF9 Board	12
Set Mechanical Exploded view & parts list	13



© Copyright 2000 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by BB 0042 Service Audio Printed in The Netherlands Subject to modification




3139 785 22550



PHILIPS

LOCATION OF PRINTED CIRCUIT BOARDS

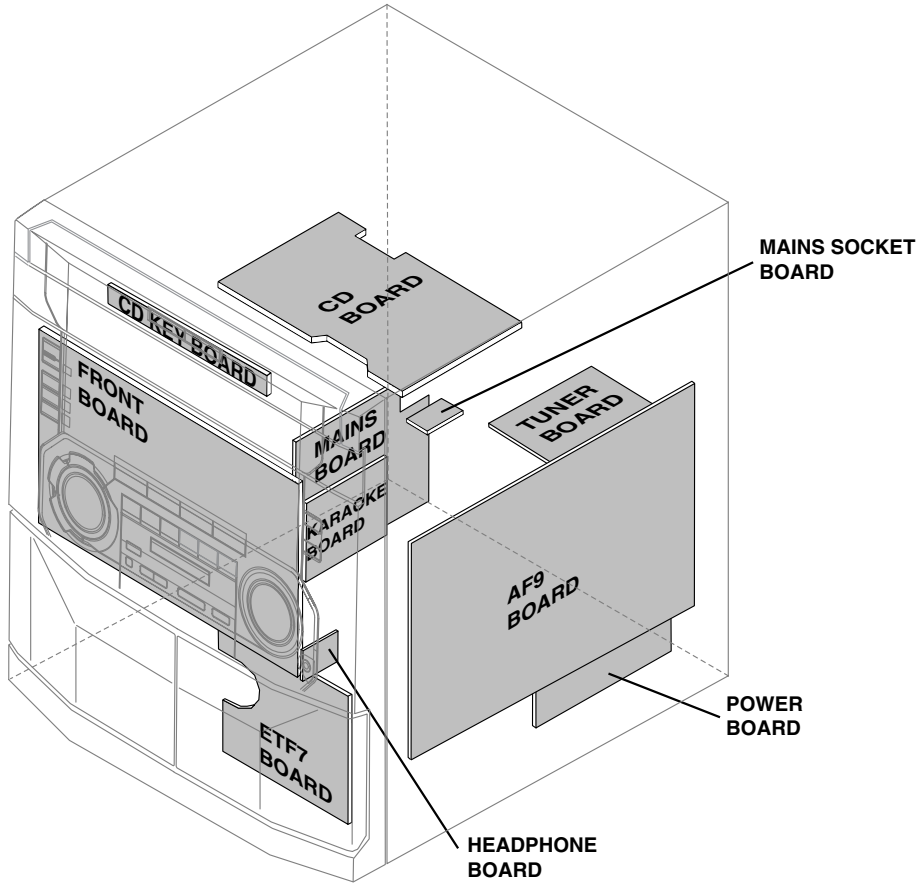

VERSION VARIATIONS:

Type /Versions:	FW-C380									
	/21	/22	/30	/34	/37					
Features & Board in used:										
Aux in /CDR in	x	x	x	x	x					
Line Out										
Surround Out										
Subwoofer Out	x	x	x	x	x					
Digital Out	x	x	x	x	x					
Matrix Surround										
CD Text										
Dolby B										
RDS		x		x						
News		x		x						
Dolby Pro Logic (DPL)										
Incredible Surround	x	x	x	x	x					
Karaoke Features	x									
Voltage Selector	x									
ECO Power Standby (Clock Display Off)		x	x	x						
ECO6 Tuner Board - Systems Non-Cenelec	x		x	x	x					
ECO6 Tuner Board - Systems Cenelec		x								
Center/Surround Channel										

Note: 3CDC-LC-MB Module is mechanically the same as 3CDC-LC Module except the schematics, layouts & electrical parts list related to the CDC Board. The CDC Board (recognized by 12NC : 3103 303 34522 printed on the Board) is introduced as an alternative to supplement for the shortage of Servo IC TDA7073A.

SPECIFICATIONS**GENERAL:**

Mains voltage : 110-127V/220-240V Switchable for /21/21M
 120V for /37
 220V for /33
 220-230V for /22/34
 230-240V for /30

Mains frequency : 50/60Hz

Power consumption : < 1W at ECO Power Standby
 : < 15W at Standby
 : 90W at Active

Clock accuracy : < 4 seconds per day

Dimension centre unit : 265 x 310 x 390mm

TUNER:**FM**

Tuning range : 87.5-108MHz
 65.81-74MHz for /34 ¹⁾

Grid : 50kHz (& 30kHz for /34)
 100kHz for /37

IF frequency : 10.7MHz ± 25kHz

Aerial input : 75Ω coaxial
 75Ω click fit for /37

Sensitivity at 26dB S/N : < 7μV

Selectivity at 600kHz bandwidth : > 25dB

Image rejection : > 25dB

Distortion at RF=1mV, dev. 75kHz : < 3%

-3dB Limiting point : < 8μV

Crosstalk at RF=1mV, dev. 40kHz : > 18dB

MW

Tuning range : 531-1602kHz
 530-1700kHz for /21/21M/37

Grid : 9kHz
 10kHz for /21/21M/37

IF frequency : 450kHz ± 1kHz

Aerial input : Frame aerial

Sensitivity at 26dB S/N : < 4.0mV/M

Selectivity at 18kHz bandwidth : > 18dB

IF rejection : > 45dB

Image rejection : > 28dB

Distortion at RF=50mV, m=80% : < 5%

LW

Tuning range : 153-279kHz /22

Grid : 3kHz

IF frequency : 450kHz ± 1kHz

Aerial input : Frame aerial

Sensitivity at 26dB S/N : [< 7.0mV/M]

Selectivity at 18kHz bandwidth : [> 24dB]

IF rejection : [> 30dB]

Image rejection : [> 30dB]

Distortion at RF=50mV, m=80% : [< 5%]

AMPLIFIER:

Output power (6Ω, 1kHz, 10% THD)
 L & R : 2 x 60W

Output power (6Ω, 60Hz-12.5kHz, 10% THD) /37
 L & R : 2 x 45W

Frequency response within -3dB : 60Hz-16kHz

Digital Sound Control (DSC) : Optimal, Jazz, Rock, Techno

Virtual Environment Control (VEC) : Hall, Concert, Cinema

Dynamic Bass Boost (DBB) : DBB 1, DBB 2, DBB 3, DBB OFF

Incredible Surround : IS ON, IS OFF

Input sensitivity

Aux in : 500mV ± 3dB at 600Ω

CDR in : 1V ± 3dB at 600Ω

Mic : {3mV ± 3dB at 600Ω}

Output sensitivity

Subwoofer out : 1.5V ± 2dB at 22 kΩ

Headphone output at 32Ω : 15mW ± 2dB

Digital (Coax) out : IEC 958, 44.1kHz

CASSETTE RECORDER:

Number of track : 2 x 2 stereo

Tape speed : 4.76 cm/sec ± 2%

Wow and flutter : < 0.4% DIN

Fast-wind/Rewind time C60 : 130 sec

Bias system : 75kHz ± 10kHz

Rec/Pb frequency response within 8dB : 80Hz - 12.5kHz

Signal to Noise Ratio (Type I) : > 48dB

COMPACT DISC:

Measurement done at output conn. of the CDC module.

Frequency response : < ±1.5dB for 20Hz-20kHz

Output Voltage (in Vrms) : 550mV ± 1dB unloaded

Signal to Noise Ratio (A-weighted) : > 80dB

Distortion at 1kHz : < 0.003%

Channel Unbalance : < ±1dB

Channel Separation (1kHz) : >60dB

De-emphasis : 0 or 15/50 mS (Switched by subcode on the disc)


[...] Values indicated are for "ECO6 Cenelec Board" only.

{...} Values for /21/21M only

¹⁾ Default setting is OFF, to switch on please refer page 3-4.


MEASUREMENT SETUP

Tuner FM

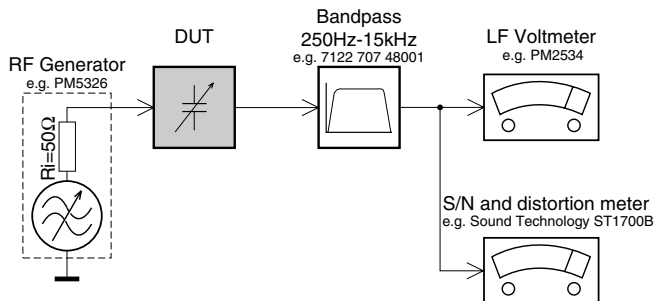

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilotone (19kHz, 38kHz).


Tuner AM (MW,LW)

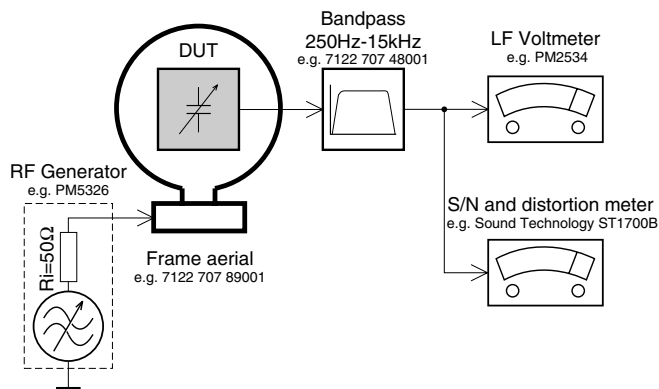

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


CD

Use Audio Signal Disc SBC429 4822 397 30184
(replaces test disc 3)

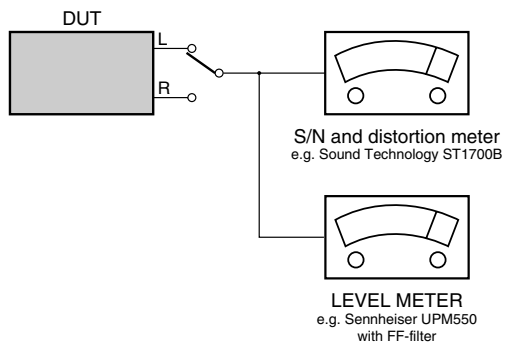

Recorder

Use Universal Test Cassette **CrO2** SBC419 4822 397 30069
or Universal Test Cassette **Fe** SBC420 4822 397 30071

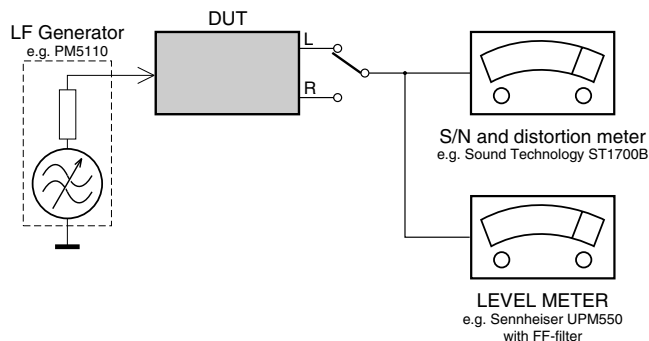

SERVICE AIDS

Service Tools:

Universal Torx driver holder	4822 395 91019
Torx bit T10 150mm	4822 395 50456
Torx driver set T6 - T20	4822 395 50145
Torx driver T10 extended	4822 395 50423

Cassette:

SBC419 Test cassette CrO ₂	4822 397 30069
SBC420 Test cassette Fe	4822 397 30071
MTT150 Dolby level 200nWb/M	4822 397 30271

Compact Disc:

SBC426/426A Test disc 5 + 5A	4822 397 30096
SBC442 Audio Burn-in Test disc 1kHz	4822 397 30155
SBC429 Audio Signals disc	4822 397 30184
Dolby Pro-logic Test Disc	4822 395 10216

ESD Equipment:

Anti-static table mat - large 1200x650x1.25mm ...	4822 466 10953
Anti-static table mat - small 600x650x1.25mm	4822 466 10958
Anti-static wristband	4822 395 10223
Connector box (1M Ω)	4822 320 11307
Extension cable (to connect wristband to conn. box)	4822 320 11305
Connecting cable (to connect table mat to conn. box)	4822 320 11306
Earth cable (to connect product to mat or box)	4822 320 11308
Complete kit ESD3 (combining all above products)	4822 320 10671
Wristband tester	4822 344 13999

HANDLING CHIP COMPONENTS

GENERAL

DISMOUNTING

A

B

C

MOUNTING

A

B

SOLDERING TIME < 3 sec/side

EXAMPLES

PRECAUTIONS

(GB) WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

ESD**(NL) WAARSCHUWING**

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD). Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat. Houd componenten en hulpmiddelen ook op hetzelfde potentiaal.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le bracelet serti d'une résistance de sécurité. Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

(D) WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD). Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren. Veranlassen Sie, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand verbunden sind mit dem gleichen Potential wie die Masse des Gerätes. Bauteile und Hilfsmittel auch auf dieses gleiche Potential halten.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD). La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza. Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified, be used.

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat bij reparatie in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.

**(F)**

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisés les pièces de rechange identiques à celles spécifiées.

(GB) Warning !

Invisible laser radiation when open. Avoid direct exposure to beam.

(D)

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Geräts darf nicht verändert werden; für Reparaturen sind Original-Ersatzteile zu verwenden.

(S) Varning !

Osynlig laserstrålning när apparaten är öppnad och spårren är urkopplad. Betrakta ej strålen.

(I)

Le norme di sicurezza esigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

(SF) Varoitus !

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkymättömälle laserisäteilylle. Älä katso säteeseen!

"After servicing and before returning set to customer perform a leakage current measurement test from all exposed metal parts to earth ground to assure no shock hazard exist. The leakage current must not exceed 0.5mA."


(DK) Advarsel !

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

Contents

English

General Information	
Environmental Information	7
Energy Star	7
Supplied Accessories	7
Safety Information	7
Preparation	
Rear Connections	8-9
Inserting batteries into the Remote Control	9
Controls	
Controls on the player and remote control	10-11
Operating the System	
Plug and Play	12
Demonstration Mode	12-13
Switching On	13
Switching the system to standby mode	13
Switching the system to eco power mode ..	13
Selecting the source	13
DIM mode	13
Volume Control	14
Sound Control	14-15
Compact Disc	
Discs for playback	16
Loading the CD Changer	16
CD Direct Play	16
Playing a Disc	17
Disc Change	17
Selecting a desired track	17
Searching for a particular passage during playback	17
Programming Tracks	17
Reviewing the programme	18
Playing the programme	18
Erasing the programme	18
Shuffle	18
Repeat	18
Tuner	
Tuning to radio stations	19
Storing Preset Stations	19-20
Tuning to Preset Radio Stations	20
Receiving RDS Radio Station News	20-21
Tape	
Loading a tape	22
Auto Replay	22
Tape Playback	22
Rewind/Fast Forward	23
Aux	
Selecting External Equipment	23
Recording	
One Touch Recording	24
CD Synchro Start Recording	25
Dubbing tapes	25
Recording from other sources	25
Digital Recording via Digital Out	25
Clock/Timer	
View Clock	26
Clock Setting	26
Timer Setting	26-27
Sleep Timer	27
Specifications	28
Maintenance	29
TroubleShooting	29-30

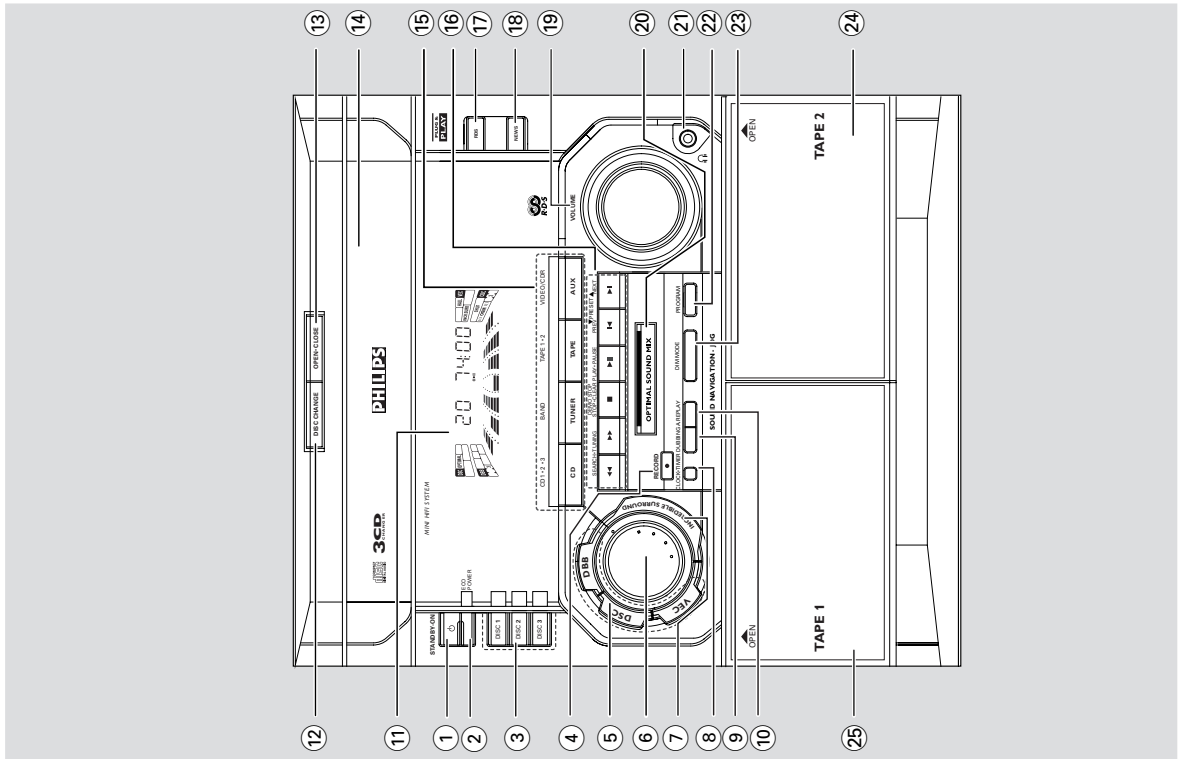

General Information

- The type plate (which contains the serial number) is located at the rear of the player.
- Recording is permissible if copyright or other rights of third parties are not infringed.
- This product complies with the radio interference requirements of the European Community.

Environmental Information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Energy Star



As an ENERGY STAR® Partner, Philips has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Supplied Accessories

- Remote control
- AM loop antenna
- FM wire antenna
- AC power cord


Safety Information

- Before operating the player, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your player is identical with the voltage of your local power supply. If not, please consult your dealer. The typeplate is located at the rear of your player.
- When the player is switched on, do not move it around.
- Place the player on a solid base (e.g. a cabinet).
- Place the player in a location with adequate ventilation to prevent internal heat build-up in your player. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from the each side.
- Do not expose the player to excessive moisture, rain, sand or heat sources.
- Under no circumstances should you repair the player yourself, as this will invalidate the warranty!
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the disc unit inside the player. Should this occur, the CD player will not operate normally. Leave the power on for about one hour with no disc in the player until normal playback is possible.
- Electrostatic discharge may cause unexpected problems. See whether these problems disappear if you unplug the AC power cord and plug it in again after a few seconds.
- **To disconnect the player from the power supply completely, remove the AC power plug from the wall socket.**

Preparations


English

English

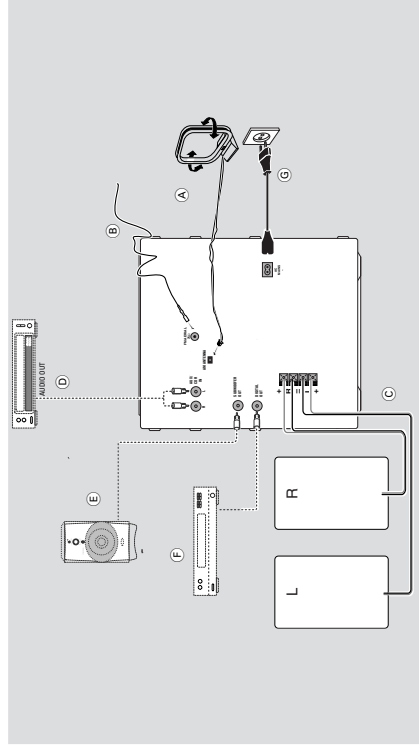


Rear Connections

- A AM Loop Antenna Connection**
Connect the supplied loop antenna to the AM ANTENNA terminal. Place the AM loop antenna far away from the system and adjust its position for the best reception.
- B FM Wire Antenna Connection**
Connect the supplied FM wire antenna to the FM AERIAL (FM ANTENNA) 75 Ω terminal. Adjust the position of the FM antenna for the best reception.
- Outdoor Antenna**
For better FM stereo reception, connect an outdoor FM antenna to the FM AERIAL (FM ANTENNA) 75 Ω terminal using a 75 Ω coaxial wire.



Speakers Connection

- C Speakers Connection**
- Connect the right speaker to Front terminal R, with the colored wire to + and the black wire to -.
 - Connect the left speaker to Front terminal L, with the colored wire to + and the black wire to -.
 - Clip the stripped portion of the speaker wire as shown.

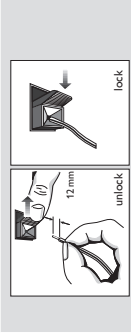

CAUTION:

- For optimal sound performance, it is recommended to use the supplied speakers.
- Do not connect more than one speaker to any one pair of + / - speaker terminal.
- Do not connect speakers with impedance lower than the speakers supplied. Please refer to SPECIFICATION section of this manual.

Preparation

D Connecting other equipment to your system

You can connect the audio left and right, OUT terminals of a TV/VCR, Laser Disc Player, DVD player or CD Recorder to the AUX IN terminals at the rear of the system.

E Subwoofer Out Connection

Connect the optional active subwoofer to the SUBWOOFER OUT terminal. The subwoofer reproduces just the low bass sound effect (e.g. explosions, the rumble of spaceships, etc.). Be sure to follow the instructions supplied with the subwoofer.

F Digital Out Connection

You can record the digital sound from the CD, through this output, on any audio equipment with digital input (e.g. CD Recorder, Digital Audio Tape (DAT) deck, Digital to Analog Converter and Digital Signal Processor).


Connect one end of the cinch cable (not supplied) to the DIGITAL OUT socket and the other end to the audio equipment with digital input. When connecting the cinch cable, make sure it is fully inserted.

G AC Power Supply

After all other connections have been made, connect the AC power cord to the system and to the wall outlet. Inserting batteries into the Remote Control

Inserting batteries into the Remote Control

- Insert the batteries (not supplied) into the remote control as shown in the battery compartment (Type R06 or AA).

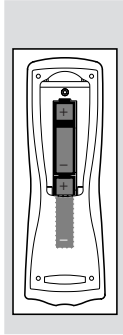

CAUTION

- Remove batteries if they are exhausted or not to be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed off properly.


English

English


Controls (illustrations on page 3)

Controls on the player and remote control

- STANDBY-ON Φ**
switches the system to standby/on.
- ECO POWER**
to switch the system to eco power standby mode or to wake up the system to last selected source.
- DISC 1 / DISC 2 / DISC 3 (DISC DIRECT PLAY)**
to select a disc tray for playback.
- RECORD**
to start recording on tape deck 2.
- SOUND CONTROL**
to select the desired sound feature: DSC, VEC, or DBB.
- JOG**
to select the desired sound effect of DSC/VEC/DBB setting. You must select the respective sound feature first.
- DBB (DYNAMIC BASS BOOST)**
to select the desired bass effect : DBB 1, DBB 2, DBB 3, DBB OFF.
- DSC (DIGITAL SOUND CONTROL)**
to select the desired Digital Sound Control effect : OPTIMAL, JAZZ, ROCK or TECHN.
- VEC**
to select the desired Virtual Environment Control effect : CINEMA, HALL or CONCERT.
- INCREDIBLE SURROUND**
to switch on or off the surround sound effect.
- CLOCK-TIMER**
to view the clock, set the clock or set the timer.
- DUBBING**
to dub a tape.
- AUTO REPLAY**
to select playback mode either in continuous AUTO REPLAY or ONCE only.
- DISPLAY SCREEN**
to view the current setting of the system.
- DISC CHANGE**
to change disc(s).
- OPEN-CLOSE**
to open or close the CD changer tray.
- CD CHANGER TRAY**
- SOURCE** – to select the following:
CD / (CD 1-2-3)
to select CD mode. When disc playback is stopped, press to select disc tray 1, 2, or 3.
TUNER / (BAND)
to select Tuner mode. When in tuner mode, press to select the waveband: FM, MW or LW.
TAPE / (TAPE 1-2)
to select Tape mode. When tape playback is stopped, press to select either tape deck 1 or 2.
AUX (VIDEO/CDR)
to select sound from an external source (e.g. TV, VCR, Laser Disc player, DVD player or CD Recorder). When in AUX mode, press to select either AUX or CDR.

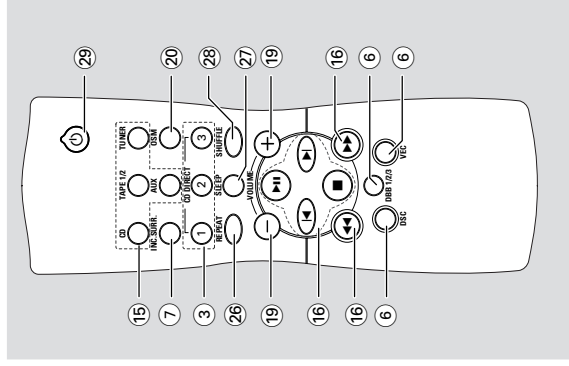

Operating the System

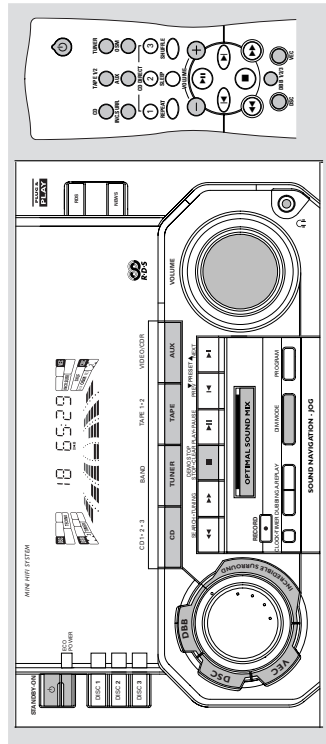

English

English

Controls

- 16 MODE SELECTION**
SEARCH ◀◀ ▶▶ (TUNING ◀◀▶▶)
 for CD to search backward/forward.
 for TUNER to tune to a lower or higher radio frequency.
 for TAPE to rewind or fast forward a tape.
 for CLOCK to set the hour (on the system only).
- STOP•CLEAR ■**
 for CD to stop disc playback or to clear a program.
 for TUNER to stop programming (on the system only).
 for TAPE to stop playback or recording.
 for DEMO to start or stop demonstration mode (on the system only).
 for CLOCK to exit clock setting or cancel timer (on the system only).
 for PLUG & PLAY to exit plug & play mode and return to standby mode (on the system only).
- PLAY ▶ / PAUSE II**
 for CD to start or interrupt playback.
 for TAPE to start playback.
 for PLUG & PLAY to initiate and start plug & play mode (on standby/demo mode (on the system only)).
- PREV ◀ / NEXT ▶ (PRESET ▼ ▲)**
 for CD to skip to the beginning of the current, previous, or next track.
 for TUNER to select a preset station in memory.
 for CLOCK to set the minute (on the system only).
- 17 RDS**
 to select RDS data in the following order: station name, program type, radio text and frequency.
- 18 NEWS**
 to hear news automatically.
- 19 VOLUME**
 to increase or decrease the volume.
- 20 OPTIMAL SOUND MIX**
 optimal mix of various sound features of the set to create the most impressive listening experience at one touch of a button.
- 21** to connect headphones.
- 22 PROGRAM**
 for CD to program disc tracks.
 for TUNER to program preset radio stations.
 for CLOCK to select 12 or 24 hour in clock setting mode.
- 23 DIM**
 to select different brightness for the display screen: DIM 1, DIM 2, DIM 3 or DIM OFF.
- 24 TAPE DECK 2**
25 TAPE DECK 1
26 REPEAT
 to repeat a disc track, a disc, or all available discs.
- 27 SLEEP**
 to switch the system to standby mode at a selected time.
- 28 SHUFFLE**
 to play all the available discs and their tracks in random order.
- 29** to switch the system to standby power standby mode.

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (e.g. CD, TUNER, etc.).
- Then select the desired function (▶, ◀, ▲, etc.).

11

Important: Before you operate the system, complete the Preparation procedures.

Plug and Play

The system provides PLUG and PLAY feature that allows you to store all available radio stations and RDS stations automatically upon power up.

If the PLUG and PLAY has not been installed

- 1** Upon power up, "AUTO INSTALL - PRECESS PLUG" will be displayed.
- 2** Press **PLAY** (on the system only) to start installation.
 → "INSTALL" will be displayed and followed by "TUNER" and then "AUTO".
 → The **PROGRAM** starts flashing.
 → PLUG and PLAY will start searching for all RDS radio stations with sufficient signal strength and then followed by radio stations on FM, MW and LW band respectively. Weak RDS radio stations may be stored in later presets.
 → All available RDS and radio stations with sufficient signal strength will be stored. Up to 40 presets may be stored.
 → The last preset radio station or the first available RDS station will appear on the display when PLUG and PLAY is completed.

- 3** The system will proceed to set the RDS time automatically with the stored RDS preset station. If no RDS station is available in the first preset station, the program will exit automatically.
 → After the RDS radio station is found, "INSTALL" will be displayed and followed by "TIME".

- When searching RDS time;
 → "SEARCH RDS TIME" will be displayed.
- When RDS time is read, "RDS TIME" will be displayed. The current time will be displayed for 2 seconds and stored automatically.

Note:

- If RDS station does not transmit RDS time within 90 seconds, the program will exit automatically and the display will show "RDS TIME".

To reinstall the PLUG & PLAY

- 1** In Standby or Demonstration mode, press and hold **PLAY** for 5 seconds (on the system only) "AUTO INSTALL - PRECESS PLUG" will be displayed.
 - 2** Press **PLAY** (on the system only) again to start installation.
- To exit without storing the PLUG and PLAY, press **■** button (on the system only).

12

Operating the System

English

Switching the system ON

- Press **CD, TUNER, TAPE** or **AUX**. You can also switch on the system by pressing any one of the CD DIRECT PLAY buttons.

Switching the system to standby mode

- Press **STANDBY-ON** or \odot on the remote control.
→ The system will switch to standby mode.

Switching the system to ECO POWER standby mode (when Demonstration mode is stopped)

- Press **ECO POWER** or press and hold \odot on the remote control for more than 2 seconds to switch to eco power standby mode (< 2 watts).
→ "ECO PWR" will be displayed, after which the display screen goes blank.
→ The ECO POWER LED will be lit.

To switch on the system from ECO

- Press **ECO POWER**.
→ The system will switch to last selected source.
- Press **CD, TUNER, TAPE** or **AUX** on the remote control.
→ The system will switch to the selected source.

Notes:

- If the demonstration mode has not been disabled, it will resume 5 seconds later.

Notes:

- **PLUG** and **PLAY** will be reinitiated again during the next power up if:
 - i) **PLUG** and **PLAY** installation was not completed.
 - ii) No stereo frequency being detected during **PLUG** and **PLAY**, "CHECK ANTENNA" will be displayed.
- You can store any radio stations manually or automatically after **PLUG** and **PLAY**.
- When **PLUG** and **PLAY** is used, all previously stored radio stations will be replaced.
- During **PLUG** and **PLAY**, if no button is pressed within 15 seconds, the system will go to demonstration mode (if demonstration mode is enable)

Demonstration mode

The system has a demonstration mode that shows the various features offered by the system.

To disable the demonstration mode

- Press and hold \blacksquare (on the system only) for **5 seconds** when the system is in demonstration mode.
→ "DEMO OFF" is displayed.
→ The system will switch to standby mode.

To enable the demonstration mode

- Press and hold \blacksquare (on the system only) for **5 seconds** when the system is in standby mode.
→ The demonstration will begin.

Notes:

- If the demonstration mode has not been disabled, it will resume 5 seconds later after the system switches to standby mode.
- When the system is switched on from the main power outlet, the CD changer tray may open and close again to initialize the set.
- Even though the AC power cord is removed from and reconnected to the wall socket, the demonstration will remain off until it is switched on again.

Operating the System

English

Selecting the Source

- Press the respective source selection button: **CD, TUNER, TAPE** or **AUX**.
→ The display indicates the selected source.

Note:

- For an external source, make sure you have connected the audio left and right **OUT** terminals of the external equipment (TV/VCR, Laser Disc player, DVD player or CD Recorder) to the **AUX IN** terminals.

DIM mode (only on remote control)


You can select the desired brightness for the display.

- Press **DIM** to select DIM 1, DIM 2, DIM 3 or DIM OFF display mode.
→ The **DIM** appears on the display.
→ "DIM 1", "DIM 2", "DIM 3" or "DIM OFF" will be displayed depending on the mode selected.

DIM OFF - normal brightness with Spectrum Analyzer On



DIM 1 - normal brightness with Spectrum Analyzer Off



DIM 2 - half brightness with Spectrum Analyzer On



DIM 3 - half brightness with Spectrum Analyzer Off and all LEDs off



Volume Control

Adjust **VOLUME** to increase or decrease the sound level.

For Personal Listening

Connect the headphones plug to the H socket at the front of the system. The speakers will be muted.

Sound Control

For Optimal sound listening, you can only select one of the following sound control at a time : DSC, VEC or OPTIMAL SOUND MIX.

DIGITAL SOUND CONTROL (DSC)

The DSC feature enables you to adjust the system to suit your type of music.

- 1 Press to select the **DSC** feature.
→ DSC led lights up.
- 2 Adjust the **JOG** to select the desired Digital Sound Control setting : **OPTIMAL, JAZZ, ROCK**, or **TECHNO**.
→ The selected digital sound is encircled.
→ "OPTIMAL, JAZZ, ROCK" or "TECHNO" will be displayed.

Note:

- For neutral setting, select **JAZZ**.

Operating the System

VIRTUAL ENVIRONMENT CONTROL (VEC)

The VEC feature enables you to adjust the system to select a type of environment.

- 1 Press to select the **VEC** feature.
→ VEC led lights up.
- 2 Adjust the **JOG** to select the desired Virtual Environment Control setting: CINEMA, HALL or CONCERT.
→ The selected environment is encircled.
→ "CINEMA", "HALL" or "CONCERT" will be displayed.

DYNAMIC BASS BOOST (DBB)

The DBB mode enhances the bass response.

- 1 Press to select the **DBB** feature.
→ DBB led lights up.
- 2 Adjust the **JOG** to select the desired DBB level or to switch off DBB.
→ The selected bass response is encircled.
→ "DBB 1", "DBB 2", "DBB 3" or "DBB OFF" will be displayed.

Note:

– If DBB 1/2/3 is selected, the corresponding number flag will be displayed.

INCREDIBLE SURROUND

Normal stereo sound is determined by the distance between the front speakers. When Incredible Surround is switched on, it magnifies the virtual distance between the front speakers for an incredibly wide, enveloping, stereo effect.

- Press **INCREDIBLE SURROUND** to switch on.
→ The **INCREDIBLE SURROUND** led lights up.
→ "INC SURROUND" and the INC. SUR flag will be displayed.
- To switch off **Incredible Surround**
Press **INCREDIBLE SURROUND** again.
→ The **INCREDIBLE SURROUND** led is switched off.
→ "IS OFF" will be displayed.
→ The INC. SUR flag disappears from the display.

OPTIMAL SOUND MIX

The Optimal Sound Mix features gives a various sound features of the set to create the most impressive listening experience at one touch of a button.


- To switch on **Optimal Sound Mix**
Press **OPTIMAL SOUND MIX** button lights up.
→ The **OPTIMAL SOUND MIX** button lights up.
→ "OPTIML SOUND MIX" and ((OSM)) flag will be displayed.

To switch off Optimal Sound Mix

- Press **OPTIMAL SOUND MIX** again.
→ The **OPTIMAL SOUND MIX** button light is switched off.
→ "OSM OFF" will be displayed.
→ ((OSM)) flag disappears from the display.
- Press any of the sound button (**DBB**, **DSC**, **VEC**, **IS**).
→ The sound feature message will be displayed.
→ ((OSM)) flag disappears from the display.

English

Compact Disc

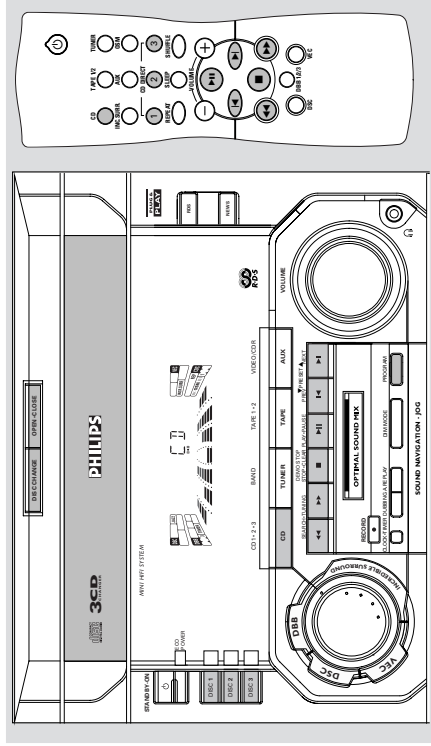

English

Warning!

- 1 This system is designed for conventional discs. Do not use any accessories such as disc stabilizer rings or disc treatment sheets, etc., which may damage the disc mechanism.
 - 2 Do not load more than one disc into each tray.
 - 3 When the CD changer is loaded with discs, do not turn over or shake the system. This may jam the changer.
- You may load three discs in the CD changer for continuous playback without interruption.

Discs for playback

This system can play all digital audio disc, finalized digital audio CD-Recordable and finalized digital audio CD-Rewritable format discs.



Loading the CD Changer

- 1 Press **CD** to select CD mode.
- 2 Press **OPEN*CLOSE**.
→ The CD changer tray slides out.
- 3 Load a disc with the printed side up in the right tray.
● You can load another disc in the left tray.
● To load the third disc, press the **DISC CHANGE** button.
→ The CD changer tray will rotate until the empty tray is ready for loading.
- 4 Press **OPEN*CLOSE** to close the CD changer tray.
→ The total number of tracks and the playing time of the selected disc appear on the display.

Note:

– To ensure good system performance, wait until the CD changer completely reads the disc(s) before proceeding.

Disc Direct Play

- You can play a disc directly by pressing the **DISC 1**, **DISC 2** or **DISC 3** button. The CD player will stop at the end of playback of the selected disc.
→ A lit button indicates that a disc is loaded in the disc tray.
→ A flashing button indicates that a disc is playing.

Compact Disc

English

Playing a Disc

- 1 Press **PLAY ▶ II** to start playback.
→ The disc tray track number and elapsed playing time of the current track appear on the display.
 - To interrupt playback, press **PAUSE ▶ II**.
 - The playing time flashes.
 - To resume playback, press **PLAY ▶ II** again.
- 2 To stop playback, press **■**.

Note:

- All the available discs will play once, then stop.

Disc Change

You can change the outer two discs while the third inner disc is stopped or is playing.

- 1 Press **DISC CHANGE**.
→ The CD changer tray slides out.
- 2 Replace the discs in the left and right disc trays.
 - If you wish to change the inner disc during playback, press **DISC CHANGE** again.
→ "DISC CHANGE" will be displayed.
 - The disc will stop playing.
 - The CD changer tray will close to retrieve the inner disc and then open again with the inner disc accessible.
- 3 Press **OPEN/CLOSE** to close the CD changer tray.

Selecting a desired track

Selecting a desired track when playback is stopped

- 1 Press **◀** or **▶** until the desired track appears on the display.
- 2 Press **PLAY ▶ II** to start playback.
→ The selected track number and elapsed playing time appear on the display.

Selecting a desired track during playback

- Press **◀** or **▶** until the desired track appears on the display.
→ The selected track number and elapsed playing time appear on the display.
- If you press **◀** once it will skip to the beginning of the current track and play the track again.

Note:

- Pressing **◀** during shuffling can only skip to the beginning of the current track.

Compact Disc

English

Reviewing the programme

Reviewing of the programme is possible only when playback is stopped.

- Press **◀** or **▶** repeatedly to review the programmed tracks.
- Press **■** to exit review mode.

Playing the programme

- 1 Press **PLAY ▶ II** to start programme playback.
→ "PLAY PROGRAM" will be displayed.
→ The track number and elapsed playing time of the current track will appear on the display.
 - If you press **REPEAT** during programme playback, the current track or all programmed tracks will be played repeatedly.
 - "TRACK" or "PROGRAM" will be displayed.
 - The **REP** and **PROG** flags appear on the display.
- 2 Press **■** to stop programme playback.

Notes:

- If you press any of the **DISC DIRECT PLAY** buttons, the system will play the selected disc and the stored programme will be ignored temporarily. The **PROG** display also will disappear temporarily from the display, it will reappear when playback of the selected disc ends.
- **REPEAT DISC** mode will be cancelled when programme playback begins.

Erasing the programme

(when playback is stopped)

- Press **■**.
→ "PROGRAM CLEAR" will be displayed.

Note:

- The programme will be erased when the system is disconnected from the power supply or when the CD changer tray is opened.

Shuffle (only on remote control)

In shuffle mode, the system plays all the available discs and their tracks in random order. Shuffle may be used also when tracks are programmed.

To shuffle all the discs and tracks

- 1 Press **SHUFFLE**.
→ "SHUFFLE" will be displayed.
→ The **SHUF** flag and the track selected at random appear on the display.
 - The discs and the tracks will be played in random order until you press **■**.
 - If you press **REPEAT** during shuffling, the current track or all available discs will be played repeatedly.
 - "TRACK" or "ALL DISC" will be displayed.
 - The **REP** and **SHUF** flags appear on the display.
- 2 Press **SHUFFLE** again to resume normal playback.
→ The **SHUF** flag disappears from the display.

Note:

- **REPEAT DISC** mode will be cancelled when shuffle is selected.

Repeat (only on remote control)

You can play the current track, a disc or all available discs repeatedly.

- 1 Press **REPEAT** on the remote control to select the various repeat modes.
→ "TRACK", "DISC", "ALL DISC" or "OFF" will be displayed.
→ The **REP** flag appears on the display.
 - The selected track, selected disc or all available discs will now be played repeatedly until you press **■**.
- 2 Press **REPEAT** until the "OFF" mode is displayed to resume normal playback.
→ The **REP** flag disappears from the display.

Notes:

- **REPEAT DISC** mode is not available during programme play or shuffle mode.
- You can also repeat shuffling a programme.
 - i) "TRACK" or "PROGRAM" will be displayed.
 - ii) The **REP**, **PROG**, and **SHUF** flags appear on the display.

Tuner

English

Receiving RDS Radio Station

RDS (Radio Data System) is a broadcasting service that allows FM stations to send additional information along with the regular FM radio signal. This additional information can contain:

- **STATION NAME:** The radio station name is displayed.
- **PROGRAM TYPE:** The following program types exist and can be received by your tuner: News, Affairs, Info, Sport, Educate, Drama, Culture, Science, Varied, Pop M, Rock M, MOR, (middle of the road music), Light M, Classics, Other M, No type.
- **RADIO TEXT (RT):** text messages appear in the display.

When you have tuned to a RDS station, the RDS logo (RDS) and the radio station name will appear on the display:

- The display normally shows the radio station name if available.
By repeatedly pressing **RDS** button you can change the type of display information:
→ The display shows in turn:
STATION NAME → PROGRAM TYPE → RADIO TEXT → TUNED FREQUENCY → STATION NAME ...

Note:

- When you press the **RDS** button and the display shows "RDS", it indicates that either the tuned station is not transmitting RDS signal or it is a non RDS station.

Manual programming

- 1 Press **TUNER (BAND)**.
- 2 Press **TUNER (BAND)** again to select the desired waveband : FM, MW or LW.
- 3 Press **PROGRAM** for less than one second → The PROG flag starts flashing.
→ The next available preset number will be displayed for selection.
- 4 Press **◀** or **▶** to tune to the desired frequency.
- If you wish to store the radio station to another preset number press **▼** or **▲** to select the desired preset number.
- 5 Press **PROGRAM** again.
→ The PROG flag disappears and the radio station will be stored.

- Repeat **steps 3 – 5** to store other preset radio stations.

Notes:


- When **40** radio stations are stored and you attempt to store another radio station, the display will show "FULL". If you want to change an existing preset number, repeat steps 3 – 5.
- You can cancel manual programming by pressing **■** (on the system only).
- During programming, if no button is pressed within 20 seconds, the system will exit programme mode automatically.

Tuning to Preset Radio Stations

- Press **▼** or **▲** to select the desired preset number.
→ The preset number, radio frequency, and waveband appear on the display.

Tuner

English

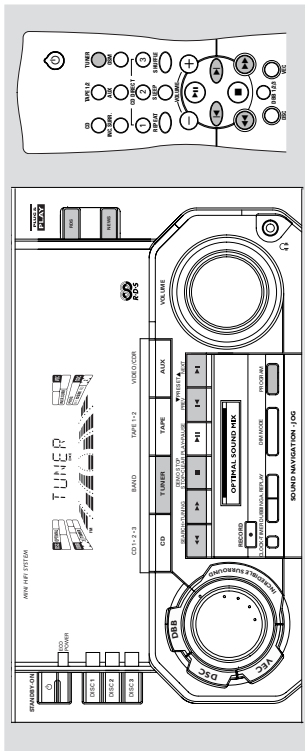

Note:

- For **"PLUG & PLAY"** feature, please refer to page 12.

Tuning to radio stations

- 1 Press **TUNER (BAND)** to select TUNER mode.
→ "TUNE R" will be displayed.
A few seconds later, the current radio frequency will be displayed.
- 2 Press **TUNER (BAND)** again to select the desired waveband : FM, MW or LW.
- 3 Press **◀** or **▶** for more than one second, then release.
→ The display will show "SEARCH" until a radio station with sufficient signal strength is found.
→ Repeat this procedure until the desired station is reached.
- To tune to a weak station, briefly press **◀** or **▶** repeatedly until the display shows the desired frequency and/or when the best reception has been obtained.

Storing Preset Stations

You can store up to 40 radio stations in the memory. When a preset radio station is selected, the preset number appears next to the frequency on the display.


Automatic programming

- 1 Press **TUNER (BAND)**.
- 2 Press **PROGRAM** for more than one second.
→ The PROG flag starts flashing and "AUTO" will be displayed.
→ The system will start searching for all radio stations with RDS and then followed by radio stations on FM, MW and LW band respectively.
→ All available stations will be stored automatically. The frequency and preset number will be displayed briefly.
→ The system will stop searching when all the available radio stations are stored or when the memory for 40 preset radio stations is used.
→ The system will remain tuned to the last stored preset radio station.

Notes:

- You can cancel the automatic programming by pressing **PROGRAM** or **■** (on the system only).
- If you want to reserve a section of preset numbers, for example preset numbers 1 to 9, select preset 10 before starting automatic programming, only the preset numbers 10 to 40 will be programmed.

Tape

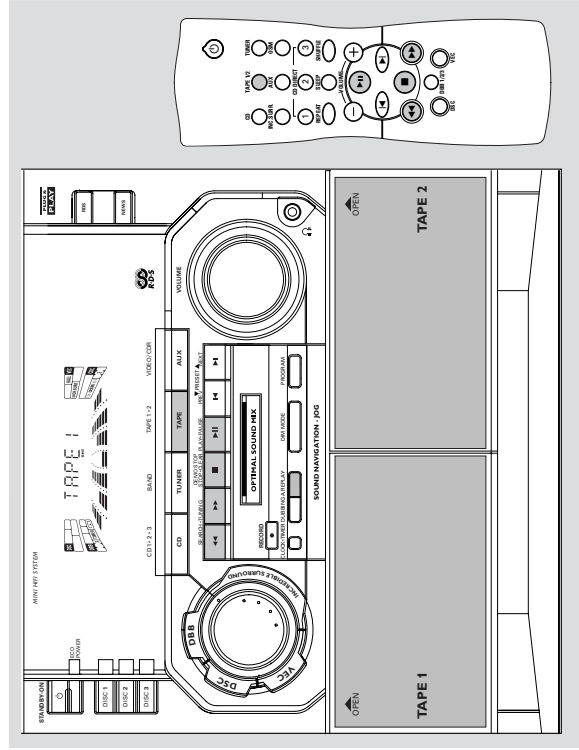

English

Tuner

English

To start NEWS function

- 1 Press **NEWS**.
 - The **NEWS** and "NEWS" will be displayed.
 - It will scan stations stored in the first 5 preset and wait for the News Program Type data to be available in any of these RDS stations. During the search :
 - "..." or current time appears on the display.
- 2 Press **CLOCK-TIMER** once more to enter clock setting mode.
 - "CLOCK" or current time starts flashing.
- 3 Press **RDS**.
 - The message "SEARCH RDS TIME" will be displayed.
 - If the current station is not receiving any RDS information, "NO RDS TIME" will be displayed.
 - When the RDS clock is read, "RDS TIME" will be displayed. The current clock time is displayed for 2 seconds and will be stored automatically.
 - If within 90 seconds, the RDS time is not detected, "NO RDS TIME" will be displayed.

To cancel NEWS function

- Press **NEWS** again.
 - The **NEWS** disappears and "NEWS OFF" will be displayed.

Notes:

- If you are listening to a non RDSTUNER radio station and should you decide to hear NEWS, first select other source (e.g. CD, TAPE or AUX), then press NEWS.
- Before using the NEWS feature, ensure that the first 5 presets are RDS stations.
- The NEWS works only once for each activation.
- During News bulletin, you can press any available source or Tuner function keys to cancel NEWS function and execute the relevant source mode.
- If set is switched to Tuner source, the NEWS function will be cancelled, "NEWS OFF" will be displayed immediately after the "TUNER" message.

RDS Clock

Some RDS station may be transmitting a real clock time at an interval of every minute.

Setting the time with RDS clock

- 1 Press **CLOCK-TIMER**.
 - "..." or current time appears on the display.
- 2 Press **CLOCK-TIMER** once more to enter clock setting mode.
 - "CLOCK" or current time starts flashing.
- 3 Press **RDS**.
 - The message "SEARCH RDS TIME" will be displayed.
 - If the current station is not receiving any RDS information, "NO RDS TIME" will be displayed.
 - When the RDS clock is read, "RDS TIME" will be displayed. The current clock time is displayed for 2 seconds and will be stored automatically.
 - If within 90 seconds, the RDS time is not detected, "NO RDS TIME" will be displayed.

Note:


- Some RDS station may be transmitting a real time clock at a minute interval. The accuracy of the transmitted time depends on the transmitting RDS station.

News (only available in Radio Station with RDS)

You can activate NEWS function in Standby or any source mode except Tuner mode. Once the News PTY (program type) is detected in a RDS station, it will switch to TUNER mode automatically.

Loading a tape

- 1 Press **OPEN**.
- 2 The tape deck door opens.
- 3 Load the tape with the open side downward and the full spool to the left.

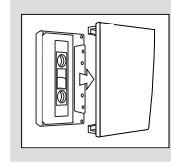

- 4 Close the tape deck door:

Auto Replay

- Press **A. REPLAY** to select either continuous AUTO REPLAY or ONCE during tape playback.
 - "AUTO REPLAY" (∞) or "ONCE" (1) will be displayed.

Notes:


- This feature is available during tape playback only.
- When "AUTO REPLAY" is selected, the tape will rewind automatically at the end of playback for the selected side. Then it will start playing again. It will replay up to a maximum of 20 times until you press **STOP**.
- When "ONCE" is selected, the tape will play the selected side once and then stop.

Tape Playback

- 1 Press **TAPE** (TAPE 1•2) to select TAPE mode.
 - "TAPE 1" or "TAPE 2" will be displayed and followed by "T 1 >>>>" or "T 2 >>>>".
- 2 Load the tape into the selected tape deck.
- 3 Press **PLAY** (▶) to start playback.
 - "T 1" or "T 2" with ">" scrolling right will be displayed.
- Press **A. REPLAY** to select the different type of playback mode (see Auto Replay)
 - Press **STOP** to end playback.
 - "T 1" or "T 2" with ">>>>" will be displayed.

Recording

English

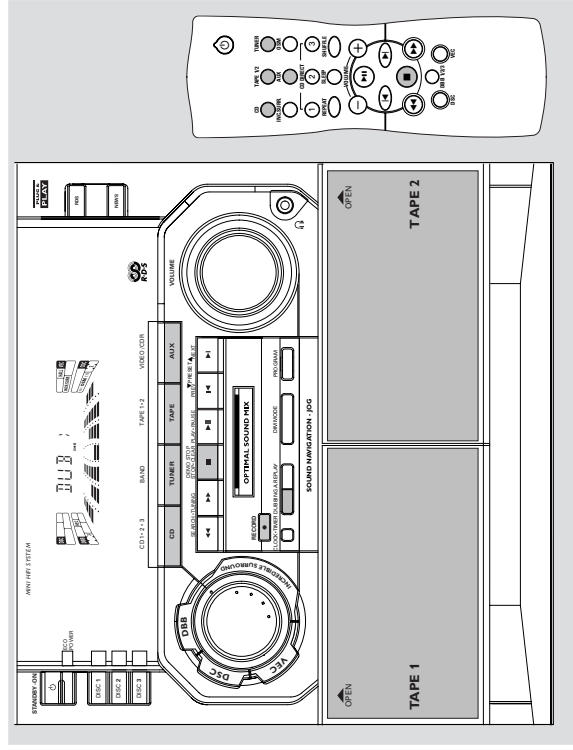

Notes:

- For recording, use only tape of IEC type I (normal tape).
- The tape is secured at both ends with leader tape. At the beginning and end of tape, nothing will be recorded for six to seven seconds.
- The recording level is set automatically, regardless of the position of VOLUME, DBS, Incredible Surround, DSC, VEC or Optimal Sound Mix.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.
- If "CHECK TAPE" is displayed, the protection tab has been broken. Put a piece of clear adhesive tape over the opening.

One Touch Recording

- For One Touch Recording, as soon as you press RECORD, the current source (CD, TUNER or AUX) will be recorded on tape deck 2.

- Load a blank tape in tape deck 2.
- Press **RECORD** to start recording.
 - The REC starts flashing.
- Press **■** to stop recording.

Note:

- When you press **RECORD** while in TAPE mode, "SELECT SOURCE" will be displayed. One Touch Recording is not possible in TAPE mode.

Tape

English

Notes:

- During rewinding or fast forwarding of a tape, it is also possible to select another source (e.g. CD, TUNER, or AUX).
- Before playing a tape, check and tighten slack tape with a pencil. Slack tape may get jammed or may burst in the mechanism.
- C-120 tape is extremely thin and is easily deformed or damaged. It is not recommended for use in this system.
- Store the tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV, or speaker).

1 You can rewind or fast forward the tape by pressing **◀** or **▶** respectively.


- If rewinding, "T 1 <" or "T 2 <" with "<" scrolling left will be displayed.
- If fast forwarding, "T 1 >" or "T 2 >" with ">" scrolling right will be displayed.
- The tape will stop automatically at the end of rewinding or fast forwarding.

2 Press **■** to stop rewinding or fast forwarding.

During playback

- Press and hold **◀** or **▶** until the desired passage is located.
- "T 1" or "T 2" with "<<" or ">>" scrolling left or right will be displayed depending on which button is pressed.
- During searching, the sound is reduced to a low volume.
- When you release **◀** or **▶** the tape continues playing.

Aux

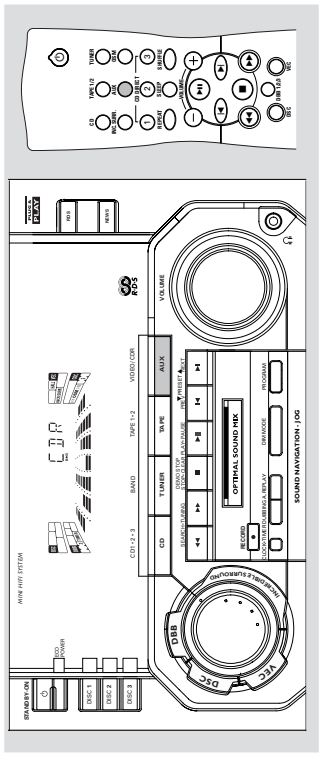

Notes:

- All the sound control features (e.g. DSC, VEC, DBS, etc.) are available for selection.

Selecting External Equipment


If you have connected the audio out terminals of the external equipment (TV/VCR, Laser Disc player, DVD player or CD Recorder) to the AUX/CD-R IN terminals, you can hear the enhanced sound from the system.

- Press **AUX** (VIDEO/CD-R) to select either AUX or CD-R.
 - "FL:" or "E.DR:" will be displayed.


Recording

English


English

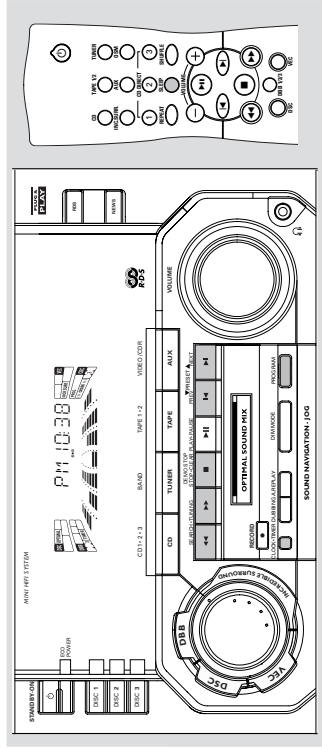


English

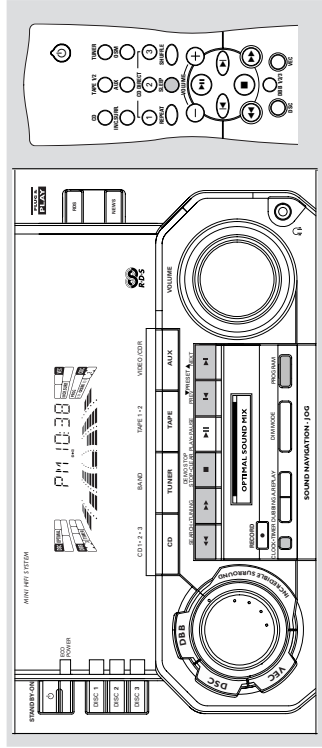


English

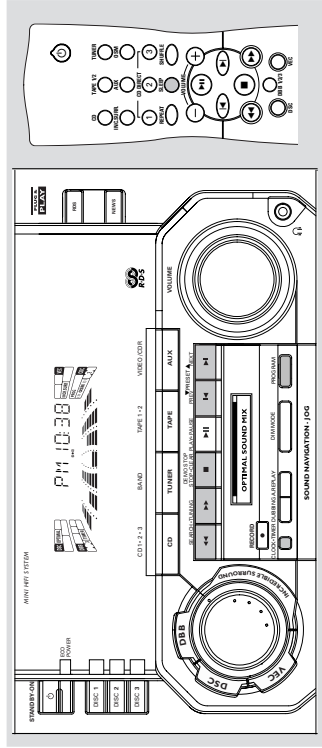


English

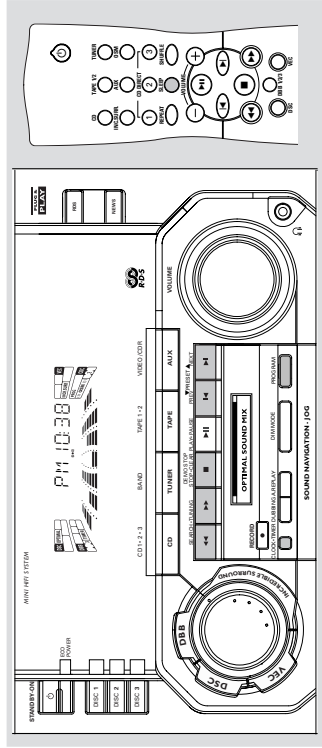


English

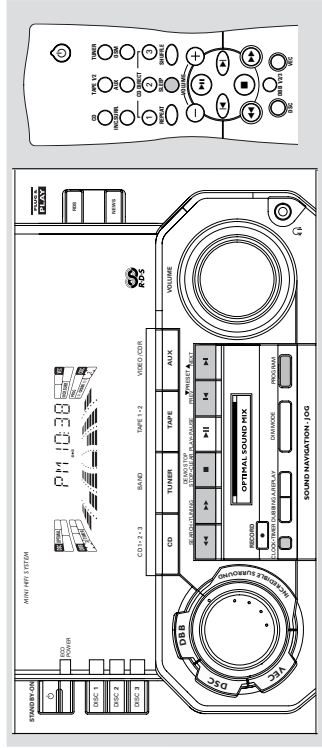


English

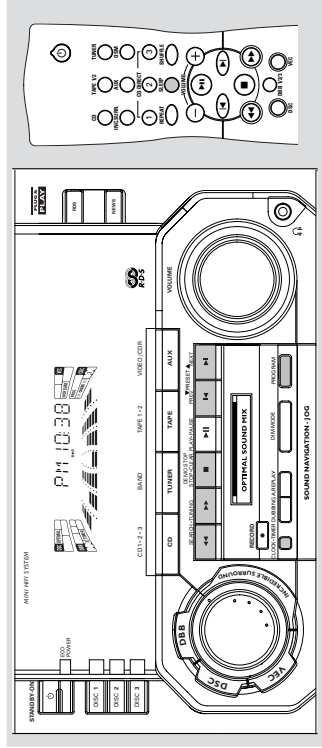


English

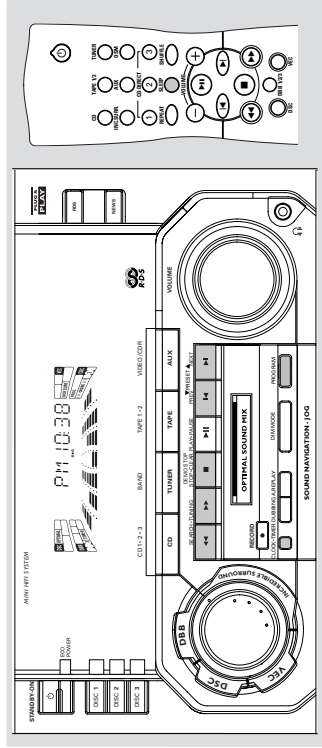


English

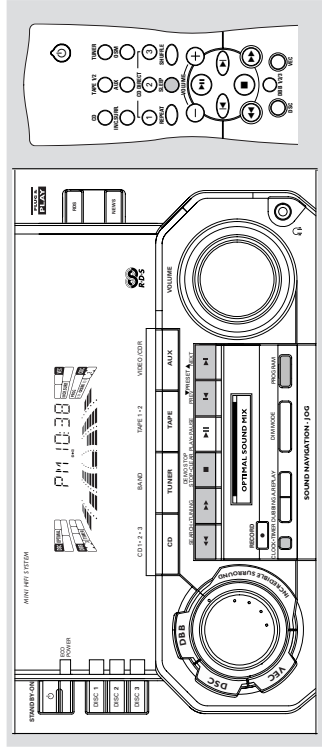


English

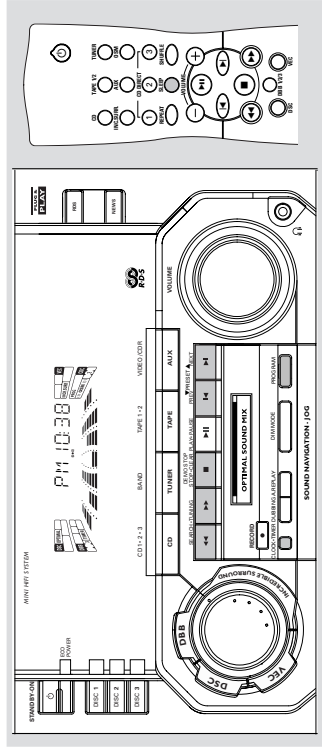


English

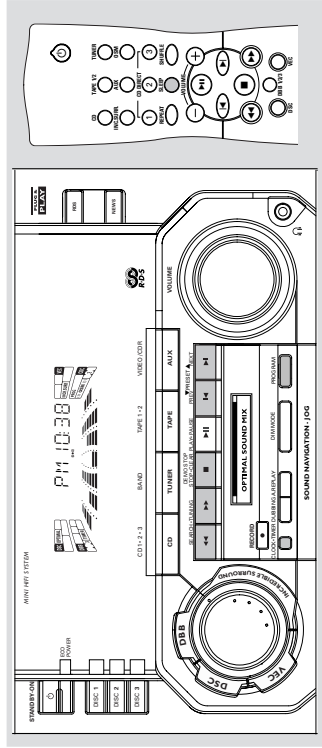


English

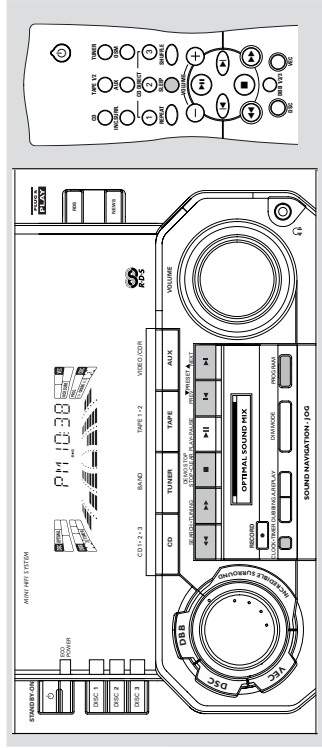


English

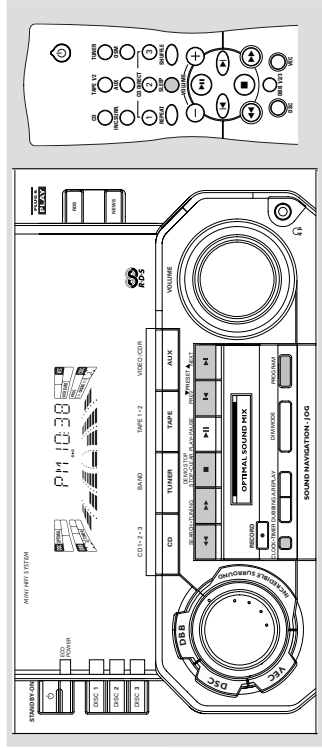


English

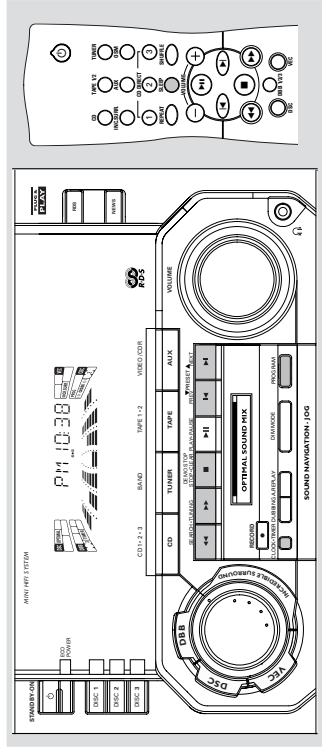


English

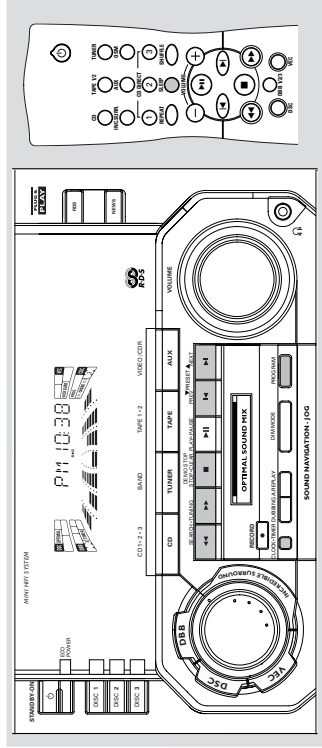


English

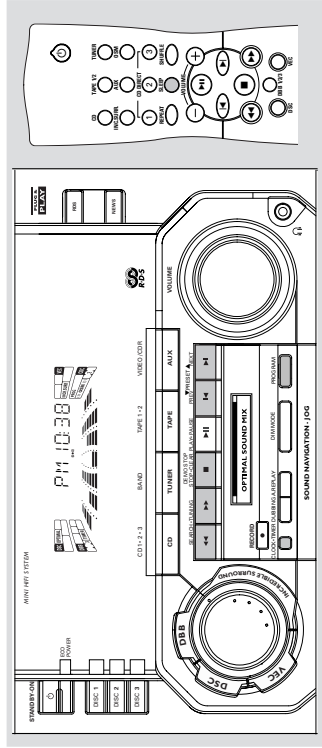


English

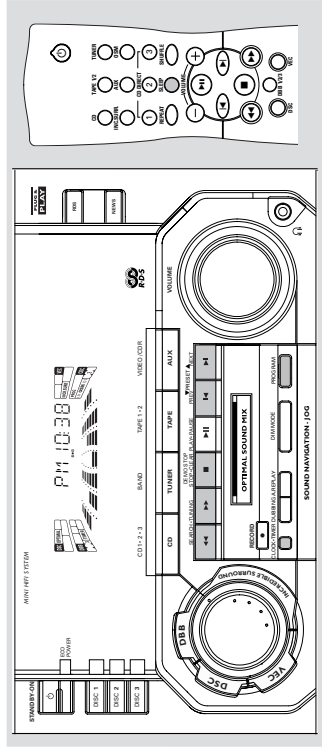


English

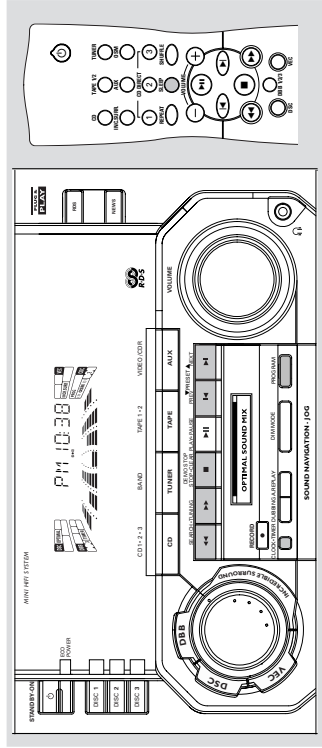


English

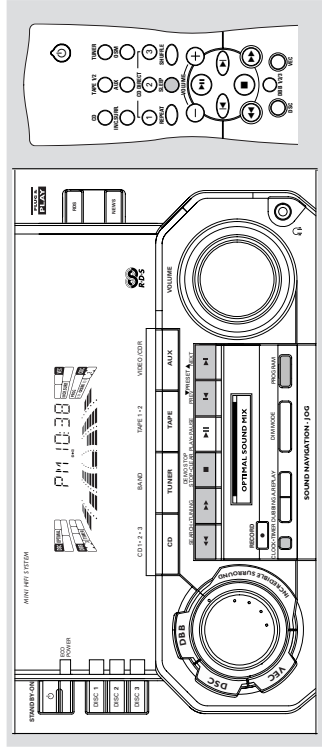


English

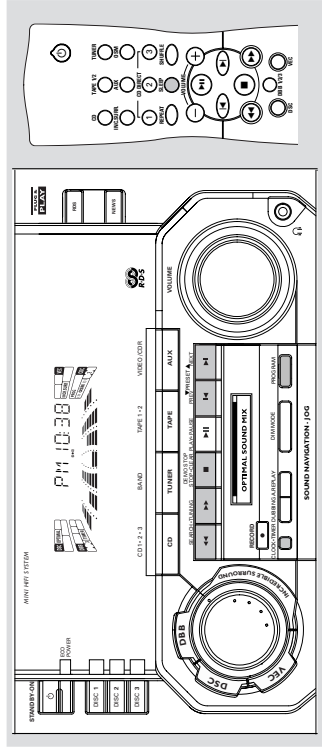


English

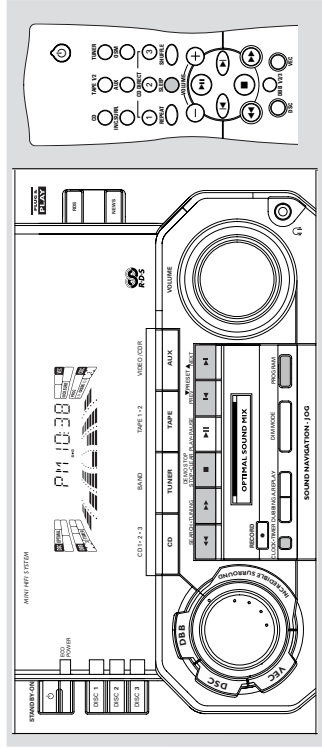


English

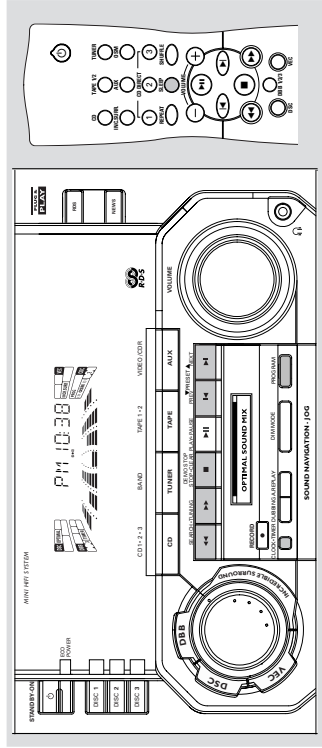


English

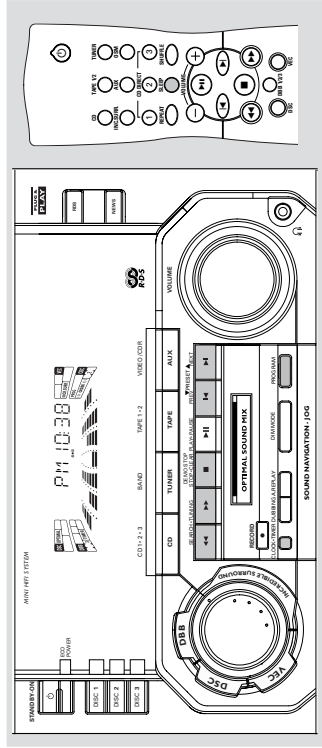


English

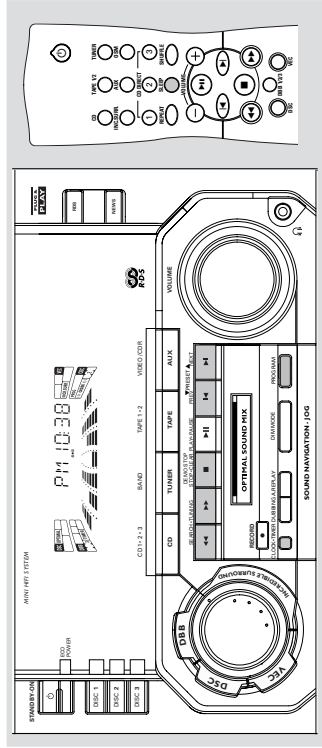


English

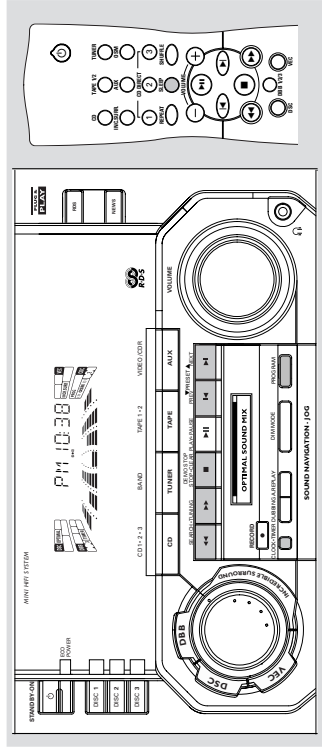


English

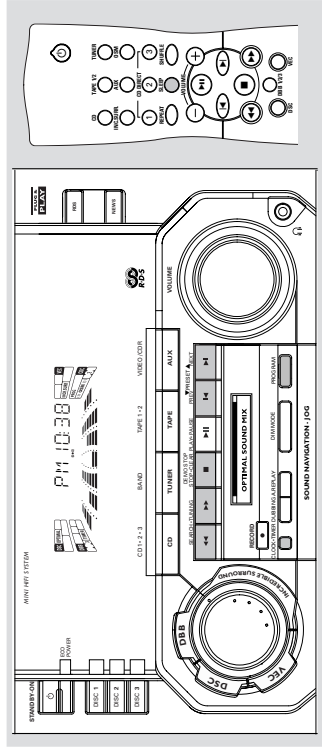


English

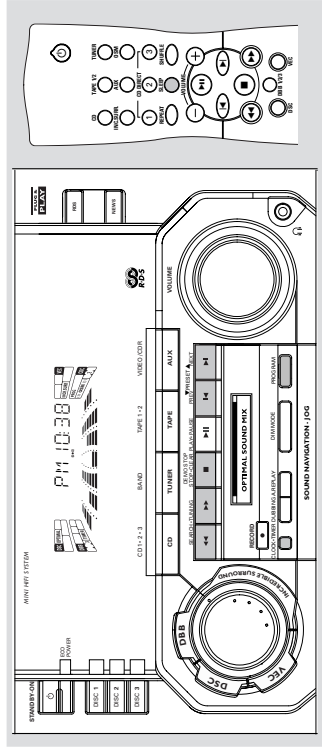


English

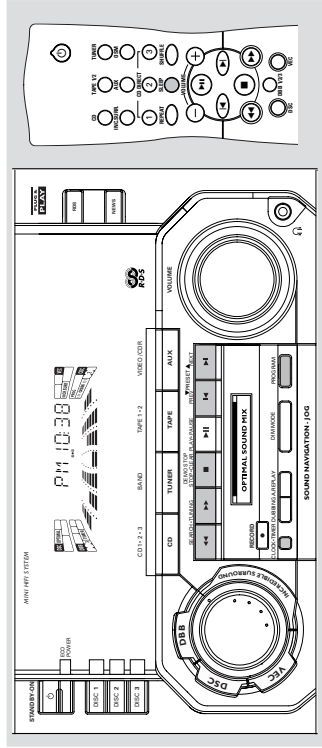


English

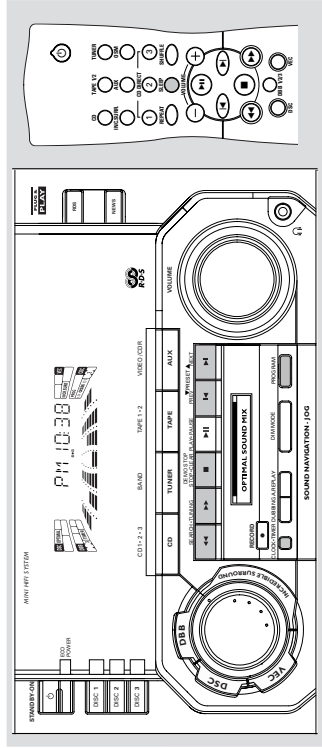


English

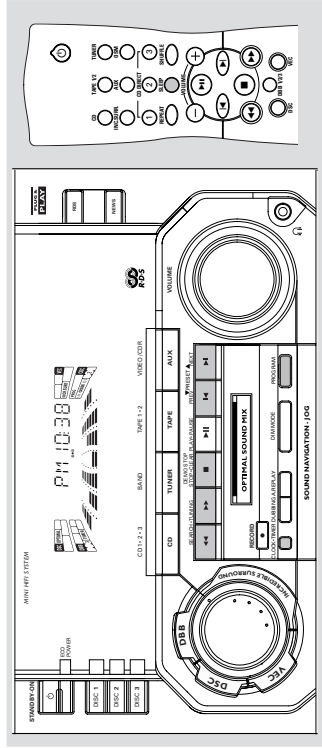


English

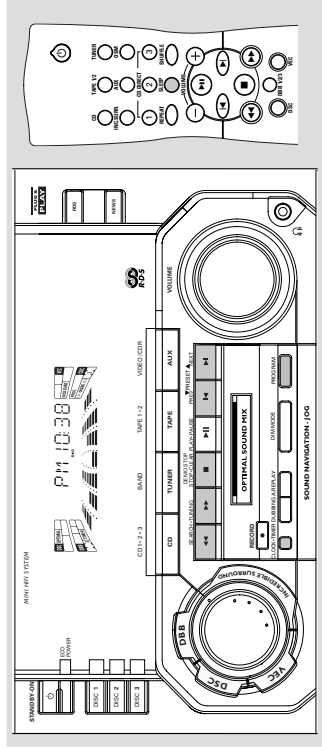


English

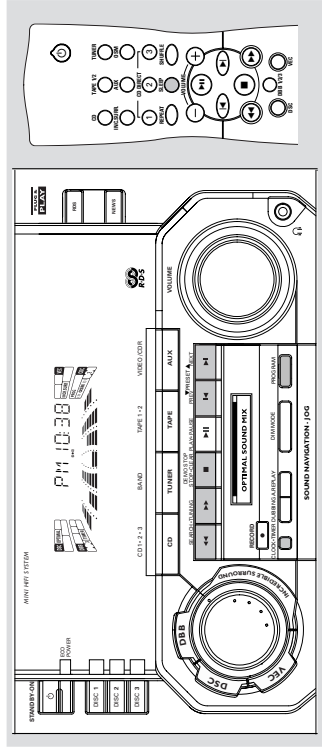


English

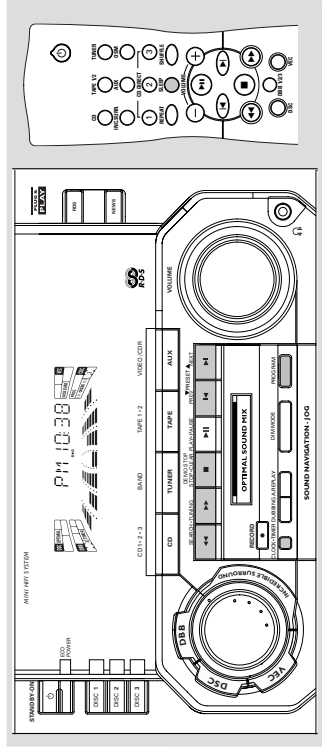


English

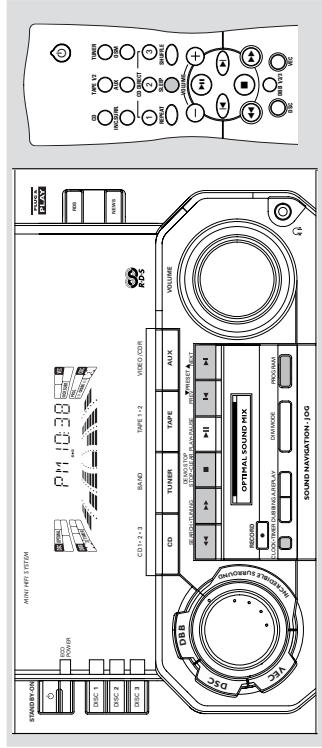


English

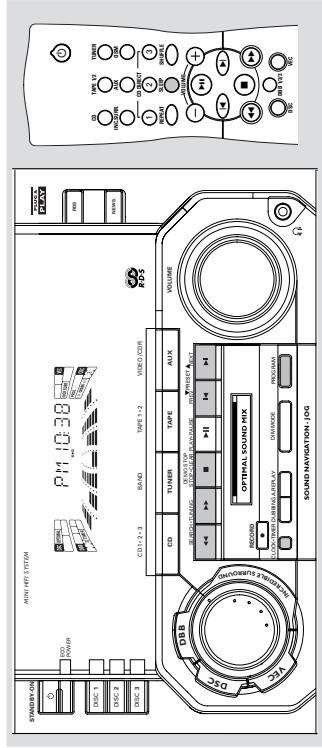


English

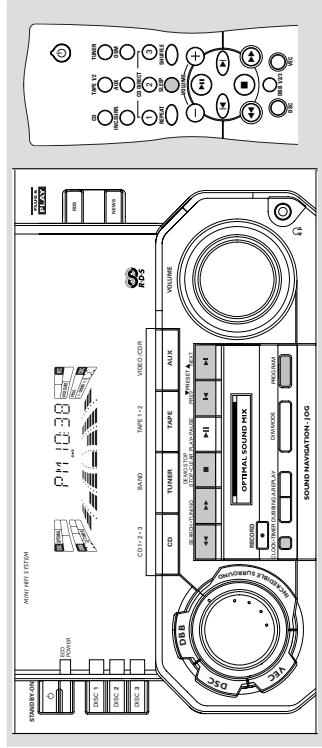


English

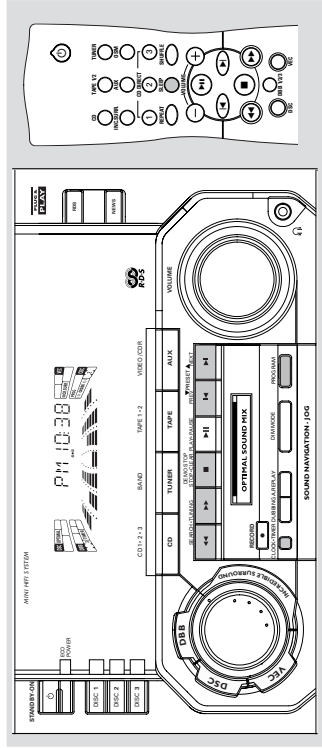


English

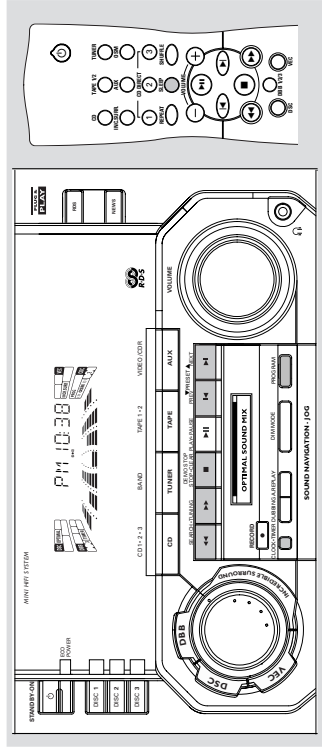


English

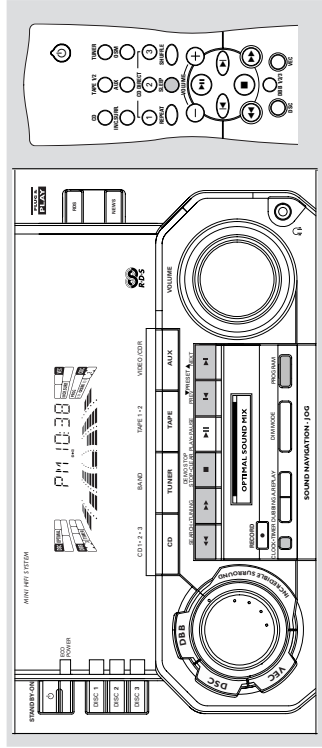


English

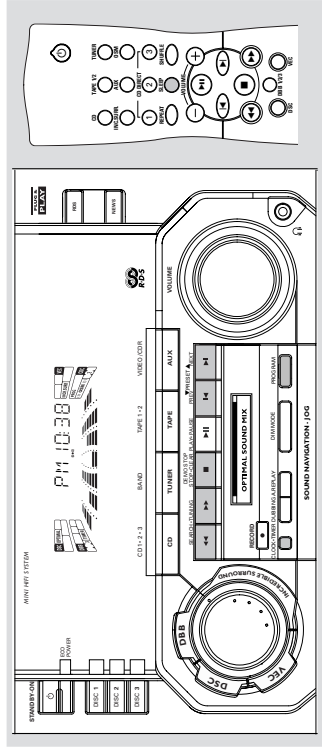


English

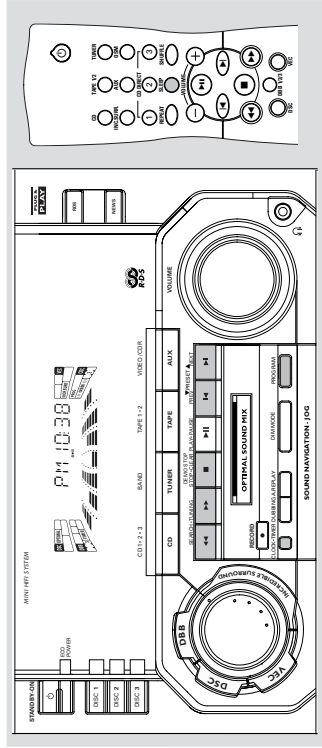


English

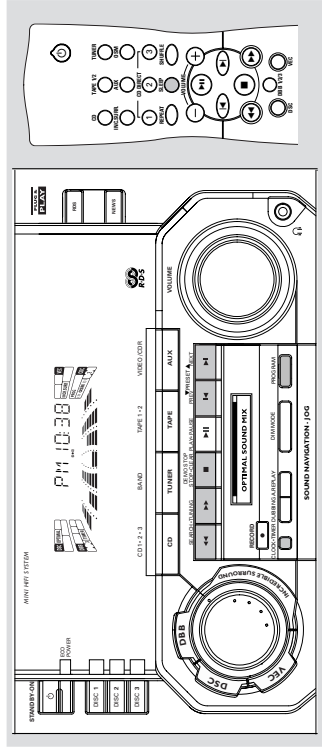


English

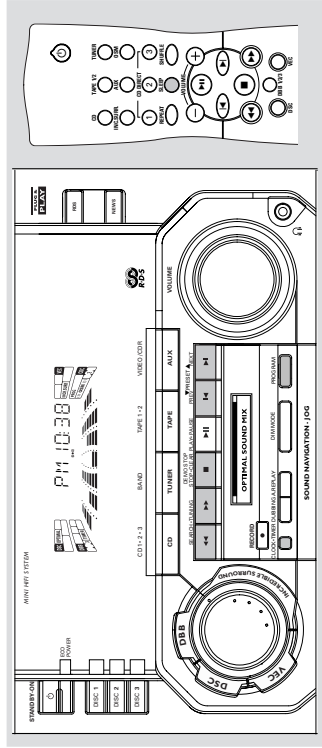


English

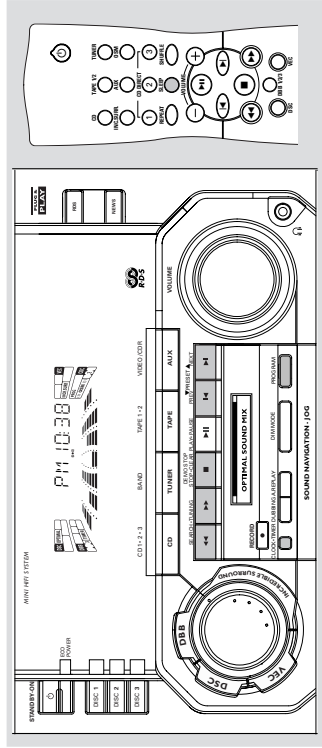


English

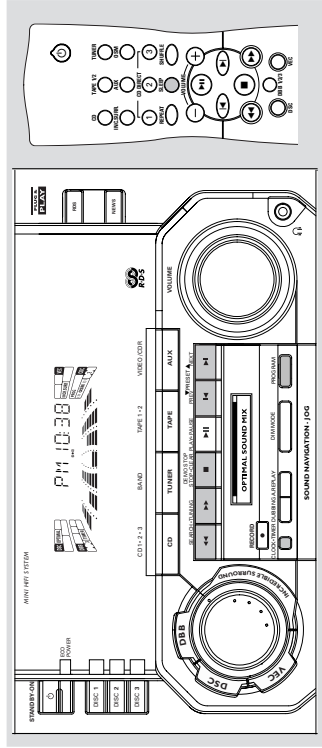


English

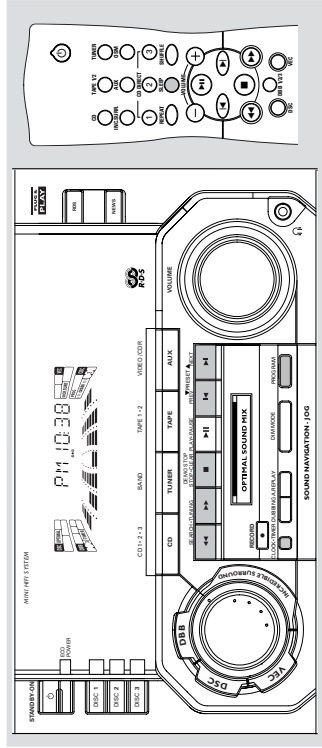


English

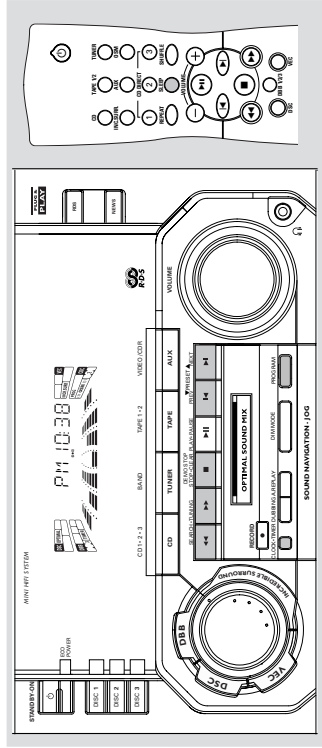


English

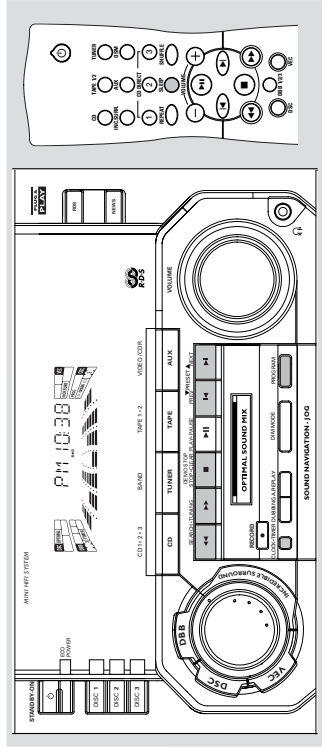


English

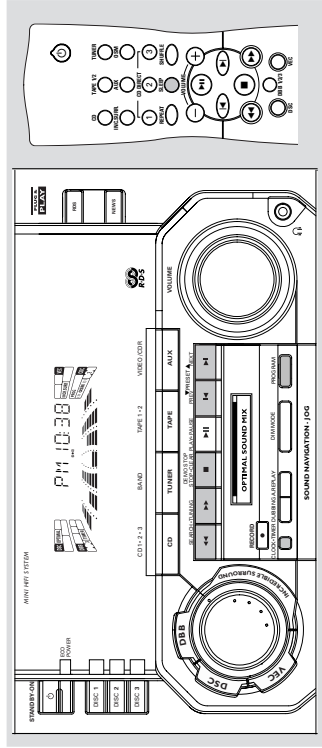


English

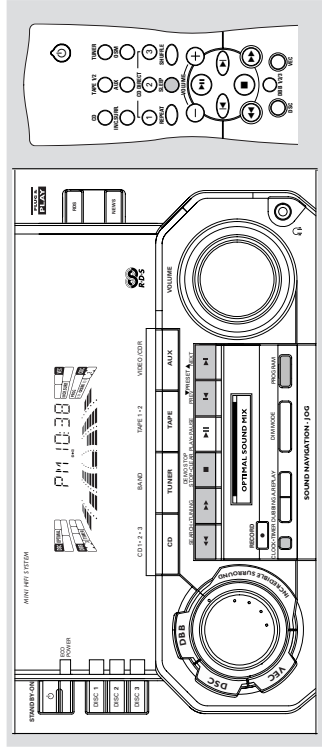


English

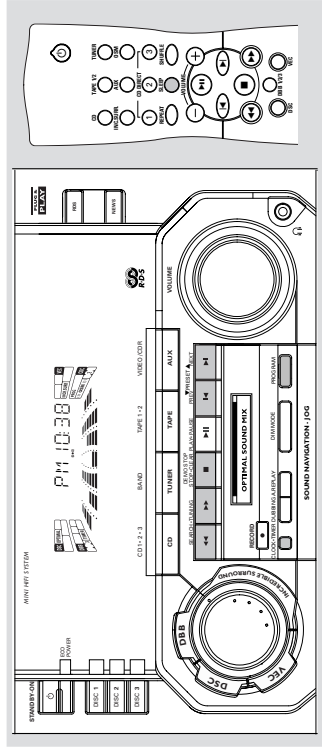


English

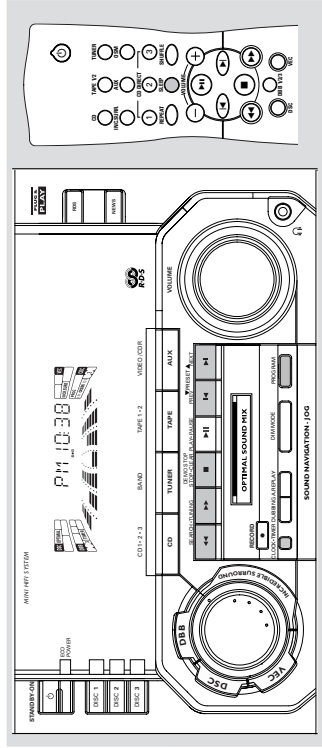


English

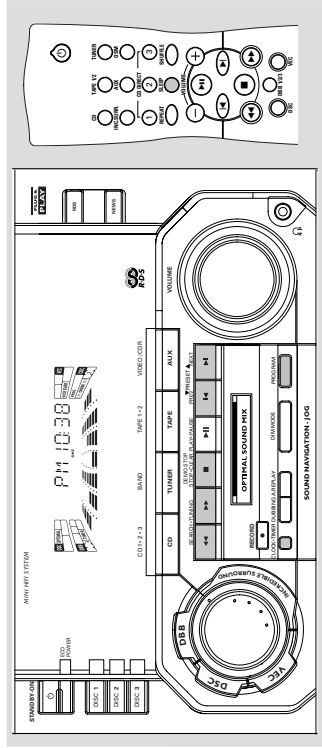


English

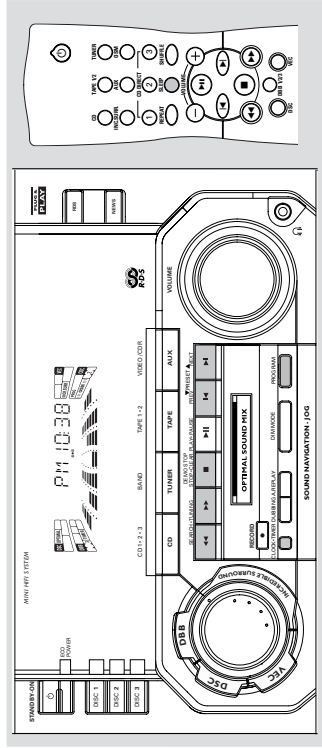


English

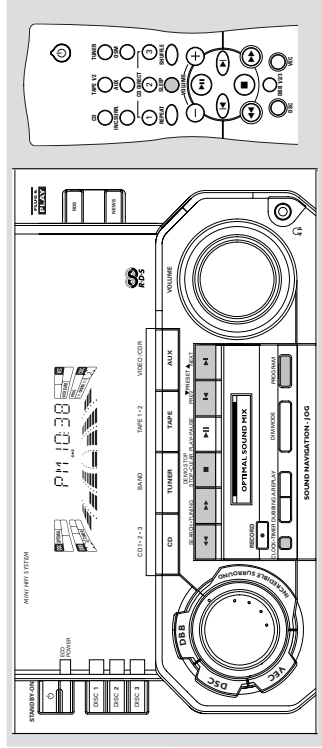


English

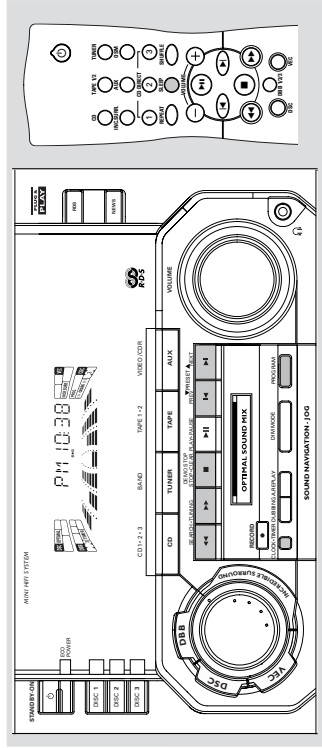


English

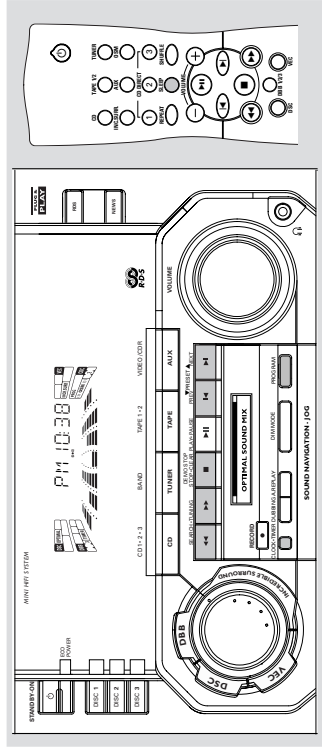


English

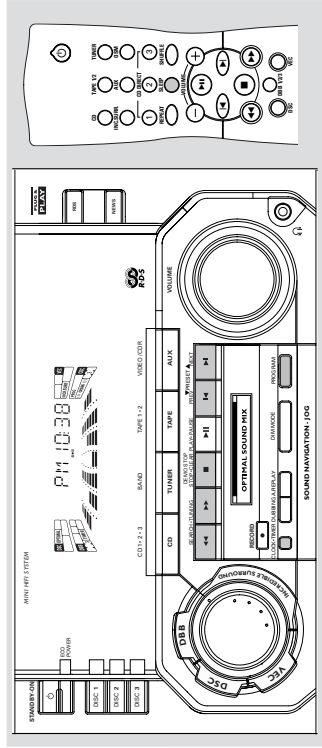


English

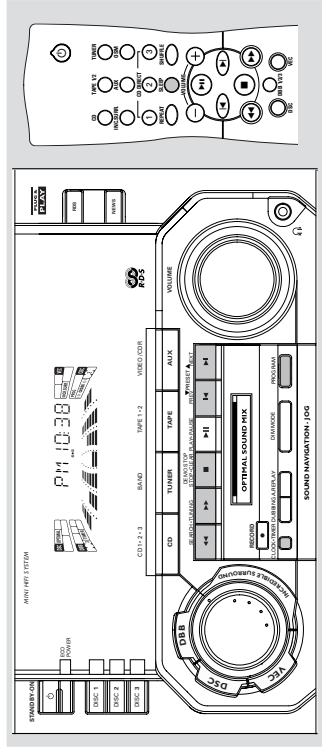


English

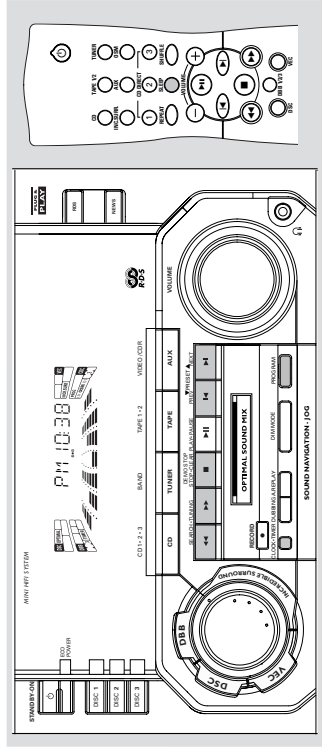


English

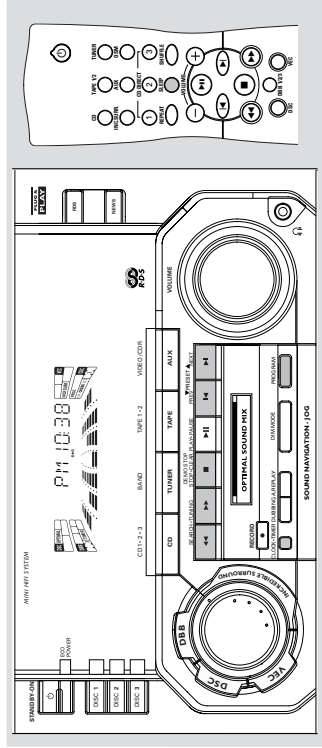


English

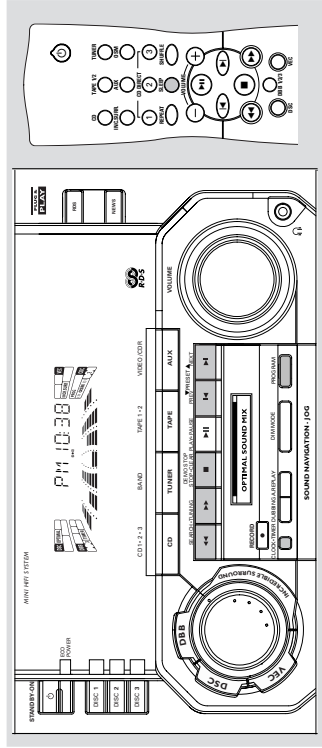


English

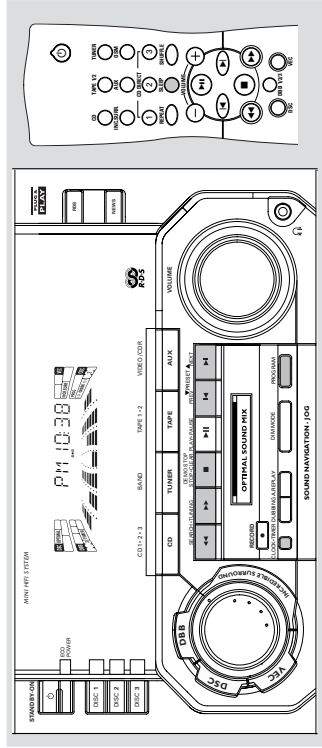


English

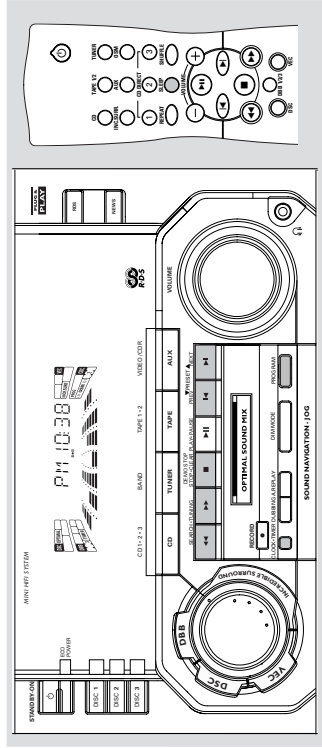


English

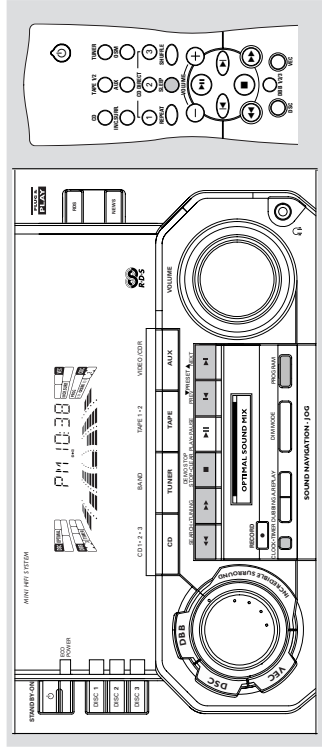


English

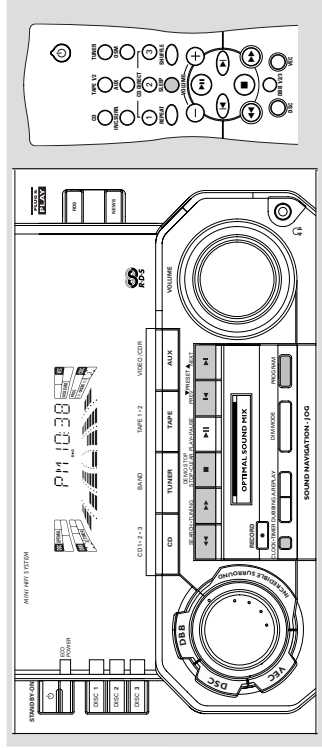


English

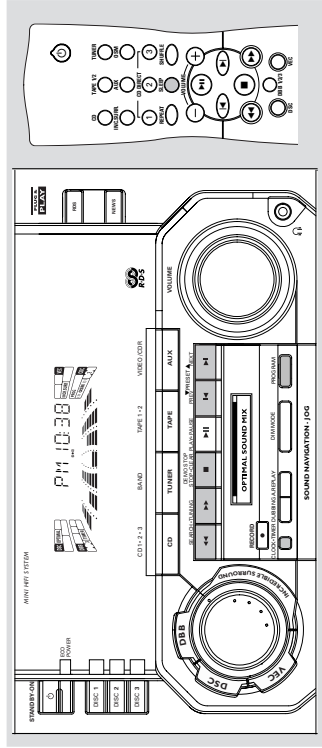


English

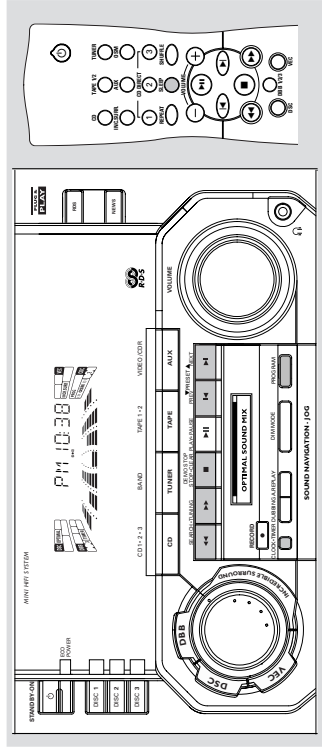


English

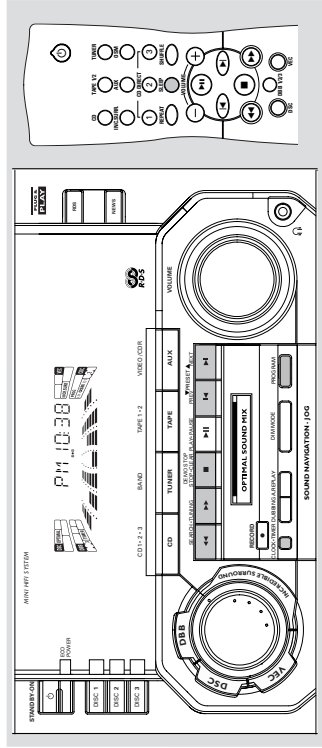


English

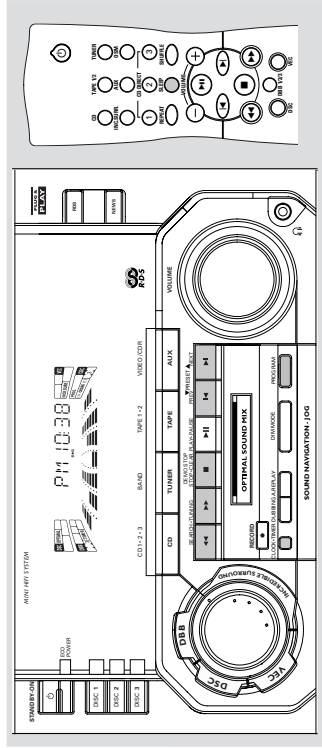


English

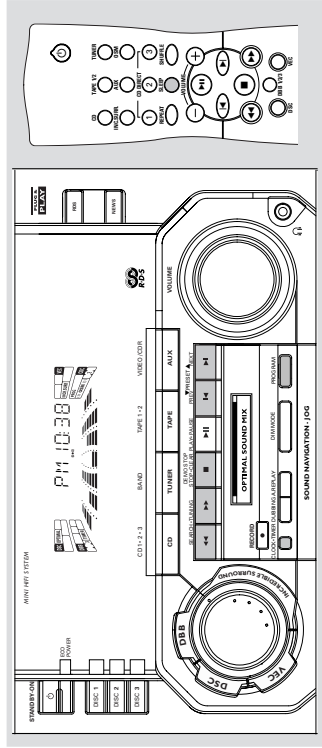


English

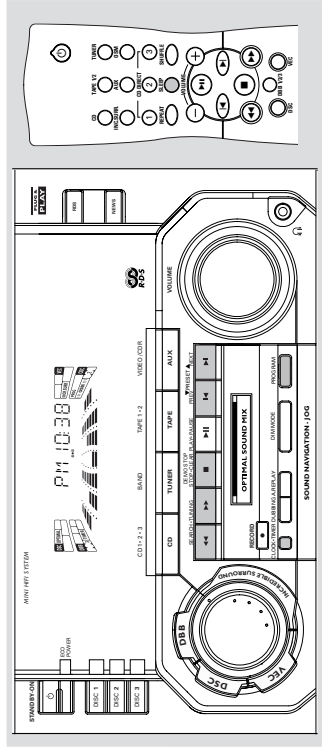


English

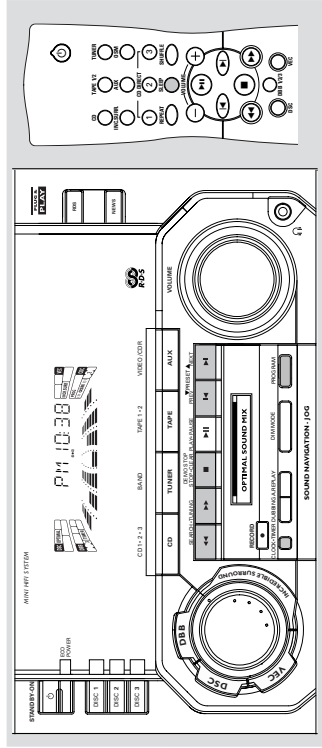


English

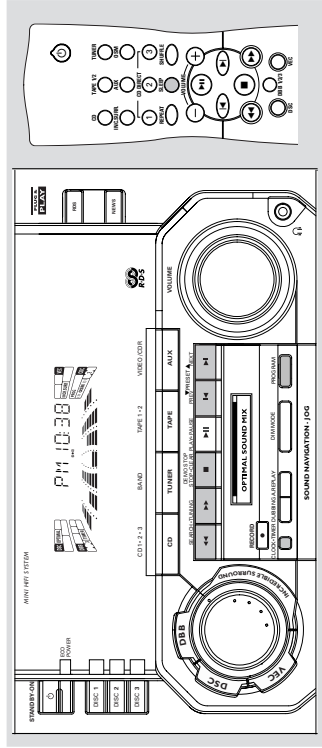


English

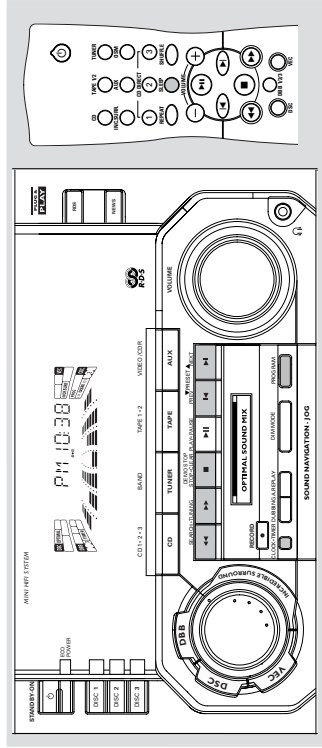


English

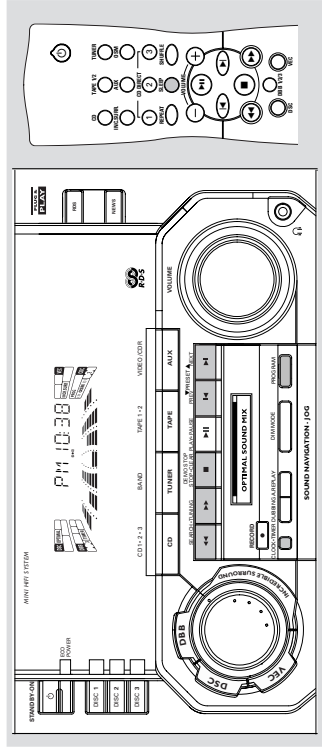


English

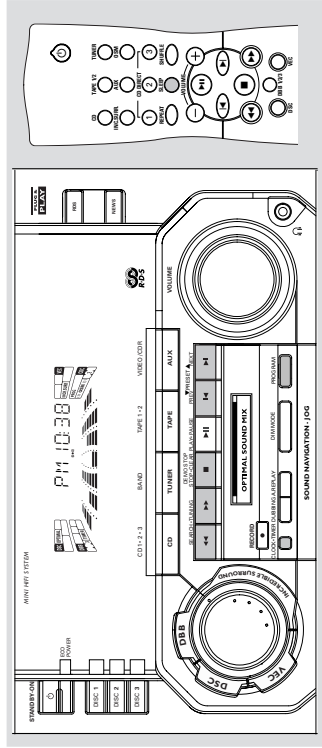


English

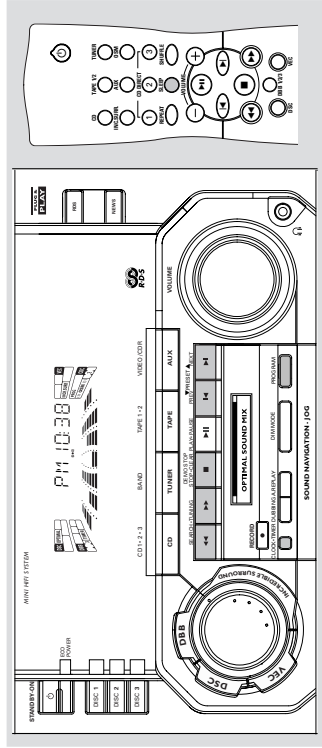

English

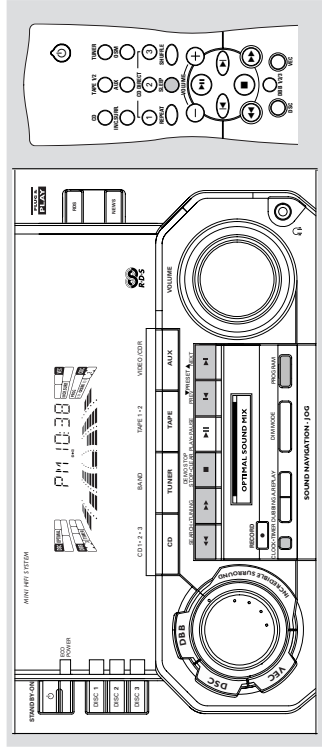

English

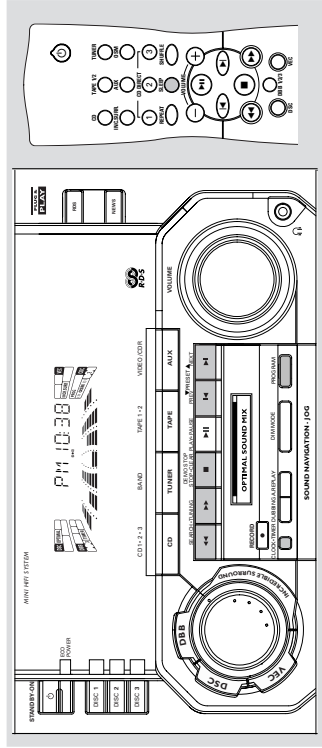

Sleep Timer *(only on remote control)*

This feature allows you to select a length of time after which the system will switch to the standby mode automatically.

- 1 Press **SLEEP** on the remote control repeatedly to select a period of time.
 - The selections are as follows (time in minutes): 15 → 30 → 45 → 60 → OFF → 15 ...
 - "SLEEP :;:" or "OFF" will be displayed ";;;" is the time in minutes.
- 2 When you reach the desired length of time, stop pressing the **SLEEP** button.
 - The **SLEEP** display lights up.
 - The Sleep Timer is now set. Before the system switches to standby mode, a countdown of 10 seconds will be displayed.
 - "SLEEP 10" → "SLEEP 9" ... → "SLEEP 1" → "SLEEP"

While SLEEP mode is activated

- Press **SLEEP** once to view the remaining length of time.
- Press **SLEEP** twice to change the pre-selected period of time.
- The display will show the remaining time followed by the sequence of sleep timer options.

To switch off the Sleep Timer

- Press **SLEEP** repeatedly until "OFF" is displayed, or press the **STANDBY-ON** button.

- 3 Press **◀** or **▶** on the system to set the hour for the timer to start.
- 4 Press **⏪** or **⏩** on the system to set the minute for the timer to start.
- 5 Press **CLOCK-TIMER** to store the start time.
 - The timer is now set.
 - The **TIMER** remains on the display.
 - At the preset time, the timer will be activated.
 - The selected source will be played.

Notes:

- During timer setting, if no button is pressed within 90 seconds, the system will exit timer setting mode automatically.
- If the source selected is **TUNER**, the last tuned frequency will be switched on.
- If the source selected is **CD**, playback will begin with the first track of the selected disc or programme. If the disc trays are empty, the **TUNER** will be selected instead.
- The timer will not activate if a recording is in progress.

To switch off the TIMER

- 1 Press and hold **CLOCK-TIMER** for more than 2 seconds.
- 2 Press **■** on the system to cancel the timer.
 - The timer is now switched off.
 - The display will show "OFF" and the **TIMER** disappears.

To start the TIMER again *(for the same preset time and source)*


- 1 Press and hold **CLOCK-TIMER** for more than 2 seconds.
- 2 Press **CLOCK-TIMER** again to store the start time.
 - The timer is now on.
 - The **TIMER** appears on the display.

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analog records.

Cleaning the Disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads, the capstan(s), and pressure roller(s) after every 50 hours of tape operation. Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You can also clean the heads by playing a cleaning tape once.

Demagnetizing the heads

- Use a demagnetizing tape available at your dealer.

Troubleshooting

WARNING

Do not open the player as there is a risk of electric shock! Under no circumstances should you try to repair the player yourself, as this will invalidate the warranty

If a fault occurs, first check the points listed below before taking the player for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

Symptom

Remedy

"NO DISC" is displayed.

- If the disc is inserted upside down.
- Moisture condensation at the lens.
- There is no disc in the CD tray.
- The disc is dirty, badly scratched or warped.
- The disc lens is dirty or dusty, refer to section under Maintenance.

"DISC NOT FINALIZED" is displayed.

- The CD-RW or CD-R disc is not properly recorded for use with a standard CD player.
- The disc is badly scratched or dirty.

Poor radio reception.

- The signal is too weak, adjust the antenna or connect an external antenna for better reception.
- The TV or VCR is too close to the stereo system.


Troubleshooting

English

Recording or playback cannot be made or there is a decrease in audio level.	<ul style="list-style-type: none"> - Dirty tape heads, capstans or pressure rollers, refer to section under Maintenance. - Magnetic build-up in the record/playback head, use demagnetizing tape.
Tape deck door cannot open.	<ul style="list-style-type: none"> - Reconnect the AC power plug and switch on the system again.
System does not react when any button is pressed.	<ul style="list-style-type: none"> - Press STANDBY-ON to switch the system off. Remove the AC power plug from the wall outlet, then reconnect the power plug and switch on the system again.
No or poor sound.	<ul style="list-style-type: none"> - Adjust the volume. - Disconnect the headphones. - Check that the speakers are connected correctly. - Check if the stripped speaker wire is clamped.
Reversed left and right sound.	<ul style="list-style-type: none"> - Check the speaker connections and location.
Lack of bass sound or apparently imprecise physical location of musical instruments.	<ul style="list-style-type: none"> - Check the speaker connection for proper phasing, colored/black wires to colored/black terminals.
Remote control has no effect on the system.	<ul style="list-style-type: none"> - Select the source (CD, TUNER, etc.) before pressing the function button (▶, ◀, ▲, ▼, etc.). - Reduce the distance to the system. - Insert the batteries with their polarities (+ / - signs) as indicated. - Replace the batteries.
Timer is not working.	<ul style="list-style-type: none"> - Set the clock. - Press CLOCK+TIMER to switch on the timer. - If recording is in progress, stop recording.
Clock setting is erased.	<ul style="list-style-type: none"> - Reset the clock.
System displays features automatically; buttons flash continuously.	<ul style="list-style-type: none"> - Press and hold ■ (on the system) for five seconds to switch off the demonstration.
All lighted buttons are not lit.	<ul style="list-style-type: none"> - Press DIM until DIM OFF display mode is shown.

Additional Features For FW-C380/21 Preparations

English

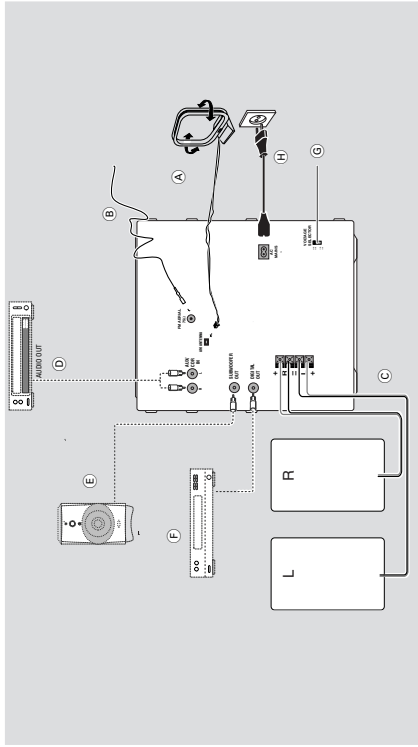

Rear Connections

Ⓒ Adjusting the Operating Voltage

(for I21 version only)

Before connecting the AC power cord to the wall outlet, make sure that the voltage selector at the rear of the system is set to the local power line voltage. If not, reset the selector before connecting to the wall outlet.

Ⓓ AC Power Supply

After all other connections have been made, connect the AC power cord to the system and to the wall outlet.


Microphone Mixing

(for I21 version only)

- 1 Set the **MIC LEVEL** control to the minimum level to prevent acoustic feedback (e.g. a loud howling sound) before you connect the microphone.
- 2 Connect a microphone to the **MICROPHONE** socket.
- 3 Press **CD, TUNER TAPE** or **AUX**.
- 4 Play the selected source.
- 5 Adjust the volume level with **VOLUME** control.
- 6 Adjust the **MIC LEVEL** control to the mixing level that you want.
- 7 Start singing or talking through the microphone.

Note:

- Keep the mic away from the speakers to prevent howling.

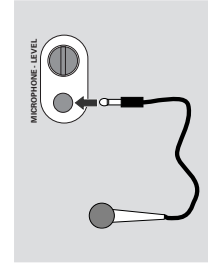

Karaoke

Additional Features For FW-C380/21 Tuner

English

Changing the MW tuning grid

(for I21 version only)

The frequency step can be changed if necessary. In North and South America, the frequency step between adjacent channels in the MW band is 10 kHz. In other parts of the world, it is 9 kHz. The frequency step preset in the factory is 9 kHz.

For MW Band

To change from 9 kHz to 10 kHz or vice versa

Changing of tuning grid will erase all previously stored preset stations.

- 1 Disconnect the system from the AC power supply (pull out the AC power cord).
- 2 Press and hold **TUNER** and **TUNING >>** while reconnecting the system to the AC power supply.


→ Display will show "GRID 9" or "GRID 5".

Notes:


- **GRID 9** indicates that the tuning grid is in step of 9 kHz in MW band. **GRID 10** indicates that the tuning grid is in step of 10 kHz in MW band.
- **FM tuning grid will also be changed from 50 kHz to 100 kHz or vice versa.**

DISMANTLING INSTRUCTIONS

Dismantling of the Cassette Cover

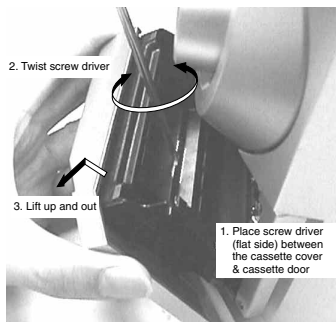

Remove Cassette Cover

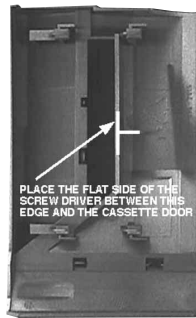

Cassette Cover


Dismantling of the CDC Module and Front Panel

- 1) Loosen 4 screws to remove the Cover Top (pos 255) of the set.
- 2) Loosen 2 screws to remove the Panel Left (pos 253) and 2 screws to remove the Panel Right (pos 254) of the set.
- 3) Slide out the CDC Tray as shown in the diagram below with the help of a flat head screw driver.



Sliding Out The CDC Tray

- 4) Remove the Cover Tray CDC (pos 106) as indicated.

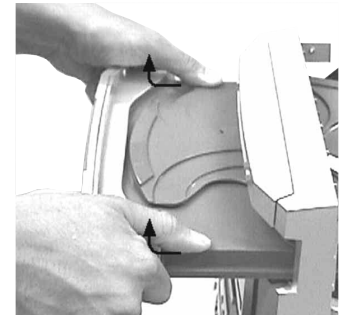


Remove Cover Tray CDC

- 5) Loosen 2 screws A and 2 screws B to remove the CDC Module (pos 1105) as indicated.
- 6) Remove 2 screws (pos 226) at the bottom to separate the Front Panel Assembly from the Plate Bottom (pos 265).



Front View CDC

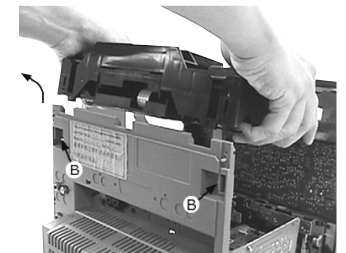


Remove CDC Module


Dismantling of the CDC Module and Front Panel

Dismantling of the Front Board


- 1) Remove 1 screw C as indicated to loosen the Headphone Board (pos 1101-C).
- 2) For set without Karaoke:
Remove 11 screws D and 2 screws E as indicated to loosen the Front Board (pos 1101-A).
- For set with Karaoke:
Remove 11 screws D as indicated to loosen the Front Board (pos 1101-A) and 2 screws E as indicated to loosen the Karaoke Board (pos 1101-D).

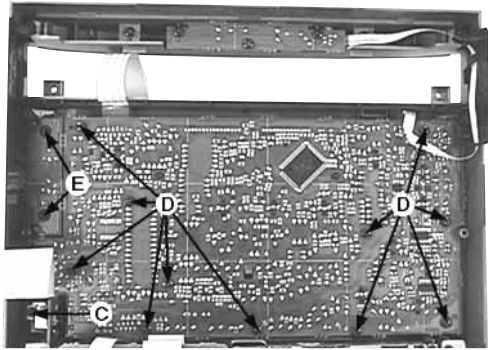**Dismantling of the ETF Tape Module**


- 1) Remove 6 screws G as indicated to loosen the ETF Tape Module (pos 1104).

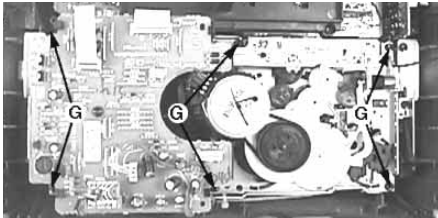**Dismantling of Rear Portion**

- 1) Remove 3 screws J and uncatch M1 as indicated to loosen the AF Board (pos 1102).
- 2) Remove 3 screws K and uncatch M2 as indicated to loosen the Tuner Board (pos 1103).
- 3) Remove 4 screws L as indicated to loosen the Panel Rear (pos 256).

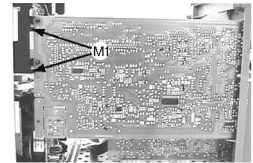


Remove AF Board

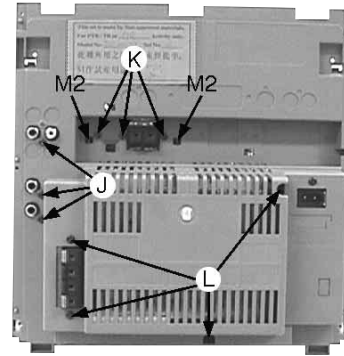
**Repair Hints**

- 1) The Knob Volume (pos 139) can be remove by inserting a strong string into the slot and pull it out in the direction as indicated. See picture 1.
- 2) The Knob Rotary (pos 138) can be remove by inserting a strong string into the slot and pull it out in the direction as indicated. See picture 2.

Picture 1

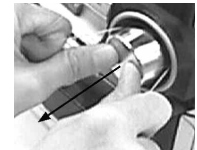

Picture 2

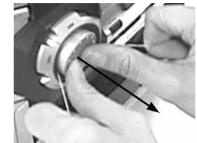


Repair Hints

3) During repair it is possible to disconnect the Tuner board and CDC Module completely unless the fault is suspected to be in that area. This will not affect the performance of the rest of the set.


4) Due to the short flex cable wires in the ETF Module, the pc board should be disconnected and reconnected on the reverse side of the tape mechanism to keep it electrically connected during repair. See picture 3.

Note: The flex cables are very fragile, care should be taken not to damage them during repair. After repair, be very sure that the flex cables are inserted properly into the flex sockets before encasing, otherwise faults may occur.


Picture 3

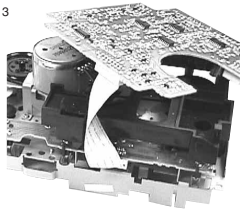


Service pos A

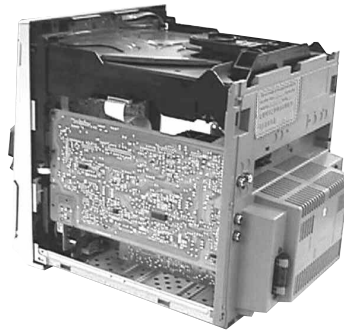


Service pos B

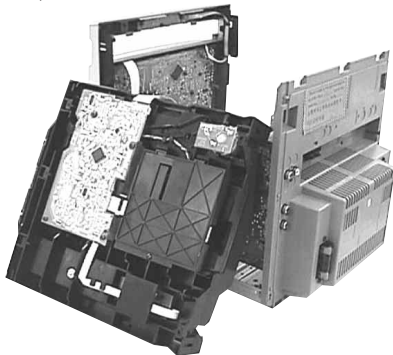



Service pos C

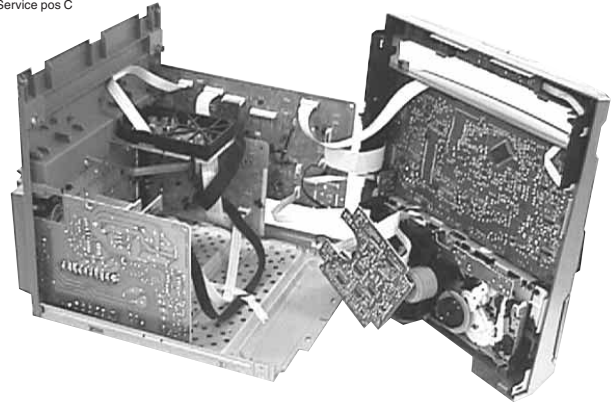

Service pos D

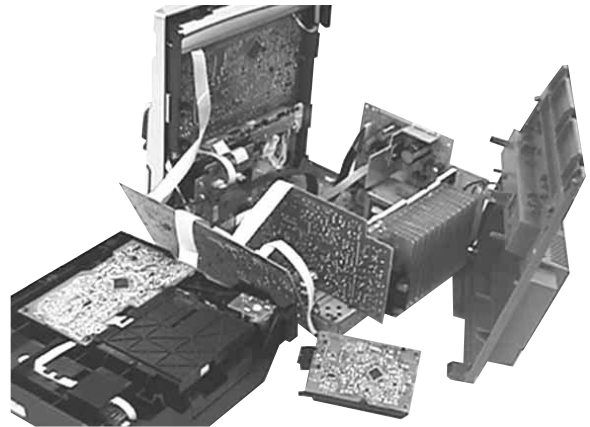

SERVICE TEST PROGRAM

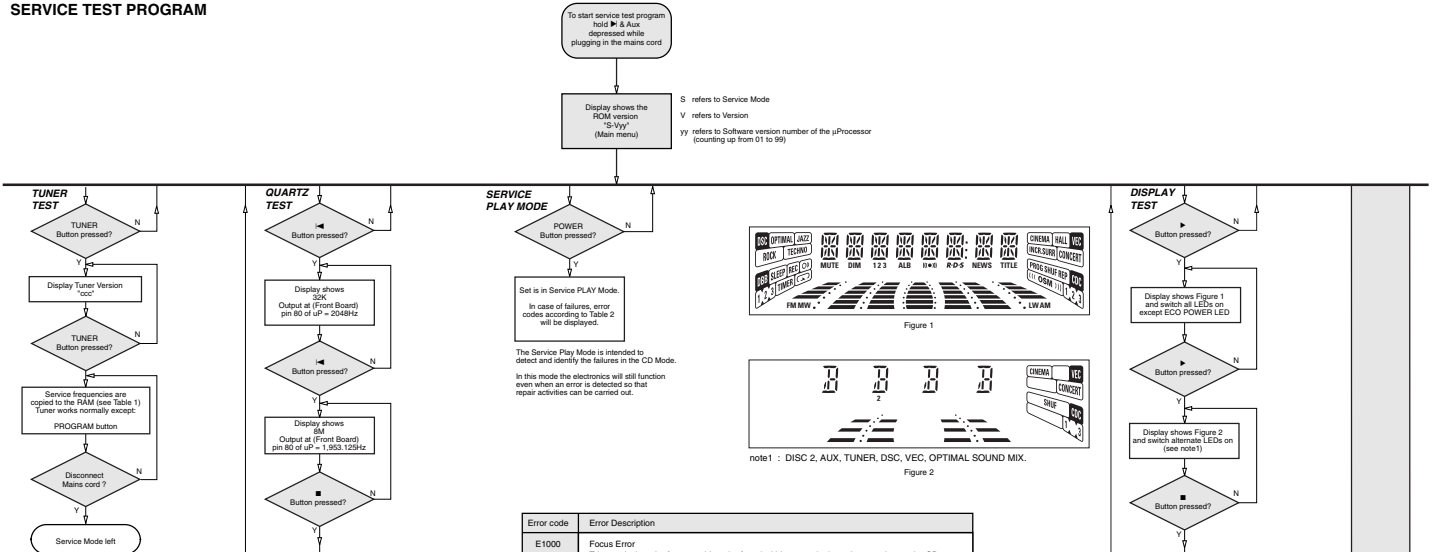

PRESET	Europe "EUR"	East Eur. "EAS"	East Eur. Extended-band "EAS"	USA "USA"	Oceania "OSE"
1	87.5MHz	87.5MHz	65.81MHz	87.5MHz	87.5MHz
2	108MHz	108MHz	108MHz	108MHz	108MHz
3	531kHz	531kHz	74MHz	530kHz	531/530kHz*
4	1602kHz	1602kHz	87.5MHz	1700kHz	1602/1700kHz*
5	558kHz	558kHz	531kHz	560kHz	558/560kHz*
6	1494kHz	1494kHz	1602kHz	1500kHz	1494/1500kHz*
7	153kHz	87.5MHz	558kHz	98MHz	87.5/98MHz*
8	279kHz	87.5MHz	1494kHz	87.5MHz	87.5MHz
9	198kHz	87.5MHz	98MHz	87.5MHz	87.5MHz
10	98MHz	87.5MHz	70.01MHz	87.5MHz	87.5MHz
11	87.5MHz	98MHz	65.81MHz	87.5MHz	98/87.5MHz*

Table 1


Note: * Depending on the selected grid frequency (9 or 10kHz)
By holding the TUNER and **▶** buttons depressed while switching on the Mains supply, one of the undermentioned features will be activated:
- the tuning grid frequency is toggled between 9kHz and 10kHz for the Oversea (21) version.
- the extended FM1 (65.81MHz - 74MHz) is toggled on and off for East Eur. (34) version.

Error code	Error Description
E1000	Focus Error Triggered when the focus could not be found within a certain time when starting up the CD or when the focus is lost for a certain time during play.
E1001	Radial Error Triggered when the radial servo is off-track for a certain time during play.
E1002	Sledge In Error The sledge did not reach its inner position (inner-switch is still open) before approximately 6 Sec. have passed by. Inner-switch or sledge motor problem.
E1003	Sledge Out Error The sledge did not come out of its inner position (inner-switch is still open) before approximately 250 mSec. have passed by. Inner-switch or sledge motor problem.
E1005	Jump-off-track error Triggered in normal play when the jump destination could not be found within a certain time. When this error occurred, software will try to recover by initiating the jump command again. If it is recoverable, the disc will continue to play.
E1006	Subcode Error Triggered when a new subcode was missing for a certain time during play.
E1007	PLL Error The Phase Lock Loop could not lock within a certain time.
E1008	Turntable Motor Error Generated when the CD could not reached 75% of speed during startup within a certain time. Discmotor problem.
E1020	Focus Search Error The focus point has not been found within a certain time.
E1070	The carousel switch is not open within certain time. This can happen when either the switch is defective and closed all the time, or when the carousel is blocked when located exactly at a disc position.
E1071	The carousel position switch did not close within a certain time. This can happen when the switch is defective and never closes electrically, or when the carousel is blocked in between two disc positions. The time-out is approximately 5 Sec.
E1079	The drawer could not enter the inside position is opening again. This can be caused because the drawer is blocked by something and cannot go fully inside, or the drawer switch is defective and does not close.


Table 2

TEST	Activated with	ACTION
EEPROM TEST	▶▶	A test pattern will be sent to the EEPROM. "PASS" is displayed if the μ Processor read back the test pattern correctly, otherwise "ERROR" will be displayed.
EEPROM FORMAT TEST	◀◀	Load default data. Display shows "NEW" for 1 second. Caution! All presets from the customer will be lost!!
ROTARY ENCODER TEST	Rotary Volume Knob or Jog Shuffle Knob	Display shows value for 2 seconds. Values increases or decreases in steps of 1 until 0 (Min.) or 40 (Max.) is reached.
LEAVE SERVICE TESTPROGRAM	Disconnect mains cord	

SET BLOCK DIAGRAM

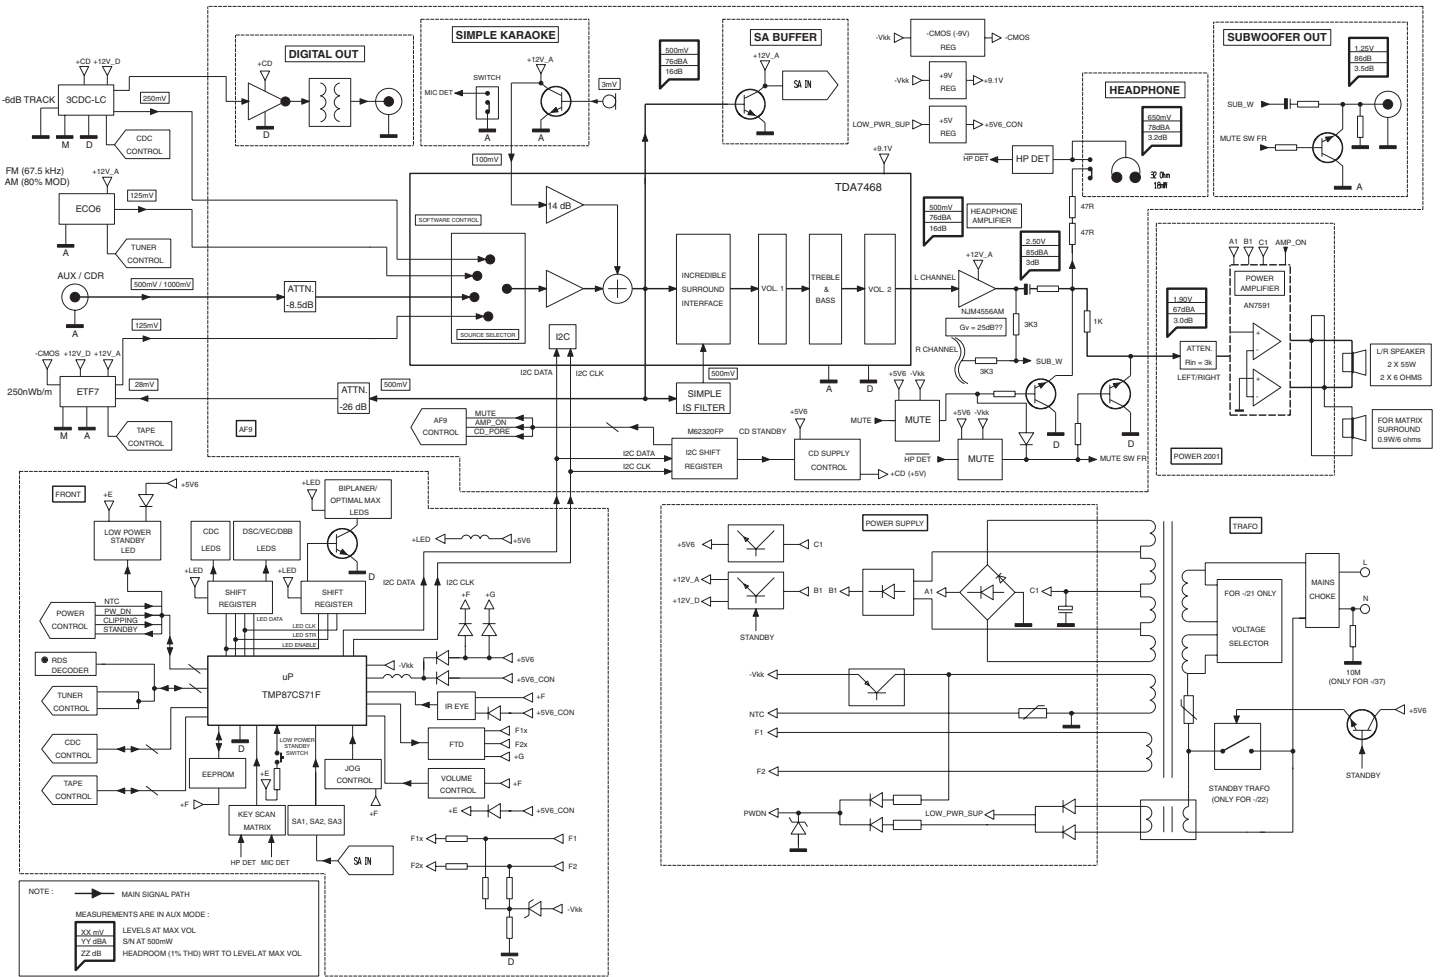

SET WIRING DIAGRAM

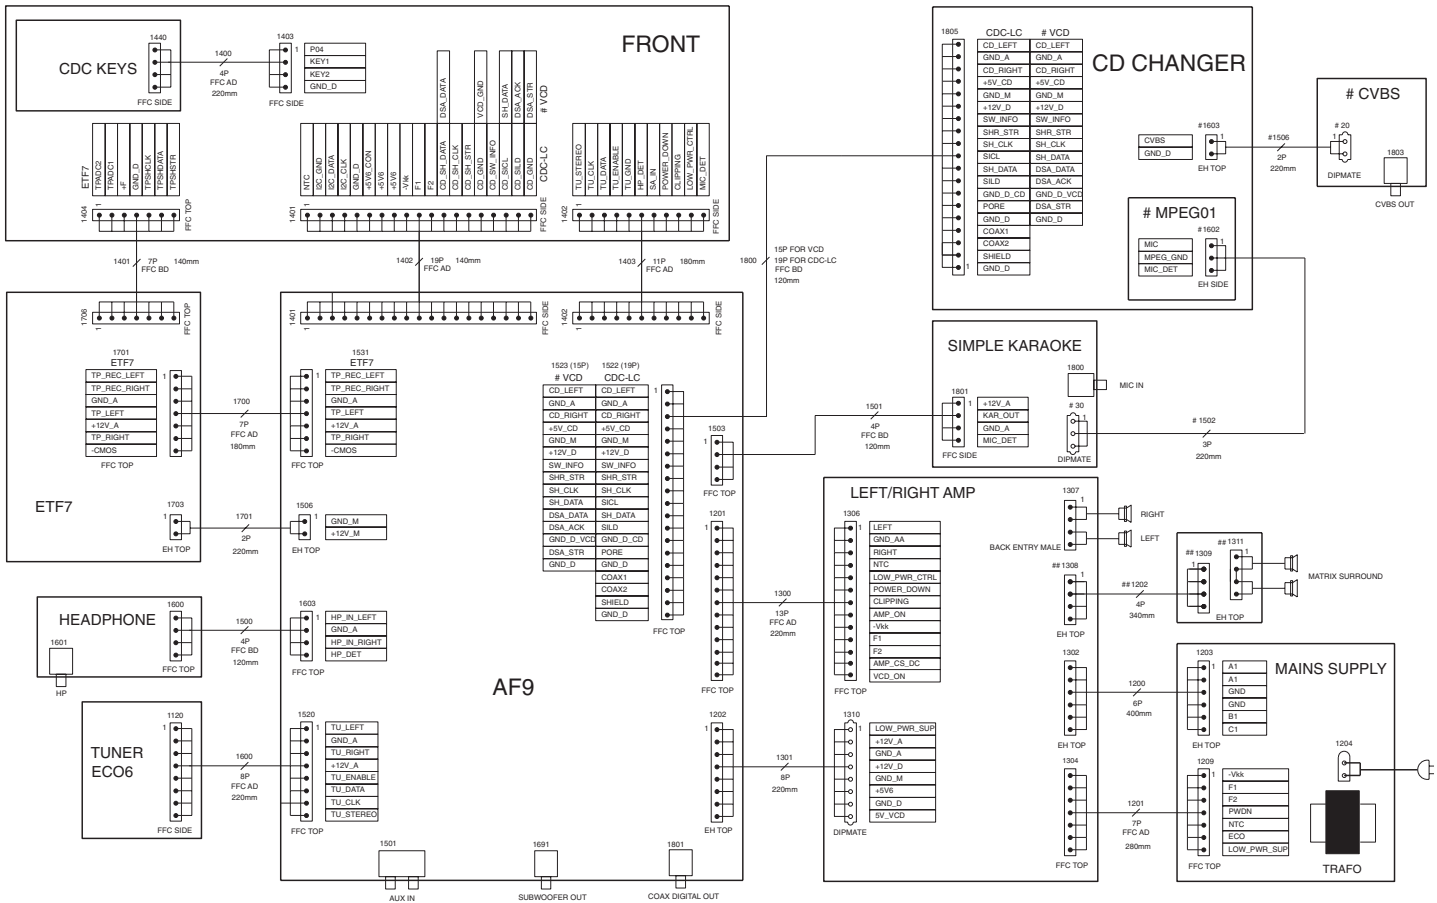



- PROVISION FOR SETS WITH VCD.
 ## - PROVISION FOR SETS WITH MATRIX SURROUND.

FRONT BOARD

TABLE OF CONTENTS

FTD pin connection6-1
 Front Board - Component layout6-2
 Front Board - Chip layout6-3
 Front Board - Circuit diagram6-4
 Front Board Variation Table6-5
 Key-CDC part - Component layout & Circuit diagram6-5
 Headphone part - Layout & Circuit diagram6-6
 Karaoke part - Component & Chip layout6-6
 Karaoke part - Circuit diagram6-7
 Electrical parts list6-8


FTD DISPLAY PIN CONNECTIONS

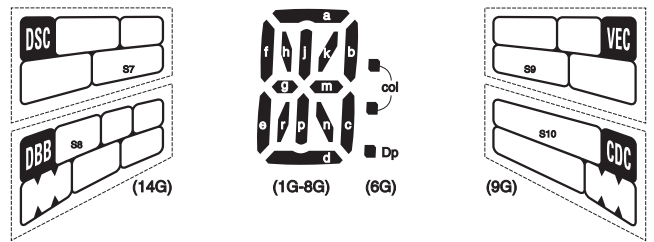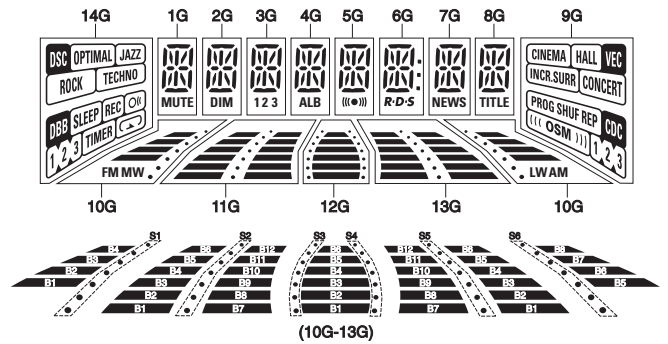

	1G	2G	3G	4G	5G	6G	7G	8G	9G	10G	11G	12G	13G	14G
P1	a	a	a	a	a	a	a	a	CINEMA	B1	B1	B1	B1	S7
P2	h	h	h	h	h	h	h	h	HALL	B2	B2	B2	B2	OPTIMAL
P3	j . p	j . p	j . p	j . p	j . p	j . p	j . p	j . p	S9	B3	B3	B3	B3	JAZZ
P4	k	k	k	k	k	k	k	k	INCR.SURR	B4	B4	B4	B4	ROCK
P5	b	b	b	b	b	b	b	b	CONCERT	S1	B5	B5	B5	TECHNO
P6	f	f	f	f	f	f	f	f	PROG	-	B6	B6	B6	S8
P7	m	m	m	m	m	m	m	m	SHUF	FM	S2	-	S5	SLEEP
P8	g	g	g	g	g	g	g	g	REP	MW	-	-	-	REC
P9	c	c	c	c	c	c	c	c	S10	B5	B7	-	B7	ON
P10	e	e	e	e	e	e	e	e	¹⁰ OSM (●)	B6	B8	-	B8	1
P11	r	r	r	r	r	r	r	r	1	B7	B9	S3	B9	2
P12	n	n	n	n	n	n	n	n	2	B8	B10	S4	B10	3
P13	d	d	d	d	d	d	d	d	3	S6	B11	-	B11	TIMER
P14	MUTE	DIM	1	ALB	((●))	R-D-5	NEWS	TITLE	-	-	B12	-	B12	↶
P15	-	-	2	-	-	ool	-	-	-	LW	-	-	-	➤
P16	-	-	3	-	-	Dp	-	-	-	AM	-	-	-	-


FRONT BOARD - COMPONENT LAYOUT

1400 A3	1412 B4	1424 C4	1437 C5	2439 A1	3407 B7	3493 C7	3556 C2	5406 A3	6413 A6	6425 A5	6437 C2	9405 C6	9417 C1	9430 A2	9446 C2	9458 B3	9470 C3	9485 B4	9497 B5	9509 A7	9521 C5	9534 A4
1401 B7	1413 B4	1425 A7	1438 C5	2449 A6	3408 A6	3499 A3	3561 C5	6400 A2	6414 C4	6426 A5	6438 A6	9406 C5	9418 B1	9432 A2	9447 C2	9459 B3	9471 C3	9486 B4	9498 C5	9510 A7	9522 C6	9535 A4
1402 A6	1414 B3	1426 C3	2400 C3	2454 A6	3410 A5	3502 A3	3563 C6	6401 B4	6415 C4	6427 A1	6439 A5	9407 B6	9419 B1	9433 A2	9448 C2	9460 B3	9472 C3	9487 B4	9499 A6	9511 A6	9523 C6	9540 A2
1403 A1	1415 B3	1427 A7	2402 A3	2464 C2	3419 C5	3503 B3	3566 A6	6402 A2	6416 A5	6428 A1	6440 A5	9408 B6	9421 B2	9434 A2	9449 C2	9461 B3	9474 C4	9488 B4	9500 A6	9512 A6	9524 C6	9541 A7
1404 C6	1416 C1	1428 A1	2404 A6	2475 B5	3421 C5	3505 B2	3580 B6	6403 A2	6417 A5	6429 A1	6441 A6	9409 B6	9422 A2	9435 A2	9450 C2	9462 B3	9475 C4	9489 B5	9501 A6	9513 B6	9525 C6	
1405 B5	1417 B2	1429 A1	2405 A6	2479 A6	3425 C5	3509 B3	3582 C7	6404 A2	6418 A5	6430 B1	6447 A5	9410 B6	9423 A2	9436 B2	9451 C3	9463 B3	9477 C3	9490 A5	9502 A6	9514 B6	9526 C6	
1406 B5	1418 B1	1430 A1	2406 A2	2484 A7	3432 B7	3510 A6	5400 A2	6405 B7	6419 A5	6431 C1	7402 A6	9411 B6	9424 A2	9437 A2	9452 C3	9464 B3	9478 A4	9491 B5	9503 A6	9515 B6	9527 B6	
1407 B4	1419 C3	1431 C5	2407 A2	3400 A7	3433 A2	3529 A5	5401 A2	6406 A2	6420 A5	6432 B2	9400 A7	9412 A1	9425 A2	9438 B2	9453 A3	9465 B3	9479 A4	9492 B5	9504 A6	9516 B6	9528 B7	
1408 B3	1420 C4	1432 A1	2416 B5	3401 B7	3447 A4	3544 A1	5402 A7	6409 A3	6421 A5	6433 A3	9401 A4	9413 A1	9426 A1	9439 B2	9454 B2	9466 B4	9480 B4	9493 B5	9505 A6	9517 B6	9530 B7	
1409 A1	1421 C3	1433 B6	2417 A5	3402 A3	3481 A5	3553 A3	5403 B6	6410 A3	6422 A5	6434 A4	9402 A7	9414 B1	9427 A2	9440 B2	9455 B2	9467 C3	9481 B4	9494 B5	9506 A7	9518 C6	9531 B7	
1410 B5	1422 C3	1434 B2	2436 A4	3403 B7	3482 A5	3554 B2	5404 A2	6411 A1	6423 A5	6435 A4	9403 C7	9415 B1	9428 A2	9441 B2	9456 A2	9468 C3	9482 B4	9495 B5	9507 A7	9519 C6	9532 B7	
1411 B5	1423 C3	1435 B6	2437 A4	3404 A7	3483 B5	3555 B2	5405 A3	6412 A2	6424 A5	6436 A5	9404 A7	9416 B1	9429 A2	9442 C1	9457 B3	9469 C3	9484 B4	9496 B5	9508 A7	9520 C5	9533 B7	

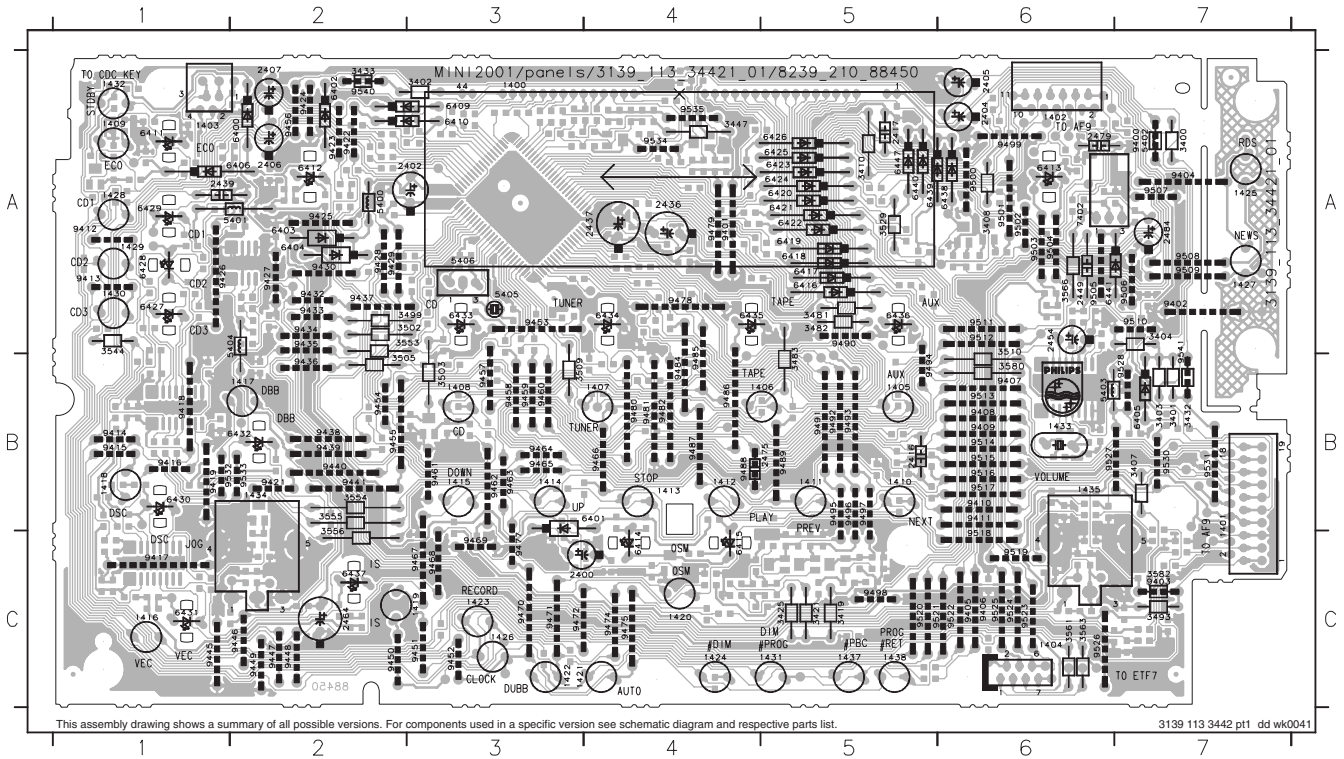

FRONT BOARD - CHIP LAYOUT


2403 A6	2425 C3	2444 A5	2462 C7	2481 C7	3420 C3	3441 A6	3458 A5	3474 A4	3494 A6	3516 C6	3533 A6	3550 C7	3574 A5	3592 B7	4420 A7	4436 B2	4452 B6	4468 B6	4485 B3	4504 C3	4520 C1	4536 B4	7411 A7
2408 C1	2426 C3	2445 A5	2463 C1	2482 A4	3422 C3	3442 A6	3459 A5	3475 A4	3495 A6	3517 B4	3534 A7	3551 B7	3575 A4	3593 C6	4421 B1	4437 B7	4453 A7	4469 B6	4486 B3	4505 C4	4521 C1	4537 C5	7413 B6
2409 C1	2427 C4	2446 A5	2465 B5	2483 A4	3423 C4	3443 A6	3460 A4	3476 A4	3496 A5	3518 B4	3535 B6	3552 C7	3576 A2	3594 C7	4422 A7	4438 B7	4454 A6	4470 B5	4487 B4	4506 A2	4522 C1	4538 A3	7414 C4
2410 B1	2428 C3	2447 A5	2466 B5	2485 A2	3424 C3	3444 A6	3461 A4	3477 A4	3497 A6	3519 C5	3536 B5	3553 C6	3577 A2	3595 A7	4423 A7	4439 B7	4455 A7	4471 C5	4488 B4	4507 A2	4523 C3	4539 C4	7415 B5
2411 B3	2429 C3	2448 A5	2467 B5	2486 A7	3426 C4	3445 A5	3462 A4	3478 A4	3498 A5	3520 B3	3537 A6	3554 A4	3578 B2	3596 A4	4424 A7	4440 A1	4456 A7	4472 C5	4489 B4	4508 A2	4524 C2	4540 B7	7416 C3
2412 B3	2430 C4	2450 A2	2468 A7	2487 A4	3427 C3	3446 A4	3463 A4	3479 A4	3500 A5	3521 B3	3538 A7	3555 A4	3579 B2	3597 A4	4425 A7	4441 B7	4457 A7	4473 B3	4490 B4	4509 A2	4525 C2	4541 B7	7417 C3
2413 B3	2431 C3	2451 A2	2469 A2	2488 C1	3428 C3	3448 A4	3464 A4	3480 C1	3501 A5	3522 A3	3539 A6	3556 C2	3581 B5	4400 C1	4426 A7	4442 B7	4458 A7	4474 C5	4491 A4	4510 C7	4526 B2	4542 B7	7418 C3
2414 B3	2432 A4	2452 B2	2470 A2	2489 C1	3430 A7	3449 A4	3465 A3	3484 A4	3504 A5	3523 A3	3540 A6	3564 A1	3583 A5	4401 C1	4427 A7	4443 B7	4459 A6	4475 B5	4492 A4	4511 A1	4527 B2	7400 A5	
2415 B3	2433 A4	2453 B2	2471 C6	2490 A2	3431 A7	3450 A5	3466 A4	3485 A4	3506 A5	3524 A3	3541 A3	3565 A2	3584 C3	4402 A4	4428 A7	4444 C7	4460 A6	4477 C5	4494 A7	4512 A4	4528 B2	7401 B2	
2418 B2	2434 A4	2455 A2	2472 C6	2491 A2	3434 A6	3451 A5	3467 A4	3486 A4	3507 A5	3525 C4	3542 A3	3567 C6	3585 C3	4403 B4	4429 A7	4445 C7	4461 A7	4478 C5	4495 A4	4513 B1	4529 A6	7403 A6	
2419 A2	2435 A4	2456 C6	2473 C2	2492 A2	3435 A5	3452 A5	3468 A4	3487 A4	3508 A5	3526 A3	3543 A3	3568 C6	3586 B4	4405 A6	4430 A7	4446 B5	4462 A7	4479 B4	4496 A5	4514 B2	4530 A6	7404 B7	
2420 A2	2438 B2	2457 C4	2474 C2	2493 A2	3436 A6	3453 A5	3469 A4	3488 A4	3511 B5	3527 A3	3545 A7	3569 C2	3587 A2	4406 A6	4431 A1	4447 C6	4463 A1	4480 C5	4499 A3	4515 B1	4531 B5	7405 C7	
2421 A3	2440 A6	2458 B7	2476 B1	2494 A2	3437 A6	3454 A5	3470 A4	3489 A4	3512 A6	3528 A3	3546 A7	3570 C2	3588 A6	4414 A5	4432 A7	4448 C6	4464 A6	4481 C4	4500 B3	4516 C2	4532 B5	7406 A4	
2422 A2	2441 A7	2459 B7	2477 A4	2495 A2	3438 A6	3455 A5	3471 A3	3490 A4	3513 A6	3530 A3	3547 A7	3571 B4	3589 B4	4415 A4	4433 A7	4449 B6	4465 A6	4482 C3	4501 C4	4517 B1	4533 B5	7407 A4	
2423 A2	2442 A7	2460 B7	2478 A4	2496 A2	3439 A6	3456 A5	3472 A3	3491 A4	3514 A2	3531 A7	3548 A7	3572 A5	3590 C4	4416 A6	4434 A6	4450 B6	4466 A6	4483 C4	4502 B3	4518 C1	4534 B5	7408 A2	
2424 C3	2443 A6	2461 C7	2480 B7	2498 A2	3440 A6	3457 A5	3473 A4	3492 A5	3515 A2	3532 A7	3549 B7	3573 B4	3591 B7	4417 A4	4435 A6	4451 B7	4467 A6	4484 B3	4503 C3	4519 C1	4535 B7	7410 A2	

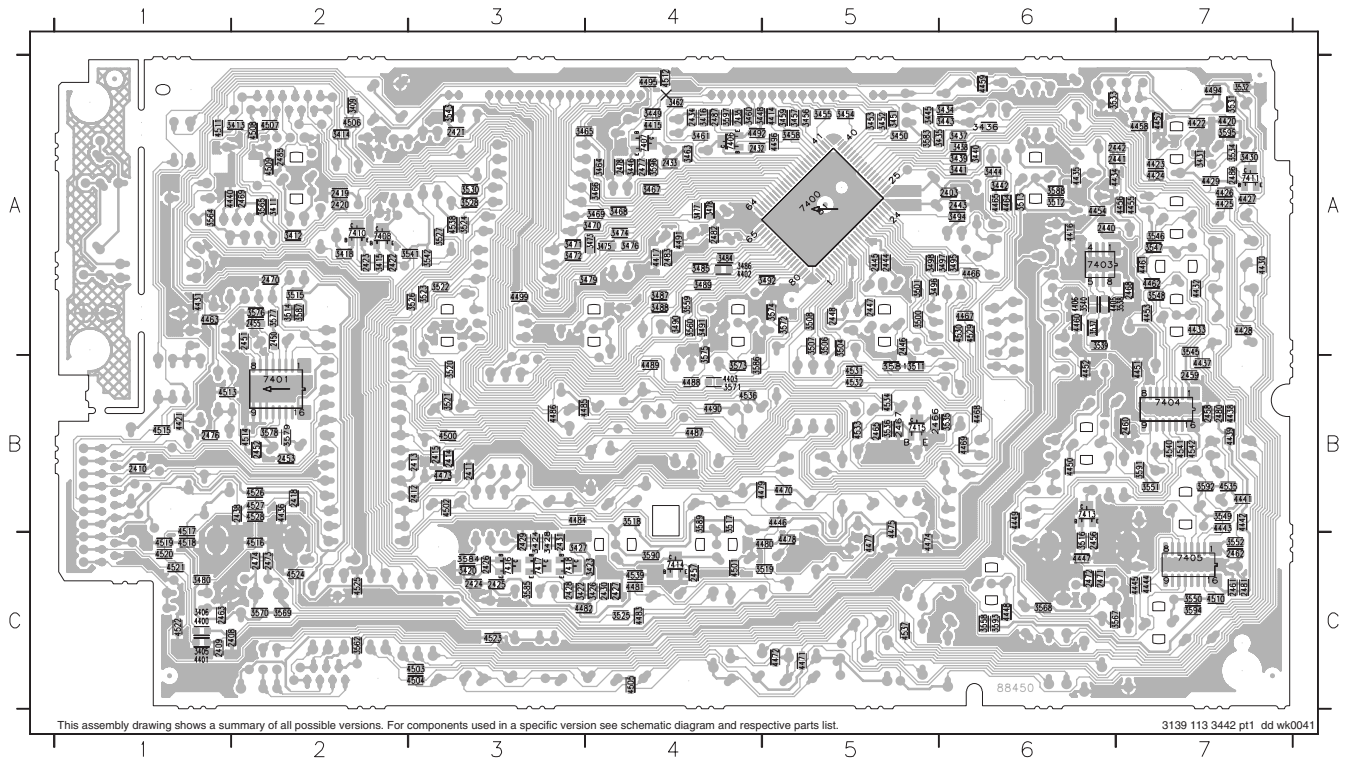

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram and respective parts list.

3139 113 3442 pt1 dd wk0041

FRONT BOARD - CIRCUIT DIAGRAM

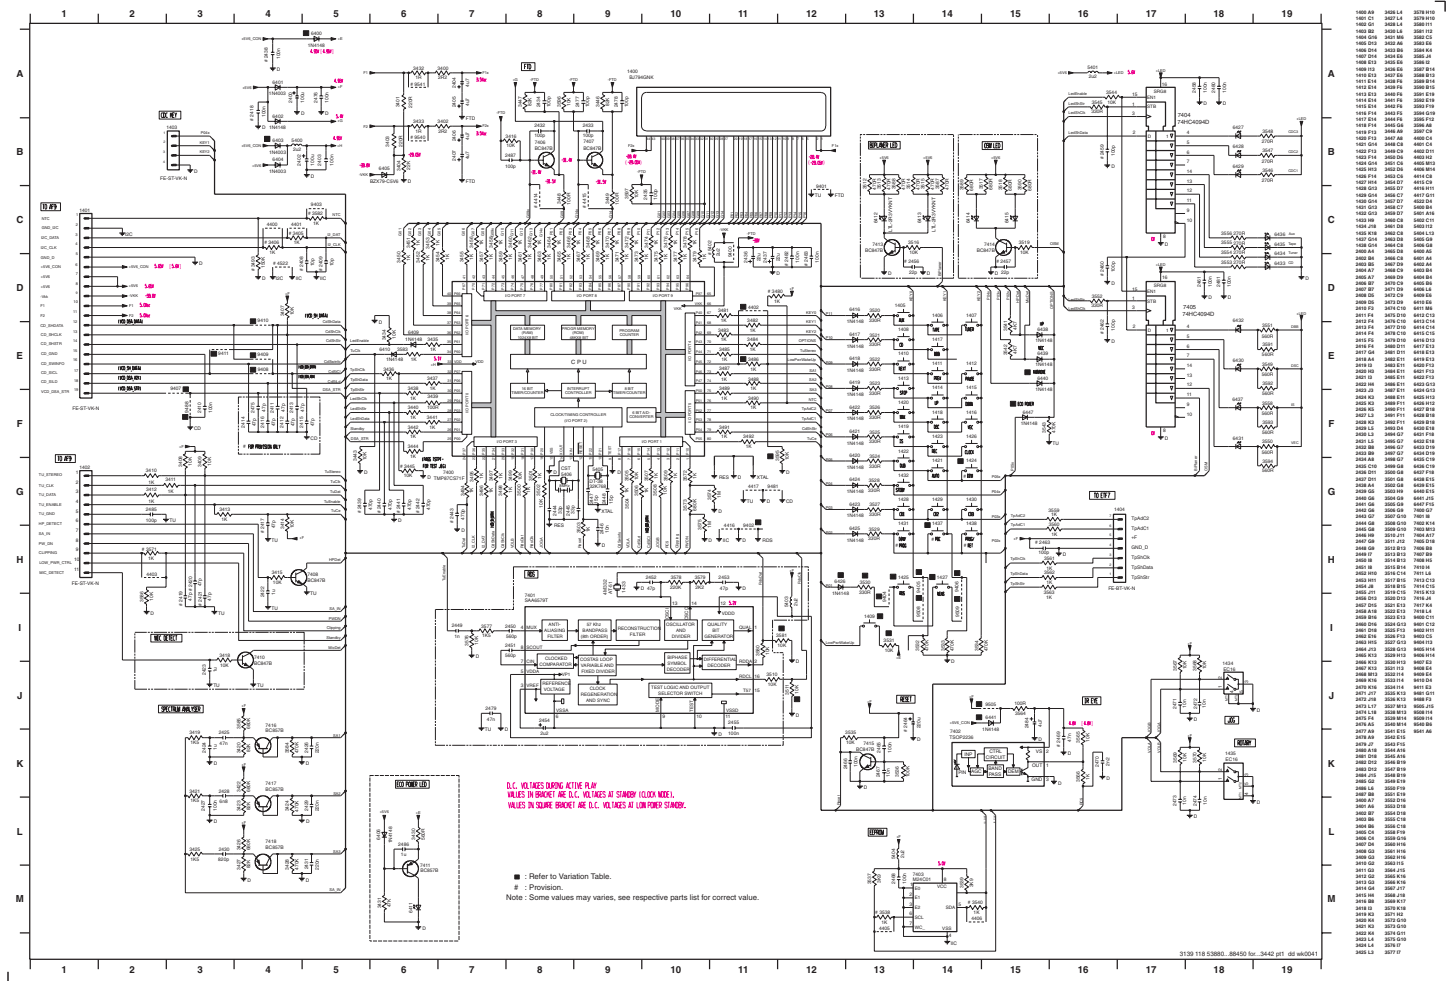


FRONT BOARD VARIATION TABLE


	FW-C380/37	FW-C380/21	FW-C380/22/34	VCD version only
1409	-	-	x	-
1424	-	-	-	x
1425	-	-	x	-
1427	-	-	x	-
1437	-	-	-	x
3486	-	-	1k	-
3511	10k	10k	-	10k
3530	-	-	330R	-
3531	-	-	10k	-
3581	10k	10k	-	10k
3595	10k	10k	-	10k
4402	x	x	-	x
6400	-	-	x	-
6403	-	-	x	-
6426	-	-	x	-
6440	-	x	-	x
6441	-	-	x	-
6447	-	-	x	-
9402	x	-	x	-
9404	-	-	x	-
9405	-	-	x	-
9406	-	-	x	-
9407	-	-	-	x
9408	x	x	x	-
9409	-	-	-	x
9410	x	x	x	-
9411	-	-	-	x
9488	x	x	x	-
9505	x	x	-	x
9508	-	-	x	-
9509	-	-	x	-

x - item in use


KEY-CDC BOARD - COMPONENT LAYOUT

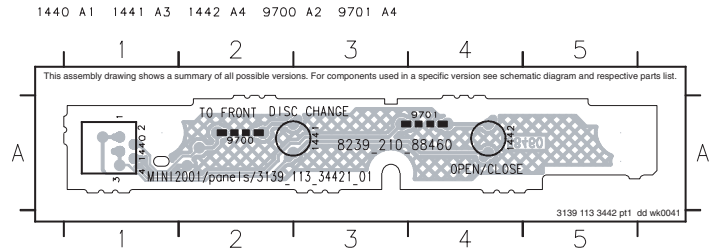


KEY-CDC PART - CIRCUIT DIAGRAM

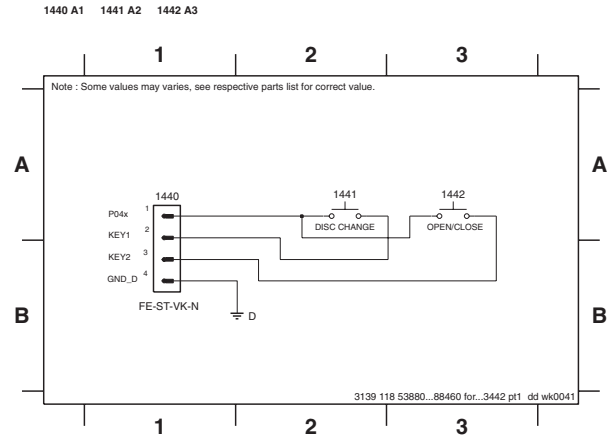

HEADPHONE BOARD - COMPONENT LAYOUT

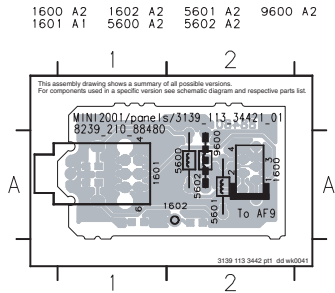


HEADPHONE BOARD - CHIP LAYOUT

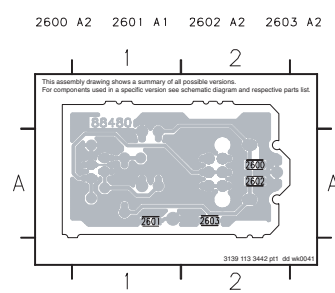


HEADPHONE PART - CIRCUIT DIAGRAM

- 1600 C1 1602 A3 2601 A3 2603 A2 5601 B2 9600 A3
1601 B3 2600 A2 2602 A2 5600 B2 5602 A2

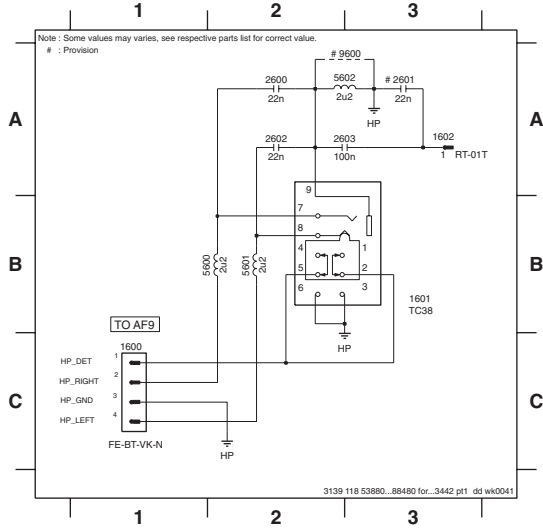


KARAOKE BOARD - COMPONENT LAYOUT

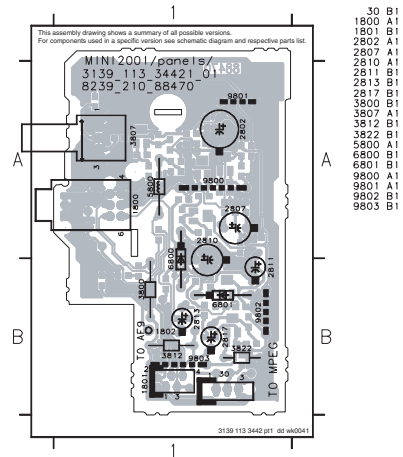

- 38 B1
1800 A1
1801 B1
2802 A1
2807 A1
2810 A1
2811 B1
2813 B1
2817 B1
3800 B1
3807 A1
3812 B1
3822 B1
5800 A1
6800 B1
6801 B1
9800 A1
9801 A1
9802 B1
9803 B1


KARAOKE BOARD - CHIP LAYOUT

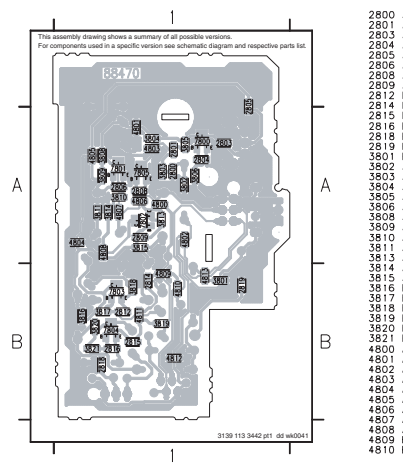

- 2800 A1 4811 B1
2801 A1 4812 B1
2803 A1 4813 B1
2804 A1 7800 A1
2805 A1 7801 A1
2806 A1 7802 A1
2808 A1 7803 B1
2809 A1 7804 B1
2812 B1
2814 B1
2815 B1
2816 B1
2818 B1
2819 B1
3801 B1
3802 A1
3803 A1
3804 A1
3805 A1
3806 A1
3808 A1
3809 A1
3810 A1
3811 A1
3813 A1
3814 A1
3815 A1
3816 B1
3817 B1
3818 B1
3819 B1
3820 B1
3821 B1
4800 A1
4801 A1
4802 A1
4803 A1
4804 A1
4805 A1
4806 A1
4807 A1
4808 B1
4809 B1
4810 B1

KARAOKE PART - CIRCUIT DIAGRAM

30 D9	1802 C2	2802 B5	2805 B5	2808 E3	2811 D6	2814 E7	2817 D8	3800 A2	3803 B3	3806 C4	3809 B6	3812 B8	3815 D5	3818 E6	3821 D7	5800 B2	7800 B4	7803 E6	9800 A4
1800 C1	2800 B2	2803 B4	2806 B6	2809 E4	2812 E5	2815 E7	2818 E8	3801 A2	3804 B4	3807 B4	3810 C5	3813 D3	3816 D6	3819 E7	3822 E8	6800 D5	7801 B6	7804 E8	
1801 B9	2801 B3	2804 B4	2807 B6	2810 E5	2813 E5	2816 E7	2819 C3	3802 B2	3805 B4	3808 B6	3811 B5	3814 E4	3817 D5	3820 D8	4800 D7	6801 E5	7802 D4	7805 D3	

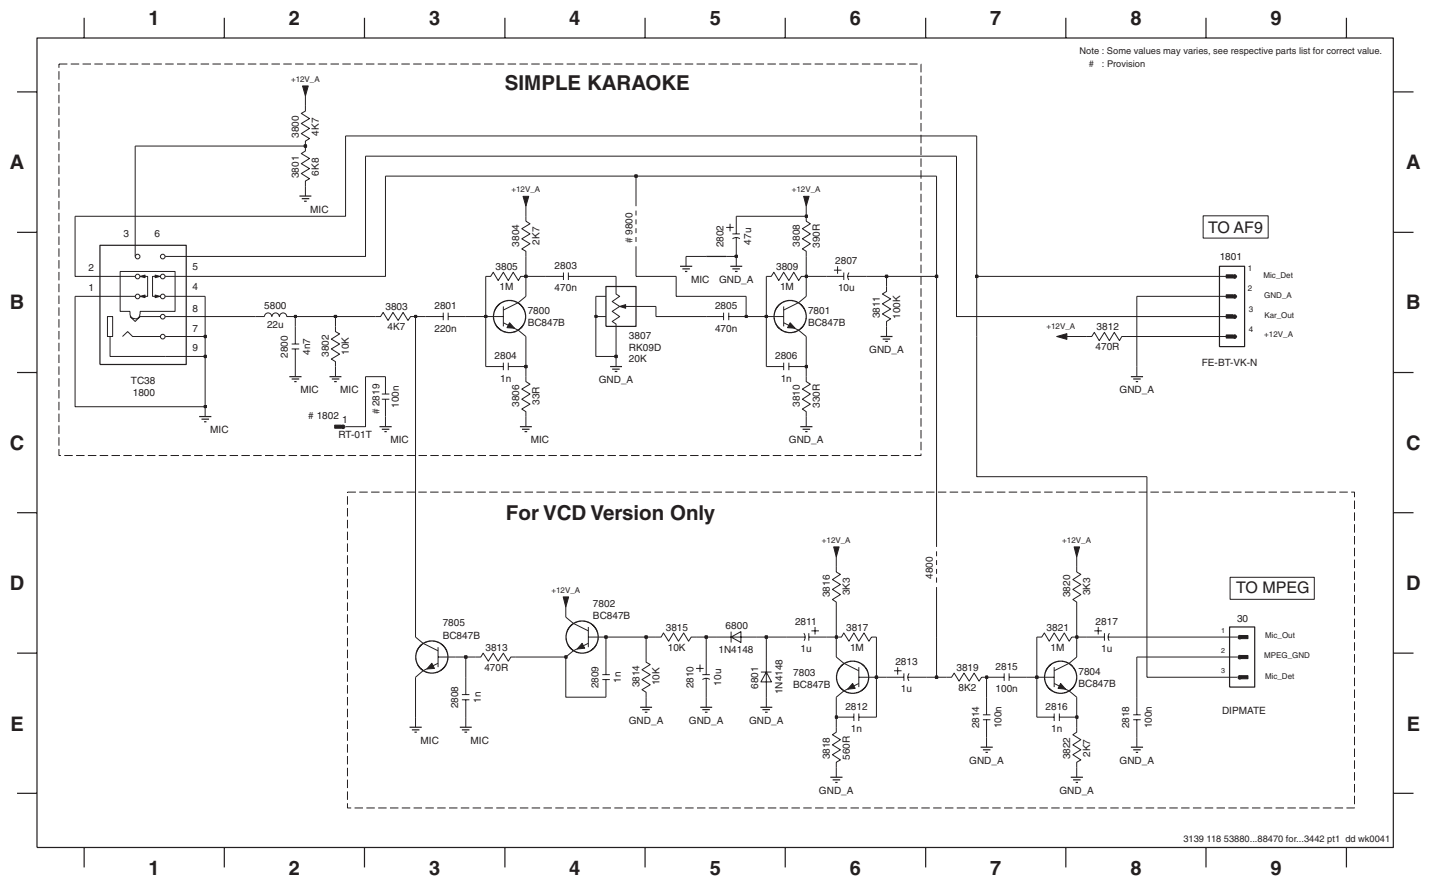

ELECTRICAL PARTS LIST - FRONT BOARD

MISCELLANEOUS

1400	3139 110 52530	FTD Display	2410	4822 126 14305	100nF 10% 16V
1401	4822 265 11545	Flex Connector 19P	2422	3198 017 41050	1µF 10V
1402	2422 025 14541	Flex Connector 11P	2423	3198 017 41050	1µF 10V
1403	4822 265 11183	Flex Connector 4P	2424	3198 017 41050	1µF 10V
1404	4822 267 10953	Flex Connector 7P	2425	3198 017 34730	47nF 16V
1405	4822 276 13775	Tact Switch	2426	4822 126 13879	220nF +80/-20% 16V
1406	4822 276 13775	Tact Switch	2427	4822 126 14305	100nF 10% 16V
1407	4822 276 13775	Tact Switch	2428	5322 126 11582	6,8nF 10% 63V
1408	4822 276 13775	Tact Switch	2429	4822 126 13879	220nF +80/-20% 16V
1409	4822 276 13775	Tact Switch	2430	3198 016 38210	820pF 25V
1410	4822 276 13775	Tact Switch	2431	4822 126 13879	220nF +80/-20% 16V
1411	4822 276 13775	Tact Switch	2432	4822 122 31765	100pF 2% 63V
1412	4822 276 13775	Tact Switch	2433	4822 122 31765	100pF 2% 63V
1413	4822 276 13775	Tact Switch	2434	4822 122 31765	100pF 2% 63V
1414	4822 276 13775	Tact Switch	2435	4822 122 31765	100pF 2% 63V
1415	4822 276 13775	Tact Switch	2436	3198 028 52290	22µF 20% 50V
1416	4822 276 13775	Tact Switch	2437	3198 028 52290	22µF 20% 50V
1417	4822 276 13775	Tact Switch	2444	4822 126 11671	33pF
1418	4822 276 13775	Tact Switch	2445	4822 126 11671	33pF
1419	4822 276 13775	Tact Switch	2446	5322 126 11583	10nF 10% 50V
1420	4822 276 13775	Tact Switch	2447	4822 122 33752	15pF 5% 50V
1421	4822 276 13775	Tact Switch	2448	4822 122 33752	15pF 5% 50V
1422	4822 276 13775	Tact Switch	2449	4822 122 33197	1nF 10% 50V
1423	4822 276 13775	Tact Switch	2450	4822 126 14249	560pF 10% 50V
1425	4822 276 13775	Tact Switch	2451	4822 126 14249	560pF 10% 50V
1426	4822 276 13775	Tact Switch	2452	4822 122 33777	47pF 5% 63V
1427	4822 276 13775	Tact Switch	2453	4822 122 33777	47pF 5% 63V
1428	4822 276 13775	Tact Switch	2454	4822 124 22652	2,2µF 20% 50V
1429	4822 276 13775	Tact Switch	2455	4822 126 14305	100nF 10% 16V
1430	4822 276 13775	Tact Switch	2458	4822 126 14305	100nF 10% 16V
1431	4822 276 13775	Tact Switch	2461	4822 126 14305	100nF 10% 16V
1432	4822 276 13775	Tact Switch	2465	4822 126 14305	100nF 10% 16V
1433	4822 242 72195	QUARZ 4,332MHz	2466	4822 126 14305	100nF 10% 16V
1434	4822 273 10366	Rotary Encoder 24P	2467	5322 126 11583	10nF 10% 50V
1435	4822 273 10365	Rotary Encoder 24P	2468	4822 126 14305	100nF 10% 16V
1438	4822 276 13775	Tact Switch	2470	4822 126 14238	2,2nF 50V
1440	4822 265 11183	Flex Connector 4P	2471	5322 126 11583	10nF 10% 50V
1441	4822 276 13775	Tact Switch	2472	5322 126 11583	10nF 10% 50V
1442	4822 276 13775	Tact Switch	2473	5322 126 11583	10nF 10% 50V
1600	4822 267 10733	Flex Connector 4P	2474	5322 126 11583	10nF 10% 50V
1601	4822 265 11529	Headphone Socket	2476	4822 126 14305	100nF 10% 16V
1800	4822 265 11529	Microphone Socket	2477	4822 122 31765	100pF 2% 63V
1801	4822 267 10733	Flex Connector 4P	2478	4822 122 31765	100pF 2% 63V
			2479	4822 126 12785	47nF 50V
			2480	4822 126 14305	100nF 10% 16V
			2481	4822 126 14305	100nF 10% 16V
			2484	4822 124 40769	4,7µF 20% 100V
			2485	4822 122 31765	100pF 2% 63V
			2486	3198 017 41050	1µF 10V
			2487	4822 122 31765	100pF 2% 63V
			2600	4822 126 14494	22nF 10% 25V
			2602	4822 126 14494	22nF 10% 25V

CAPACITORS

ELECTRICAL PARTS LIST - FRONT BOARD

2603	4822 126 14305	100nF 10% 16V	3447	4822 116 52304	82k 5% 0,5W
2800	4822 126 13193	4,7nF 10% 63V	3448	4822 051 30101	100R 5% 0,062W
2801	4822 126 13879	220nF +80/-20% 16V	3449	4822 051 30101	100R 5% 0,062W
2802	3198 028 44790	47µF 20% 35V	3450	4822 051 30102	1k 5% 0,062W
2803	4822 126 13482	470nF +80/-20% 16V	3451	4822 051 30102	1k 5% 0,062W
2804	5322 126 11578	1nF 10% 50V	3452	4822 051 30102	1k 5% 0,062W
2805	4822 126 13482	470nF +80/-20% 16V	3453	4822 051 30102	1k 5% 0,062W
2806	5322 126 11578	1nF 10% 50V	3454	4822 051 30102	1k 5% 0,062W
2807	4822 124 12255	10µF 20% 50V	3455	4822 051 30102	1k 5% 0,062W
			3456	4822 051 30102	1k 5% 0,062W
			3457	4822 051 30102	1k 5% 0,062W
			3458	4822 051 30102	1k 5% 0,062W
			3459	4822 051 30102	1k 5% 0,062W
			3460	4822 051 30102	1k 5% 0,062W
			3461	4822 051 30102	1k 5% 0,062W
			3462	4822 051 30102	1k 5% 0,062W
			3463	4822 051 30102	1k 5% 0,062W
			3464	4822 051 30102	1k 5% 0,062W
			3465	4822 051 30102	1k 5% 0,062W
			3466	4822 051 30102	1k 5% 0,062W
			3467	4822 051 30102	1k 5% 0,062W
			3468	4822 051 30102	1k 5% 0,062W
			3469	4822 051 30102	1k 5% 0,062W
			3470	4822 051 30102	1k 5% 0,062W
			3471	4822 051 30102	1k 5% 0,062W
			3472	4822 051 30102	1k 5% 0,062W
			3473	4822 051 30102	1k 5% 0,062W
			3474	4822 051 30102	1k 5% 0,062W
			3475	4822 051 30102	1k 5% 0,062W
			3476	4822 051 30102	1k 5% 0,062W
			3477	4822 051 30102	1k 5% 0,062W
			3478	4822 051 30102	1k 5% 0,062W
			3479	4822 051 30102	1k 5% 0,062W
			3481	4822 050 11002	1k 1% 0,4W
			3482	4822 050 11002	1k 1% 0,4W
			3483	4822 050 11002	1k 1% 0,4W
			3484	4822 051 30102	1k 5% 0,062W
			3485	4822 051 30102	1k 5% 0,062W
			3486	4822 051 30102	1k 5% 0,062W
			3487	4822 051 30102	1k 5% 0,062W
			3488	4822 051 30102	1k 5% 0,062W
			3489	4822 051 30102	1k 5% 0,062W
			3490	4822 051 30102	1k 5% 0,062W
			3491	4822 051 30102	1k 5% 0,062W
			3492	4822 051 30102	1k 5% 0,062W
			3494	4822 051 30102	1k 5% 0,062W
			3495	4822 051 30102	1k 5% 0,062W
			3496	4822 051 30102	1k 5% 0,062W
			3497	4822 051 30102	1k 5% 0,062W
			3498	4822 051 30102	1k 5% 0,062W
			3499	4822 050 21003	10k 1% 0,6W
			3500	4822 051 30102	1k 5% 0,062W

RESISTORS

ELECTRICAL PARTS LIST - FRONT BOARD**RESISTORS**

3501	4822 051 30102	1k 5% 0,062W	3555	4822 116 83876	270R 5% 0,5W
3502	4822 050 21003	10k 1% 0,6W	3556	4822 116 83876	270R 5% 0,5W
3503	4822 050 11002	1k 1% 0,4W	3558	4822 051 30561	560R 5% 0,062W
3504	4822 051 30102	1k 5% 0,062W	3559	4822 051 30102	1k 5% 0,062W
3505	4822 050 21003	10k 1% 0,6W	3560	4822 051 30102	1k 5% 0,062W
3506	4822 051 30102	1k 5% 0,062W	3561	4822 050 11002	1k 1% 0,4W
3507	4822 051 30102	1k 5% 0,062W	3562	4822 051 30102	1k 5% 0,062W
3508	4822 051 30103	10k 5% 0,062W	3563	4822 050 11002	1k 1% 0,4W
3509	4822 050 11002	1k 1% 0,4W	3564	4822 051 30101	100R 5% 0,062W
3510	4822 050 21003	10k 1% 0,6W	3565	4822 051 30103	10k 5% 0,062W
3511	4822 051 30103	10k 5% 0,062W	3566	4822 050 11002	1k 1% 0,4W
3512	4822 051 30471	470R 5% 0,062W	3567	4822 051 30103	10k 5% 0,062W
3513	4822 051 30471	470R 5% 0,062W	3568	4822 051 30103	10k 5% 0,062W
3514	4822 051 30471	470R 5% 0,062W	3569	4822 051 30103	10k 5% 0,062W
3515	4822 051 30471	470R 5% 0,062W	3570	4822 051 30103	10k 5% 0,062W
3516	4822 051 30103	10k 5% 0,062W	3572	4822 051 30102	1k 5% 0,062W
3517	4822 051 30681	680R 5% 0,062W	3573	4822 051 30684	680k 5% 0,062W
3518	4822 051 30681	680R 5% 0,062W	3574	4822 051 30105	1M 5% 0,062W
3519	4822 051 30103	10k 5% 0,062W	3575	4822 051 30105	1M 5% 0,062W
3520	4822 051 30331	330R 5% 0,062W	3576	4822 051 30103	10k 5% 0,062W
3521	4822 051 30331	330R 5% 0,062W	3577	4822 051 30152	1k5 5% 0,062W
3522	4822 051 30331	330R 5% 0,062W	3578	4822 117 12891	220k 1%
3523	4822 051 30331	330R 5% 0,062W	3579	4822 051 30222	2k2 5% 0,062W
3524	4822 051 30331	330R 5% 0,062W	3580	4822 050 21003	10k 1% 0,6W
3525	4822 051 30331	330R 5% 0,062W	3581	4822 051 30103	10k 5% 0,062W
3526	4822 051 30331	330R 5% 0,062W	3583	4822 051 30102	1k 5% 0,062W
3527	4822 051 30331	330R 5% 0,062W	3584	4822 051 30474	470k 5% 0,062W
3528	4822 051 30331	330R 5% 0,062W	3585	4822 051 30684	680k 5% 0,062W
3529	4822 116 52219	330R 5% 0,5W	3586	4822 051 30103	10k 5% 0,062W
3530	4822 051 30331	330R 5% 0,062W	3587	4822 051 30471	470R 5% 0,062W
3531	4822 051 30103	10k 5% 0,062W	3588	4822 051 30471	470R 5% 0,062W
3532	4822 051 30474	470k 5% 0,062W	3589	4822 051 30681	680R 5% 0,062W
3533	4822 051 30474	470k 5% 0,062W	3590	4822 051 30681	680R 5% 0,062W
3534	4822 051 30474	470k 5% 0,062W	3591	4822 051 30561	560R 5% 0,062W
3535	4822 051 30103	10k 5% 0,062W	3592	4822 051 30561	560R 5% 0,062W
3536	4822 117 13632	100k 1% 0,62W	3593	4822 051 30561	560R 5% 0,062W
3537	4822 051 30392	3k9 5% 0,063W	3594	4822 051 30561	560R 5% 0,062W
3539	4822 051 30392	3k9 5% 0,063W	3595	4822 051 30103	10k 5% 0,062W
3541	4822 051 30472	4k7 5% 0,062W	3596	4822 051 30103	10k 5% 0,062W
3542	4822 051 30472	4k7 5% 0,062W	3597	4822 051 30103	10k 5% 0,062W
3543	4822 051 30474	470k 5% 0,062W	3800	4822 116 52283	4k7 5% 0,5W
3544	4822 050 21003	10k 1% 0,6W	3801	4822 051 30682	6k8 5% 0,062W
3545	4822 051 30331	330R 5% 0,062W	3802	4822 051 30103	10k 5% 0,062W
3546	4822 051 30271	270R 5% 0,062W	3803	4822 051 30472	4k7 5% 0,062W
3547	4822 051 30271	270R 5% 0,062W	3804	4822 051 30272	2k7 5% 0,062W
3548	4822 051 30271	270R 5% 0,062W	3805	4822 051 30105	1M 5% 0,062W
3549	4822 051 30561	560R 5% 0,062W	3806	4822 051 30339	33R 5% 0,062W
3550	4822 051 30561	560R 5% 0,062W	3807	2120 366 90291	POTM CAR LOG 20k
3551	4822 051 30561	560R 5% 0,062W	3808	4822 051 30391	390R 5% 0,062W
3552	4822 051 30331	330R 5% 0,062W	3809	4822 051 30105	1M 5% 0,062W
3553	4822 116 83876	270R 5% 0,5W	3810	4822 051 30331	330R 5% 0,062W
3554	4822 116 83876	270R 5% 0,5W	3811	4822 117 13632	100k 1% 0,603 0,62W

ELECTRICAL PARTS LIST - FRONT BOARD

3812	4822 116 83883	470R 5% 0,5W	4463	4822 051 30008	OR Jumper 0603
4400	4822 051 30008	OR Jumper 0603	4464	4822 051 30008	OR Jumper 0603
4401	4822 051 30008	OR Jumper 0603	4465	4822 051 30008	OR Jumper 0603
4402	4822 051 30008	OR Jumper 0603	4466	4822 051 30008	OR Jumper 0603
4403	4822 051 30008	OR Jumper 0603	4467	4822 051 30008	OR Jumper 0603
4405	4822 051 30008	OR Jumper 0603	4468	4822 051 30008	OR Jumper 0603
4406	4822 051 30008	OR Jumper 0603	4469	4822 051 30008	OR Jumper 0603
4416	4822 051 30008	OR Jumper 0603	4470	4822 051 30008	OR Jumper 0603
4417	4822 051 30008	OR Jumper 0603	4471	4822 051 30008	OR Jumper 0603
4420	4822 051 30008	OR Jumper 0603	4472	4822 051 30008	OR Jumper 0603
4421	4822 051 30008	OR Jumper 0603	4473	4822 051 30008	OR Jumper 0603
4422	4822 051 30008	OR Jumper 0603	4474	4822 051 30008	OR Jumper 0603
4423	4822 051 30008	OR Jumper 0603	4475	4822 051 30008	OR Jumper 0603
4424	4822 051 30008	OR Jumper 0603	4476	4822 051 30008	OR Jumper 0603
4425	4822 051 30008	OR Jumper 0603	4477	4822 051 30008	OR Jumper 0603
4426	4822 051 30008	OR Jumper 0603	4478	4822 051 30008	OR Jumper 0603
4427	4822 051 30008	OR Jumper 0603	4479	4822 051 30008	OR Jumper 0603
4428	4822 051 30008	OR Jumper 0603	4480	4822 051 30008	OR Jumper 0603
4429	4822 051 30008	OR Jumper 0603	4481	4822 051 30008	OR Jumper 0603
4430	4822 051 30008	OR Jumper 0603	4482	4822 051 30008	OR Jumper 0603
4431	4822 051 30008	OR Jumper 0603	4483	4822 051 30008	OR Jumper 0603
4432	4822 051 30008	OR Jumper 0603	4484	4822 051 30008	OR Jumper 0603
4433	4822 051 30008	OR Jumper 0603	4485	4822 051 30008	OR Jumper 0603
4434	4822 051 30008	OR Jumper 0603	4486	4822 051 30008	OR Jumper 0603
4435	4822 051 30008	OR Jumper 0603	4487	4822 051 30008	OR Jumper 0603
4436	4822 051 30008	OR Jumper 0603	4488	4822 051 30008	OR Jumper 0603
4437	4822 051 30008	OR Jumper 0603	4489	4822 051 30008	OR Jumper 0603
4438	4822 051 30008	OR Jumper 0603	4490	4822 051 30008	OR Jumper 0603
4439	4822 051 30008	OR Jumper 0603	4491	4822 051 30008	OR Jumper 0603
4440	4822 051 30008	OR Jumper 0603	4492	4822 051 30008	OR Jumper 0603
4441	4822 051 30008	OR Jumper 0603	4493	4822 051 30008	OR Jumper 0603
4442	4822 051 30008	OR Jumper 0603	4494	4822 051 30008	OR Jumper 0603
4443	4822 051 30008	OR Jumper 0603	4495	4822 051 30008	OR Jumper 0603
4444	4822 051 30008	OR Jumper 0603	4496	4822 051 30008	OR Jumper 0603
4445	4822 051 30008	OR Jumper 0603	4497	4822 051 30008	OR Jumper 0603
4446	4822 051 30008	OR Jumper 0603	4498	4822 051 30008	OR Jumper 0603
4447	4822 051 30008	OR Jumper 0603	4499	4822 051 30008	OR Jumper 0603
4448	4822 051 30008	OR Jumper 0603	4500	4822 051 30008	OR Jumper 0603
4449	4822 051 30008	OR Jumper 0603	4501	4822 051 30008	OR Jumper 0603
4450	4822 051 30008	OR Jumper 0603	4502	4822 051 30008	OR Jumper 0603
4451	4822 051 30008	OR Jumper 0603	4503	4822 051 30008	OR Jumper 0603
4452	4822 051 30008	OR Jumper 0603	4504	4822 051 30008	OR Jumper 0603
4453	4822 051 30008	OR Jumper 0603	4505	4822 051 30008	OR Jumper 0603
4454	4822 051 30008	OR Jumper 0603	4506	4822 051 30008	OR Jumper 0603
4455	4822 051 30008	OR Jumper 0603	4507	4822 051 30008	OR Jumper 0603
4456	4822 051 30008	OR Jumper 0603	4508	4822 051 30008	OR Jumper 0603
4457	4822 051 30008	OR Jumper 0603	4509	4822 051 30008	OR Jumper 0603
4458	4822 051 30008	OR Jumper 0603	4510	4822 051 30008	OR Jumper 0603
4459	4822 051 30008	OR Jumper 0603	4511	4822 051 30008	OR Jumper 0603
4460	4822 051 30008	OR Jumper 0603	4512	4822 051 30008	OR Jumper 0603
4461	4822 051 30008	OR Jumper 0603	4513	4822 051 30008	OR Jumper 0603
4462	4822 051 30008	OR Jumper 0603	4514	4822 051 30008	OR Jumper 0603

ELECTRICAL PARTS LIST - FRONT BOARD

RESISTORS

4515	4822 051 30008	OR Jumper 0603
4516	4822 051 30008	OR Jumper 0603
4517	4822 051 30008	OR Jumper 0603
4518	4822 051 30008	OR Jumper 0603
4519	4822 051 30008	OR Jumper 0603
4520	4822 051 30008	OR Jumper 0603
4521	4822 051 30008	OR Jumper 0603
4523	4822 051 30008	OR Jumper 0603
4524	4822 051 30008	OR Jumper 0603
4525	4822 051 30008	OR Jumper 0603
4526	4822 051 30008	OR Jumper 0603
4527	4822 051 30008	OR Jumper 0603
4528	4822 051 30008	OR Jumper 0603
4529	4822 051 30008	OR Jumper 0603
4530	4822 051 30008	OR Jumper 0603
4531	4822 051 30008	OR Jumper 0603
4532	4822 051 30008	OR Jumper 0603
4533	4822 051 30008	OR Jumper 0603
4534	4822 051 30008	OR Jumper 0603
4535	4822 051 30008	OR Jumper 0603
4536	4822 051 30008	OR Jumper 0603
4537	4822 051 30008	OR Jumper 0603
4538	4822 051 30008	OR Jumper 0603
4539	4822 051 30008	OR Jumper 0603
4540	4822 051 30008	OR Jumper 0603
4541	4822 051 30008	OR Jumper 0603
4542	4822 051 30008	OR Jumper 0603
4801	4822 051 30008	OR Jumper 0603
4802	4822 051 30008	OR Jumper 0603
4803	4822 051 30008	OR Jumper 0603
4804	4822 051 30008	OR Jumper 0603
4805	4822 051 30008	OR Jumper 0603
4806	4822 051 30008	OR Jumper 0603
4807	4822 051 30008	OR Jumper 0603
4808	4822 051 30008	OR Jumper 0603
4809	4822 051 30008	OR Jumper 0603
4810	4822 051 30008	OR Jumper 0603
4811	4822 051 30008	OR Jumper 0603
4812	4822 051 30008	OR Jumper 0603
4813	4822 051 30008	OR Jumper 0603

COILS & FILTERS

5400	4822 157 62552	Coil 2,2µH 5%
5401	4822 157 62552	Coil 2,2µH 5%
5403	4822 157 62552	Coil 2,2µH 5%
5404	4822 157 62552	Coil 2,2µH 5%
5405	2422 543 01069	RES XTL 32kHz768
5406	4822 242 72066	RES CER 8MHz
5600	4822 157 62552	Coil 2,2µH 5%
5601	4822 157 62552	Coil 2,2µH 5%
5602	4822 157 62552	Coil 2,2µH 5%
5800	4822 157 11235	Coil 22µH 5%

DIODES

6400	4822 130 30621	1N4148
6401	4822 130 31878	1N4003G
6402	4822 130 30621	1N4148
6403	4822 130 31878	1N4003G
6404	4822 130 31878	1N4003G
6405	4822 130 34173	BZX79-C5V6
6406	4822 130 30621	1N4148
6409	4822 130 30621	1N4148
6410	4822 130 30621	1N4148
6411	9322 160 65676	LED VS LTL-4221NLC-VA
6412	9322 161 99676	LED VS LTL-2R3VYKNT
6413	9322 161 99676	LED VS LTL-2R3VYKNT
6414	4822 130 82978	LTL-1CHPE
6415	4822 130 82978	LTL-1CHPE
6416	4822 130 30621	1N4148
6417	4822 130 30621	1N4148
6418	4822 130 30621	1N4148
6419	4822 130 30621	1N4148
6420	4822 130 30621	1N4148
6421	4822 130 30621	1N4148
6422	4822 130 30621	1N4148
6423	4822 130 30621	1N4148
6424	4822 130 30621	1N4148
6425	4822 130 30621	1N4148
6426	4822 130 30621	1N4148
6427	4822 130 11589	LTL-1CHAE
6428	4822 130 11589	LTL-1CHAE
6429	4822 130 11589	LTL-1CHAE
6430	4822 130 11589	LTL-1CHAE
6431	4822 130 11589	LTL-1CHAE
6432	4822 130 11589	LTL-1CHAE
6433	4822 130 11589	LTL-1CHAE
6434	4822 130 11589	LTL-1CHAE
6435	4822 130 11589	LTL-1CHAE
6436	4822 130 11589	LTL-1CHAE
6437	4822 130 10791	LTL-1CHGE
6438	4822 130 30621	1N4148
6439	4822 130 30621	1N4148
6441	4822 130 30621	1N4148
6447	4822 130 30621	1N4148


TRANSISTORS & INTEGRATED CIRCUITS

7400	3139 110 52490	TMP87CS71F - '380S52491'
7401	4822 209 31981	SAA6579T/V1
7402	9322 155 22667	TSOP2236ZC1
7403	9965 000 04931	M24C01-WMNM6
7404	4822 209 15449	74HC4094D
7405	4822 209 15449	74HC4094D
7406	5322 130 60159	BC847B
7407	5322 130 60159	BC847B
7408	5322 130 60159	BC847B
7410	5322 130 60159	BC847B

ELECTRICAL PARTS LIST - FRONT BOARD

7411	4822 130 60373	BC857B
7413	5322 130 60159	BC847B
7414	5322 130 60159	BC847B
7415	5322 130 60159	BC847B
7416	4822 130 60373	BC857B
7417	4822 130 60373	BC857B
7418	4822 130 60373	BC857B
7800	5322 130 60159	BC847B
7801	5322 130 60159	BC847B

Note : Only the parts mentioned in this list are normal service spare parts.

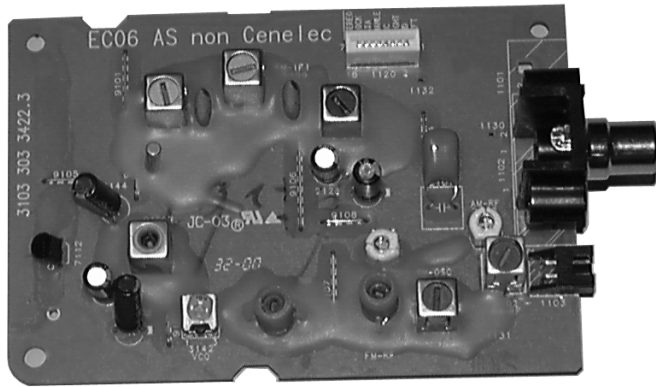



ECO6 Tuner Board
version: **SYSTEMS non-CENELEC**

TABLE OF CONTENTS



Blockdiagram7A-1
 Schematic Diagram7A-2
 Component Layout7A-3
 Adjustment table7A-3
 Electrical Partlist7A-4

BLOCK DIAGRAM

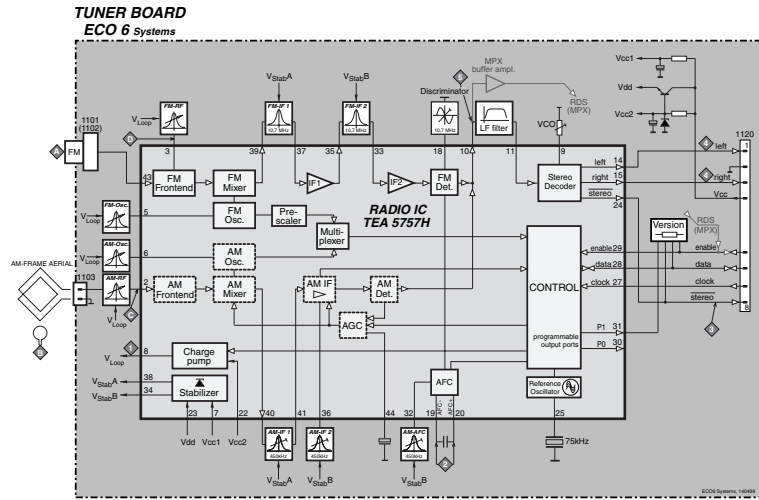

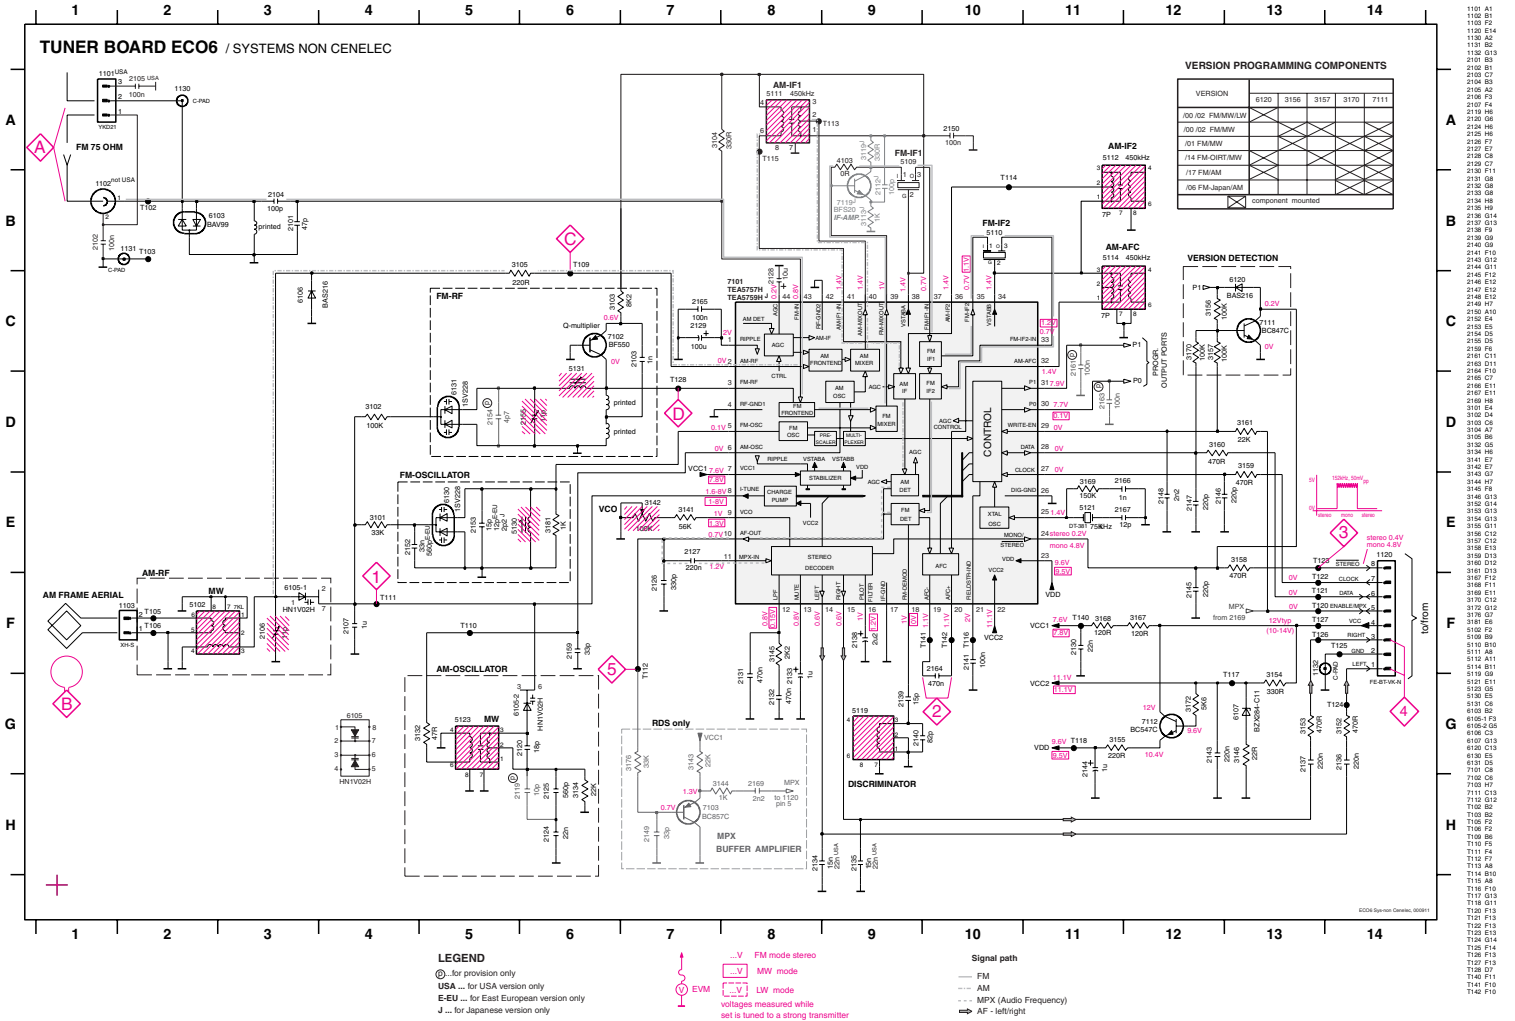

1101 A1
1102 F2
1103 A2
1104 B2
1105 B1
1106 B3
1107 B4
1108 B5
1109 B6
1110 B7
1111 B8
1112 B9
1113 B10
1114 B11
1115 B12
1116 B13
1117 B14
1118 B15
1119 B16
1120 B17
1121 B18
1122 B19
1123 B20
1124 B21
1125 B22
1126 B23
1127 B24
1128 B25
1129 B26
1130 B27
1131 B28
1132 B29
1133 B30
1134 B31
1135 B32
1136 B33
1137 B34
1138 B35
1139 B36
1140 B37
1141 B38
1142 B39
1143 B40
1144 B41
1145 B42
1146 B43
1147 B44
1148 B45
1149 B46
1150 B47
1151 B48
1152 B49
1153 B50
1154 B51
1155 B52
1156 B53
1157 B54
1158 B55
1159 B56
1160 B57
1161 B58
1162 B59
1163 B60
1164 B61
1165 B62
1166 B63
1167 B64
1168 B65
1169 B66
1170 B67
1171 B68
1172 B69
1173 B70
1174 B71
1175 B72
1176 B73
1177 B74
1178 B75
1179 B76
1180 B77
1181 B78
1182 B79
1183 B80
1184 B81
1185 B82
1186 B83
1187 B84
1188 B85
1189 B86
1190 B87
1191 B88
1192 B89
1193 B90
1194 B91
1195 B92
1196 B93
1197 B94
1198 B95
1199 B96
1200 B97

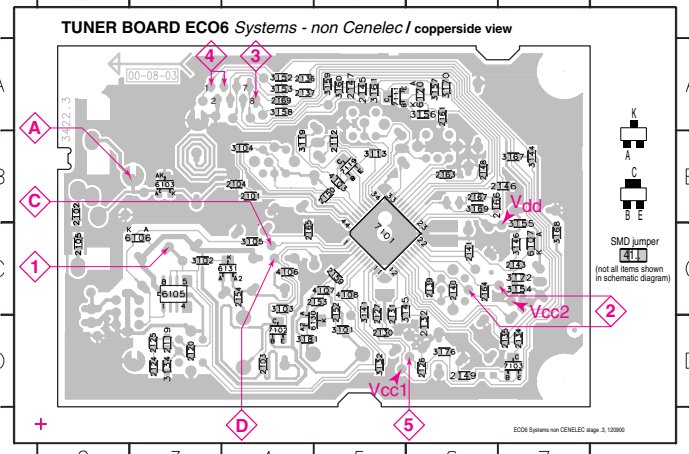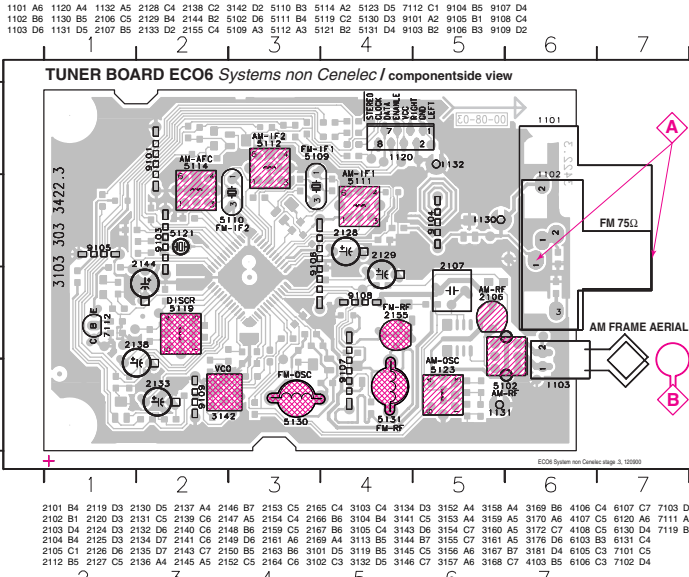

These assembly drawings show a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.

TUNER ADJUSTMENT TABLE (ECO6 FM/MW- and FM/MW/LW - versions with AM-frame aerial)


Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)			108MHz	5130		8V ±0.2V
			87.5MHz (65.81MHz)	check		4.3V ±0.5V (1.2V ±0.5V)
MW FM/AM-version, 10kHz grid 530 - 1700kHz			1700kHz	5123		8V ±0.2V
			530kHz	check		1.1V ±0.4V
FM/MW-version , 9kHz grid 531 - 1602kHz			1602kHz	5123	1	6.9V ±0.2V
			531kHz	check		1.1V ±0.4V
LW 153 - 279kHz			279kHz	5122		8V ±0.2V
			153kHz	check		1.1V ±0.4V
MW FM/MW/LW-version, 9kHz grid 531 - 1602kHz			1602kHz	5123		8V ±0.2V
			531kHz	check		1.1V ±0.4V
FM IF						
FM	10.7MHz, 45mV continuous wave	D	IC 7101 21 shortcircuit to block AFC IC 7101 21 IC 7101 21	5119	2	0 ± 3 mV DC
FM RF						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)	108MHz	A	108MHz	2155	4	MAX
	87.5MHz (65.81MHz)	mod=1kHz Δf=±22.5kHz	87.5MHz (65.81MHz)	5131		
VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz ¹⁾
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3kΩ to Vcc	C	IC 7101 36 100nF IC 7101 40 100nF see remark 2)	5111	5	symmetric
		C	5112			
AM AFC		C	continuous wave V _{RF} = 2mV	5114	2	0 ± 2 mV DC
AM RF³⁾						
MW⁴⁾ FM/MW/LW- and FM/MW-version (9kHz grid) 531 - 1602kHz	1494kHz	B	1494kHz	2106	5	symmetric
	558kHz		558kHz	5102		
LW	198kHz		198kHz	5103		
	1500kHz		1500kHz	2106		
MW FM/AM-version, 10kHz grid 530 - 1700kHz	560kHz		560kHz	5102		
			Δf = ±30kHz V _{RF} as low as possible			

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.
¹⁾ If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)
²⁾ RC network serves for damping the IF-filter while adjusting the other one.
³⁾ For AM RF adjustments the original frame antenna has to be used!
⁴⁾ MW has to be aligned before LW.

Repeat

Electrical Partslist ECO6 SYSTEMS NON-CENELEC

MISCELLANEOUS				RESISTORS				
1101	2422 015 19376	SOCKET 2P CLICKFIT	USA only	3143	4822 051 20223	22kΩ	5% 0,1W	RDS only
1102	4822 267 10283	SOCKET COAX, IEC 75Ω	not USA	3144	4822 051 10102	1kΩ	2% 0,25W	RDS only
1103	4822 265 31184	JST CONNECTOR 2 POLE		3145	4822 117 11449	2,2kΩ	1% 0,1W	
1120	4822 265 11515	FFC SOCKET, 8P		3146	4822 051 20229	22Ω	5% 0,1W	
				3152	4822 051 20471	470Ω	5% 0,1W	
CAPACITORS				RESISTORS				
2101	4822 126 13692	47pF	1% 63V	3153	4822 051 20471	470Ω	5% 0,1W	
2102	4822 126 13838	100nF	10% 50V	3154	4822 117 13577	330Ω	1% 0,1W	
2103	5322 122 31647	1nF	10% 63V	3155	4822 117 11503	220Ω	5% 0,1W	
2104	5322 122 32531	100pF	5% 50V	3156	4822 117 10837	100kΩ	1% 0,1W	
2105	4822 126 13838	100nF	10% 50V	3157	4822 117 10837	100kΩ	1% 0,1W	
2106	2020 800 00191	3-11pF TRIMCAP, .N450		3158	4822 051 20471	470Ω	5% 0,1W	
2107	4822 121 51319	1μF	20% 50V	3159	4822 051 20471	470Ω	5% 0,1W	
2120	4822 126 13689	18pF	1% 63V	3160	4822 051 20471	470Ω	5% 0,1W	
2124	5322 122 32654	22nF	10% 63V	3161	4822 051 20223	22kΩ	5% 0,1W	
2125	2020 552 96199	560pF	1% 50V	3167	4822 051 20121	120Ω	5% 0,1W	
2126	5322 122 31863	330pF	5% 50V	3168	4822 051 20121	120Ω	5% 0,1W	
2127	4822 126 14076	220nF	20% 25V	3169	4822 051 20154	150kΩ	5% 0,1W	
2128	4822 124 40248	10μF	20% 63V	3170	4822 117 10837	100kΩ	1% 0,1W	
2129	4822 124 41584	100μF	20% 10V	3172	4822 051 20562	5,6kΩ	5% 0,1W	
2130	5322 122 32654	22nF	10% 63V	3176	4822 051 20333	33kΩ	5% 0,1W	RDS only
2131	4822 126 13482	470nF	20% 16V	3181	4822 051 10102	1kΩ	2% 0,25W	
2132	4822 126 13482	470nF	20% 16V	4103	4822 051 20008	CHIP JUMPER 0805		
2133	4822 124 21913	1μF	20% 63V	4106	4822 051 20008	CHIP JUMPER 0805		
2134	4822 126 13188	15nF	5% 63V	4107	4822 051 20008	CHIP JUMPER 0805		
2134	5322 122 32654	22nF	10% 63V	4108	4822 051 20008	CHIP JUMPER 0805		
2135	4822 126 13188	15nF	5% 63V	COILS				
2135	5322 122 32654	22nF	10% 63V	5102	4822 157 71634	RF-COIL MW		
2136	4822 126 14076	220nF	20% 25V	5109	4822 242 70665	FM-IF FILTER 10,7MHz		
2137	4822 126 14076	220nF	20% 25V	5110	4822 242 70665	FM-IF FILTER 10,7MHz		
2138	4822 124 22652	2,2μF	20% 50V	5111	2422 549 44023	AM-IF FILTER 450kHz		
2139	4822 126 14236	15pF	5% 50V	5112	4822 157 70302	AM-IF FILTER 450kHz		
2140	4822 126 13695	82pF	1% 63V	5114	4822 157 70302	AM-IF FILTER 450kHz		
2141	4822 126 13838	100nF	10% 50V	5119	4822 157 11443	DISCRIMINATOR COIL		
2143	4822 126 14076	220nF	20% 25V	5121	4822 242 10261	QUARTZ 75kHz		
2144	4822 124 21913	1μF	20% 63V	5123	2422 549 44108	RF-COIL, AM-OSCILLATOR		
2145	4822 122 33575	220pF	5% 50V	5130	4822 157 11843	RF COIL 1,5 TURNS		
2146	4822 122 33575	220pF	5% 50V	5131	4822 157 11843	RF COIL 1,5 TURNS		
2147	4822 122 33575	220pF	5% 50V	DIODES				
2148	4822 122 33127	2,2nF	10% 63V	6103	5322 130 34337	BAV99		
2149	5322 122 32659	33pF	5% 50V	6105	4822 130 83075	HN1V02H		
2150	4822 126 13838	100nF	10% 50V	6106	4822 130 83757	BAS216		
2152	4822 126 12105	33nF	5% 63V	6107	9340 386 90115	BZX284-C11		
2152	5322 116 80853	560pF	5% 63V	6120	4822 130 83757	BAS216		
2153	4822 126 13486	15pF	2% 63V	6130	4822 130 82833	1SV228		
2153	4822 122 33926	12pF	2% 50V	6131	4822 130 82833	1SV228		
2155	2020 800 00191	3-11pF TRIMCAP, .N450		TRANSISTORS				
2159	5322 122 32659	33pF	5% 50V	7102	4822 130 42131	BF550		
2164	4822 126 13482	470nF	20% 16V	7103	5322 130 42756	BC857C		RDS only
2165	4822 126 13838	100nF	10% 50V	7111	5322 130 42755	BC847C		
2166	5322 122 31647	1nF	10% 63V	7112	4822 130 44503	BC547C		
2167	4822 122 33926	12pF	5% 50V	INTEGRATED CIRCUITS				
2169	4822 122 33127	2,2nF	10% 63V	7101	9351 740 80557	TEA5757H/V1, RADIO IC		
RESISTORS								
3101	4822 051 20333	33kΩ	5% 0,1W					
3102	4822 117 10837	100kΩ	1% 0,1W					
3103	4822 051 20822	8,2kΩ	5% 0,1W					
3104	4822 117 13577	330Ω	1% 0,1W					
3105	4822 117 11503	220Ω	5% 0,1W					
3132	4822 051 20479	47Ω	5% 0,1W					
3134	4822 051 20223	22kΩ	5% 0,1W					
3141	4822 117 11148	56kΩ	1% 0,1W					
3142	4822 100 12159	TRIMPOT, 100kΩ						

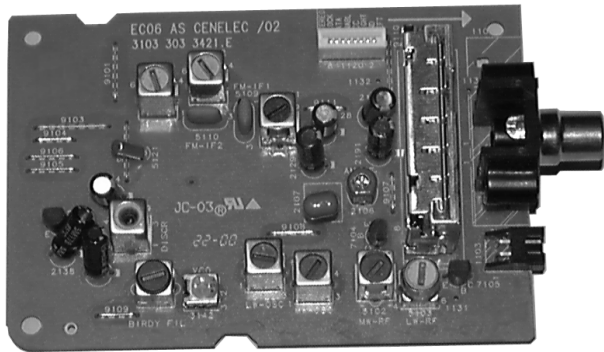


ECO6 Tuner Board

version: **SYSTEMS CENELEC**


TABLE OF CONTENTS

Blockdiagram	7B-1
Schematic Diagram	7B-2
Component Layout	7B-3
Adjustment table	7B-3
Electrical Partlist	7B-4

BLOCK DIAGRAM

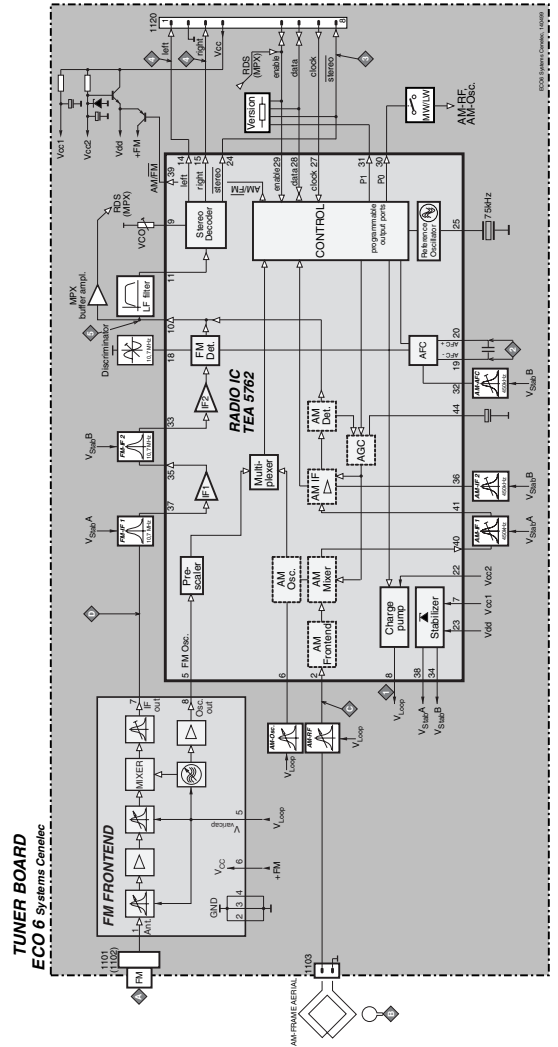

TUNER BOARD ECO6 / SYSTEMS-CENELEC

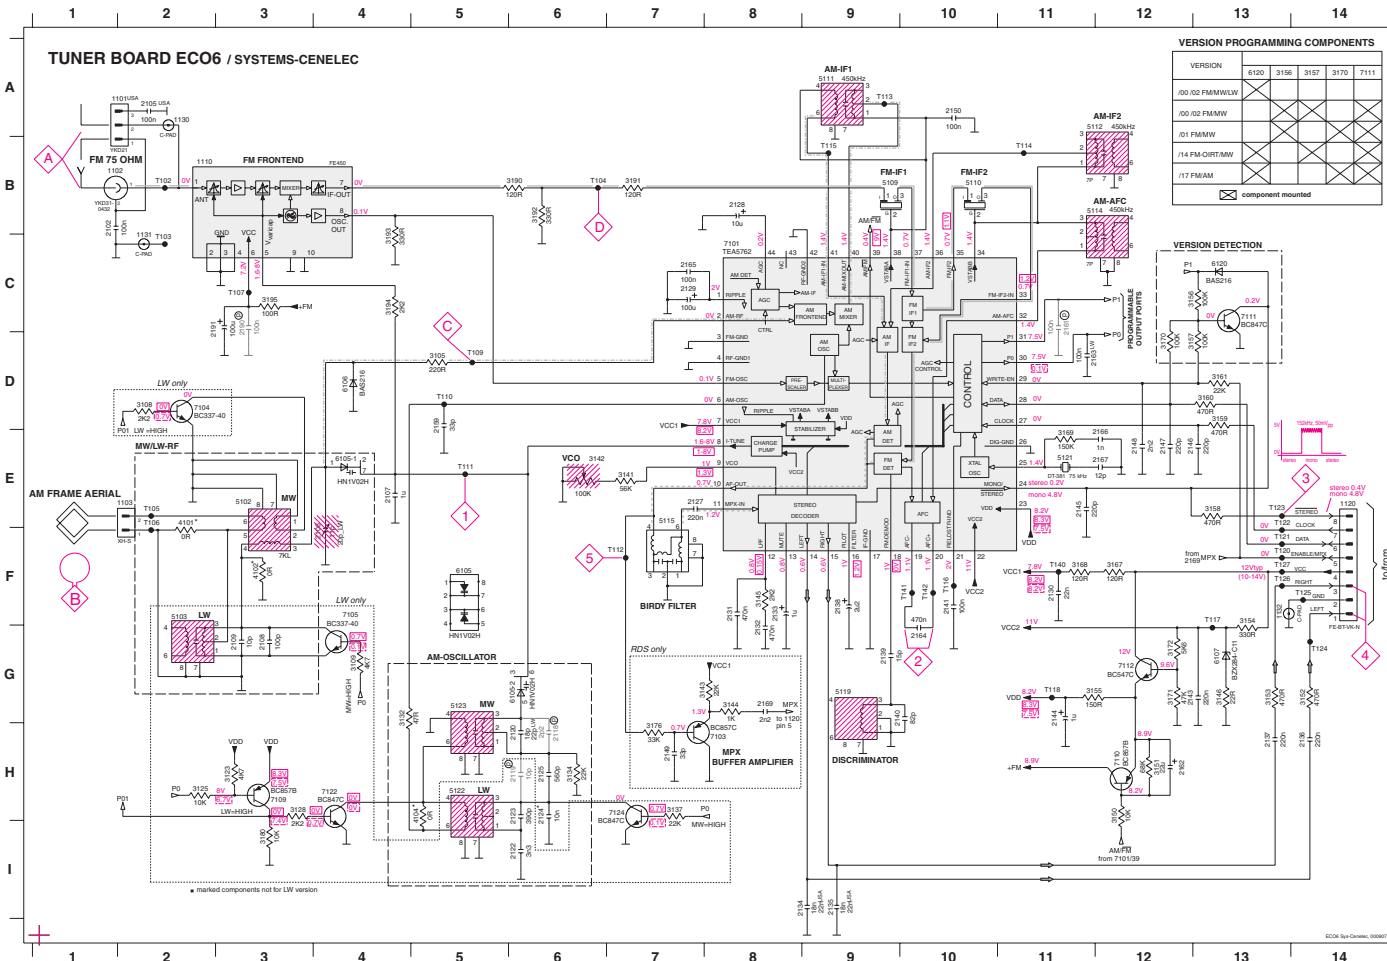

VERSION PROGRAMMING COMPONENTS

VERSION	6100	3166	3167	3170	7111
/00 /02 FM/MW					
/00 /02 FM/MW					
/01 FM/MW					
/14 FM-OUT/MW					
/17 FM/AM					

☒ component mounted

VERSION DETECTION

VERSION	6100	3166	3167	3170	7111
/00 /02 FM/MW					
/00 /02 FM/MW					
/01 FM/MW					
/14 FM-OUT/MW					
/17 FM/AM					


LEGEND

- only assembled in FM/AM version
- ⊕ for provision only
- USA ... for USA version only
- LW ... for LW version only
- SMD jumper
- ~V FM mode stereo
- ~V MW mode
- ~V LW mode
- voltages measured while set is tuned to a strong transmitter
- Signal path: FM, AM, MPX (Audio Frequency), AF - sublight


- 1101 A2
- 1102 B1
- 1103 B2
- 1104 E4
- 1105 A2
- 1131 C2
- 2102 B1
- 2103 E4
- 2108 G3
- 2109 G3
- 2116 B6
- 2118 H6
- 2120 H6
- 2122 H6
- 2123 H6
- 2124 H6
- 2125 H6
- 2127 F7
- 2128 H6
- 2129 C7
- 2130 F8
- 2131 F8
- 2132 F8
- 2133 F8
- 2134 H6
- 2136 H9
- 2137 H13
- 2138 F9
- 2139 G9
- 2140 G9
- 2141 F10
- 2142 G12
- 2144 G11
- 2145 E11
- 2146 E12
- 2147 E12
- 2148 H7
- 2149 E10
- 2150 D5
- 2151 C11
- 2160 H12
- 2162 D11
- 2166 G11
- 2168 C7
- 2191 C3
- 2192 C3
- 2193 D3
- 2194 D3
- 2195 D13
- 2196 D13
- 2197 D12
- 2198 E11
- 2199 E11
- 2199 H11
- 2199 H12
- 2199 H13
- 2199 H14
- 2199 H15
- 2199 H16
- 2199 H17
- 2199 H18
- 2199 H19
- 2199 H20
- 2199 H21
- 2199 H22
- 2199 H23
- 2199 H24
- 2199 H25
- 2199 H26
- 2199 H27
- 2199 H28
- 2199 H29
- 2199 H30
- 2199 H31
- 2199 H32
- 2199 H33
- 2199 H34
- 2199 H35
- 2199 H36
- 2199 H37
- 2199 H38
- 2199 H39
- 2199 H40
- 2199 H41
- 2199 H42
- 2199 H43
- 2199 H44
- 2199 H45
- 2199 H46
- 2199 H47
- 2199 H48
- 2199 H49
- 2199 H50
- 2199 H51
- 2199 H52
- 2199 H53
- 2199 H54
- 2199 H55
- 2199 H56
- 2199 H57
- 2199 H58
- 2199 H59
- 2199 H60
- 2199 H61
- 2199 H62
- 2199 H63
- 2199 H64
- 2199 H65
- 2199 H66
- 2199 H67
- 2199 H68
- 2199 H69
- 2199 H70
- 2199 H71
- 2199 H72
- 2199 H73
- 2199 H74
- 2199 H75
- 2199 H76
- 2199 H77
- 2199 H78
- 2199 H79
- 2199 H80
- 2199 H81
- 2199 H82
- 2199 H83
- 2199 H84
- 2199 H85
- 2199 H86
- 2199 H87
- 2199 H88
- 2199 H89
- 2199 H90
- 2199 H91
- 2199 H92
- 2199 H93
- 2199 H94
- 2199 H95
- 2199 H96
- 2199 H97
- 2199 H98
- 2199 H99
- 2199 H100

ECO6 Sys-Cenelec, 03/87

1101 B5 1110 B4 1131 C5 2107 B3 2133 C1 2162 A4 5102 C4 5110 A2 5114 A2 5121 B2 7104 C4 9101 A2 9104 B1 9107 B4 9110 A4
 1102 B5 1120 A4 1132 A4 2128 A3 2138 B1 2191 B4 5103 C4 5111 A3 5115 C2 5122 C3 7105 C5 9102 B2 9105 B1 9108 B3 9111 A3
 1103 C5 1130 A5 2106 B4 2129 B3 2144 B1 3142 C2 5109 B3 5112 A2 5119 B2 5123 C3 7112 B1 9103 A1 9106 B1 9109 C2

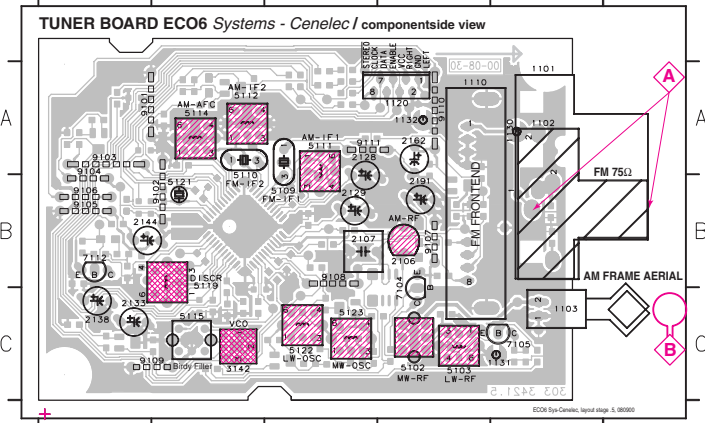

2102 B1 2120 C3 2130 B3 2137 A3 2146 B5 2161 A4 2169 A3 3125 A3 3143 C5 3152 A3 3158 A3 3169 B4 3190 B2 4101 C2 6105 B2 7108 A5
 2105 B1 2122 C3 2131 C4 2139 B4 2147 A5 2163 A4 2190 B2 3128 C2 3144 A5 3153 A3 3159 A3 3170 A4 3181 A3 4102 C2 6109 B2 7110 B2
 2108 C1 2123 C3 2132 C4 2140 B4 2148 B4 2164 B4 3106 B3 3132 B3 3145 C4 3154 B5 3160 A3 3171 B5 3192 A2 4104 C3 6107 B5 7111 A2
 2109 C1 2124 C3 2134 C4 2141 B5 2149 C4 2165 B3 3108 C2 3134 C3 3146 B5 3155 B5 3161 A4 3172 B5 3193 B2 4105 B2 6120 A4 7122 C3
 2118 C3 2125 C3 2135 C5 2143 B5 2150 B3 2168 B5 3109 C1 3137 C4 3150 B3 3156 A4 3167 A5 3176 C4 3184 B2 4106 B3 7101 B4 7124 C3
 2119 C3 2127 C4 2136 A3 2145 B5 2159 B3 2167 B4 3123 A5 3141 B3 3151 A2 3157 A4 3168 C5 3180 A5 3195 B2 4107 C4 7103 C5

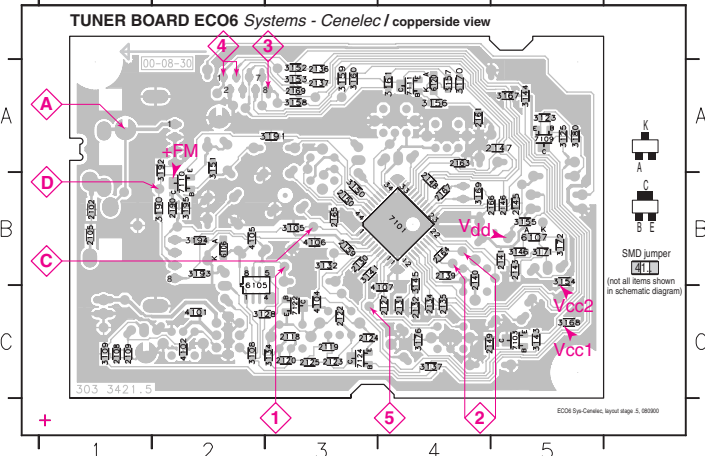

These assembly drawings show a summary of all possible versions.
 For components used in a specific version see schematic diagram respectively partlist.

TUNER ADJUSTMENT TABLE (ECO6 Cenelec FM/MW - and FM/MW/LW - versions with AM-frame aerial)

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (50kHz grid)			108MHz	check		8V ±1.2V
			87.5MHz	check		1.6V ±0.5V
MW 531 - 1602kHz (9kHz grid)			1602kHz	5123	1	8V ±0.2V 3-band 6.9V ±0.2V 2-band
			531kHz	check		1.1V ±0.4V
LW 153 - 279kHz (3kHz grid)			279kHz	5122		8V ±0.2V
			153kHz	check		1.1V ±0.4V
FM - IF						
FM	10.7MHz, 45mV continuous wave	D		5119	2	0mV ±3mV
FM - VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz ¹⁾
FM RF (channel separation) Note: The FM-frontend unit has already been adjusted by the factory and needs therefore no further adjustments for service purposes.						
FM	98MHz, 1mV 90% Left + 9% pilot mod=1kHz	A	98MHz	IF coil inside FM frontend 1110	4	right channel min.
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with 3.3kΩ to Vcc	C		5111 5112	5	
AM AFC MW	continuous wave V _{RF} = 2mV	C		5114	2	0mV ±2mV
AM RF³⁾						
MW	1494kHz	B	1494kHz	2106	5	
	558kHz		558kHz	5102		
LW	198kHz Δf = ±30kHz V _{RF} as low as possible		198kHz	5103		

Use Service Testprogram. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.
¹⁾ If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)
²⁾ RC network serves for damping the IF-filter while adjusting the other one.
³⁾ For AM RF adjustments the original frame antenna has to be used!
 MW has to be aligned before LW.
 ↑ Repeat

ETF7 TAPE MODULE

(Non-Dolby Version)

Tapedeck wiring (Double deck)

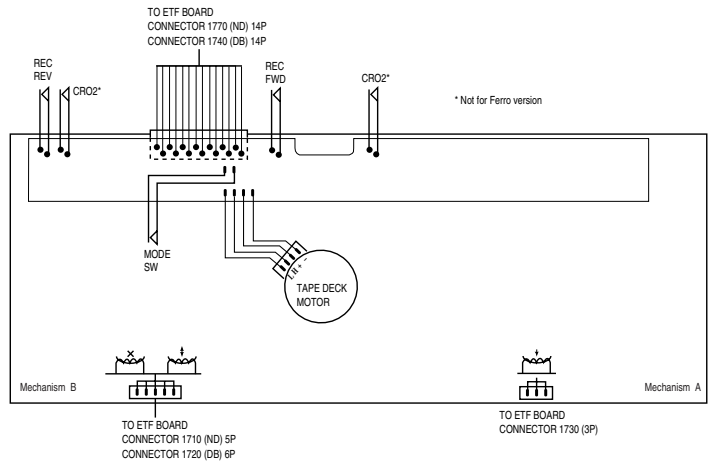


TABLE OF CONTENTS



Tape Module Wiring & variation table 9-1
 Block diagram 9-2
 Brief Introduction 9-3
 Connector assignment 9-4
 Tape deck electronics & Tape adjustments 9-5
 ETF7 Non-Dolby board layouts 9-6
 Analog Circuit diagram 9-7
 Servo Circuit diagram 9-8
 Exploded views & parts list 9-9
 Electrical parts list 9-13

Variations table for Analog Circuit

	Autoreverse ND/DD/FR		Non-autoreverse ND/DD/FF	
	Chrome/Ferro	Chrome/Ferro	Chrome/Ferro	Ferro
2624	-	-	-	100nF
2701, 2702	150pF	270pF	270pF	270pF
2703, 2704	100pF	220pF	220pF	220pF
2717, 2718	10nF	15nF	15nF	15nF
2721, 2722	6.8nF	6.8nF	-	-
2727, 2728	470pF	1nF	1nF	1nF
3616	10k	1k	1k	-
3618	6k8	-	-	-
3620	10k trimmer	-	-	-
3622	-	10k trimmer	10k trimmer	-
3672	4k7	-	-	-
3676	47k	-	-	-
3687	220R	220R	-	-
3688	680R	-	-	-
3723, 3724	15k	18k	18k	-
3725, 3726	10R	10R	-	-
3727, 3728	5k6	6k8	6k8	-
3729, 3730	3k3	4k7	4k7	-
3743, 3744	1k5	2k2	2k2	-
3745, 3746	3k3	5k6	5k6	-
3754, 3755	1M	47R	47R	-

	Autoreverse ND/DD/FR		Non-autoreverse ND/DD/FF	
	Chrome/Ferro	Chrome/Ferro	Chrome/Ferro	Ferro
3769	12k	8k2	8k2	-
3772	6k8	5k6	5k6	-
4785	-	-	0R jumper	-
3774	15k	8k2	8k2	-
6614	1N4148	-	-	-
7616	BC857B	-	-	-
7622	BC847B	-	-	-


BLOCK DIAGRAM

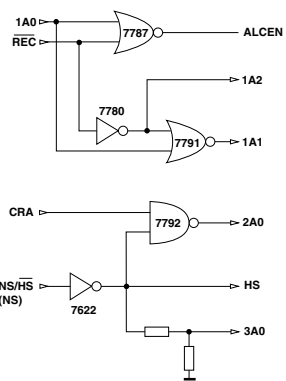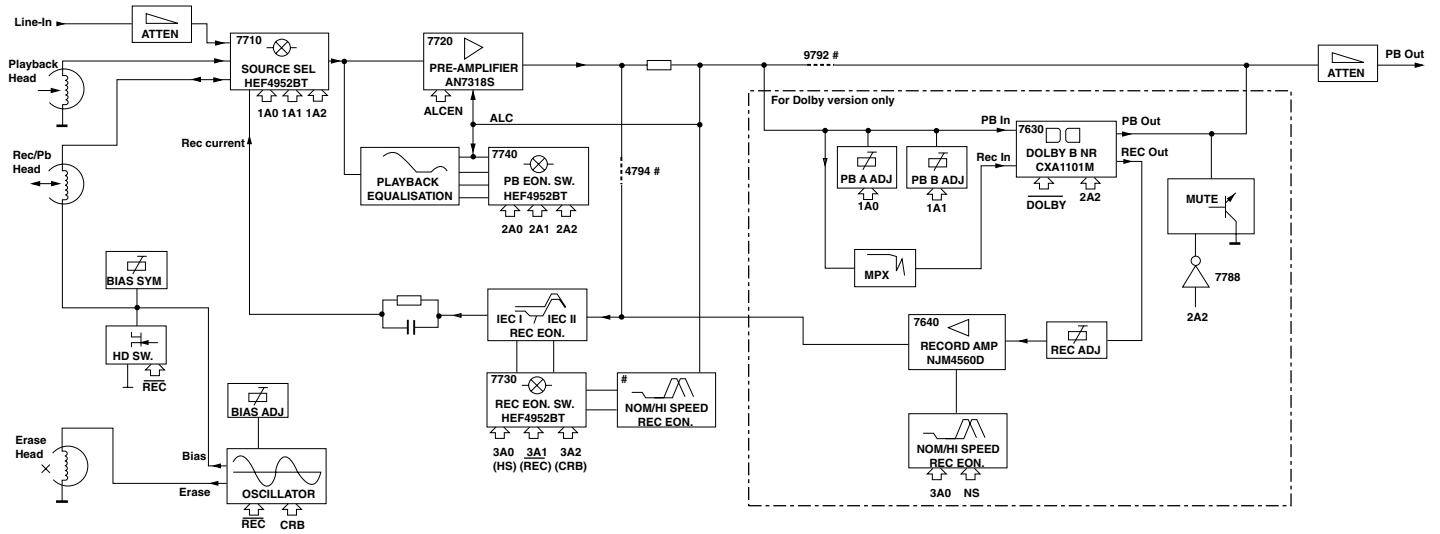

NOTE: # For Non-dolby version only
Only 1 channel is presented.

MicroProcessor Control / Communication lines

Direct / Indirect Control lines from Shift Registers

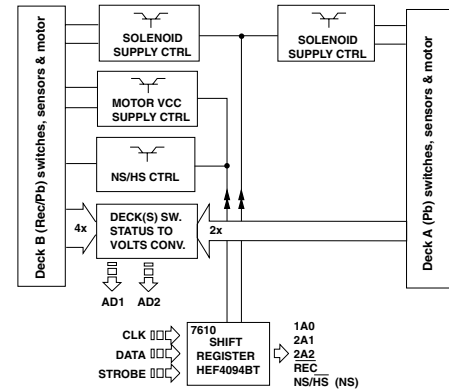

Brief introduction

General

1. **Playback Mode**
Signal from the playback head Deck A or Deck B is selected and fed through by the Mode Selector IC7710 (HEF4952BT). The signal is amplified by amplifier IC7720 (AN7323S) before feeding to the IC7740 (HEF4952BT) and out to the AF Board via connector 1701.
2. **Recording Mode**
Recording Signal is selected and fed through by the Mode Selector IC7710 (HEF4952BT) which is then amplified by the amplifier IC7720 (AN7323S). The amplified output signal will pass through IC7730 (HEF4952BT) for record equalization and back to IC7710 (HEF4952BT) before registered into the Rec/PB Head of Deck B.
3. **Dubbing Mode**
In Dubbing mode, signal from the playback head Deck A is selected and fed through by the Mode Selector IC7710 (HEF4952BT) which is then equalised for playback mode by the amplifier IC7720 (AN7323S) so that a flat response is obtained after the pre-amp. The equalised signal will then follow the same path as in the Recording mode.
4. **Mode Selector**
The Mode Selector IC7710 (HEF4952BT) caters for 4 inputs signal, namely Playback Signal from Deck A, Playback Signal from Deck B, Recording Signal and Dubbing Signal.
5. **Amplifier PB/REC**
Amplifier IC7720 (AN7323S) is for the purpose of amplifying the Playback and Recording signal from the Mode Selector.
6. **Automatic Level Control (ALC)**
ALC circuit consists of resistors (3760, 3765, 3766, 3767), capacitors (2762, 2763) and control by transistor 7787 (BC847B). ALC limits the amplifier output to a constant value when input signal becomes too large, thus limiting recording current to below saturation level, to prevent recording distortion.
7. **Muting Circuit (For Non-Dolby version only)**
Switch S4 of the IC7740 (HEF4952BT) is for the purpose of muting the output during Recording mode. During Recording mode, S4 is closed and shorted to the ground.
8. **IC7740 (HEF4952BT)**
The function of the IC7740 (HEF4952BT) is to change time constant between 120us Ferro (IEC I) and 70us Chrome (IEC II) during playback mode. It will automatically determined whether the tape type is 120us Ferro (IEC I) or 70us Chrome (IEC II). This IC will switch to Flat Gain during the Recording mode.
9. **IC7730 (HEF4952BT)**
The function of the IC7730 (HEF4952BT) is to change gain and time constant according to tape type and recording speed to boost recording current at higher frequency during recording to compensate for head loss. It will automatically determined whether the tape type is 120us Ferro (IEC I) or 70us Chrome (IEC II).
10. **Bias Level**
Bias Level making use of the Variable resistor (3773) for adjusting the optimal level of the bias current for Ferro or Chrome.
11. **Bias Symm (For Dolby B NR version only)**
Bias Symm making use of the Variable resistor (3785) to adjust the bias current for the left and the right channel to be equal.
12. **PB Switch**
Playback Switch which consists of the FETs 7785 (For Dolby B NR version only) & 7786 (J111) is for the purpose of providing a virtual ground for the Rec/PB Head (Deck B) during Playback mode. During the Playback mode, the FETs are turn on and shorted pin 2 and 4 of connector 1720 to the ground. During Recording mode, the FETs are turn off to allow the oscillator signal to be superposition onto the Recording signal for recording.

13. **Motor Speed (For FR versions only)**
During High speed dubbing, a feedback signal from the uP through pin 03 of the IC7610 (HEF4094BT) will trigger the transistors 7622 (BC847B) and 7616 (BC857B) to cause a change in the voltage level between High and Low, thus changing the speed of the motor.
14. **IC7610 (HEF4094BT)**
IC7610 (HEF4094BT) is a Shift Register use for issues the logic for cmos switch ICs (HEF4952BT) via 1A0, 2A1 and 2A2. It also issues logic to On/Off SOL_A, SOL_B and MOT. Recording speed is controlled via NS/HS.

Dolby Circuit (For sets with Dolby B NR version only)

15. **IC7630 (CXA1551M)**
IC7630 (CXA1551M) in the Dolby circuit is a Dolby Noise Reduction Type B IC for the Playback and Recording signal. Noise Reduction ON/OFF are controlled by DOLBY, which is from CLK, direct from uP. After clocking in DATA, CLK is set to HIGH/LOW for NR OFF/ON.
16. **19kHz Filter**
The 19kHz filters 5631 & 5632 (LXD-210) in the Dolby circuit is for the purpose of filtering the 19kHz Pilot Tone (for Tuner signal only) of the Recording signal.
17. **Level Adjust**
The Variable resistor 3635, 3636, 3641 and 3642 in the Dolby circuit is for adjusting the playback level of the Dolby reference (400Hz, 200nWb/m). Transistor 7631, 7632 are ON to enable adjustment of 3641, 3642 during Playback Deck A. Transistor 7633, 7634 and 3635, 3636 are active for Playback Deck B.
18. **Amplifier IC7640 (NJM4560M)**
The Amplifiers 7640A & 7640B (NJM4560M) in the Dolby circuit is for the purpose of amplified the Recording signal.
19. **Muting Circuit**
The muting circuit which consists of transistors 7788, 7789 and 7790 (BC847B) is for the purpose of muting the output during Recording mode.

NOTATIONS & ABBREVIATIONS USED IN THIS DOCUMENT

CR	Chrome (IEC type II)
DB	Dolby NR type B
DD	Double Deck
DM	Double Motor
FE	Ferro (IEC type I)
FF	Non-Autoreverse
FR	Autoreverse Deck B
Gnd x	Ground x
HSD	High speed dubbing
ND	Non Dolby
NR	Noise Reduction
NSD	Normal speed dubbing
PB	Playback
REC	Record
S/A	Sub-assy
SD	Single Deck
SM	Single Motor

CONNECTORS ASSIGNMENTS:**CONNECTOR 1701**

1	REC-L	Record input left
2	REC-R	Record input right
3	GND A	AF Ground
4	TAPE-L	Playback output left
5	+12V	D.C. supply (+12V) for AF electronics
6	TAPE-R	Playback output right
7	-CMOS	Negative d.c. supply (-9V) for CMOS ICs

INTERCONNECTION TO AF BOARD**CONNECTOR 1703**

1	GND M	Motor Ground
2	+MOTOR	D.C. supply (+12V) for tape deck motor & solenoid

INTERCONNECTION TO AF BOARD**CONNECTOR 1706**

1	AD2	Deck sensing switches output voltage / Deck A EOT
2	AD1	Deck sensing switches output voltage / Deck B EOT
3	+5V	DC supply +5V for ADC network
4	GND P	Control & Oscillator Ground
5	CLK	HEF4094BT shift register Clock line
6	DATA	HEF4094BT shift register Data line
7	STROBE	HEF4094BT shift register Strobe line

INTERCONNECTION TO FRONT BOARD**CONNECTOR 1710**

1	B R/P HD L+	R/P Head left channel positive
2	GND A	R/P Head return ground
3	B R/P HD R+	R/P Head right channel positive
4	ERASE HEAD	Erase Head
5	GND A	Erase Head ground

DECK B HEADS CONNECTON (For Non-Dolby version only)**CONNECTOR 1720**

1	B R/P HD L+	R/P Head left channel positive
2	B R/P HD L-	R/P Head left channel negative
3	B R/P HD R+	R/P Head right channel positive
4	B R/P HD R-	R/P Head right channel negative
5	ERASE HEAD	Erase Head
6	GND A	Erase Head ground

DECK B HEADS CONNECTON (For Dolby B NR version only)**CONNECTOR 1730**

1	A PB HD L+	Pb Head left channel positive
2	GND A	Pb Head return ground shield
3	A PB HD R+	Pb Head right channel positive

DECK A HEAD CONNECTIONS (For Double Deck versions only)**CONNECTOR 1740**


1	REC REW	Record tab protection status switch (reverse)	[open=on: close=off]
2	CrO2 B	Chrome tape detection switch deck B	[open=Cr: close=Fe]
3	REC FWD	Record tab protection status switch (forward)	[open=on: close=off]
4	PHOTO B	Photo sensor output (tape movement indication)	
5	SOL B	Solenoid supply for deck B	
6	Vcc	Deck / Motor supply	
7	MODE B	Mode switch (head engagement)	[open=off: close=engaged]
8	GND M	Deck / Motor ground	
9	SOL A	Solenoid supply for deck A	
10	PHOTO A	Photo sensor output (tape movement indication)	
11	MODE A	Mode switch (head engagement)	[open=off: close=engaged]
12	L	L pin for motor	
13	CrO2 A	Chrome tape detection switch deck A	[open=Cr: close=Fe]
14	H	H pin for motor	

DECK A & B CONTROL INTERFACE (For Dolby B NR version only)**CONNECTOR 1770**


1	REC REW	Record tab protection status switch (reverse)	[open=on: close=off]
2	CrO2 B	Chrome tape detection switch deck B	[open=Cr: close=Fe]
3	REC FWD	Record tab protection status switch (forward)	[open=on: close=off]
4	PHOTO B	Photo sensor output (tape movement indication)	
5	SOL B	Solenoid supply for deck B	
6	Vcc	Deck / Motor supply	
7	MODE B	Mode switch (head engagement)	[open=off: close=engaged]
8	GND M	Deck / Motor ground	
9	SOL A	Solenoid supply for deck A	
10	PHOTO A	Photo sensor output (tape movement indication)	
11	MODE A	Mode switch (head engagement)	[open=off: close=engaged]
12	L	L pin for motor	
13	CrO2 A	Chrome tape detection switch deck A	[open=Cr: close=Fe]
14	H	H pin for motor	

DECK A & B CONTROL INTERFACE (For Non-Dolby version only)


TAPE MECHANISM ELECTRONICS

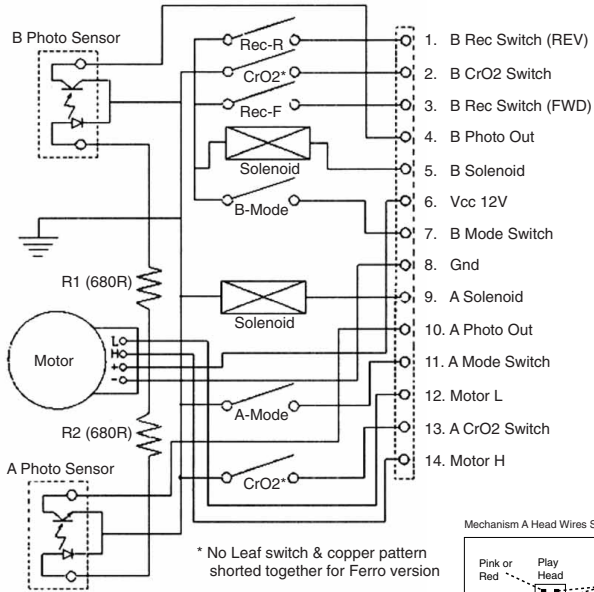


* No Leaf switch & copper pattern shorted together for Ferro version

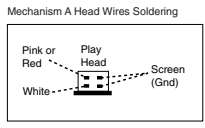

Mechanism B Head Wires Soldering (Non-Dolby version)

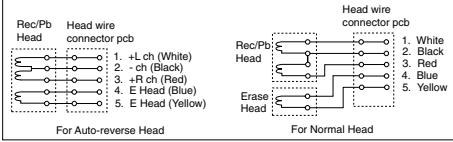

Mechanism B Head Wires Soldering (Dolby B NR version)


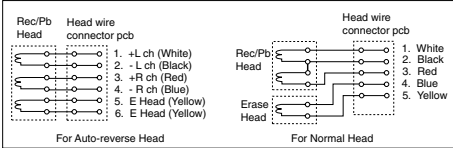


TAPE ADJUSTMENT & CHECK TABLE

	TEST CASSETTE	RECORDER MODE	MEASURE ON	READ ON	ADJUST	
					with	to
ADJUST MOTOR SPEED						
NORMAL SPEED	SBC420 3150Hz	PLAY B	1 or 2	frequency counter	3620	3150Hz - 0.5%
		PLAY A	LEFT RIGHT		check	3150Hz -0.8/+1.8%
CHECK WOW & FLUTTER						
DECK A & B	SBC420 3150Hz	PLAY	1 or 2	W&F-meter	check	±0.4% DIN
ADJUST AZIMUTH						
DECK A & B	SBC420 10kHz	PLAY FWD	1 or 2	mV-meter	left hand screw right hand screw	max. output level & left-right
		PLAY REV #	LEFT RIGHT			
CHECK PLAYBACK FREQUENCY RESPONSE						
DECK A & B	SBC420	PLAY	1 or 2	mV-meter	check	limits see fig.1
ADJUST BIAS CURRENT						
DECK B	SBC419A^	RECORD	5 or 6	mV-meter	3773	995mV
	SBC420		LEFT RIGHT		check	750mV - 1.5dB
CHECK OVERALL FREQUENCY RESPONSE AND DISTORTION						
Inject 3mV signals 100Hz, 250Hz, 1kHz, 10kHz, 12.5kHz via 3 or 4	SBC419A^ or SBC420	RECORD B				
	RECORDED CASSETTE	PLAY B	1 or 2	mV-meter	check	limits see fig. 2 *
Inject 1kHz 8.65mV via 3 or 4	SBC419A^ or SBC420	RECORD B				
	RECORDED CASSETTE	PLAY B	1 or 2	THD-meter	check	±3% *


SBC419A^: 4822 397 30069
SBC420 : 4822 397 30071

For Auto-reverse version only
* If high frequencies are not within limits, decrease bias and re-measure.
If distortion is too high, increase bias and re-measure
^ Not applicable for Ferro version

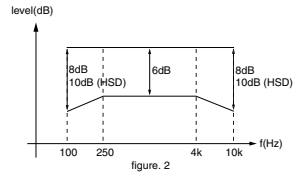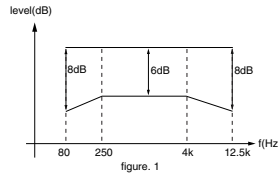


COMPONENT LAYOUT

1701 B2	2714 B2	2784 B1	3761 A1	6770 A1	6782 A2	9706 A1	9715 A1	9724 B2
1702 A2	2715 B2	2785 B1	3764 B2	6771 A1	6785 B2	9707 A2	9716 A2	9725 A2
1703 A2	2716 B2	3607 A1	3773 A1	6772 B1	6786 B2	9708 A2	9717 A2	9726 A2
1706 A1	2741 B1	3609 A1	3778 B1	6773 B1	7782 B1	9709 A2	9718 B2	9727 A2
1710 B1	2761 B2	3611 A1	5701 B1	6774 B1	7786 B2	9710 A1	9719 B1	9728 A2
1730 B2	2762 B2	3620 A1	5703 B1	6775 A1	9702 A1	9711 A1	9720 B1	9729 B1
1760 A2	2763 B2	3622 A1	6611 A2	6776 A1	9703 A1	9712 A1	9721 B1	9791 A2
1770 A2	2765 B2	3674 A2	6612 A2	6777 A1	9704 A2	9713 A1	9722 B1	9792 A2
2713 B2	2780 A1	3685 A1	6614 A1	6778 A1	9705 A2	9714 A1	9723 B2	9793 A1

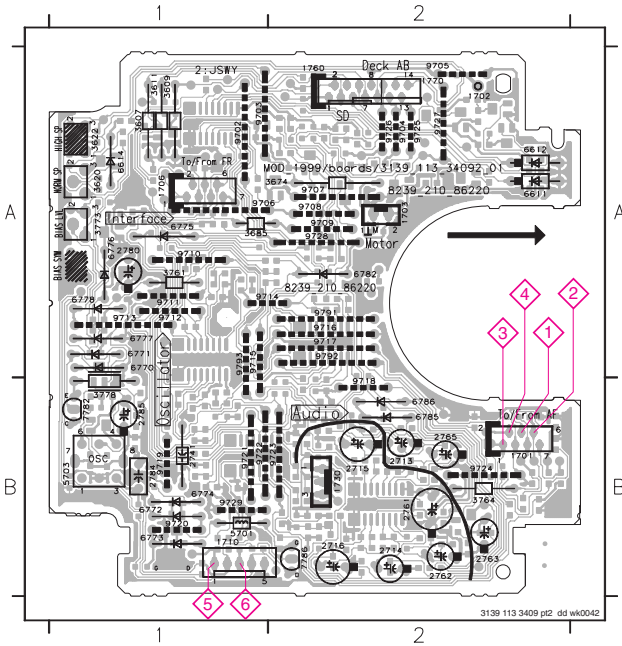


CHIP LAYOUT

2621 A2	2724 B2	3602 A1	3688 A2	3725 A2	3757 A1	4701 A1	4727 B1	7612 A1
2622 A2	2725 A2	3603 A1	3689 A1	3726 B2	3758 A2	4702 A1	4728 B1	7613 A1
2623 A2	2726 B2	3604 A1	3701 B2	3727 A1	3759 A1	4703 A1	4729 B1	7614 A1
2624 A1	2727 B2	3605 A1	3702 B2	3728 B1	3760 B1	4704 A1	4730 B1	7618 A2
2625 A2	2728 B2	3606 A1	3703 B1	3729 A1	3762 A2	4705 A1	4731 B1	7618 A1
2626 B1	2729 A1	3608 A2	3704 B1	3730 B1	3763 B1	4706 A1	4732 B2	7619 A1
2627 A1	2730 B1	3610 A2	3705 B1	3731 A1	3765 B1	4707 A2	4733 B2	7620 A1
2701 B2	2733 B1	3612 A2	3706 B1	3732 B1	3766 B1	4708 A2	4734 B1	7623 A1
2702 B2	2734 B1	3613 A1	3707 B1	3733 B1	3767 B1	4709 A2	4735 B1	7623 A1
2703 B1	2735 B1	3614 A2	3708 B1	3734 B1	3768 B1	4710 A2	4736 B1	7624 A2
2704 B1	2737 B1	3616 A2	3709 B1	3735 B1	3769 A2	4711 A2	4737 B1	7710 B2
2705 B1	2738 B1	3618 A2	3710 B1	3736 B1	3770 B2	4712 A2	4738 B1	7720 B1
2706 B1	2742 A2	3619 A2	3711 B1	3741 B1	3771 B2	4713 A1	4739 B1	7730 A2
2707 B1	2745 B2	3623 A1	3712 B1	3742 B1	3772 A2	4714 A1	4740 B1	7740 A1
2708 B1	2744 B1	3624 A1	3713 B1	3743 B1	3774 A2	4715 A1	4741 B2	7780 A2
2709 B1	2745 B2	3625 A1	3714 B1	3744 B1	3775 B2	4716 A1	4742 B2	778 B2
2710 B1	2746 B1	3626 A1	3715 B1	3745 B1	3776 B2	4717 A1	4744 A2	7783 A2
2711 B1	2747 B1	3628 A1	3716 B1	3746 B1	3777 B2	4718 A1	4745 A1	7784 B2
2712 B1	2760 A2	3630 A1	3717 A1	3748 B1	3778 B2	4719 A2	4746 A1	7785 B1
2717 A2	2769 B1	3672 A2	3718 B2	3749 A1	3780 B2	4720 A2	4747 A1	7791 A1
2718 B2	2770 B1	3676 A2	3719 A2	3751 A1	3781 B1	4721 A2	4748 B1	7792 A2
2719 A2	2781 B2	3678 A1	3720 B2	3752 A1	3784 B2	4722 A2	4785 A2	
2720 B2	2782 B2	3679 A1	3721 A2	3753 A1	3786 A2	4723 B1	4790 B2	
2721 A2	2786 B2	3680 A1	3722 B2	3754 A1	3787 A2	4724 B1	4794 B1	
2722 B2	2787 B2	3686 A2	3723 B2	3755 A1	3788 B2	4725 A1	4795 A1	
2723 A2	3601 A1	3687 A2	3724 B2	3756 A1	3789 A2	4726 B1	7610 A2	

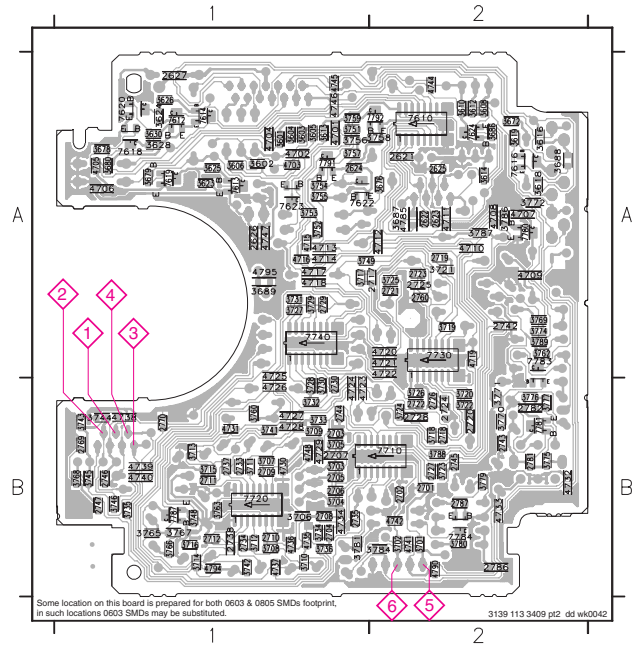


ANALOG CIRCUIT


1701 F9	2705 A2	2712 B6	2719 C5	2726 D4	2735 B3	2745 F5	2765 B4	2785 F1	3705 A4	3712 B4	3719 C6	3726 D5	3733 A2	3744 F8	3753 F5	3760 A7	3767 A7	3774 E3	3781 D2	4794 C6	6774 D3	6786 B7	7782 E1	9791 A8
1710 C1	2706 A2	2713 A6	2720 D5	2727 A3	2737 A6	2746 F8	2760 F7	2786 D1	3706 B4	3713 A7	3720 E6	3727 A7	3734 B2	3745 F8	3754 E8	3761 E3	3768 E8	3775 F3	3784 D1	5701 D2	6775 C3	7710 A3	7783 E2	9792 B6
1730 A1	2707 A4	2714 B6	2721 C5	2728 E5	2738 B6	2747 E9	2770 F8	2787 D3	3707 A5	3714 B7	3721 C5	3728 B7	3735 A2	3746 E8	3755 E7	3762 E2	3769 E4	3776 F2	3786 F4	5703 F1	6776 F3	7720 A5	7784 D2	9793 A6
2701 B2	2708 B4	2715 A4	2722 D5	2729 A8	2741 D6	2760 E3	2780 F3	3701 B1	3708 B4	3715 A6	3722 D6	3729 A7	3736 B1	3748 C8	3756 D8	3763 A5	3770 F2	3777 F2	3787 C3	6770 E2	6777 E2	7730 D6	7786 C2	
2702 B2	2709 A5	2716 C4	2723 C5	2730 B8	2742 C3	2761 B5	2781 F2	3702 C2	3709 A4	3716 B6	3723 A3	3730 B7	3741 A6	3749 C7	3757 D8	3764 A5	3771 F2	3778 E1	3788 C3	6771 E2	6778 E4	7740 A8	7787 C8	
2703 A2	2710 B5	2717 C5	2724 D5	2733 A5	2743 F1	2762 B6	2782 F2	3703 A2	3710 C4	3717 C6	3724 D5	3731 A7	3742 C7	3751 E5	3758 D8	3765 B6	3772 F3	3779 D3	3789 F4	6772 D1	6782 C7	7780 F4	7791 F5	
2704 B2	2711 A6	2718 D6	2725 D4	2734 C4	2744 A4	2763 B6	2784 F1	3704 B1	3711 A5	3718 E6	3725 C5	3732 B7	3743 F8	3752 F4	3759 D7	3766 B7	3773 E3	3780 D2	4790 C3	6773 D1	6785 A7	7781 F3	7792 D6	

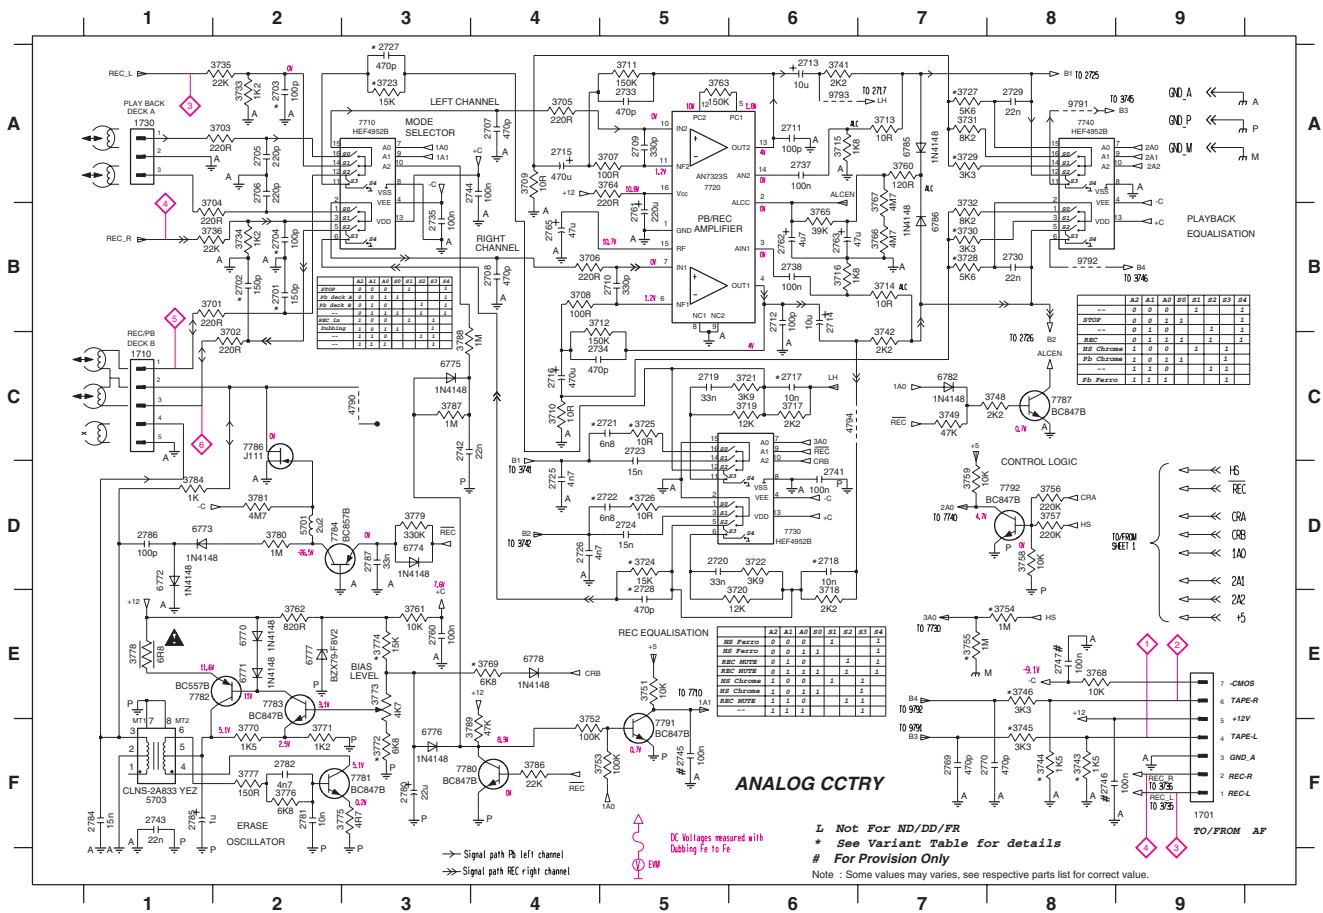

SERVO CONTROL CIRCUIT

1702 A7 1760 B8 2622 D2 2625 E4 3601 B2 3604 C2 3607 C6 3610 D6 3613 B2 3618 A4 3622 A4 3625 B3 3630 A6 3676 C5 3680 C5 3687 D2 4785 D2 6612 B6 7612 A6 7616 A4 7620 B6 7624 D6
 1703 B1 1770 B7 2623 D2 2626 B1 3602 C2 3605 B3 3608 D6 3611 C6 3614 C6 3619 A4 3623 B3 3626 B6 3672 B4 3678 B5 3685 D2 3688 A5 4795 E3 6614 B4 7613 A3 7618 B6 7622 B5 9705 A7
 1706 E1 2621 D2 2624 E2 2627 A7 3603 B2 3606 C3 3609 C6 3612 D6 3616 A5 3620 A4 3624 B6 3628 A5 3674 B5 3679 B3 3686 E6 3689 E3 6611 A2 7610 D4 7614 A6 7619 B4 7623 D2

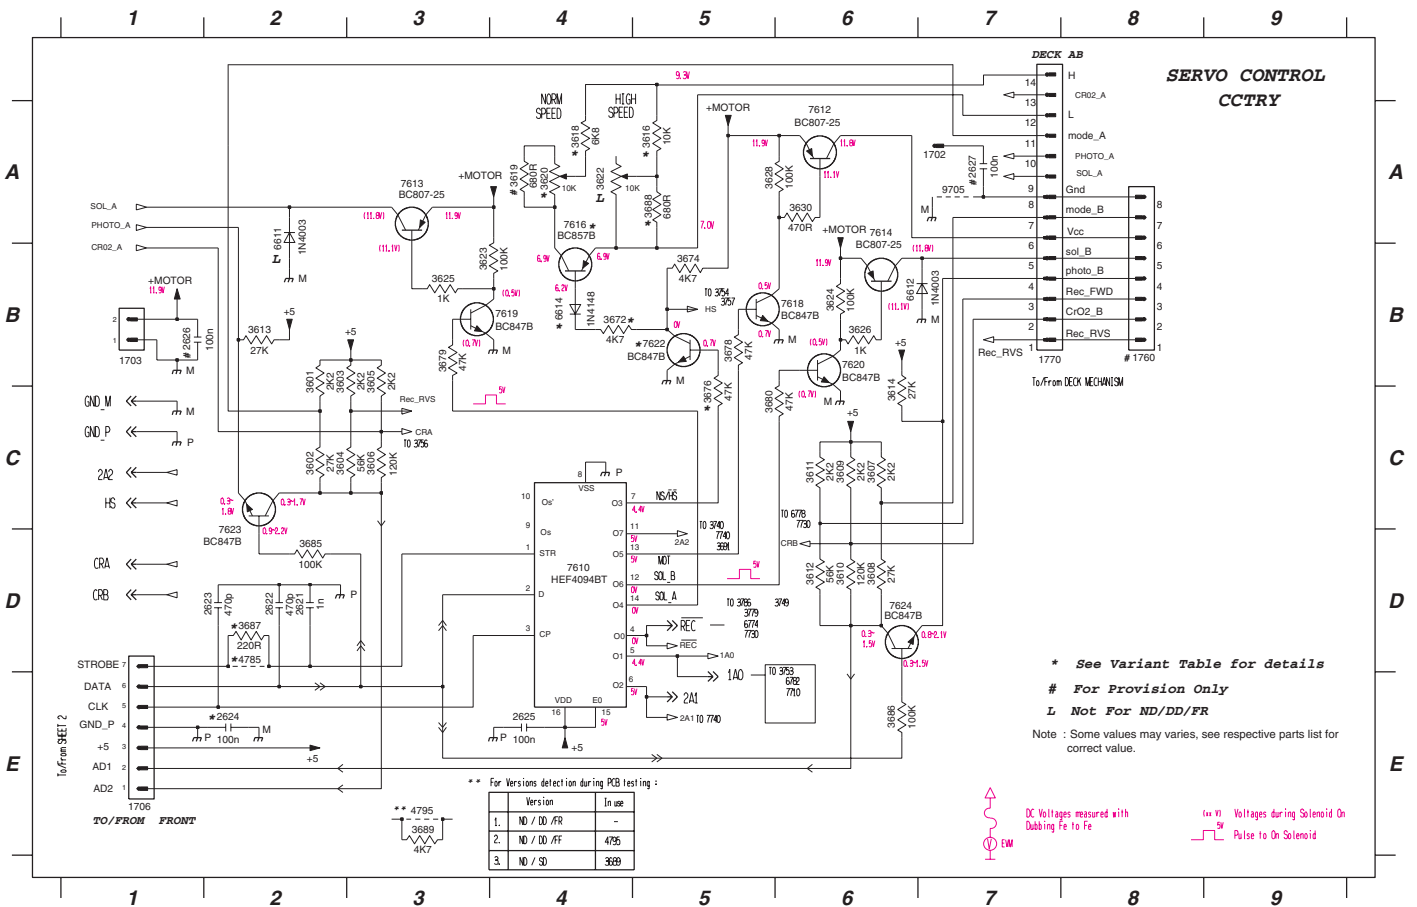

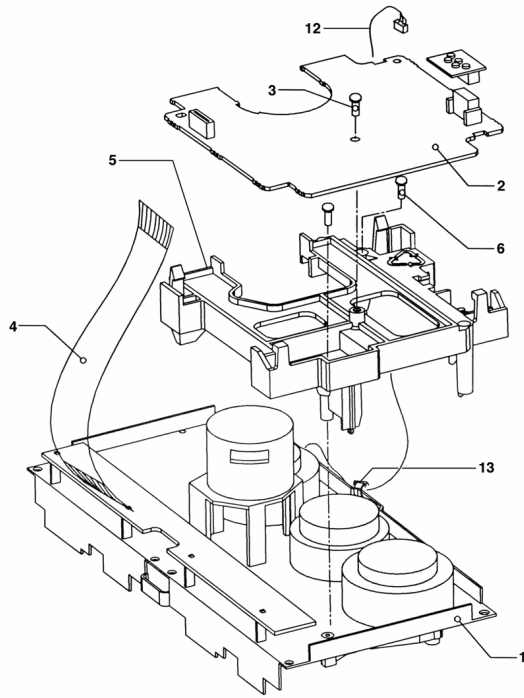


3139 118 77070 (incl. ...77080) dd wk926

TAPE MODULE EXPLODED VIEW

- 1 3139 118 77130 Autoreverse Mech. CWE44FR01
- 1 3139 118 77140 Non-Autoreverse Mech. CWE44FF02 Chrome/Ferro
- 1 3139 118 77950 Non-Autoreverse Mech. CWE44FF05 Ferro
- 3 - Screw D3 x 10
- 6 - Screw M2 x 16
- 7 3139 110 34080 Flex Cable 14 pin 7,5 cm

Note: Only the parts mentioned in this list are normal service spare parts.

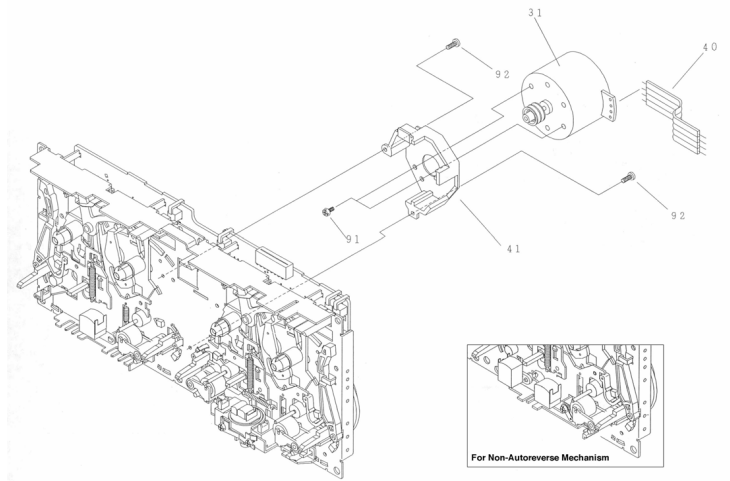

TAPE MECHANISM - MOTOR EXPLODED VIEW

- 31 4822 361 11055 Motor Assembly
- 91 - Screw M2,6 x 5
- 92 - Screw M2 x 5

Note: Only the parts mentioned in this list are normal service spare parts.

TAPE MECHANISM A - PLAY


MECHANICAL PARTS - PLAY MECHANISM

- 1 9965 000 02313 Play Head (Non-Autoreverse deck)
- 1 9965 000 02321 Play Head (Autoreverse deck)
- 12 4822 402 10972 Pinch Arm Assembly R
- 23 9965 000 02314 Coil Assembly

- 25 9965 000 06443 Cam Gear
- 32 4822 528 11209 Flywheel Assembly RV
- 42 9965 000 02315 Belt AF (Autoreverse deck)
- 42 9965 000 02718 Belt AF (Non-autoreverse deck)

- 69 4822 492 11761 Spring
- 102 4822 532 12931 Washer
- 103 4822 532 12932 Washer
- 104 4822 532 12933 Washer

Note: Only the parts mentioned in the list are normal service spare parts.

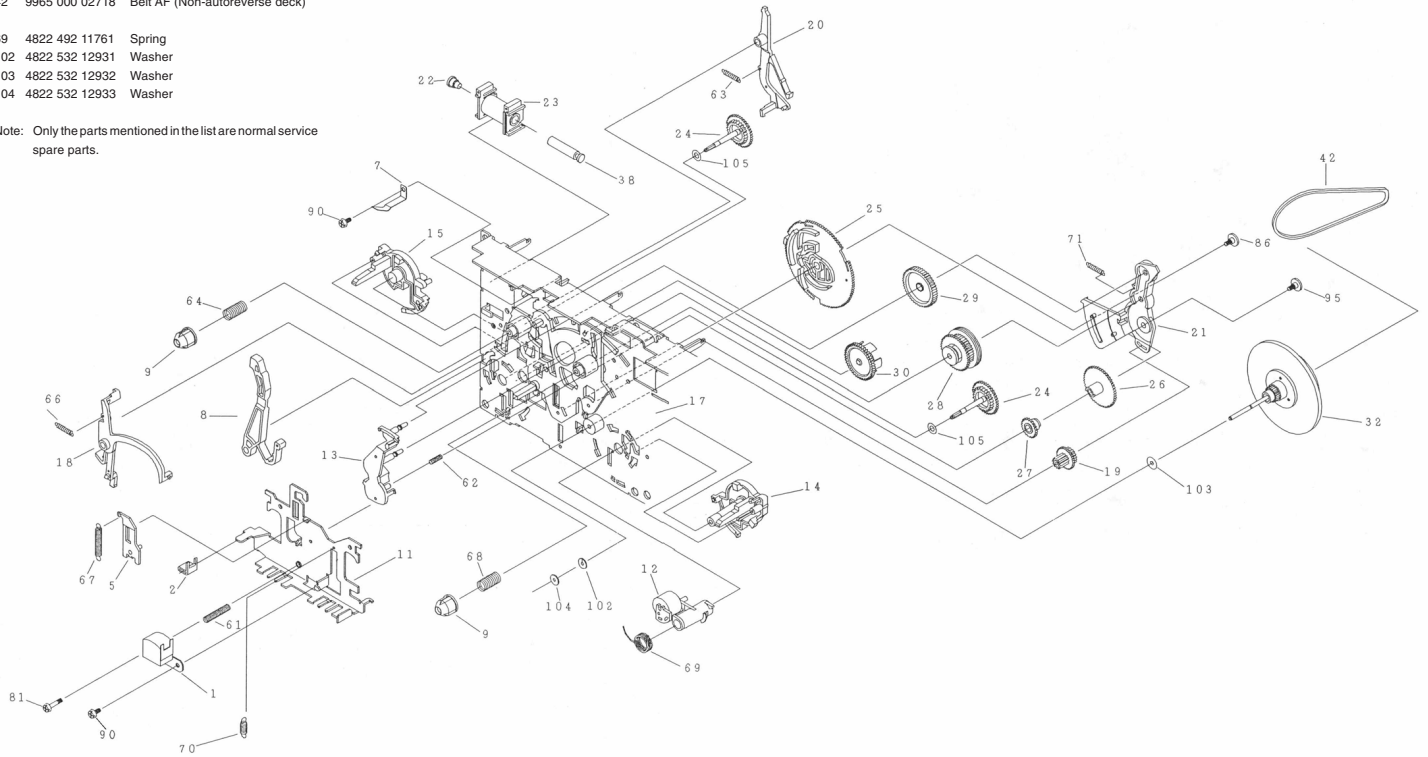


TAPE MECHANISM B - RECORD/PLAYBACK (Non-Autoreverse version)

MECHANICAL PARTS - REC/PB MECHANISM

1	9965 000 02313	Play Head
3	9965 000 02600	Head, Erase
12	4822 402 10972	Pinch Arm Assembly R
23	9965 000 02314	Coil Assembly
25	9965 000 06443	Cam Gear
32	4822 528 11209	Flywheel Assembly RV
44-2	9965 000 02317	Flex Socket 14 Pin
44-3	9965 000 02320	Photo Interrupter
44-4	4822 050 16801	680R 1% 0,4W
44-6	9965 000 02318	Leaf Switch
44-7	9965 000 02319	Mode Switch
59	9965 000 02719	Belt BF (Large)
69	4822 492 11761	Spring
102	4822 532 12931	Washer
103	4822 532 12932	Washer
104	4822 532 12933	Washer

Note: Only the parts mentioned in the list are normal service spare parts.

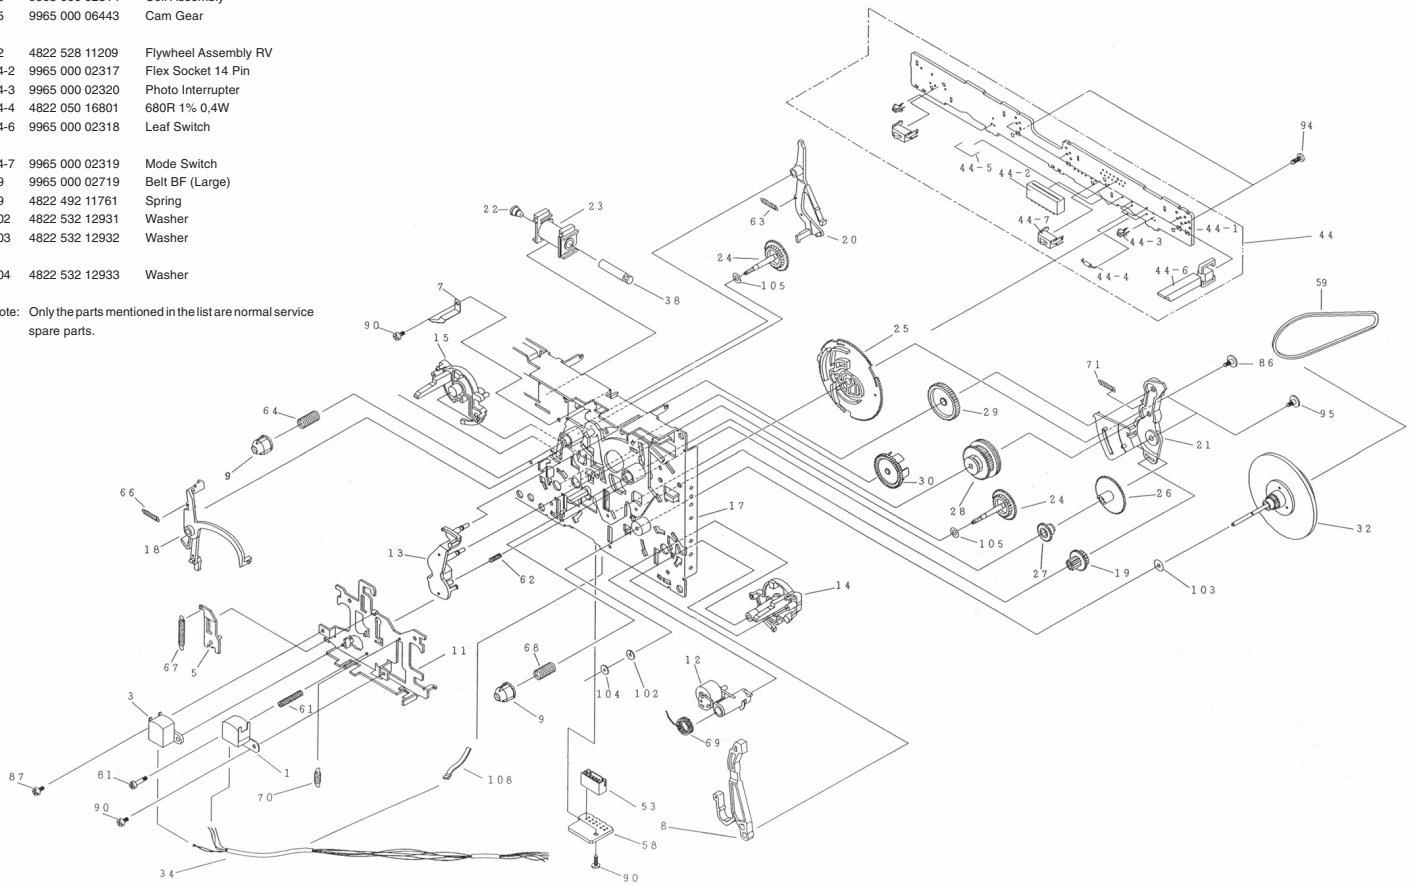

TAPE MECHANISM B - RECORD/PLAYBACK (Autoreverse version)

MECHANICAL PARTS - REC/PB MECHANISM

12	4822 402 10972	Pinch Arm Assembly R
23	9965 000 02314	Coil Assembly
25	9965 000 06443	Cam Gear
32	4822 528 11209	Flywheel Assembly RV
39	9965 000 02322	Belt AF


44-2	9965 000 02317	Flex Socket 14 Pin
44-3	9965 000 02320	Photo Interrupter
44-4	4822 050 16801	680R 1% 0,4W
44-6	9965 000 02318	Leaf Switch
44-7	9965 000 02319	Mode Switch

45	9965 000 02323	Rec/Pb Head Assembly
50	4822 402 10973	Pinch Arm Assembly L
54	9965 000 02324	Flywheel Assembly L
69	4822 492 11761	Spring
73	4822 492 11762	Spring

101	9965 000 02325	Washer
102	4822 532 12931	Washer
103	4822 532 12932	Washer
104	4822 532 12933	Washer
107	9965 000 02326	Washer

109	9965 000 02327	Washer
-----	----------------	--------

Note: Only the parts mentioned in the list are normal service spare parts.

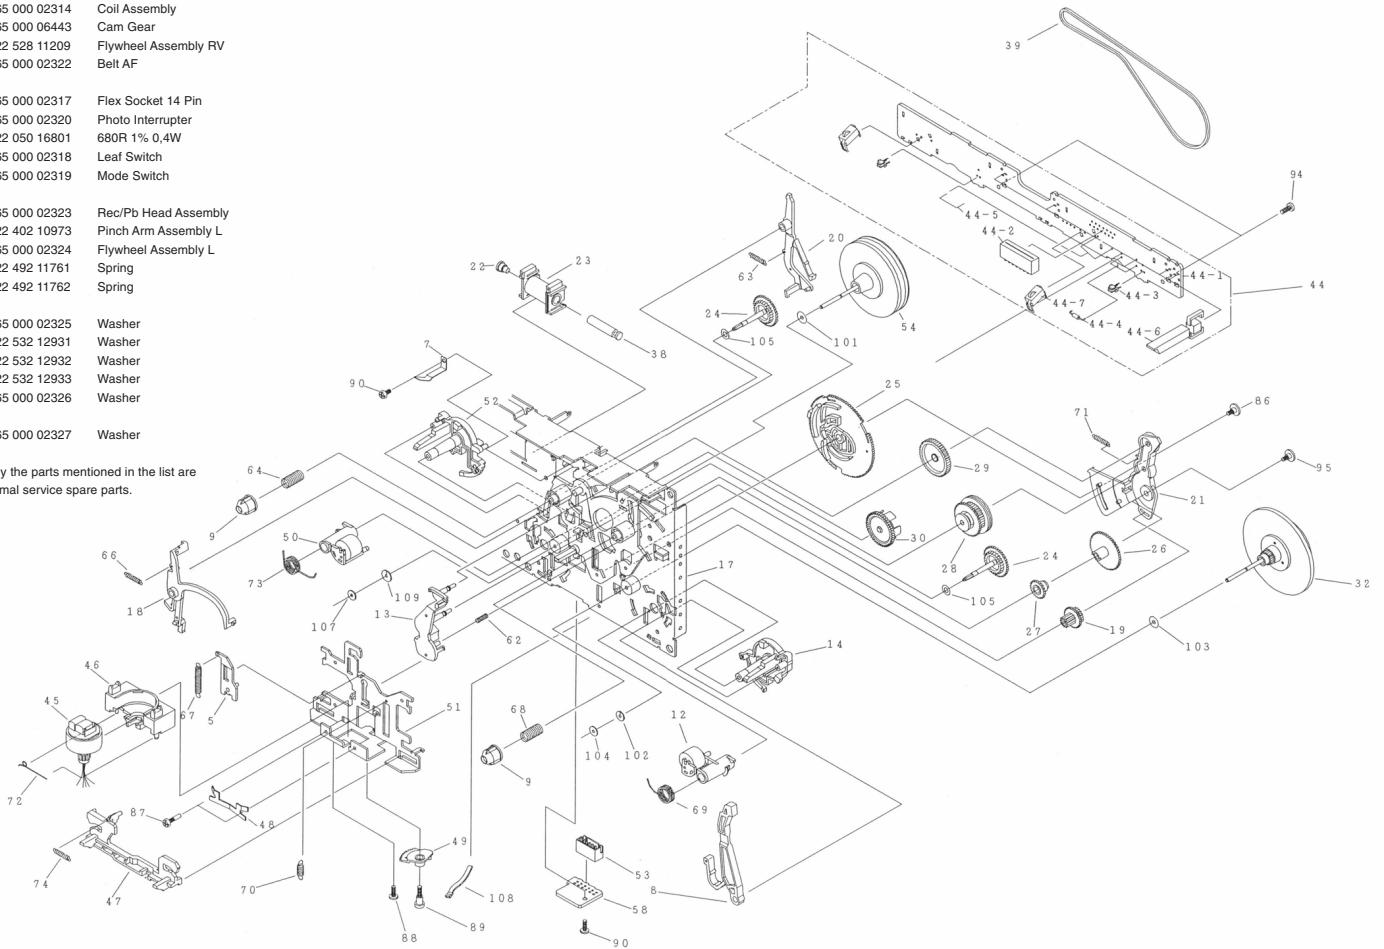

ELECTRICAL PARTS LIST - ETF7 NON-DOLBY BOARD**MISCELLANEOUS**

1701	482226710953	Flex Socket 7pin Vert.
1706	482226710953	Flex Socket 7pin Vert.
1770	482226751255	Flex Socket 14pin Vert.

CAPACITORS

2621	532212231647	1nF 10% 63V
2622	532212234099	470pF 10% 63V
2623	532212234099	470pF 10% 63V
2624	482212614585	100nF 10% 50V only for Ferro
2625	482212614585	100nF 10% 50V
2701	532212233538	150pF 2% 63V Autoreverse
2701	482212233216	270pF 5% 63V Non-autoreverse
2702	532212233538	150pF 2% 63V Autoreverse
2702	482212233216	270pF 5% 63V Non-autoreverse
2703	532212232531	100pF 5% 50V Autoreverse
2703	482212233575	220pF 5% 63V Non-autoreverse
2704	532212232531	100pF 5% 50V Autoreverse
2704	482212233575	220pF 5% 63V Non-autoreverse
2705	482212233575	220pF 5% 63V
2706	482212233575	220pF 5% 63V
2707	532212234099	470pF 10% 63V
2708	532212234099	470pF 10% 63V
2709	532212231863	330pF 5% 63V
2710	532212231863	330pF 5% 63V
2711	532212232531	100pF 5% 50V
2712	532212232531	100pF 5% 50V
2713	482212440248	10uF 20% 63V
2714	482212440248	10uF 20% 63V
2715	482212480195	470uF 20% 10V
2716	482212480195	470uF 20% 10V
2717	482212233177	10nF 20% 50V Autoreverse
2717	482212613188	15nF 5% 63V Non-autoreverse
2718	482212233177	10nF 20% 50V Autoreverse
2718	482212613188	15nF 5% 63V Non-autoreverse
2719	482212612105	33nF 5% 50V
2720	482212612105	33nF 5% 50V
2721	532212231866	6,8nF 10% 63V not for Ferro
2722	532212231866	6,8nF 10% 63V not for Ferro
2723	482212613188	15nF 5% 63V
2724	482212613188	15nF 5% 63V
2725	532212610223	4,7nF 10% 63V
2726	532212610223	4,7nF 10% 63V
2727	532212234099	470pF 10% 63V Autoreverse
2727	532212231647	1nF 10% 63V Non-autoreverse
2728	532212234099	470pF 10% 63V Autoreverse
2728	532212231647	1nF 10% 63V Non-autoreverse
2729	532212232654	22nF 10% 63V
2730	532212232654	22nF 10% 63V
2733	532212234099	470pF 10% 63V
2734	532212234099	470pF 10% 63V
2735	482212614585	100nF 10% 50V
2737	482212614585	100nF 10% 50V

2738	482212614585	100nF 10% 50V
2741	482212611585	22nF +80/-20% 25V
2742	532212232654	22nF 10% 63V
2743	532212232654	22nF 10% 63V
2744	482212614585	100nF 10% 50V
2760	482212614585	100nF 10% 50V
2761	482212480144	220uF 20% 25V
2762	482212440769	4,7uF 20% 100V
2763	482212440433	47uF 20% 25V
2765	482212440433	47uF 20% 25V
2769	532212234099	470pF 10% 63V
2770	532212234099	470pF 10% 63V
2780	482212481151	22uF 20% 50V
2781	482212233177	10nF 20% 50V
2782	532212610223	4,7nF 10% 63V
2784	482212151305	15nF 10% 50V
2785	482212421913	1uF 20% 63V
2786	532212232531	100pF 5% 50V
2787	482212612105	33nF 5% 50V

RESISTORS

3601	482211711449	2k2 1% 0,1W
3602	482205120273	27k 5% 0,1W
3603	482211711449	2k2 1% 0,1W
3604	482211711448	56k 1% 0,1W
3605	482211711449	2k2 1% 0,1W
3606	482205120124	120k 5% 0,1W
3607	482211652256	2k2 5% 0,5W
3608	482205120273	27k 5% 0,1W
3609	482211652256	2k2 5% 0,5W
3610	482205120124	120k 5% 0,1W
3611	482211652256	2k2 5% 0,5W
3612	482211711448	56k 1% 0,1W
3613	482205120273	27k 5% 0,1W
3614	482205120273	27k 5% 0,1W
3616	482211710833	10k 1% 0,1W Autoreverse
3616	482205110102	1k 2% 0,25W Non-autoreverse
3618	482211711507	6k8 1% 0,1W Autoreverse
3620	482210011141	Trim. 10k 30% Autoreverse
3622	482210011141	Trim. 10k 30% Non-autoreverse
3623	482211710837	100k 1% 0,1W
3624	482211710837	100k 1% 0,1W
3625	482205110102	1k 2% 0,25W
3626	482205110102	1k 2% 0,25W
3628	482211710837	100k 1% 0,1W
3630	482205120471	470R 5% 0,1W
3672	482205120472	4k7 5% 0,1W Autoreverse
3674	482211652283	4k7 5% 0,5W
3676	482211710834	47k 1% 0,1W Autoreverse
3678	482211710834	47k 1% 0,1W
3679	482211710834	47k 1% 0,1W
3680	482211710834	47k 1% 0,1W

ELECTRICAL PARTS LIST - ETF7 NON-DOLBY BOARD

3685	482211652234	100k 5% 0,5W
3686	482211710837	100k 1% 0,1W
3687	482211711503	220R 1% 0,1W not for Ferro
3688	482211710361	680R 1% 0,1W Autoreverse
3701	482211711503	220R 1% 0,1W
3702	482211711503	220R 1% 0,1W
3703	482211711503	220R 1% 0,1W
3704	482211711503	220R 1% 0,1W
3705	482211711503	220R 1% 0,1W
3706	482211711503	220R 1% 0,1W
3707	482205120101	100R 5% 0,1W
3708	482205120101	100R 5% 0,1W
3709	482205120109	10R 5% 0,1W
3710	482205120109	10R 5% 0,1W
3711	482205120154	150k 5% 0,1W
3712	482205120154	150k 5% 0,1W
3713	482205120109	10R 5% 0,1W
3714	482205120109	10R 5% 0,1W
3715	482205120182	1k8 5% 0,1W
3716	482205120182	1k8 5% 0,1W
3717	482211711449	2k2 1% 0,1W
3718	482211711449	2k2 1% 0,1W
3719	482211711383	12k 1% 0,1W
3720	482211711383	12k 1% 0,1W
3721	482205120392	3k9 5% 0,1W
3722	482205120392	3k9 5% 0,1W
3723	482211683933	15k 1% 0,1W Autoreverse
3723	482211710965	18k 1% 0,1W Non-autoreverse
3724	482211683933	15k 1% 0,1W Autoreverse
3724	482211710965	18k 1% 0,1W Non-autoreverse
3725	482205120109	10R 5% 0,1W not for Ferro
3726	482205120109	10R 5% 0,1W not for Ferro
3727	482205120562	5k6 5% 0,1W Autoreverse
3727	482211711507	6k8 1% 0,1W Non-autoreverse
3728	482205120562	5k6 5% 0,1W Autoreverse
3728	482211711507	6k8 1% 0,1W Non-autoreverse
3729	482205120332	3k3 5% 0,1W Autoreverse
3729	482205120472	4k7 5% 0,1W Non-autoreverse
3730	482205120332	3k3 5% 0,1W Autoreverse
3730	482205120472	4k7 5% 0,1W Non-autoreverse
3731	482205120822	8k2 5% 0,1W
3732	482205120822	8k2 5% 0,1W
3733	482205120122	1k2 5% 0,1W
3734	482205120122	1k2 5% 0,1W
3735	482205120223	22k 5% 0,1W
3736	482205120223	22k 5% 0,1W
3741	482211711449	2k2 1% 0,1W
3742	482211711449	2k2 1% 0,1W
3743	482211711139	1k5 1% 0,1W Autoreverse
3743	482211711449	2k2 1% 0,1W Non-autoreverse
3744	482211711139	1k5 1% 0,1W Autoreverse
3744	482211711449	2k2 1% 0,1W Non-autoreverse

3745	482205120332	3k3 5% 0,1W Autoreverse
3745	482205120562	5k6 5% 0,1W Non-autoreverse
3746	482205120332	3k3 5% 0,1W Autoreverse
3746	482205120562	5k6 5% 0,1W Non-autoreverse
3748	482211711449	2k2 1% 0,1W
3749	482211710834	47k 1% 0,1W
3751	482211710833	10k 1% 0,1W
3752	482211710837	100k 1% 0,1W
3753	482211710837	100k 1% 0,1W
3754	482205120105	1M 5% 0,1W Autoreverse
3754	482205120479	47R 5% 0,1W Non-autoreverse
3755	482205120105	1M 5% 0,1W Autoreverse
3755	482205120479	47R 5% 0,1W Non-autoreverse
3756	482211713579	220k 1% 0,1W
3757	482211713579	220k 1% 0,1W
3758	482211710833	10k 1% 0,1W
3759	482211710833	10k 1% 0,1W
3760	482205120121	120R 5% 0,1W
3761	482205021003	10k 1% 0,6W
3762	482211711454	820R 1% 0,1W
3763	482205120154	150k 5% 0,1W
3764	482211683872	220R 5% 0,5W
3765	482205120393	39k 5% 0,1W
3766	482205120475	4M7 5% 0,1W
3767	482205120475	4M7 5% 0,1W
3768	482211710833	10k 1% 0,1W
3769	482211711383	12k 1% 0,1W Autoreverse
3769	482205120822	8k2 5% 0,1W Non-autoreverse
3770	482211711139	1k5 1% 0,1W
3771	482205120122	1k2 5% 0,1W
3772	482211711507	6k8 1% 0,1W Autoreverse
3772	482205120562	5k6 5% 0,1W Non-autoreverse
3773	482210012227	Trimmer 4k7 30% 0,1W
3774	482211683933	15k 1% 0,1W Autoreverse
3774	482205120822	8k2 5% 0,1W Non-autoreverse
3775	482205120478	4R7 5% 0,1W
3776	482211711507	6k8 1% 0,1W
3777	482211710353	150R 1% 0,1W
3778	482205120688	Δ 6R8 5% 0,33W
3779	482205120334	330k 5% 0,1W
3780	482205120105	1M 5% 0,1W
3781	482205120475	4M7 5% 0,1W
3784	482205110102	1k 2% 0,25W
3786	482205120223	22k 5% 0,1W
3787	482205120105	1M 5% 0,1W
3788	482205120105	1M 5% 0,1W
3789	482211710834	47k 1% 0,1W
4701	482205120008	0R Jumper 0805
4702	482205120008	0R Jumper 0805
4703	482205120008	0R Jumper 0805
4704	482205120008	0R Jumper 0805
4705	482205120008	0R Jumper 0805

ELECTRICAL PARTS LIST - ETF7 NON-DOLBY BOARD**RESISTORS**

4706	482205120008	OR Jumper 0805	6612	482213031878	1N4003G	
4707	482205120008	OR Jumper 0805	6614	482213030621	1N4148	Autoreverse
4708	482205120008	OR Jumper 0805	6770	482213030621	1N4148	
4709	482205120008	OR Jumper 0805	6771	482213030621	1N4148	
4710	482205120008	OR Jumper 0805	6772	482213030621	1N4148	
4711	482205120008	OR Jumper 0805	6773	482213030621	1N4148	
4712	482205120008	OR Jumper 0805	6774	482213030621	1N4148	
4713	482205120008	OR Jumper 0805	6775	482213030621	1N4148	
4714	482205120008	OR Jumper 0805	6776	482213030621	1N4148	
4715	482205120008	OR Jumper 0805	6777	482213034382	BZX79-F8V2	
4716	482205120008	OR Jumper 0805	6778	482213030621	1N4148	
4717	482205120008	OR Jumper 0805	6782	482213030621	1N4148	
4718	482205120008	OR Jumper 0805	6785	482213030621	1N4148	
4719	482205120008	OR Jumper 0805	6786	482213030621	1N4148	
4720	482205120008	OR Jumper 0805				
4721	482205120008	OR Jumper 0805				
4722	482205120008	OR Jumper 0805				
4723	482205120008	OR Jumper 0805				
4724	482205120008	OR Jumper 0805				
4725	482205120008	OR Jumper 0805				
4726	482205120008	OR Jumper 0805				
4727	482205120008	OR Jumper 0805				
4728	482205120008	OR Jumper 0805				
4729	482205120008	OR Jumper 0805				
4730	482205120008	OR Jumper 0805				
4731	482205120008	OR Jumper 0805				
4732	482205120008	OR Jumper 0805				
4733	482205120008	OR Jumper 0805				
4734	482205120008	OR Jumper 0805				
4735	482205120008	OR Jumper 0805				
4736	482205120008	OR Jumper 0805				
4737	482205120008	OR Jumper 0805				
4738	482205120008	OR Jumper 0805				
4739	482205120008	OR Jumper 0805				
4740	482205120008	OR Jumper 0805				
4741	482205120008	OR Jumper 0805				
4742	482205120008	OR Jumper 0805				
4744	482205120008	OR Jumper 0805				
4745	482205120008	OR Jumper 0805				
4746	482205120008	OR Jumper 0805				
4748	482205120008	OR Jumper 0805				
4785	482205120008	OR Jumper 0805 only for Ferro				
4790	482205120008	OR Jumper 0805				
4794	482205120008	OR Jumper 0805				
4795	482205120008	OR Jumper 0805				

TRANSISTORS & INTEGRATED CIRCUITS

7610	532220911306	HEF4094BT	
7612	532213060845	BC807-25	
7613	532213060845	BC807-25	
7614	532213060845	BC807-25	
7616	482213060373	BC857B	Autoreverse
7618	482213060511	BC847B	
7619	482213060511	BC847B	
7620	482213060511	BC847B	
7622	482213060511	BC847B	Autoreverse
7623	482213060511	BC847B	
7624	482213060511	BC847B	
7710	482220932919	HEF4952BT	
7720	932214000668	AN7323S	
7730	482220932919	HEF4952BT	
7740	482220932919	HEF4952BT	
7780	482213060511	BC847B	
7781	482213042804	BC817-25	
7782	482213044568	BC557B	
7783	482213060511	BC847B	
7784	482213060373	BC857B	
7786	482213063494	J11	
7787	482213060511	BC847B	
7791	482213060511	BC847B	
7792	482213060511	BC847B	

Note: Only the parts mentioned in this list are normal service spare parts.

COILS & FILTERS

5701	482215711477	Coil 2,2µH 5%
5703	482215620946	Osc Coil 100kHz

DIODES

6611	482213031878	1N4003G
------	--------------	---------



3CDC-LC

(3 Disc Carrousel Changer)

Layout stage .2

TABLE OF CONTENTS

Servicing Hints	10-2
Wiring	10-4
Blockdiagram	10-5
Component Layout Main Board	10-6
Circuit Diagram part1	10-7
Component Layout Main Board	10-8
Circuit Diagram part2	10-9
Exploded View	10-10
Partslist	10-12



WARNING


CHARGED CAPACITORS ON THE SERVO BOARD MAY DAMAGE THE CD DRIVE ELECTRONICS WHEN CONNECTING A NEW CDM MECHANISM. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE

- **SWITCH OFF POWER SUPPLY**
- **ESD PROTECTION**


ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.

The following steps have to be done when replacing the CD mechanism:


1. Disconnect CD drive flexfoil from old CD drive
2. Connect paperclip to CD drive flexfoil to short-circuit flexfoil (fig.1)
3. Remove old CD drive
4. Remove short-circuit from flexfoil of CD drive
5. Connect flexfoil to new CD drive
6. Position new CD drive in its studs
7. Remove short-circuit from Laserunit

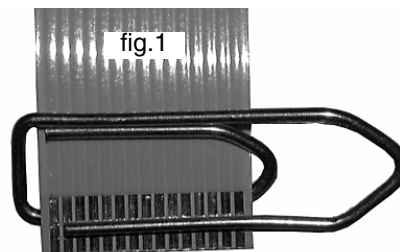


Attention: The laser diode of this CD drive is protected against ESD by a solder joint which shortcircuits the laserdiode to ground.
For proper functionality of the CD drive this solder joint must be removed **after** connection the drive to the set.

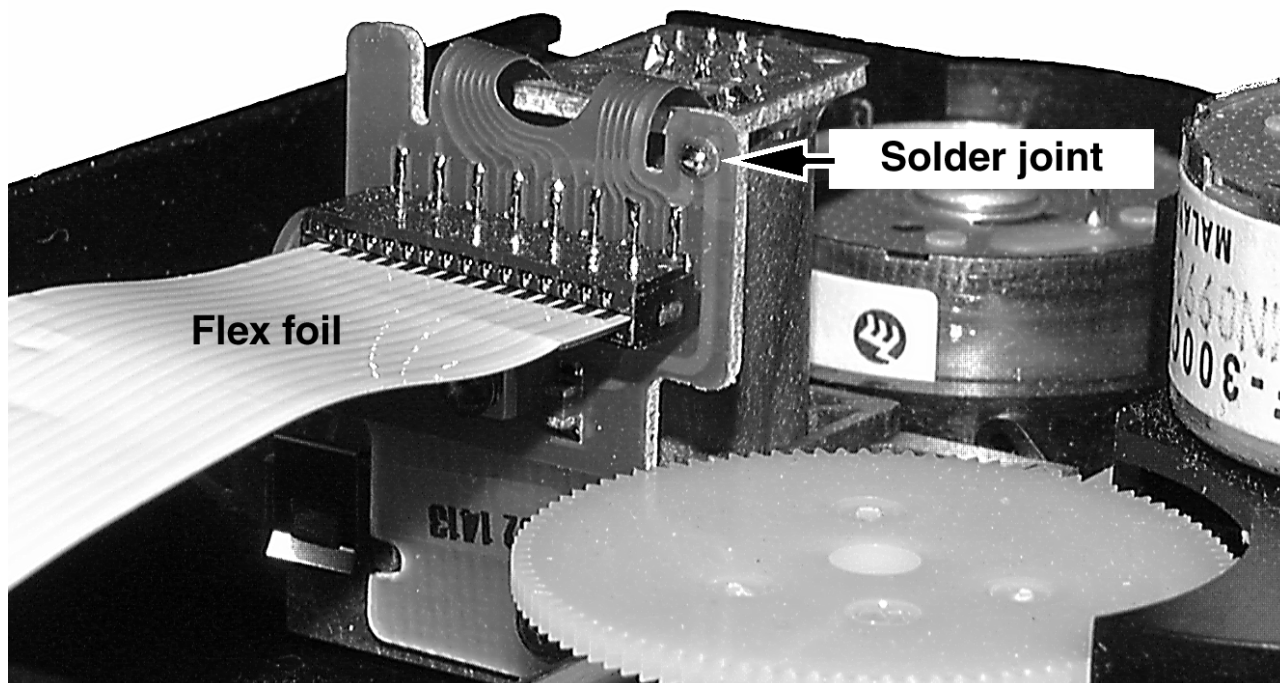


Service Position

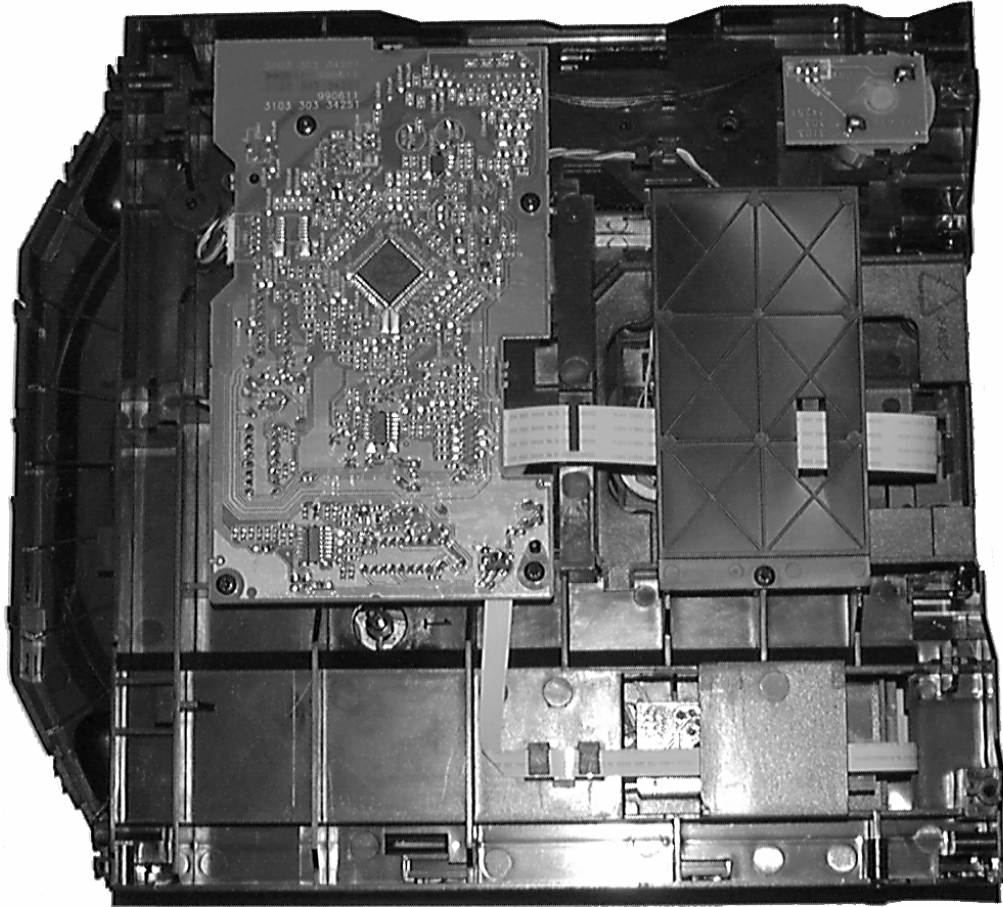

Wiring

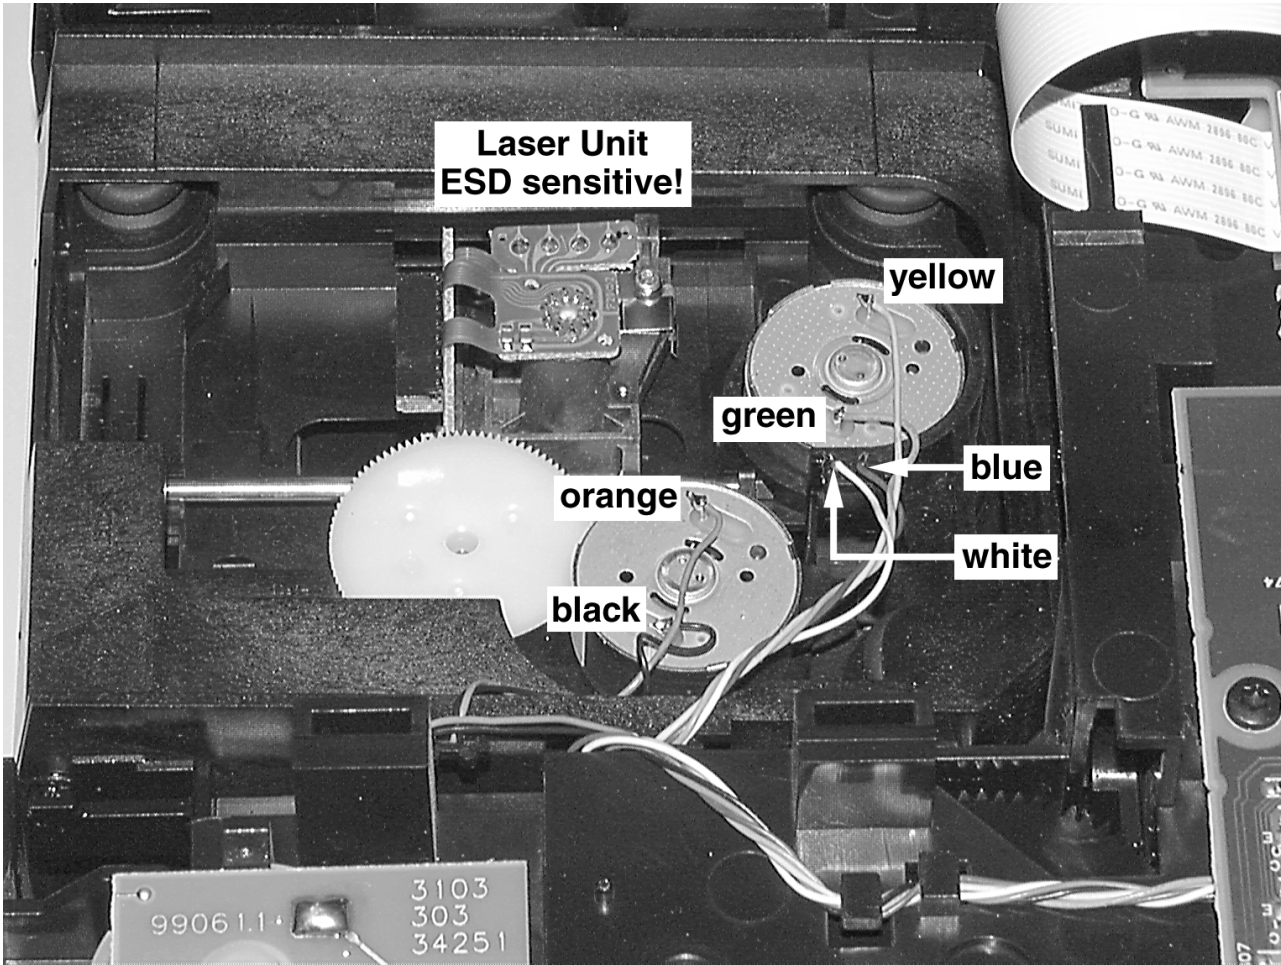



Blockdiagram

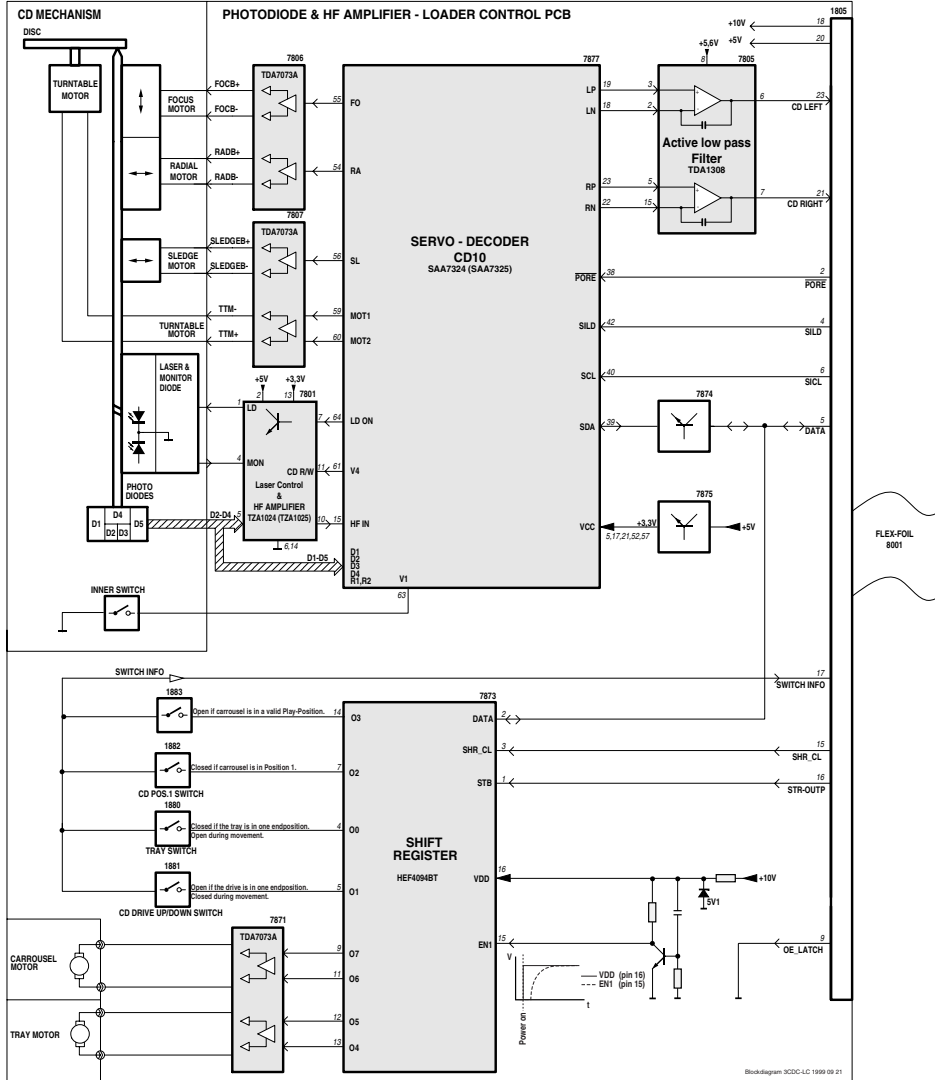


Blockdiagram SCDC-LLC 1999 09 21


Mapping

Copperside			Componentside
2900 B6	3770 C3	3890 D8	1900 A6
2801 B4	3771 A2	3891 D6	1801 E3
2802 B6	3772 A2	3892 D3	1805 B1
2803 B4	3780 C3	3893 D7	1810 B3
2805 B4	3781 C2	3894 B5	1875 A8
2806 B4	3783 A2	3895 C5	1878 C2
2807 B6	3800 B6	3897 D6	1880 E2
2808 B4	3801 B5	3898 D7	1881 A7
2810 B5	3802 B6	3899 A4	2809 D5
2811 B4	3803 B4	4800 A1	2826 C5
2815 C6	3804 C3	4801 B1	2828 D4
2816 C3	3805 B4	4802 B1	2837 D5
2818 B3	3806 B4	4803 D2	2838 C6
2822 C5	3807 B4	4804 A1	2839 D6
2823 C5	3808 B4	4805 A1	2849 B5
2824 C5	3809 D4	4806 A1	2851 B3
2825 B5	3811 B6	4807 A1	2858 B2
2829 C8	3814 B4	4808 A1	2860 A3
2830 B3	3819 C3	4809 A2	2861 A3
2831 C2	3820 B6	4810 B2	2873 B8
2832 B3	3821 B6	4811 B6	2875 B7
2833 B3	3822 B6	4812 D6	2876 B2
2834 B4	3823 C6	4813 B1	2881 C7
2835 D5	3824 C6	4814 B1	2884 C6
2840 E4	3825 C5	4815 B1	2885 B5
2841 D5	3826 C5	4816 B1	2898 C7
2842 D6	3827 B4	4817 C1	3812 D6
2844 D5	3828 D4	4818 C1	3815 C7
2850 C3	3831 D3	4819 C1	3835 E6
2852 D3	3832 C3	4820 B3	3851 B7
2853 D4	3833 B5	4821 D2	3852 E5
2854 D4	3834 B6	4822 A3	5802 D2
2855 B5	3837 D4	4823 A3	7806 E6
2856 C3	3838 D4	4824 A3	7807 E5
2857 D5	3839 D5	4825 C2	7871 C8
2859 C5	3840 C5	4826 C3	
2862 B3	3841 D4	4827 B1	
2863 B3	3842 D4	4828 D3	
2864 D4	3843 D5	4829 D2	
2865 C2	3844 D6	4830 D5	
2867 B2	3845 D4	4831 B8	
2869 B6	3846 D5	4832 D4	
2872 D7	3847 B7	4833 C5	
2877 E8	3848 C4	4834 B5	
2878 E8	3849 D5	4835 C6	
2879 D5	3850 E5	4836 B6	
2882 C2	3853 B5	4837 C5	
2887 B3	3854 A2	4838 C5	
2891 D7	3855 A2	4839 C5	
2892 C6	3856 B5	4840 C6	
2893 E8	3857 B5	4841 D7	
3700 D4	3858 A2	4842 C5	
3705 E3	3859 A2	4843 C6	
3706 D3	3860 B2	4844 C6	
3707 D3	3861 B3	4845 B7	
3708 D3	3862 B3	4846 B6	
3709 C3	3863 D4	4847 B6	
3711 D3	3864 B2	4848 B7	
3712 C1	3866 C6	4849 B1	
3713 C7	3867 B3	4876 A3	
3714 D7	3868 C2	6871 E8	
3715 D7	3869 B6	6872 D8	
3716 D4	3870 B6	6873 D8	
3717 D4	3871 E8	6874 C7	
3718 D3	3872 C2	6875 D7	
3727 C3	3873 C3	6876 A3	
3728 C3	3874 C2	6877 B3	
3730 C3	3875 D3	6878 D8	
3731 D3	3876 D3	6879 D3	
3732 D3	3877 E8	7801 C6	
3733 D3	3878 A1	7805 B2	
3734 D4	3879 C8	7812 C7	
3735 C5	3880 C7	7850 A2	
3736 C5	3881 D7	7851 A2	
3740 B3	3882 D8	7860 A2	
3741 B3	3883 C8	7861 A2	
3742 B3	3884 C8	7873 D8	
3743 C3	3885 C8	7874 D3	
3744 B2	3886 D8	7875 B4	
3746 C2	3887 D7	7876 D3	
3750 B2	3888 E8	7877 C4	

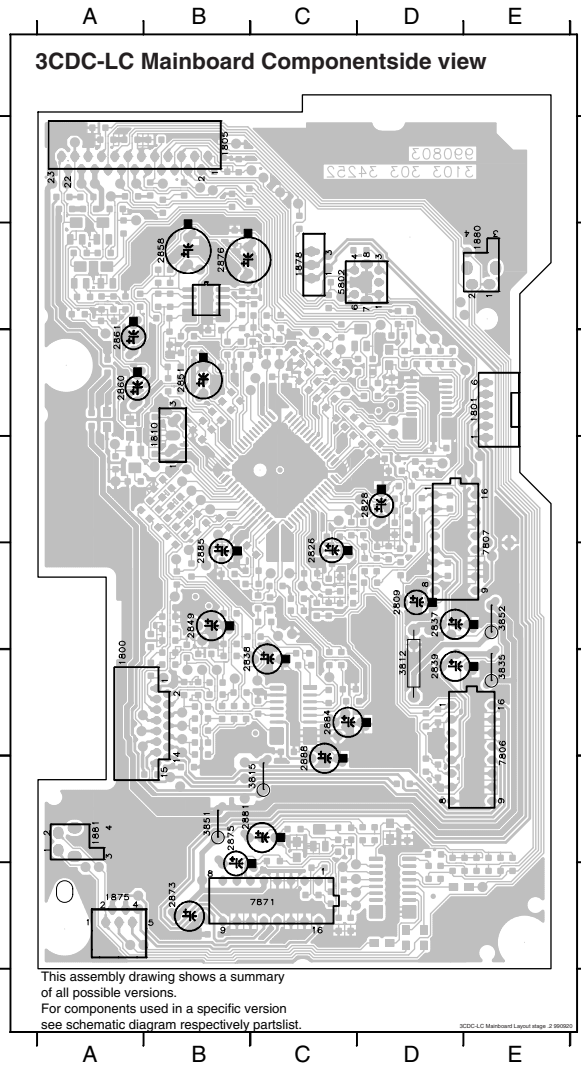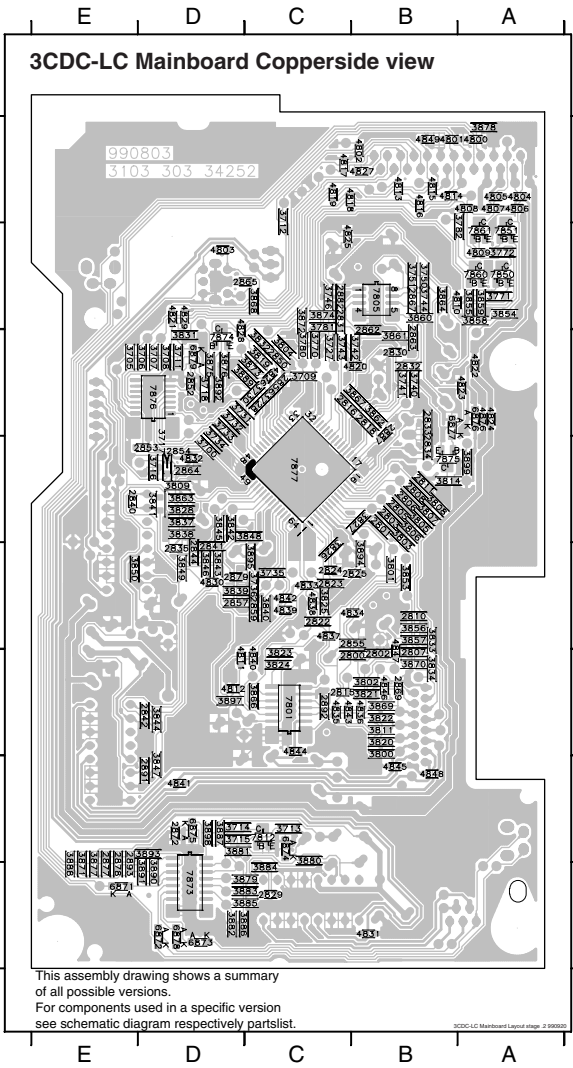

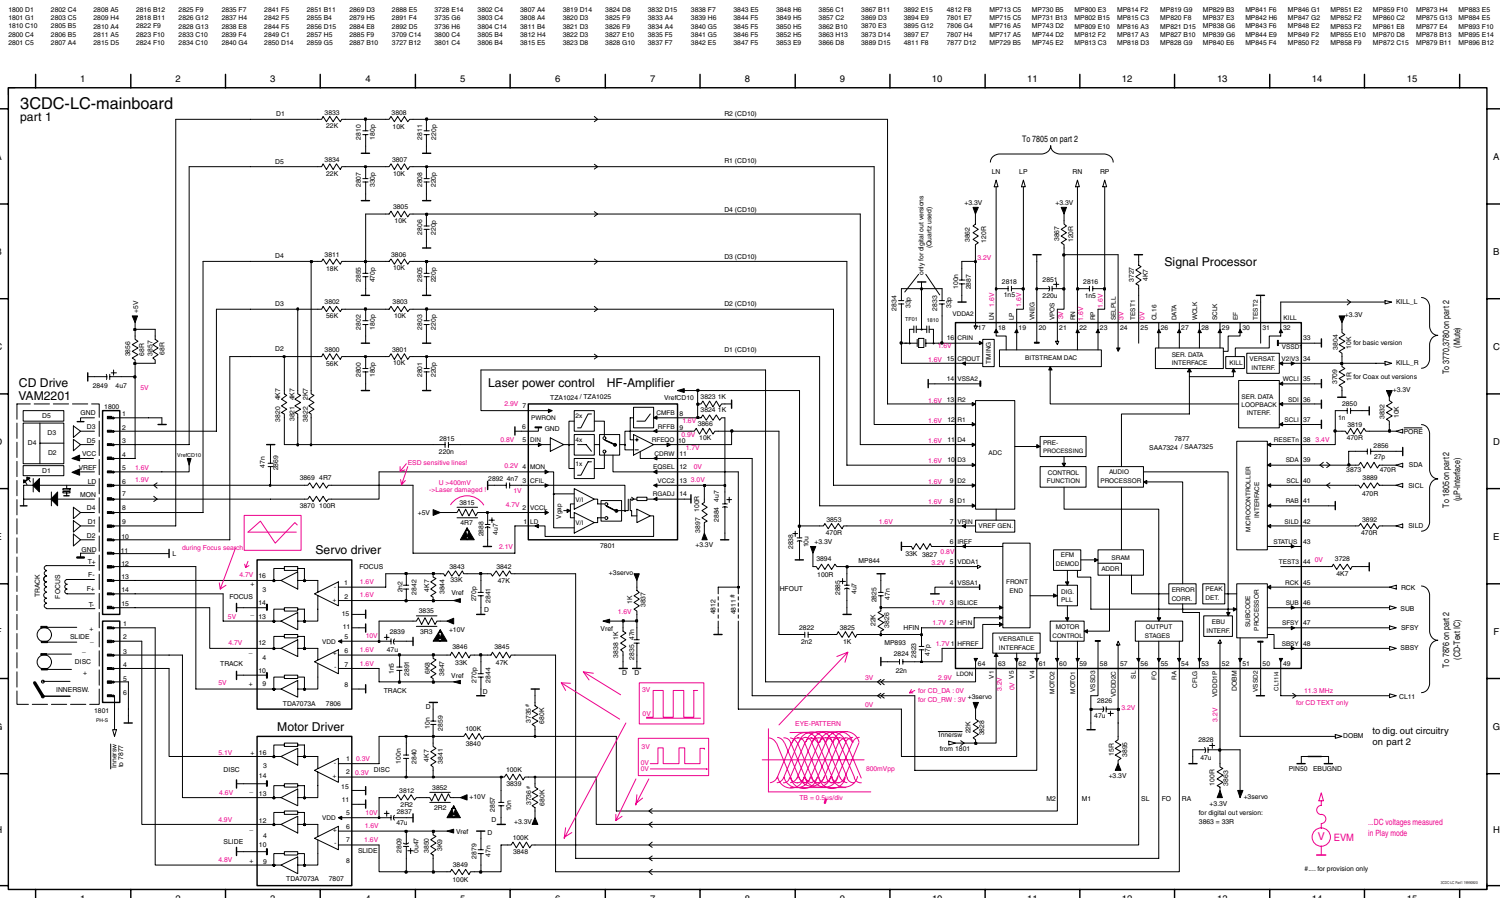


1800 D1	2802 C4	2808 A5	2816 B12	2825 F9	2835 F7	2841 F5	2851 B11	2869 D3	2888 E5	3728 E14	3802 C4	3807 A4	3819 D14	3824 D8	3832 D15	3838 F7	3843 E5	3848 H6	3856 C1	3867 B11	3892 E15	4812 F9	MP713 C5	MP730 B5	MP800 E3	MP814 F2	MP819 G9	MP820 B3	MP841 F6	MP846 G1	MP851 E2	MP859 F10	MP873 H4	MP883 E5	
1801 C10	2805 B5	2810 A4	2822 F9	2828 G13	2838 E8	2844 F5	2854 D15	2864 E8	2882 D5	3736 D6	3800 C4	3808 A4	3820 D3	3825 F9	3833 A4	3839 H6	3844 F5	3849 F5	3850 H6	3862 B10	3870 E3	3895 D12	7806 G4	MP716 A5	MP743 D2	MP809 E10	MP816 A3	MP821 D15	MP836 G4	MP843 F6	MP848 E2	MP853 F2	MP861 E8	MP867 E4	MP880 F10
2803 C4	2806 B5	2811 A5	2823 F10	2833 C10	2839 F4	2846 C1	2857 H5	2865 F9	3739 C14	3800 C4	3806 B4	3812 H4	3822 D3	3827 E10	3835 F5	3841 F5	3846 F5	3852 H5	3863 H13	3873 D14	3887 E7	7807 H4	MP717 A5	MP744 D2	MP813 C3	MP818 D3	MP826 G9	MP840 E8	MP845 F4	MP850 F2	MP858 F9	MP865 D9	MP870 D8	MP879 B11	MP886 B12
2801 C5	2807 A4	2815 D5	2824 F10	2834 C10	2840 G4	2850 D14	2859 G5	2867 B10	3727 B12	3801 C4	3806 B4	3815 E5	3823 D8	3828 G10	3837 F7	3842 E5	3847 F5	3853 E9	3866 D8	3889 D15	4811 F8	7877 D12	MP729 B5	MP745 E2	MP813 C3	MP818 D3	MP826 G9	MP840 E8	MP845 F4	MP850 F2	MP858 F9	MP865 D9	MP872 C15	MP879 B11	MP886 B12

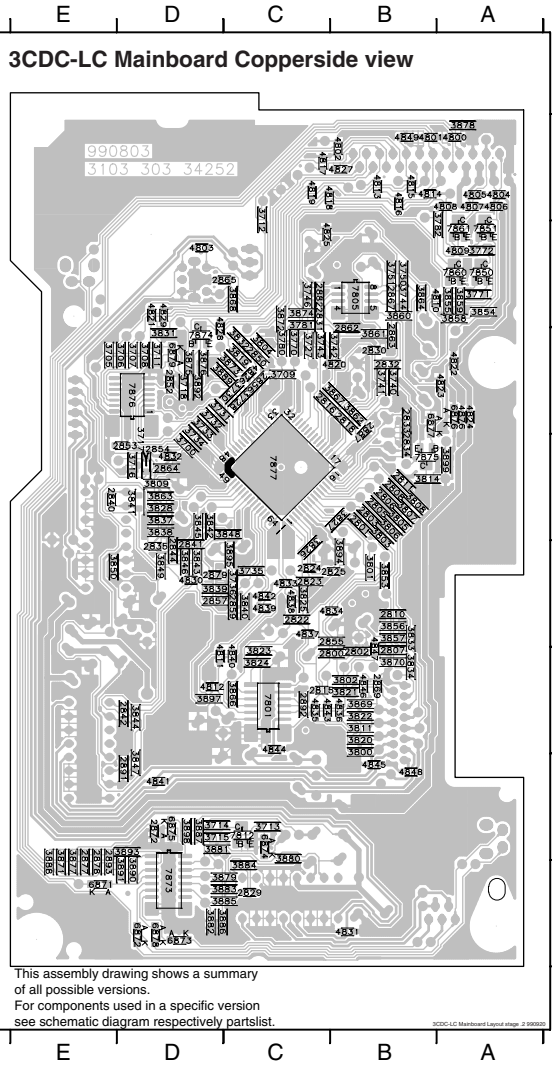


Mapping

Copperside	3751 B2	3889 D3	Componentside	1900 A6
2900 B6	3770 C3	3890 D8	1800 A6	
2801 B4	3771 A2	3891 D6	1801 E3	
2802 B6	3772 A2	3892 D3	1805 B1	
2803 B4	3780 C3	3893 D7	1810 B3	
2805 B4	3781 C2	3894 B5	1875 A8	
2806 B4	3783 A2	3895 C5	1878 C2	
2807 B6	3800 B6	3897 D6	1880 E2	
2808 B4	3801 B5	3898 D7	1881 A7	
2810 B5	3802 B6	3899 A4	2809 D5	
2811 B4	3803 B4	4800 A1	2826 C5	
2815 C6	3804 C3	4801 B1	2828 D4	
2816 C3	3805 B4	4802 B1	2837 D5	
2818 B3	3806 B4	4803 D2	2838 C6	
2822 C5	3807 B4	4804 A1	2839 D6	
2823 C5	3808 B4	4805 A1	2849 B5	
2824 C5	3809 D4	4806 A1	2851 B3	
2825 B5	3811 B6	4807 A1	2858 B2	
2829 C8	3814 B4	4808 A1	2860 A3	
2830 B3	3819 C3	4809 A2	2861 A3	
2831 C2	3820 B6	4810 B2	2873 B8	
2832 B3	3821 B6	4811 B6	2875 B7	
2833 B3	3822 B6	4812 D6	2876 B2	
2834 B4	3823 C6	4813 B1	2881 C7	
2835 D5	3824 C6	4814 B1	2884 C6	
2840 E4	3825 C5	4815 B1	2885 B5	
2841 D5	3826 C5	4816 B1	2898 C7	
2842 D6	3827 B4	4817 C1	3812 D6	
2844 D5	3828 D4	4818 C1	3815 C7	
2850 C3	3831 D3	4819 C1	3835 E6	
2852 D3	3832 C3	4820 B3	3851 B7	
2853 D4	3833 B5	4821 D2	3852 E5	
2854 D4	3834 B6	4822 A3	5802 D2	
2855 B5	3837 D4	4823 A3	7806 E6	
2856 C3	3838 D4	4824 A3	7807 E5	
2857 D5	3839 D5	4825 C2	7871 C8	
2859 C5	3840 C5	4826 C3		
2862 B3	3841 D4	4827 B1		
2863 B3	3842 D4	4828 D3		
2864 D4	3843 D5	4829 D2		
2865 C2	3844 D6	4830 D5		
2867 B2	3845 D4	4831 B8		
2869 B6	3846 D5	4832 D4		
2872 D7	3847 B7	4833 C5		
2877 E8	3848 C4	4834 B5		
2878 E8	3849 D5	4835 C6		
2879 D5	3850 E5	4836 B6		
2882 C2	3853 B5	4837 C5		
2887 B3	3854 A2	4838 C5		
2891 D7	3855 A2	4839 C5		
2892 C6	3856 B5	4840 C6		
2893 E8	3857 B5	4841 D7		
3700 D4	3858 A2	4842 C5		
3705 E3	3859 A2	4843 C6		
3706 D3	3860 B2	4844 C6		
3707 D3	3861 B3	4845 B7		
3708 D3	3862 B3	4846 B6		
3709 C3	3863 D4	4847 B6		
3711 D3	3864 B2	4848 B7		
3712 C1	3866 C6	4849 B1		
3713 C7	3867 B3	4876 A3		
3714 D7	3868 C2	6871 E8		
3715 D7	3869 B6	6872 D8		
3716 D4	3870 B6	6873 D8		
3717 D4	3871 E8	6874 C7		
3718 D3	3872 C2	6875 D7		
3727 C3	3873 C3	6876 A3		
3728 C3	3874 C2	6877 B3		
3730 C3	3875 D3	6878 D8		
3731 D3	3876 D3	6879 D3		
3732 D3	3877 E8	7801 C6		
3733 D3	3878 A1	7805 B2		
3734 D4	3879 C8	7812 C7		
3735 C5	3880 C7	7850 A2		
3736 C5	3881 D7	7851 A2		
3740 B3	3882 D8	7860 A2		
3741 B3	3883 C8	7861 A2		
3742 B3	3884 C8	7873 D8		
3743 C3	3885 C8	7874 D3		
3744 B2	3886 D8	7875 B4		
3746 C2	3887 D7	7876 D3		
3750 B2	3888 E8	7877 C4		

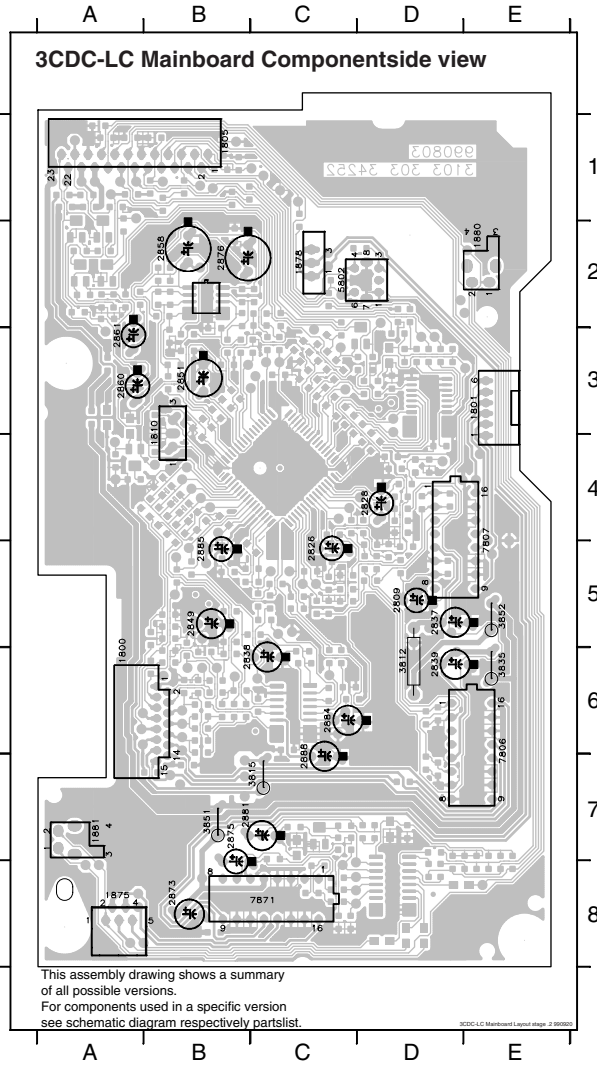

1805 D15 2830 B10 2858 A10 2865 C4 2877 F11 3705 G4 3713 F8 3730 G2 3741 A7 3751 C7 3782 B12 3855 B11 3868 C4 3877 F12 3883 D6 3890 F11 4813 G14 6872 E8 6878 E8 7851 A13 7875 C12 MP725 D8 MP930 F10 MP910 F13 MP932 A9 MP956 E14 MP967 E8 MP982 G2 MP991 B5
1875 D2 2831 B9 2860 A10 2867 A9 2879 F11 3709 G4 3714 F8 3731 G2 3742 B7 3750 A11 3869 B2 3868 A11 3871 F12 3878 E12 3884 D6 3891 F11 4827 G14 6873 E8 6879 G4 7860 B12 7876 G2 MP726 D8 MP928 E14 MP911 F13 MP932 G9 MP952 B13 MP966 F8 MP986 G3 MP992 B5
1878 D2 2832 A8 2861 B10 2875 D10 2881 F8 3709 G4 3716 G8 3732 G2 3743 A7 3751 A12 3814 C12 3858 B11 3872 E12 3881 D6 3885 C5 3891 F11 4848 C13 6874 G7 7858 A10 7861 B13 MP721 C8 MP742 H14 MP722 E8 MP741 G14 MP930 F13 MP932 D3 MP934 G14 MP962 C11 MP971 D6 MP986 D5 MP998 D13 MP999 D12
1880 E8 2862 H2 2862 B9 2875 D4 2880 B10 3709 G4 3718 G3 3734 G2 3744 A9 3813 F4 3860 E8 3860 E7 3868 F8 4876 C13 6875 F1 7852 D8 7873 C9 MP723 C8 MP742 G14 MP907 F14 MP924 D4 MP955 F14 MP966 D11 MP981 G2 MP986 D5
1881 E8 2863 F4 2863 B8 2875 E6 2880 F12 3711 G8 3718 G3 3742 A7 3750 B7 3781 B12 3854 A11 3861 D6 3875 C12 3881 E7 3887 D6 3898 D12 5802 B4 6876 C13 7812 D8 7874 C12 MP724 D8 MP910 D12 MP908 E13 MP925 D4 MP954 A13 MP966 E8 MP981 G2 MP986 B3
2829 D6 2854 B3 2864 B3 2878 C8 3700 H2 3712 B4 3718 G3 3740 A7 3750 B7 3781 B12 3854 A11 3864 A7 3876 C11 3882 C7 3888 F12 4803 B4 6871 E8 6877 D12 7850 A12 7874 C12

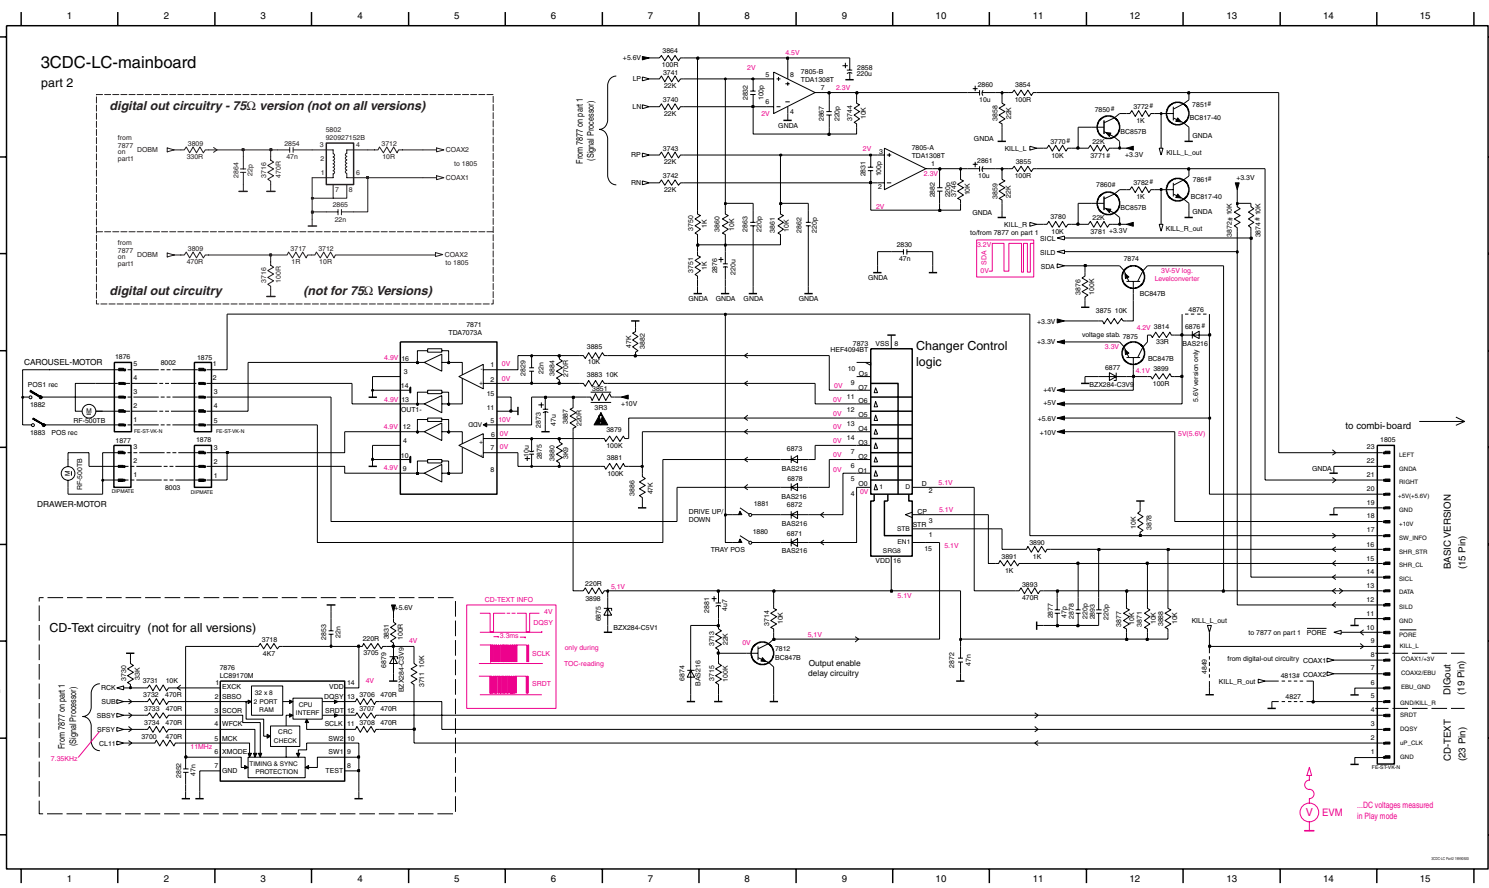

EXPLODED VIEW (3CDC-LC Module)

MECHANICAL PARTS Loader → this page



- 20 3103 304 66500 DRAWER BLACK
- 21 3140 117 58650 CLAMPER ASSY-VAM
- 30 3103 304 66560 SUPPORT
- 31 4822 529 10431 DAMPER - RUBBER (25DEG)
- 32 4822 529 10431 DAMPER - RUBBER (25DEG)

- 33 3103 304 06970 WASHER
- 35 9305 022 30103 CD Drive VAM2201/03
- 41 3103 304 66480 FRAME
- 42 3103 304 66540 BRACKET-GUIDING
- 43 3103 301 06460 SPRING-GUIDING

- 44 3103 304 06890 GEAR-3
- 45 3103 304 06980 NAIL FIXATION
- 46 3103 304 06880 GEAR-2
- 47 3103 304 66530 BRACKET-LOAD
- 48 3103 304 06910 CAM

- 49 3103 304 66510 GUIDING
- 51 3103 304 06900 GEAR-4
- 52 3103 304 06670 GEAR-1
- 53 3103 304 06960 PULLEY-FRAME
- 54 3103 304 66910 DRIVING-BELT-DRAWER

- 55 4822 361 10753 TRAY MOTOR
- 56 4822 502 12548 SCREW M2,6X3,5
- 57 3103 304 68890 COVER-VAM
- 59 4822 466 12146 RUBBER

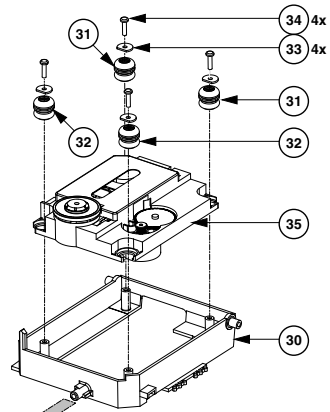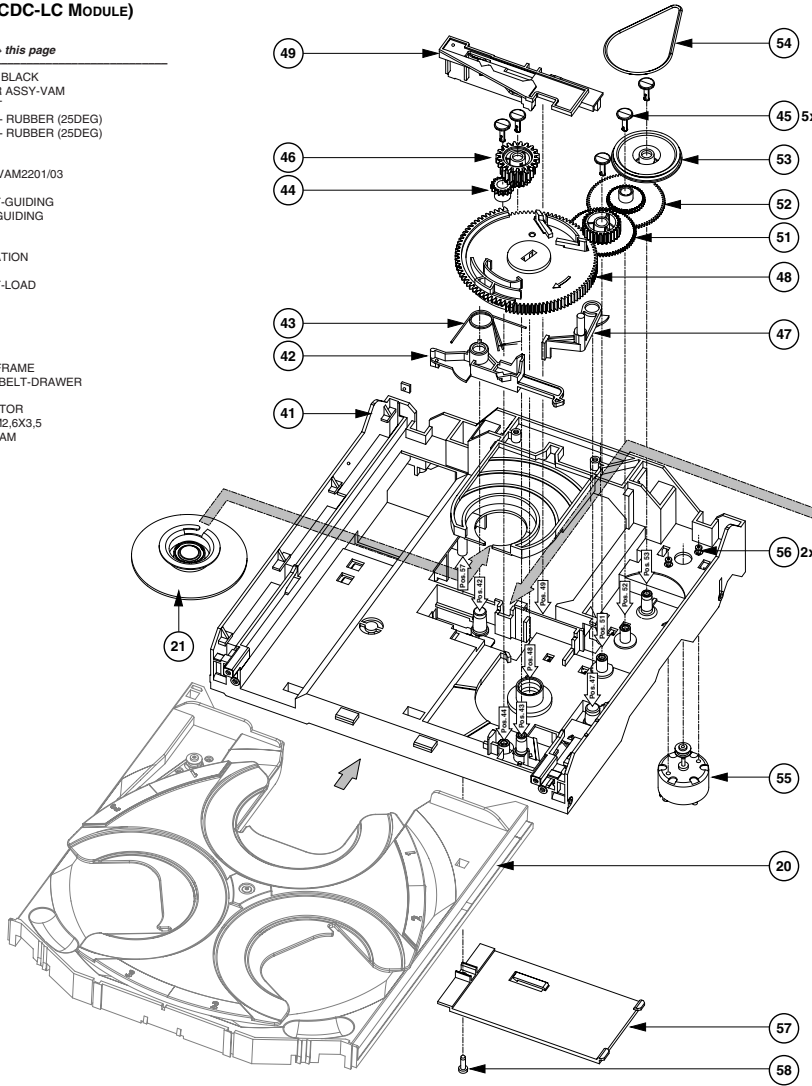


MECHANICAL PARTS Drawer → Chapter 10-11

- 20 3103 304 66500 DRAWER BLACK
- 21 3103 304 66490 CAROUSEL BLACK
- 22 3103 304 06860 PULLEY-DRAWER
- 23 3103 304 06850 ECCENTRIC GEAR WHEEL
- 24 3103 304 06980 NAIL FIXATION


- 25 3103 304 66850 DRIVING BELT CAROUSEL
- 27 3103 304 07100 BUSH DRAWER (height=8,5mm,d=16mm)
- 27 4822 532 12365 BUSH DRAWER (height=5,5mm,d=9,4mm)
- 29 3103 304 66550 BRACKET-DISC
- 30 3103 304 66520 TUMBLER

- 31 3103 301 06470 SPRING-DISC
- 32 3103 304 06920 CONTROL-DISC
- 34 3103 304 06870 GEAR-1
- 37 4822 361 10753 CAROUSEL MOTOR

Drawer bottom view

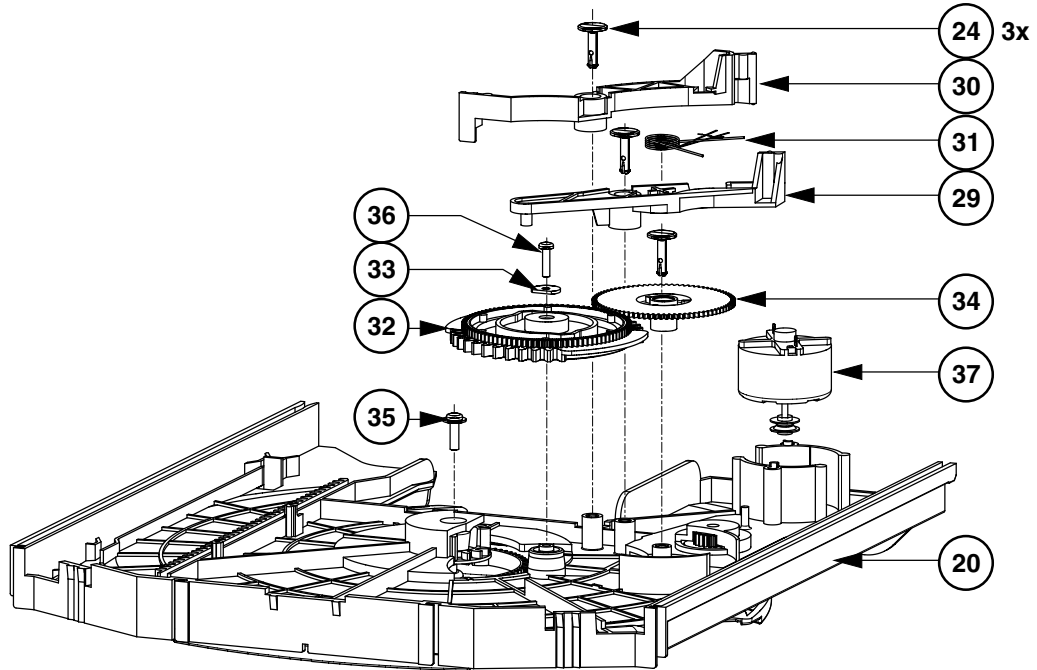

Drawer top view

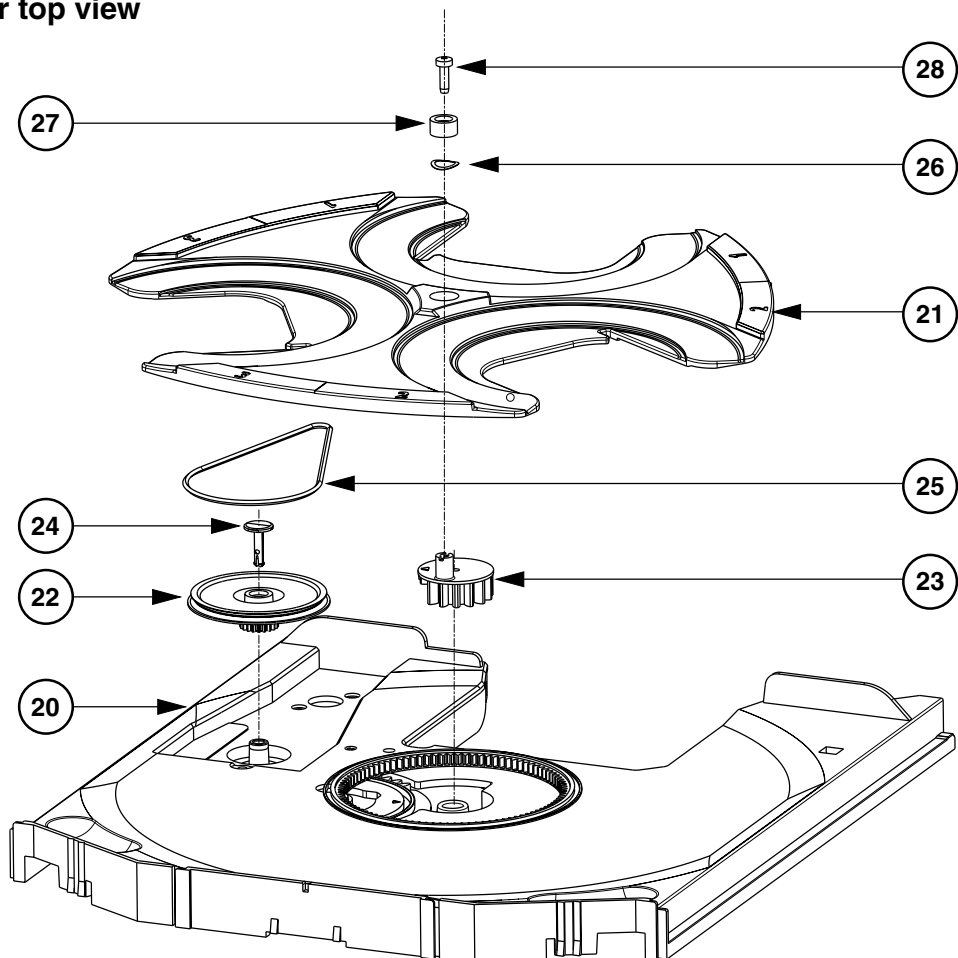

ELECTRICAL PARTSLIST 3CDC-LC MODULE**RESISTORS**

3821	4822 051 20472	4,7k Ω	5%	0,1W
3822	4822 117 12955	2,7k Ω	1%	0,1W
3823	4822 051 10102	1k Ω	2%	0,25W
3824	4822 051 10102	1k Ω	2%	0,25W
3825	4822 051 10102	1k Ω	2%	0,25W
3826	4822 051 20223	22k Ω	5%	0,1W
3827	4822 051 20273	27k Ω	5%	0,1W
3828	4822 051 20223	22k Ω	5%	0,1W
3831	4822 051 20101	100 Ω	5%	0,1W
3832	4822 117 10833	10k Ω	1%	0,1W
3833	4822 051 20223	22k Ω	5%	0,1W
3834	4822 051 20223	22k Ω	5%	0,1W
3835	4822 052 10338	3,3 Ω		NFR25
3837	4822 051 10102	1k Ω	2%	0,25W
3838	4822 051 10102	1k Ω	2%	0,25W
3839	4822 117 10837	100k Ω	1%	0,1W
3840	4822 117 10837	100k Ω	1%	0,1W
3841	4822 051 20472	4,7k Ω	5%	0,1W
3842	4822 117 10834	47k Ω	1%	0,1W
3843	4822 051 20333	33k Ω	5%	0,1W
3844	4822 051 20472	4,7k Ω	5%	0,1W
3845	4822 117 10834	47k Ω	1%	0,1W
3846	4822 051 20333	33k Ω	5%	0,1W
3847	4822 117 11507	6,8k Ω	1%	0,1W
3848	4822 117 10837	100k Ω	1%	0,1W
3849	4822 117 11149	82k Ω	1%	0,1W
3850	4822 051 20472	4,7k Ω	5%	0,1W
3851	4822 052 10338	3,3 Ω		NFR25
3852	4822 052 10228	2,2 Ω	5%	0,33W
3853	4822 051 20471	470 Ω	5%	0,1W
3854	4822 051 20101	100 Ω	5%	0,1W
3855	4822 051 20101	100 Ω	5%	0,1W
3856	4822 117 12521	68 Ω	1%	0,1W
3857	4822 117 12521	68 Ω	1%	0,1W
3858	4822 051 20223	22k Ω	5%	0,1W
3859	4822 051 20223	22k Ω	5%	0,1W
3860	4822 117 10833	10k Ω	1%	0,1W
3861	4822 117 10833	10k Ω	1%	0,1W
3862	4822 051 20121	120 Ω	5%	0,1W
3863	4822 051 20339	33 Ω	5%	0,1W
3864	4822 051 20101	100 Ω	5%	0,1W
3866	4822 117 10833	10k Ω	1%	0,1W
3867	4822 051 20121	120 Ω	5%	0,1W
3869	4822 051 20478	4,7 Ω	5%	0,1W
3870	4822 051 20101	100 Ω	5%	0,1W
3871	4822 117 10833	10k Ω	1%	0,1W
3873	4822 051 20471	470 Ω	5%	0,1W
3875	4822 117 10833	10k Ω	1%	0,1W
3876	4822 117 10837	100k Ω	1%	0,1W
3877	4822 117 10833	10k Ω	1%	0,1W
3878	4822 117 10833	10k Ω	1%	0,1W
3879	4822 117 10837	100k Ω	1%	0,1W
3880	4822 051 20392	3,9k Ω	5%	0,1W
3881	4822 117 10837	100k Ω	1%	0,1W
3882	4822 117 10834	47k Ω	1%	0,1W
3883	4822 117 10833	10k Ω	1%	0,1W
3884	4822 117 11504	270 Ω	1%	0,1W
3885	4822 117 10833	10k Ω	1%	0,1W
3886	4822 117 10834	47k Ω	1%	0,1W
3887	4822 117 11503	220 Ω	5%	0,1W
3888	4822 117 10833	10k Ω	1%	0,1W
3889	4822 051 20471	470 Ω	5%	0,1W
3890	4822 051 10102	1k Ω	2%	0,25W
3891	4822 051 10102	1k Ω	2%	0,25W

RESISTORS

3892	4822 051 20471	470 Ω	5%	0,1W
3893	4822 051 20471	470 Ω	5%	0,1W
3894	4822 051 20101	100 Ω	5%	0,1W
3895	4822 051 20159	15 Ω	5%	0,1W
3897	4822 051 20101	100 Ω	5%	0,1W
3898	4822 117 11503	220 Ω	5%	0,1W
3899	4822 051 20101	100 Ω	5%	0,1W
4800	4822 051 20008	CHIP JUMPER 0805		
4801	4822 051 20008	CHIP JUMPER 0805		
4802	4822 051 20008	CHIP JUMPER 0805		
4804	4822 051 20008	CHIP JUMPER 0805		
4805	4822 051 20008	CHIP JUMPER 0805		
4806	4822 051 20008	CHIP JUMPER 0805		
4807	4822 051 20008	CHIP JUMPER 0805		
4808	4822 051 20008	CHIP JUMPER 0805		
4810	4822 051 20008	CHIP JUMPER 0805		
4812	4822 051 20008	CHIP JUMPER 0805		
4817	4822 051 20008	CHIP JUMPER 0805		
4818	4822 051 20008	CHIP JUMPER 0805		
4819	4822 051 20008	CHIP JUMPER 0805		
4820	4822 051 20008	CHIP JUMPER 0805		
4821	4822 051 20008	CHIP JUMPER 0805		
4822	4822 051 20008	CHIP JUMPER 0805		
4823	4822 051 20008	CHIP JUMPER 0805		
4824	4822 051 20008	CHIP JUMPER 0805		
4825	4822 051 20008	CHIP JUMPER 0805		
4826	4822 051 20008	CHIP JUMPER 0805		
4827	4822 051 20008	CHIP JUMPER 0805		
4828	4822 051 20008	CHIP JUMPER 0805		
4830	4822 051 20008	CHIP JUMPER 0805		
4831	4822 051 20008	CHIP JUMPER 0805		
4832	4822 051 20008	CHIP JUMPER 0805		
4833	4822 051 20008	CHIP JUMPER 0805		
4834	4822 051 20008	CHIP JUMPER 0805		
4835	4822 051 20008	CHIP JUMPER 0805		
4836	4822 051 20008	CHIP JUMPER 0805		
4837	4822 051 20008	CHIP JUMPER 0805		
4838	4822 051 20008	CHIP JUMPER 0805		
4839	4822 051 20008	CHIP JUMPER 0805		
4840	4822 051 20008	CHIP JUMPER 0805		
4841	4822 051 20008	CHIP JUMPER 0805		
4842	4822 051 20008	CHIP JUMPER 0805		
4843	4822 051 20008	CHIP JUMPER 0805		
4844	4822 051 20008	CHIP JUMPER 0805		
4845	4822 051 20008	CHIP JUMPER 0805		
4846	4822 051 20008	CHIP JUMPER 0805		
4847	4822 051 20008	CHIP JUMPER 0805		
4848	4822 051 20008	CHIP JUMPER 0805		
4849	4822 051 20008	CHIP JUMPER 0805		
4876	4822 051 20008	CHIP JUMPER 0805		

COILS

1810	2422 543 01068	RESONATOR 8MHZ
5802	4822 157 70601	100 μ H

DIODES

6871	4822 130 11397	BAS316
6872	4822 130 11397	BAS316
6873	4822 130 11397	BAS316
6874	4822 130 11397	BAS316
6875	9340 548 52115	BZX284-C5V1
6877	9322 129 34685	BZX284-C3V9
6878	4822 130 11397	BAS316
6879	9322 129 34685	BZX284-C3V9


ELECTRICAL PARTSLIST 3CDC-LC MODULE

TRANSISTORS

7812©	5322 130 60159	BC846B
7874©	5322 130 60159	BC846B
7875©	5322 130 60159	BC846B

INTEGRATED CIRCUITS

7801©	9352 622 36118	TZA1025T/V2 HF-Amplifier
7805©	4822 209 33165	TDA1308T/N1, OPAMP
7806	4822 209 32852	TDA7073A/N2, Motor driver
7807	4822 209 32852	TDA7073A/N2, Motor driver
7871	4822 209 32852	TDA7073A/N2, Motor driver
7873	5322 209 11306	HEF4094BT, Shift register
7876	4822 209 16143	LC89170M, CD TEXT IC
7877©	9352 642 17557	SAA7325H/M2B CD10/M2

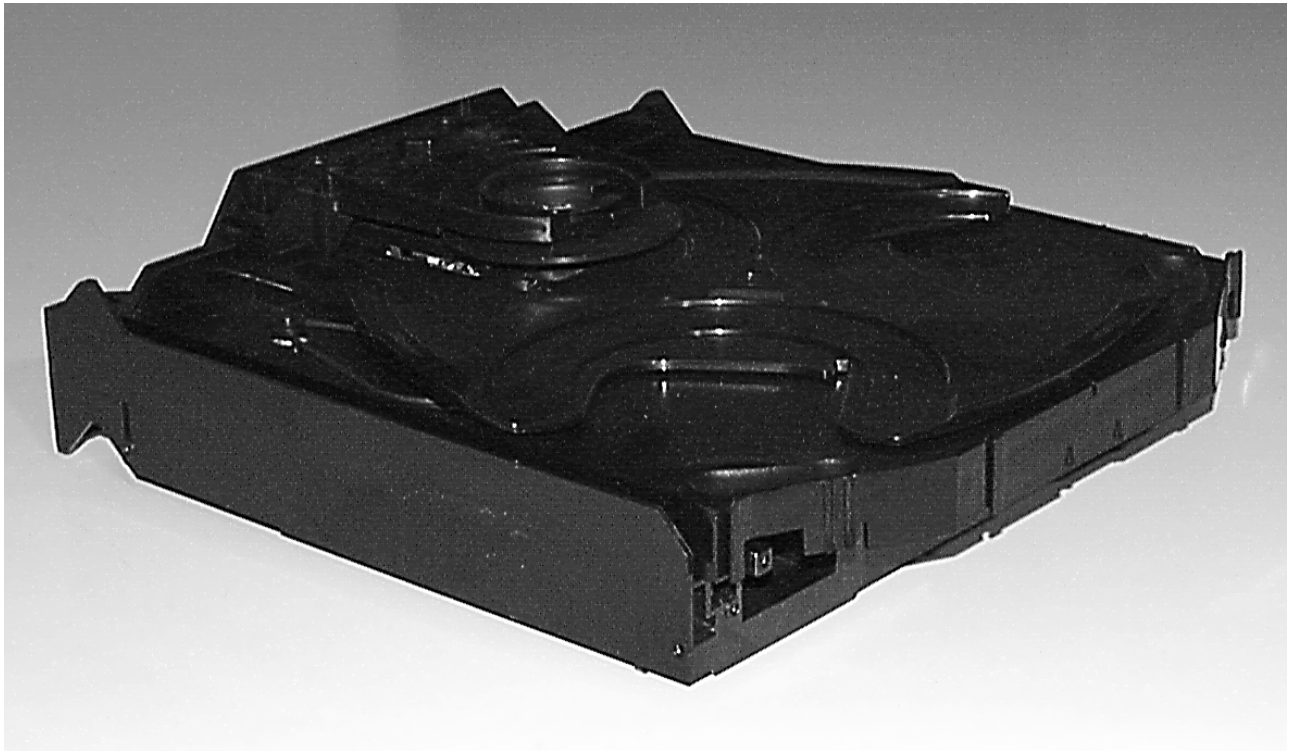

3CDC-LC-MB Module

(3 Disc Carousel Changer)

Layout stage .2

TABLE OF CONTENTS

Servicing Hints	10A-2
Wiring	10A-4
Blockdiagram	10A-5
Component Layout Main Board	10A-6
Circuit Diagram part1	10A-7
Component Layout Main Board	10A-8
Circuit Diagram part2	10A-9
Exploded View	10A-10
Partslist	10A-12



WARNING


CHARGED CAPACITORS ON THE SERVO BOARD MAY DAMAGE THE CD DRIVE ELECTRONICS WHEN CONNECTING A NEW CDM MECHANISM. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE

- **SWITCH OFF POWER SUPPLY**
- **ESD PROTECTION**


ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.

The following steps have to be done when replacing the CD mechanism:


1. Disconnect CD drive flexfoil from old CD drive
2. Connect paperclip to CD drive flexfoil to short-circuit flexfoil (fig.1)
3. Remove old CD drive
4. Remove short-circuit from flexfoil of CD drive
5. Connect flexfoil to new CD drive
6. Position new CD drive in its studs
7. Remove short-circuit from Laserunit

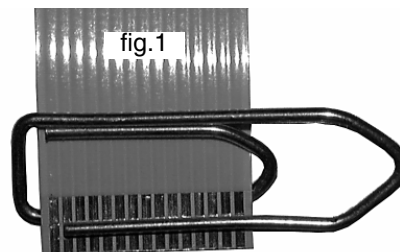


Attention: The laser diode of this CD drive is protected against ESD by a solder joint which shortcircuits the laserdiode to ground.
For proper functionality of the CD drive this solder joint must be removed **after** connection the drive to the set.

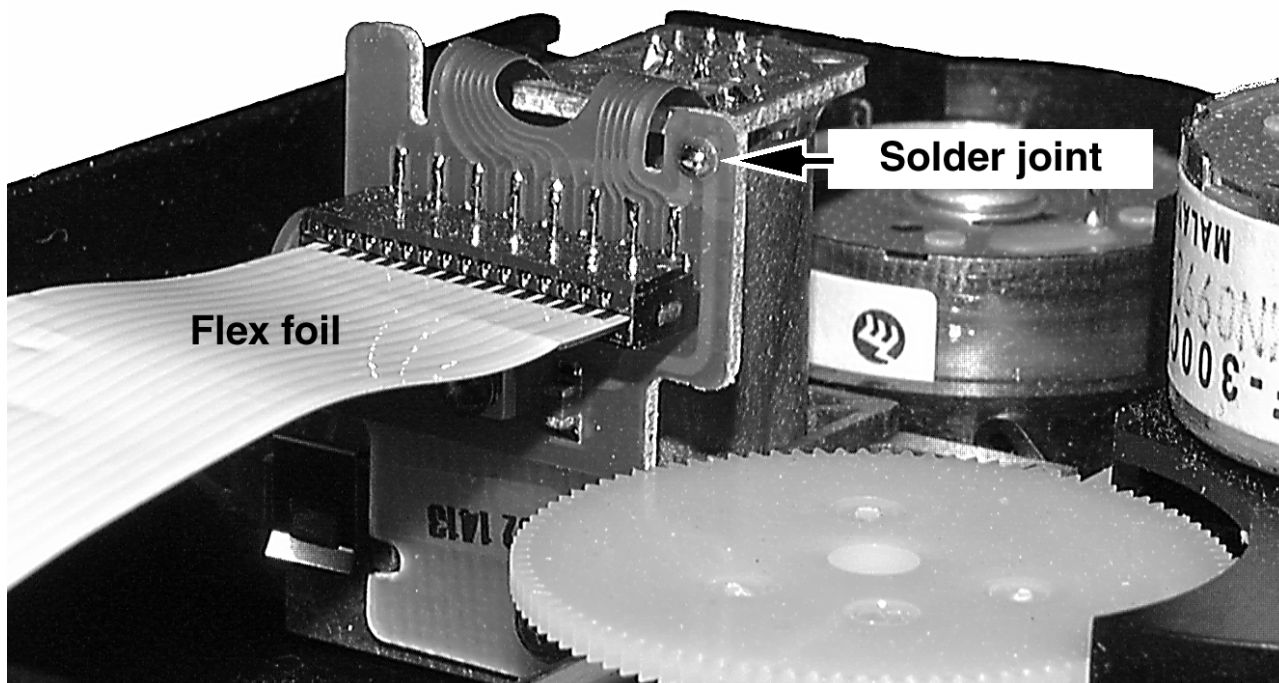


Service Position

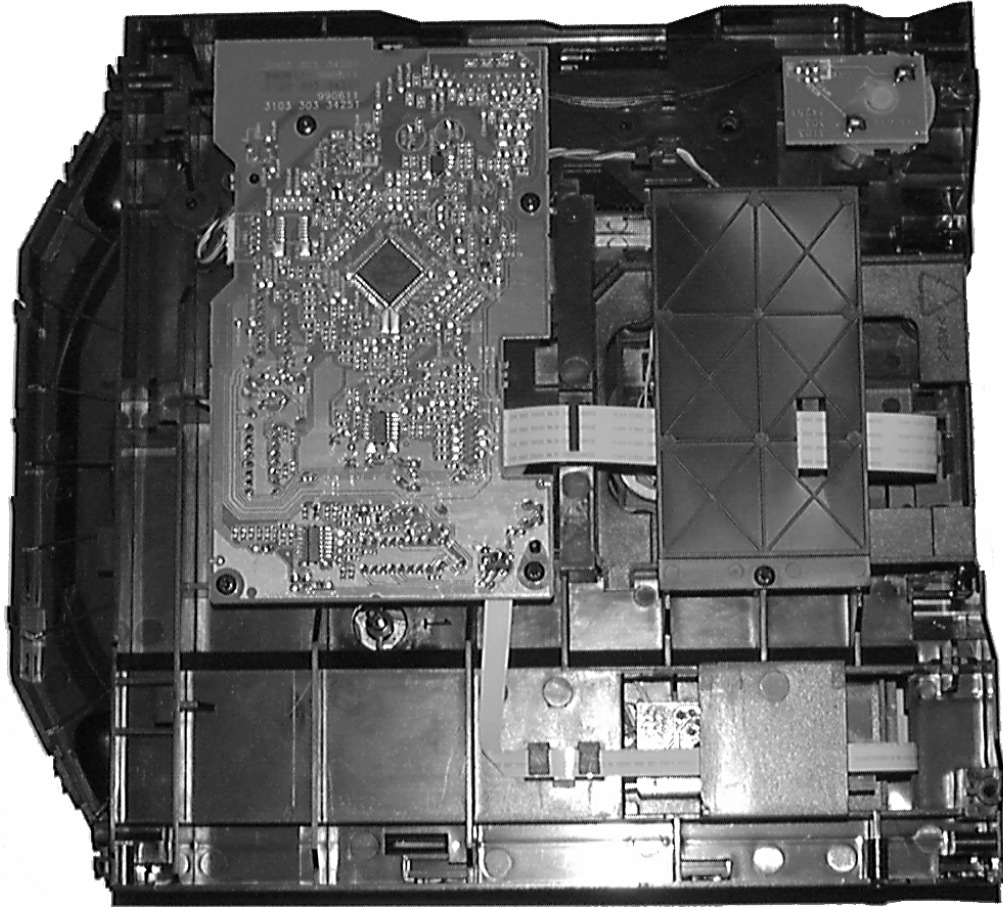

Wiring

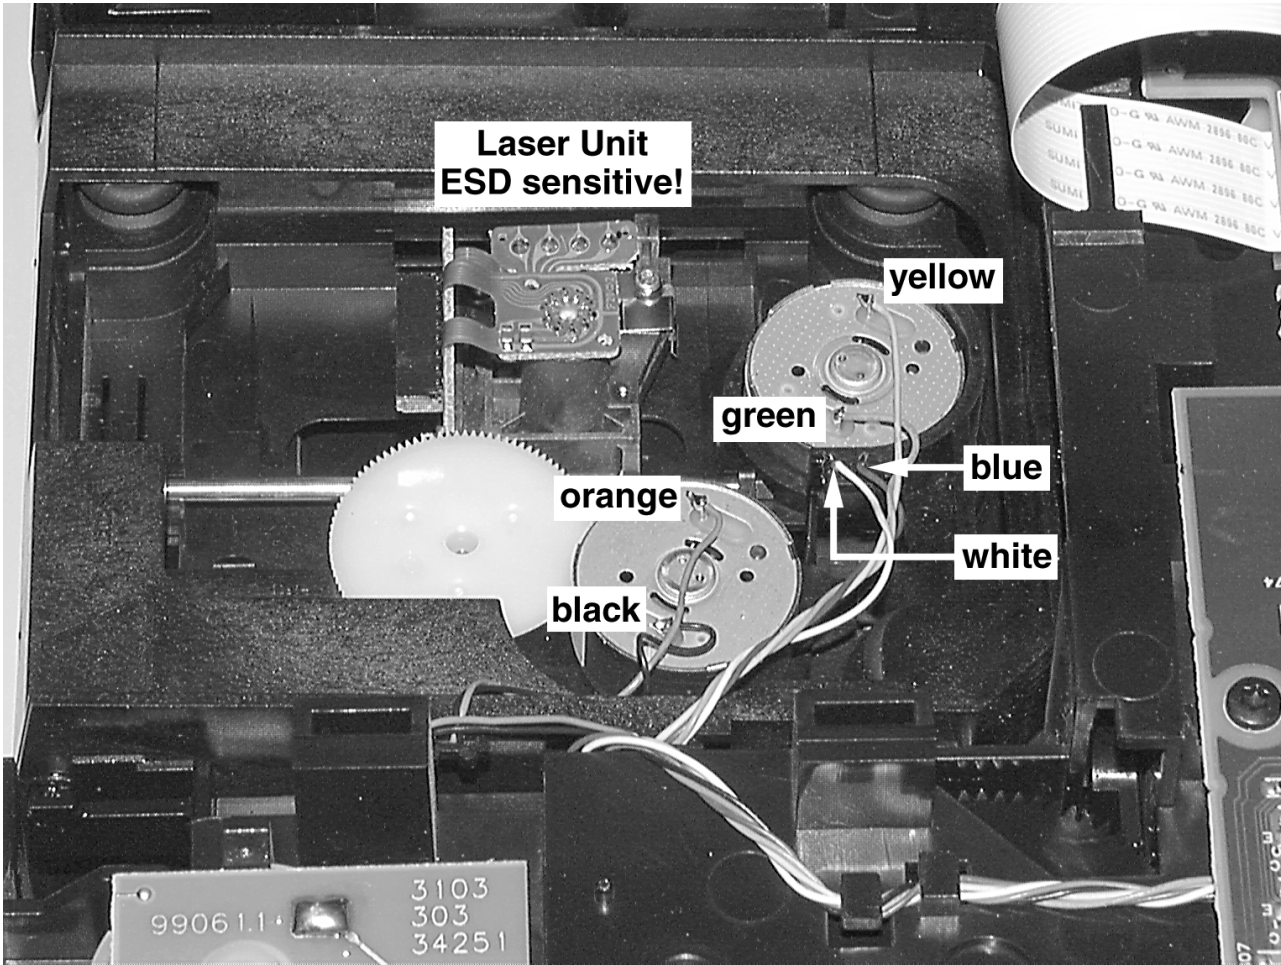

Blockdiagram


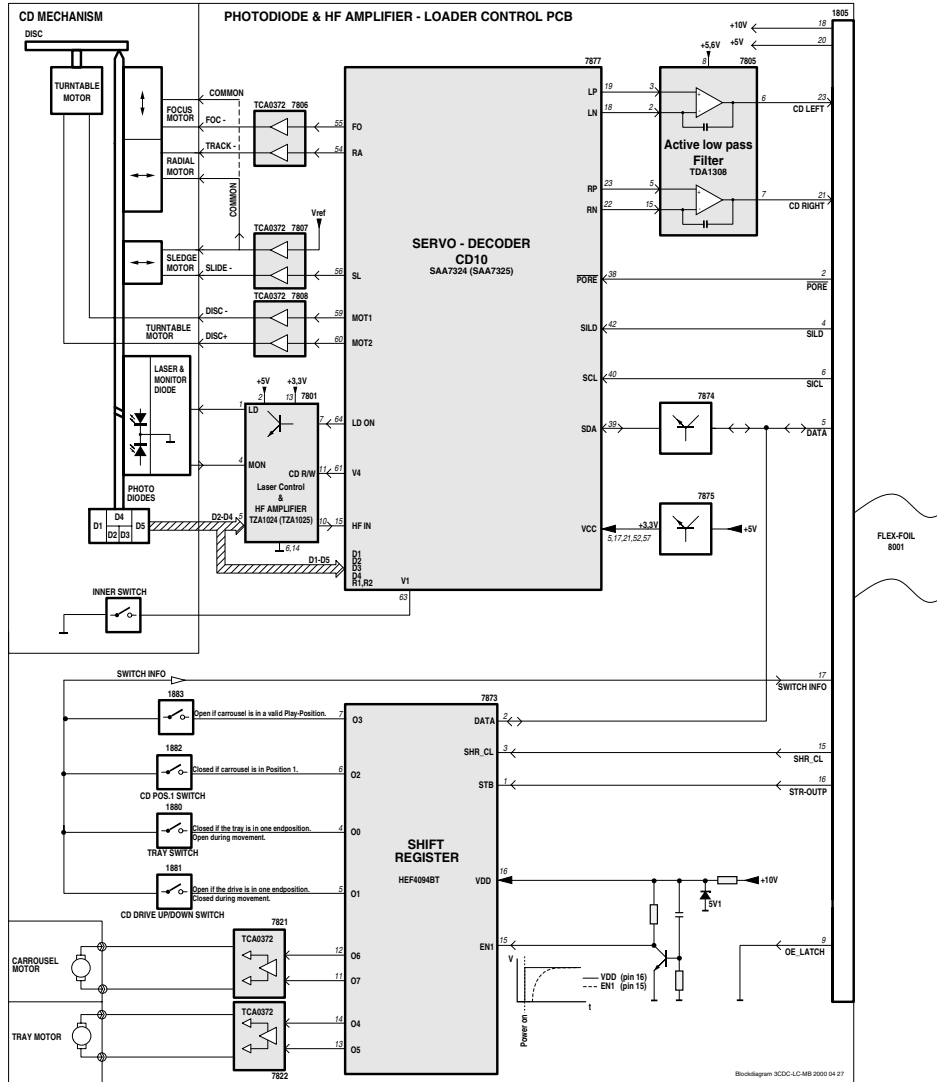


Blockdiagram 3C0C-LC-MB 2000 04 27

Mapping

3CDC-LC-MB Copperside view

3CDC-LC-MB Componentside view

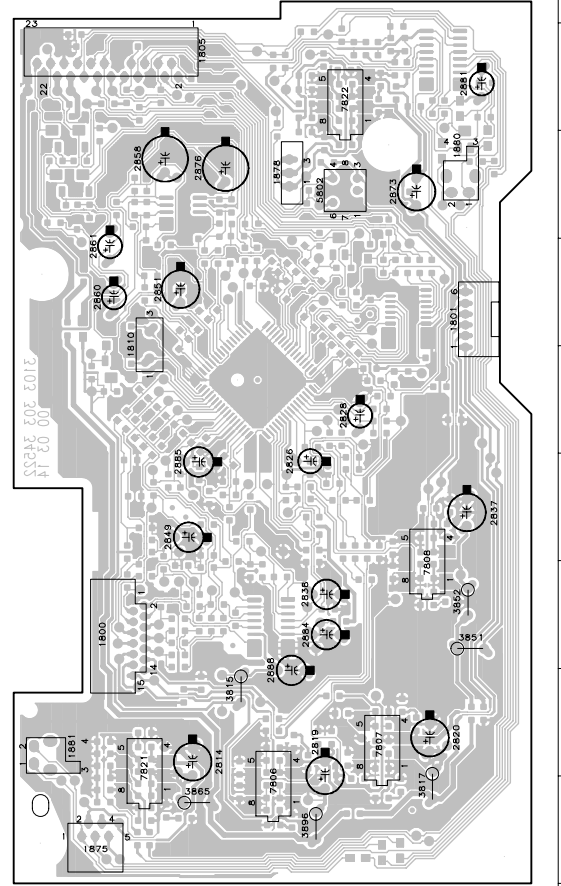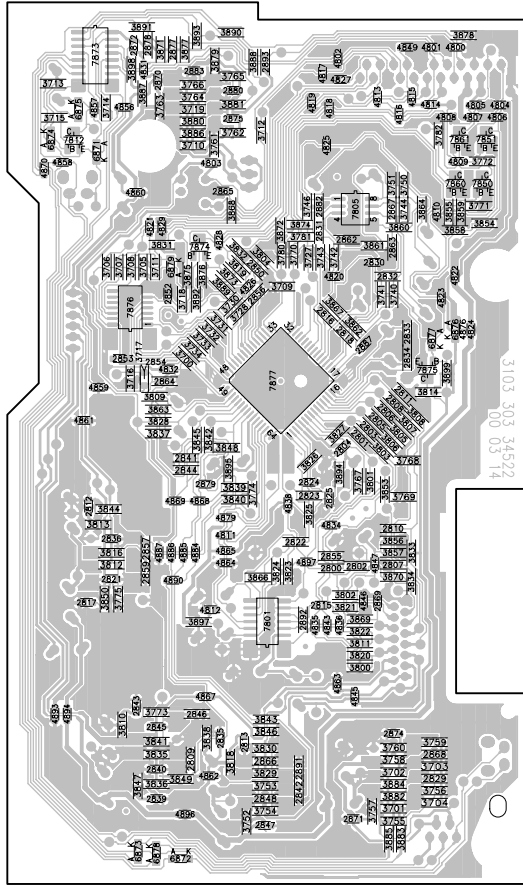


This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partlist.

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partlist.

Copperside		Componentside	
2800 F4	3750 B4	3861 A3	1800 F1
2801 D4	3751 B4	3882 H4	1801 C5
2802 F4	3752 H3	3883 H4	1805 A2
2803 D4	3753 H3	3884 H4	1810 C2
2804 D4	3754 H3	3885 H4	1875 H1
2805 D4	3755 H4	3886 B2	1878 B3
2806 D4	3756 H4	3887 A2	1880 B5
2807 F4	3757 H4	3888 A3	1881 G1
2808 D4	3758 G4	3889 C2	2814 H4
2809 G2	3759 G4	3890 A3	2819 G3
2810 E4	3760 G4	3891 A2	2820 G5
2811 D4	3761 E2	3892 C2	2826 E5
2812 E1	3762 B3	3893 A2	2828 D4
2813 G3	3763 A2	3894 E4	2837 E5
2814 F3	3764 A2	3895 E3	2838 F3
2816 C3	3765 A3	3897 F2	2849 E2
2817 F1	3766 A2	3898 A5	2851 E2
2818 C4	3767 E4	3899 D5	2858 C2
2821 F1	3768 E4	4800 A5	2860 C1
2822 E2	3769 E4	4801 A4	2861 C1
2823 E3	3770 C3	4802 A4	2873 B4
2824 E3	3771 B5	4803 B2	2876 B2
2825 E3	3772 B5	4804 A5	2881 A5
2829 H4	3773 G2	4805 A5	2884 F3
2830 C4	3774 E3	4806 A5	2885 E2
2831 E3	3775 F2	4807 A5	2888 C3
2832 C4	3780 C3	4808 A5	3815 G3
2833 D4	3781 B3	4809 A4	3817 H4
2834 D4	3782 B3	4810 B4	3851 F5
2835 C2	3800 F4	4811 E3	3852 F5
2836 C2	3801 F4	4812 A4	3853 F5
2839 H2	3802 F4	4813 A4	3896 H3
2840 G2	3803 D4	4814 A4	5802 B4
2841 E2	3804 C3	4815 A4	7806 H3
2842 H3	3805 D4	4816 A4	7807 G4
2843 G2	3806 D4	4817 A3	7821 C2
2844 F4	3807 D4	4818 A3	7822 A3
2845 G2	3808 D4	4819 A3	
2846 G2	3809 D4	4820 A3	
2847 H3	3810 G2	4821 B2	
2848 H3	3811 F4	4822 C5	
2849 H3	3812 F1	4823 B3	
2852 C2	3813 E1	4824 C5	
2853 D2	3814 D4	4825 B3	
2854 D2	3816 E1	4826 C3	
2855 E4	3818 G3	4827 A4	
2856 D5	3819 C3	4828 C2	
2857 C3	3820 F4	4829 D2	
2859 F2	3821 F4	4831 A2	
2860 F2	3822 F4	4832 A2	
2863 C4	3823 F3	4834 A4	
2864 D2	3824 F3	4835 F3	
2865 G3	3825 F3	4836 F4	
2866 G3	3826 E3	4838 E3	
2867 F4	3827 F4	4840 F3	
2868 G4	3828 D2	4845 F4	
2869 F4	3829 G3	4846 F4	
2870 A2	3830 G3	4847 F4	
2871 H4	3831 C2	4849 A4	
2872 A2	3832 C3	4856 A2	
2874 G4	3833 E4	4857 A1	
2875 A3	3834 F4	4858 B1	
2877 A2	3835 G2	4859 D1	
2878 A2	3836 H2	4860 B3	
2879 E2	3837 D2	4861 D1	
2880 A3	3838 C2	4862 G2	
2882 B3	3839 E3	4863 G4	
2883 A2	3840 E3	4864 F3	
2887 C4	3841 C2	4865 E3	
2891 G3	3842 D2	4867 G2	
2892 F3	3843 G3	4868 E2	
2893 A3	3844 E1	4869 E2	
3700 D2	3845 D2	4870 B1	
3701 H4	3846 G3	4876 C5	
3702 G4	3847 H2	4879 E3	
3703 G4	3848 D3	4884 E2	
3704 H4	3849 H2	4885 E2	
3705 C2	3850 F1	4886 E2	
3706 C1	3853 E4	4887 E2	
3707 C2	3854 B5	4890 F3	
3708 C2	3855 B5	4893 G1	
3709 C3	3856 E4	4894 G1	
3710 B3	3857 E4	4896 H2	
3711 C2	3858 B5	4897 F3	
3712 A3	3859 B5	6871 B1	
3713 A1	3860 B4	6872 H2	
3714 A1	3861 C4	6873 H2	
3715 A1	3862 C4	6874 B1	
3716 D2	3863 D2	6875 A1	
3717 D2	3864 B4	6876 C5	
3718 B2	3866 F3	6877 C4	
3719 A2	3867 C4	6878 H2	
3727 C3	3868 B3	6879 C2	
3728 C3	3869 F4	7801 F3	
3730 C3	3870 F4	7805 B4	
3731 C2	3871 A2	7812 B1	
3732 C2	3872 B3	7850 B5	
3733 C2	3873 C3	7851 B5	
3734 D2	3874 B3	7860 B5	
3740 C4	3875 C2	7861 B5	
3741 C4	3876 C2	7873 A1	
3742 C4	3877 A2	7874 C2	
3743 C3	3878 A5	7875 D4	
3744 B4	3879 A2	7876 C2	
3746 B3	3880 A2	7877 D3	


1800 D1 2801 C3 2805 F5 2809 H4 2813 G3 2816 B11 2822 F9 2826 G12 2835 B10 2839 H3 2843 G3 2847 F5 2851 B11 2859 H4 2864 E7 2891 F4 3729 E14 3761 E9 3774 G12 3803 C4 3806 B4 3811 B4 3816 H3 3820 D3 3824 E9 3828 G10 3833 A3 3837 B14 3841 G3 3845 F5 3849 H5 3855 C2 3865 D8 3873 D14 3895 G12 4812 F6 7808 H4
 1801 G1 2802 C4 2806 B5 2810 A4 2815 D5 2819 A4 2823 F10 2828 B14 2836 H4 2840 H4 2844 F5 2848 F4 2855 B4 2866 F4 2885 F9 2892 D5 3752 F3 3768 A4 3775 I3 3803 C4 3807 A4 3812 I3 3817 A14 3821 D3 3825 F10 3829 F3 3834 A3 3838 B14 3842 E5 3846 F5 3850 I3 3857 C2 3867 B11 3889 D14 3896 A14 7807 E7 7817 D12
 1810 C10 2803 C5 2807 A4 2811 A5 2816 B12 2820 A13 2824 F10 2828 C10 2837 A13 2841 F5 2845 D4 2849 C4 2856 D14 2868 E4 2887 B10 3768 C14 3753 F3 3768 A4 3800 C4 3804 C14 3808 A4 3813 I3 3818 H3 3822 D3 3826 F9 3830 G3 3835 H3 3839 H5 3843 I3 3847 H5 3852 A14 3862 B10 3866 D4 3882 E14 3892 E14 3897 C1 7806 E4
 1820 C4 2804 E10 2808 A5 2812 I3 2817 I3 2821 A1 2825 F10 2829 E9 2842 E4 2846 G4 2850 D14 2857 H4 2879 H5 2888 E5 3727 B12 3754 F3 3775 G3 3801 C4 3805 B4 3810 G3 3815 E5 3819 D14 3823 E9 3827 E10 3832 D15 3836 H3 3840 E5 3844 I3 3848 H5 3853 E9 3863 B14 3870 E5 3884 E9 4811 F8 7807 G4

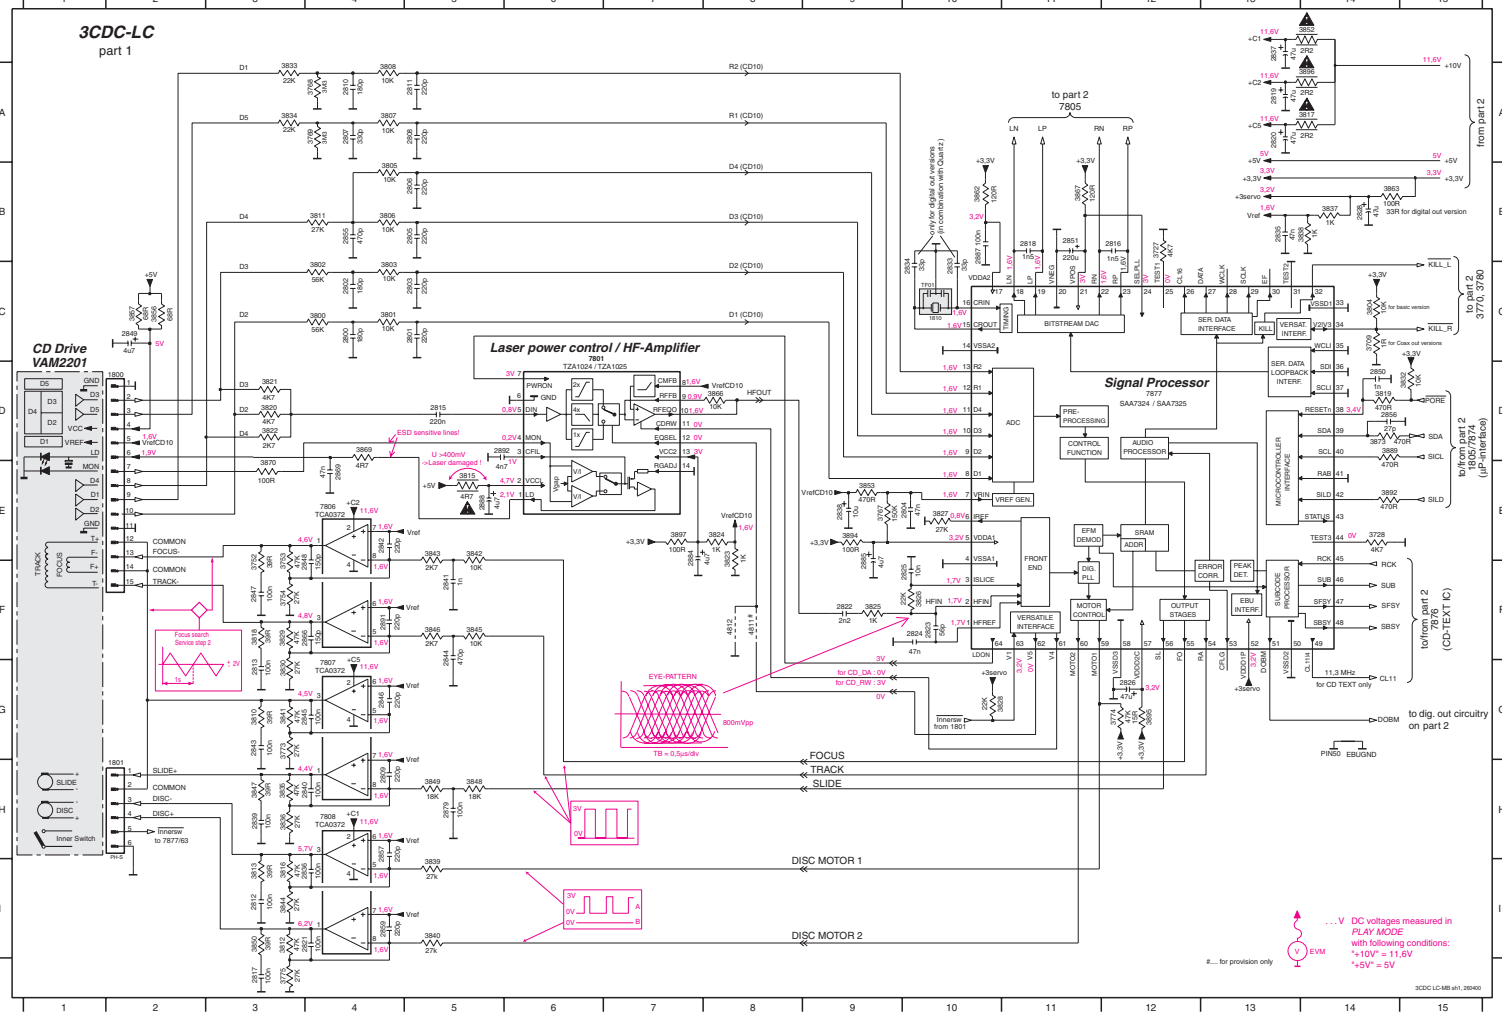

... V DC voltages measured in PLAY MODE with following conditions:
 *+10V = 11.6V
 *+5V = 5V

Mapping

3CDC-LC-MB Copperside view

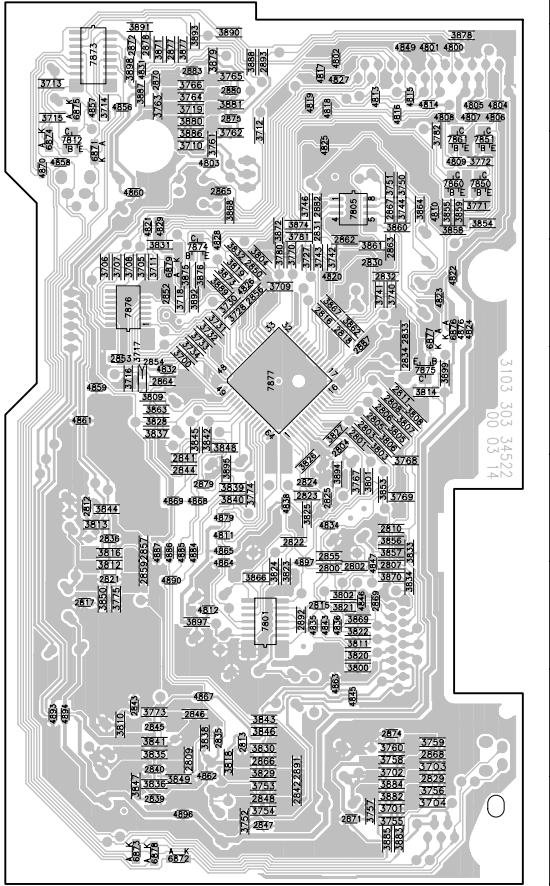


This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partlist.

3CDC-LC-MB Layout stage 2 2000-05-02

Copperside		Componentside	
2800 F4	3750 B4	3881 A3	1800 F1
2801 D4	3751 B4	3882 H4	1801 C5
2802 F4	3752 H3	3883 H4	1805 A2
2803 D4	3753 H3	3884 H4	1810 C2
2804 D4	3754 H3	3885 H4	1875 H1
2805 D4	3755 H4	3886 B3	1878 B3
2806 D4	3756 H4	3887 A2	1880 B5
2807 F4	3757 H4	3888 A3	1881 G1
2808 D4	3758 G4	3889 C2	2814 G3
2809 G2	3759 G4	3890 A3	2819 G3
2810 E4	3760 G4	3891 A2	2820 G5
2811 D4	3761 B2	3892 C2	2826 E3
2812 E1	3762 B3	3893 A2	2829 E4
2813 G3	3763 A2	3894 E4	2837 E5
2815 F3	3764 A2	3895 E3	2838 F3
2815 F3	3765 A2	3897 F2	2849 G3
2816 C4	3766 A2	3898 A2	2851 C2
2818 C4	3767 E4	3899 D5	2858 B2
2821 C4	3768 E4	4800 A5	2860 C1
2822 E3	3769 E4	4801 A4	2861 C1
2823 E3	3770 C3	4802 A4	2873 B4
2824 E3	3771 B5	4803 B2	2876 B2
2825 E3	3772 B5	4804 A5	2881 A5
2829 H4	3773 G2	4805 A5	2884 F3
2830 C4	3774 E3	4806 A5	2885 E2
2831 B3	3775 F2	4807 A5	2888 G3
2832 C4	3776 G2	4808 A5	3815 G3
2833 C4	3777 G2	4809 B5	3817 H4
2834 D4	3782 B5	4810 B4	3851 F5
2835 E4	3783 E3	4827 A5	3852 E6
2836 E1	3801 E4	4812 F2	3865 H2
2839 H4	3802 F4	4813 A4	3866 H3
2840 A4	3804 D4	4814 A4	3867 H3
2841 E2	3804 C3	4815 A4	7806 H3
2842 E2	3805 D4	4816 A4	7807 G4
2843 G2	3806 D4	4817 A3	7808 E4
2844 E2	3807 D4	4818 A3	7821 G2
2845 E2	3808 D4	4827 A5	7822 A5
2846 G2	3809 D2	4820 C4	
2847 H3	3810 G2	4821 B2	
2848 H3	3811 F4	4822 C5	
2850 C3	3812 F1	4823 C5	
2851 G3	3813 E1	4824 C5	
2852 G3	3814 D4	4825 B3	
2854 D2	3816 E1	4826 C3	
2855 D2	3817 E1	4827 A5	
2856 C3	3819 C3	4828 C2	
2857 F3	3820 F4	4829 B2	
2859 F2	3821 F4	4831 A3	
2862 C4	3822 F4	4832 D2	
2863 C3	3823 F3	4834 F4	
2864 D2	3824 F3	4835 F3	
2865 B3	3825 E3	4836 F4	
2866 B3	3826 E3	4837 A3	
2867 B4	3827 D4	4843 F3	
2868 G4	3828 D2	4845 G4	
2869 F4	3829 G3	4846 F4	
2870 A2	3830 G3	4847 F4	
2871 H4	3831 C2	4849 A4	
2872 A2	3832 C3	4856 A2	
2874 G4	3833 E4	4857 A1	
2875 A3	3834 F4	4858 B1	
2877 A2	3835 G2	4859 D1	
2878 A2	3836 H2	4860 B2	
2879 E3	3837 D2	4861 D1	
2880 A3	3838 G2	4862 G2	
2882 E3	3839 E3	4863 G4	
2883 A2	3840 E3	4864 F3	
2887 C4	3841 G2	4865 E3	
2889 C2	3842 D2	4867 G3	
2892 E3	3843 G3	4868 E2	
2893 A3	3844 E1	4869 E2	
3700 D2	3845 D2	4870 B1	
3701 H4	3846 G3	4876 C5	
3702 G4	3847 H2	4879 E3	
3703 G4	3848 D3	4884 E2	
3704 H4	3849 H2	4885 E2	
3705 C2	3850 F1	4886 E3	
3706 C1	3853 E4	4887 D2	
3707 C2	3854 B5	4890 F2	
3708 C2	3855 B5	4893 G1	
3709 C3	3856 E4	4894 F1	
3710 B2	3857 E4	4896 H2	
3711 C2	3858 B5	4897 F3	
3712 A3	3859 B5	6871 B1	
3713 A1	3860 D4	6872 H2	
3714 A1	3861 C4	6873 A1	
3715 A1	3862 C4	6874 B1	
3715 D2	3863 D2	6875 A1	
3716 D2	3864 B4	6876 C5	
3718 C2	3866 F3	6877 C4	
3719 A2	3867 C4	6878 H2	
3727 C3	3868 B3	6879 C2	
3728 C3	3869 F4	7801 F3	
3730 C3	3870 H4	7805 B4	
3731 C2	3871 A2	7812 B1	
3732 C2	3872 B3	7850 B5	
3733 C2	3873 C3	7861 B5	
3734 D2	3874 B3	7860 B5	
3740 C4	3875 C2	7861 B5	
3741 C4	3876 C2	7873 A1	
3742 C4	3877 A2	7874 C2	
3743 C4	3878 A5	7875 D4	
3744 B4	3879 A2	7876 C2	
3746 B3	3880 A2	7877 D3	


3CDC-LC-MB Componentside view

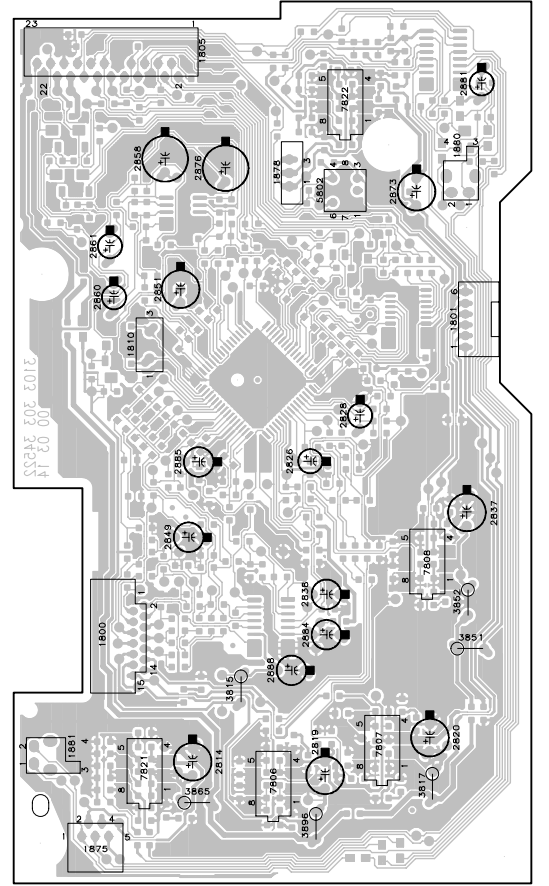

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partlist.

3CDC-LC-MB Layout stage 2 2000-05-02

1805	E14	1880	E7	2831	B8	2861	B9	2870	E4	2877	G10	3372	C13	3705	H10	3713	D10	3730	I7	3743	B6	3757	G3	3764	D2	3781	B15	3855	B9	3871	F10	3881	D5	3888	F11	4827	H13	6874	D10	7805-B	B8	7851	B14
1806	G2	1881	E7	2832	A7	2862	B7	2871	E3	2878	E10	3374	C13	3706	H10	3714	D9	3732	I7	3744	B8	3758	G4	3766	D2	3782	B15	3856	B9	3872	D10	3882	F11	3889	F10	4828	D13	6875	D6	7812	D9	7860	B15
1876	E8	1882	E7	2832	B8	2863	A6	2872	D8	2880	D10	3707	I7	3707	H10	3715	D10	3733	I7	3746	B9	3759	G4	3766	D3	3783	B15	3857	B9	3873	C11	3883	F5	3891	F10	4879	D12	6876	D12	7813	F2	7861	C14
1876	E8	1883	E7	2853	H8	2864	I3	2873	D6	2881	D10	3701	F2	3706	H10	3716	D10	3733	I7	3750	A6	3760	G4	3770	A15	3814	D12	3860	A5	3874	F10	3884	F5	3893	F10	5802	H4	6877	E12	7813-B	F2	7873	D9
1877	E3	2814	F8	2854	H3	2865	I4	2874	E4	2882	B8	3702	F5	3710	D5	3718	H8	3740	A6	3751	A6	3761	G4	3771	A14	3851	H11	3861	A7	3875	E8	3885	F11	3888	D7	6878	E8	6879	E8	7814	C12		
1878	D3	2829	F2	2858	A5	2867	B8	2875	D5	2883	E11	3703	F1	3711	H0	3719	D2	3741	A6	3755	G2	3763	E4	3772	B14	3851	C6	3864	A5	3878	D1	3889	D5	3899	E12	6872	E8	6873	E8	7815	D12		
1878	D3	2830	C8	2860	A8	2868	F5	2876	A6	2885	G11	3704	F5	3712	H4	3720	I7	3742	B6	3756	G2	3763	D4	3780	B14	3854	A8	3865	F6	3880	D1	3887	D7	4813	C13	6873	E8	7805-A	A7	7850	A14	7876	B

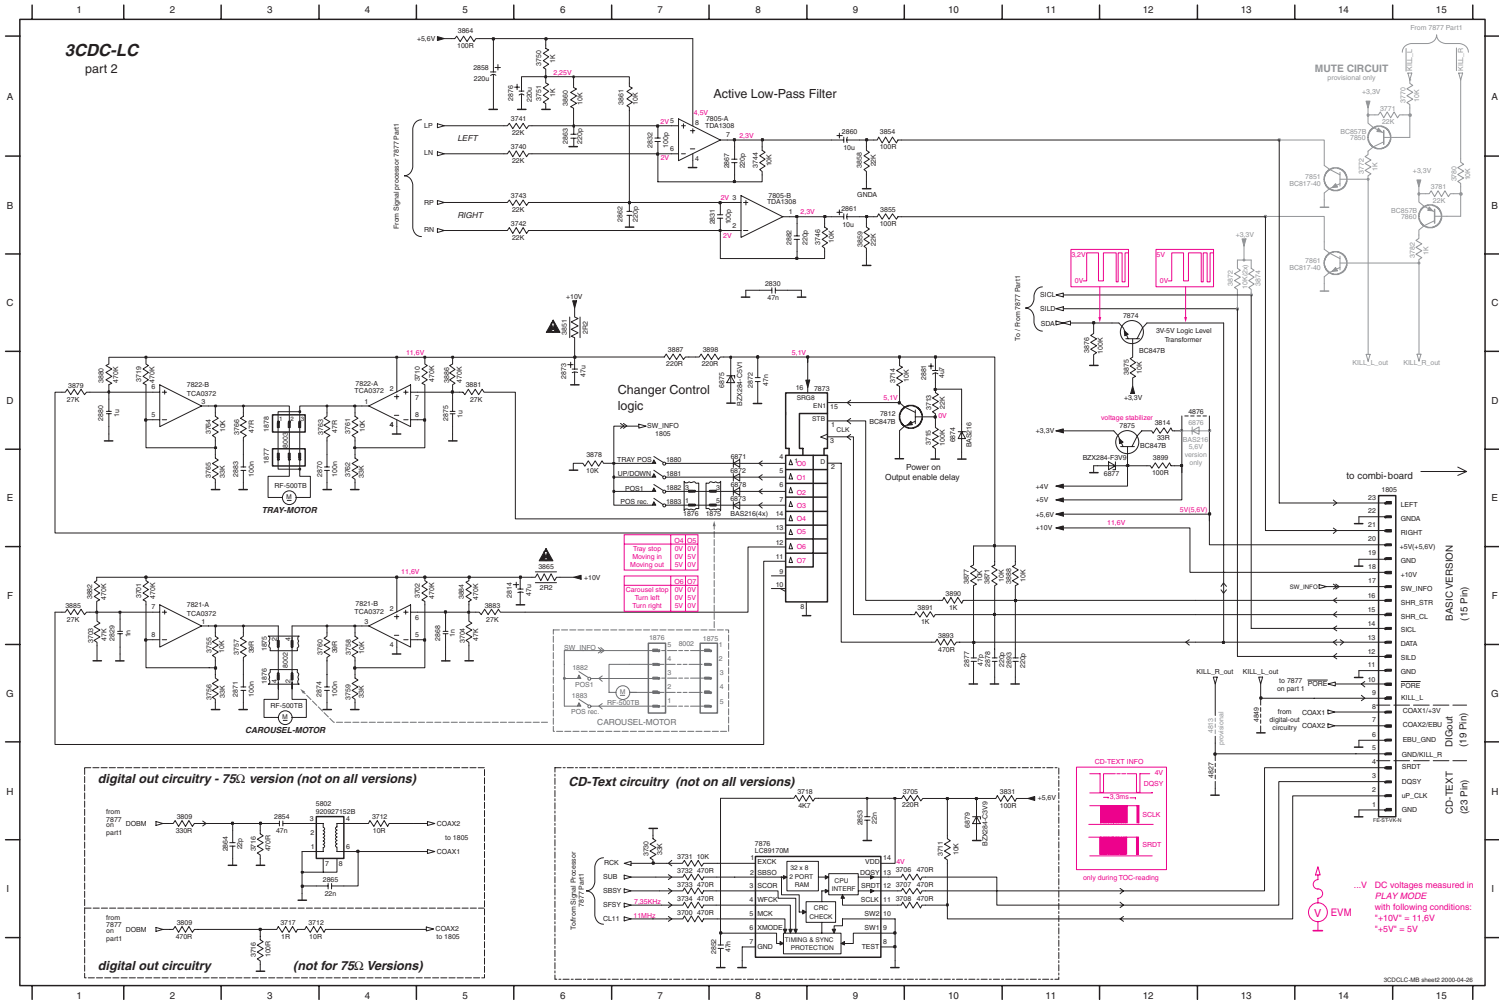



10A-10

10A-10

EXPLODED VIEW (3CDC-LC Module)

MECHANICAL PARTS Loader → this page

- 20 3103 304 66500 DRAWER BLACK
- 21 3140 117 58650 CLAMPER ASSY-VAM
- 30 3103 304 66560 SUPPORT
- 31 4822 529 10431 DAMPER - RUBBER (25DEG)
- 32 4822 529 10431 DAMPER - RUBBER (25DEG)
- 33 3103 304 06970 WASHER
- 35 4822 691 10772 VAM2201/01 CD Drive
- 41 3103 304 66480 FRAME
- 42 3103 304 66540 BRACKET-GUIDING
- 43 3103 301 06460 SPRING-GUIDING
- 44 3103 304 06890 GEAR-3
- 45 3103 304 06980 NAIL FIXATION
- 46 3103 304 06880 GEAR-2
- 47 3103 304 66530 BRACKET-LOAD
- 48 3103 304 06910 CAM
- 49 3103 304 66510 GUIDING
- 51 3103 304 06900 GEAR-4
- 52 3103 304 06870 GEAR-1
- 53 3103 304 06960 PULLEY-FRAME
- 54 3103 304 66910 DRIVING-BELT-DRAWER
- 55 4822 361 10753 TRAY MOTOR
- 56 4822 502 12548 SCREW M2,6X3,5
- 57 3103 304 68890 COVER-VAM
- 59 4822 466 12146 RUBBER

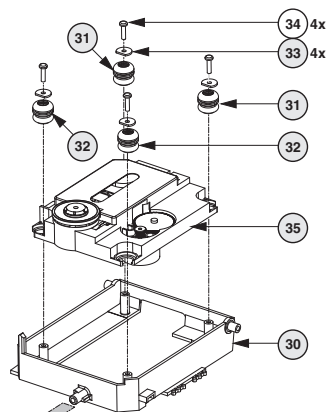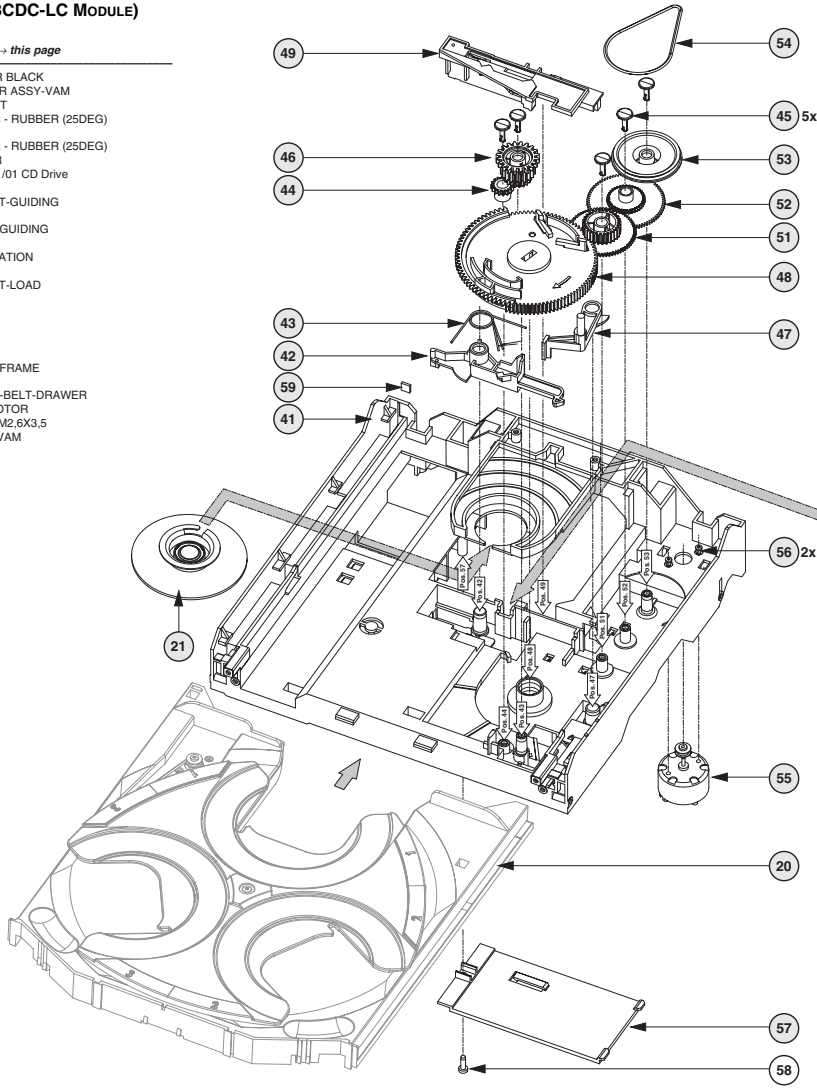


MECHANICAL PARTS Drawer → Chapter 10A-11


- 20 3103 304 66500 DRAWER BLACK
- 21 3103 304 66490 CAROUSEL BLACK
- 22 3103 304 06860 PULLEY-DRAWER
- 23 3103 304 06850 ECCENTRIC GEAR WHEEL
- 24 3103 304 06980 NAIL FIXATION
- 25 3103 304 66850 DRIVING BELT CAROUSEL
- 27 3103 304 07100 BUSH DRAWER (height=8,5mm,d=16mm)
- 27 4822 532 12365 BUSH DRAWER (height=5,5mm,d=9,4mm)
- 29 3103 304 66550 BRACKET-DISC
- 30 3103 304 66520 TUMBLER
- 31 3103 301 06470 SPRING-DISC
- 32 3103 304 06920 CONTROL-DISC
- 34 3103 304 06870 GEAR-1
- 37 4822 361 10753 CAROUSEL MOTOR

X spare part
Y non spare part

Drawer bottom view

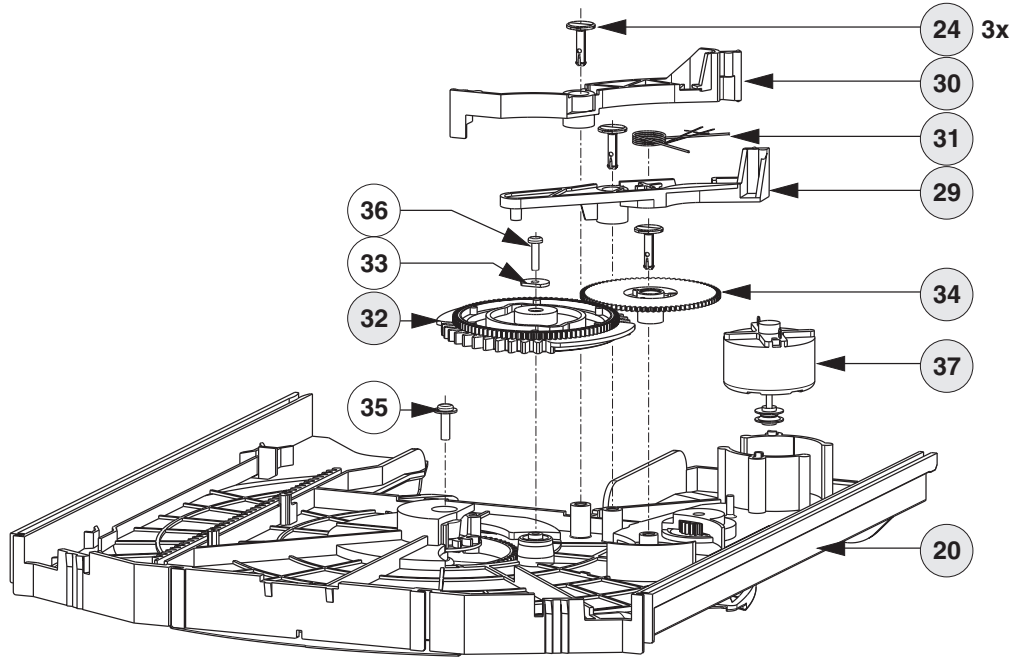

Drawer top view

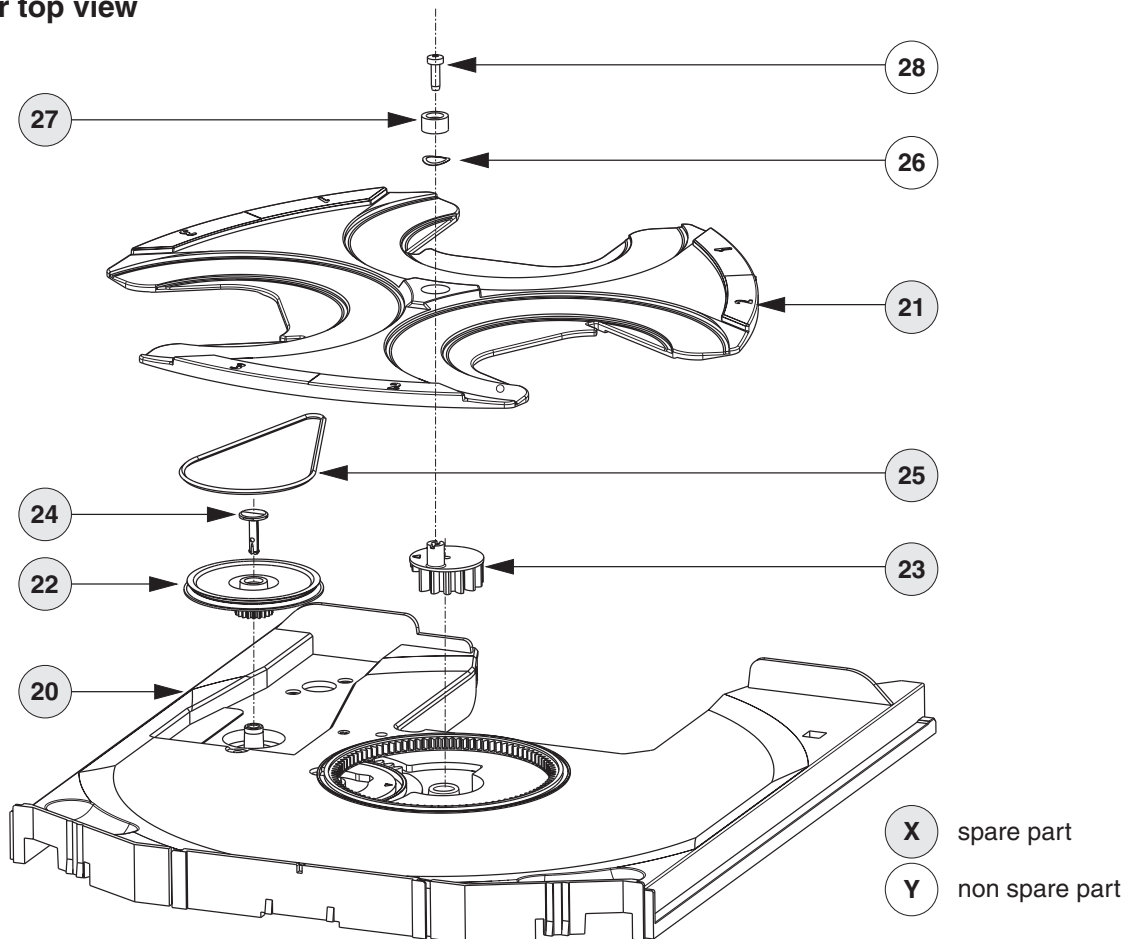

ELECTRICAL PARTSLIST 3CDC-LC-MB MODULE**MISCELLANEOUS**

1800	4822 265 10925	FFC-CONNECTOR, 15P, SIDE ENTRY
1805	4822 265 10979	FLEX FOIL CONNECTOR 15PIN
1805	4822 265 11182	FLEX FOIL CONNECTOR 23PIN
1805	4822 265 11545	FLEX FOIL CONNECTOR 19PIN
1875	4822 267 10958	FFC-CONNECTOR, 5P, SIDE ENTRY
1876	2422 025 08332	FLEX FOIL CONNECTOR 5PIN
1880	4822 276 13503	SWITCH, Tray in endposition
1881	4822 276 13503	SWITCH, Drive up/down
1882	4822 276 13503	SWITCH, Position 1
1883	4822 276 13503	SWITCH, Position recognized
8002	3103 308 91990	FLEX FOIL CABLE 5P, 200mm
8005	3103 308 91980	FLEX FOIL CABLE 15P, 170mm

CAPACITORS

2800 ©	4822 126 10326	180pF	5%	
2801 ©	4822 122 33575	220pF	5%	50V
2802 ©	4822 126 10326	180pF	5%	
2803 ©	4822 122 33575	220pF	5%	50V
2804 ©	4822 126 13751	47nF	10%	50V
2805 ©	4822 122 33575	220pF	5%	50V
2806 ©	4822 122 33575	220pF	5%	50V
2807 ©	5322 122 31863	330pF	5%	50V
2808 ©	4822 122 33575	220pF	5%	50V
2809 ©	4822 122 33575	220pF	5%	50V
2810 ©	4822 126 10326	180pF	5%	
2811 ©	4822 122 33575	220pF	5%	50V
2812 ©	4822 126 14585	100nF	10%	50V
2813 ©	4822 126 14585	100nF	10%	50V
2814	4822 124 40433	47µF	20%	25V
2815 ©	4822 126 14076	220nF	20%	25V
2816 ©	4822 126 13344	1,5nF	5%	63V
2817 ©	4822 126 14585	100nF	10%	50V
2818 ©	4822 126 13344	1,5nF	5%	63V
2819	4822 124 40433	47µF	20%	25V
2820	4822 124 40433	47µF	20%	25V
2821 ©	4822 126 14585	100nF	10%	50V
2822 ©	2222 861 15222	2,2nF	10%	50V
2823 ©	4822 126 13693	56pF	1%	63V
2824 ©	4822 126 13751	47nF	10%	50V
2825 ©	4822 122 33177	10nF	20%	50V
2826	4822 124 12362	47µF	20%	4V
2828	4822 124 12362	47µF	20%	4V
2829 ©	5322 122 31647	1nF	10%	63V
2830 ©	4822 126 13751	47nF	10%	50V
2831 ©	5322 122 32531	100pF	5%	50V
2832 ©	5322 122 32531	100pF	5%	50V
2833 ©	5322 122 32659	33pF	5%	50V
2834 ©	5322 122 32659	33pF	5%	50V
2835 ©	4822 126 13751	47nF	10%	50V
2836 ©	4822 126 14585	100nF	10%	50V
2837	4822 124 40433	47µF	20%	25V
2838	4822 124 40248	10µF	20%	63V
2839 ©	4822 126 14585	100nF	10%	50V
2840 ©	4822 126 14585	100nF	10%	50V
2841 ©	5322 122 31647	1nF	10%	63V
2842 ©	5322 126 10794	220pF	10%	
2843 ©	4822 126 14585	100nF	10%	50V
2844 ©	5322 122 34099	470pF	10%	63V
2845 ©	4822 126 14585	100nF	10%	50V
2846 ©	4822 122 33575	220pF	5%	50V
2847 ©	4822 126 14585	100nF	10%	50V
2848 ©	5322 122 33538	150pF	5%	63V
2849	4822 124 40769	4,7µF	20%	100V
2850 ©	5322 122 31647	1nF	10%	63V

CAPACITORS

2851	4822 124 42383	220µF	20%	4V
2852 ©	4822 126 13751	47nF	10%	50V
2853 ©	5322 122 32654	22nF	10%	63V
2854 ©	4822 126 13751	47nF	10%	50V
2855 ©	5322 122 34099	470pF	10%	63V
2856 ©	4822 126 13691	27pF	1%	63V
2857 ©	4822 122 33575	220pF	5%	50V
2858	4822 124 12245	220µF	20%	16V
2859 ©	4822 122 33575	220pF	5%	50V
2860	4822 124 11947	10µF	20%	16V
2861	4822 124 11947	10µF	20%	16V
2862 ©	4822 122 33575	220pF	5%	50V
2863 ©	4822 122 33575	220pF	5%	50V
2864 ©	5322 122 32658	22pF	5%	50V
2865 ©	5322 122 32654	22nF	10%	63V
2866 ©	5322 122 33538	150pF	5%	63V
2867 ©	4822 122 33575	220pF	5%	50V
2868 ©	5322 122 31647	1nF	10%	63V
2869 ©	4822 126 13751	47nF	10%	50V
2870 ©	4822 126 14585	100nF	10%	50V
2871 ©	4822 126 14585	100nF	10%	50V
2872 ©	4822 126 13751	47nF	10%	50V
2873	4822 124 40433	47µF	20%	25V
2874 ©	4822 126 14585	100nF	10%	50V
2875 ©	4822 126 14043	1µF	20%	16V
2876	4822 124 12245	220µF	20%	16V
2877 ©	4822 126 13692	47pF	1%	63V
2878 ©	4822 122 33575	220pF	5%	50V
2879 ©	4822 126 14585	100nF	10%	50V
2880 ©	4822 126 14043	1µF	20%	16V
2881	4822 124 40769	4,7µF	20%	100V
2882 ©	4822 122 33575	220pF	5%	50V
2883 ©	4822 126 14585	100nF	10%	50V
2884	4822 124 40769	4,7µF	20%	100V
2885	4822 124 40769	4,7µF	20%	100V
2887 ©	4822 126 14585	100nF	10%	50V
2888	4822 124 40769	4,7µF	20%	100V
2891 ©	4822 122 33575	220pF	5%	50V
2892 ©	5322 126 10223	4,7nF	10%	63V
2893 ©	4822 122 33575	220pF	5%	50V

RESISTORS

3700 ©	4822 051 20471	470Ω	5%	0,1W
3701 ©	4822 051 20474	470kΩ	5%	0,1W
3702 ©	4822 051 20474	470kΩ	5%	0,1W
3703 ©	4822 117 10834	47kΩ	1%	0,1W
3704 ©	4822 117 10834	47kΩ	1%	0,1W
3705 ©	4822 117 11503	220Ω	5%	0,1W
3706 ©	4822 051 20471	470Ω	5%	0,1W
3707 ©	4822 051 20471	470Ω	5%	0,1W
3708 ©	4822 051 20471	470Ω	5%	0,1W
3709 ©	4822 051 20108	1Ω	5%	0,1W
3710 ©	4822 051 20474	470kΩ	5%	0,1W
3711 ©	4822 117 10833	10kΩ	1%	0,1W
3712 ©	4822 051 20109	10Ω	5%	0,1W
3713 ©	4822 051 20223	22kΩ	5%	0,1W
3714 ©	4822 117 10833	10kΩ	1%	0,1W
3715 ©	4822 117 10837	100kΩ	1%	0,1W
3716 ©	4822 051 20471	470Ω	5%	0,1W
3718 ©	4822 051 20472	4,7kΩ	5%	0,1W
3719 ©	4822 051 20474	470kΩ	5%	0,1W
3727 ©	4822 051 20472	4,7kΩ	5%	0,1W
3728 ©	4822 051 20472	4,7kΩ	5%	0,1W
3730 ©	4822 051 20333	33kΩ	5%	0,1W
3731 ©	4822 117 10833	10kΩ	1%	0,1W
3732 ©	4822 051 20471	470Ω	5%	0,1W
3733 ©	4822 051 20471	470Ω	5%	0,1W

ELECTRICAL PARTSLIST 3CDC-LC-MB MODULE**RESISTORS**

3734	© 4822 051 20471	470Ω	5%	0,1W
3740	© 4822 051 20223	22kΩ	5%	0,1W
3741	© 4822 051 20223	22kΩ	5%	0,1W
3742	© 4822 051 20223	22kΩ	5%	0,1W
3743	© 4822 051 20223	22kΩ	5%	0,1W
3744	© 4822 117 10833	10kΩ	1%	0,1W
3746	© 4822 117 10833	10kΩ	1%	0,1W
3750	© 4822 051 10102	1kΩ	2%	0,25W
3751	© 4822 051 10102	1kΩ	2%	0,25W
3752	© 4822 051 20399	39Ω	5%	0,1W
3753	© 4822 117 10834	47kΩ	1%	0,1W
3754	© 4822 117 12024	27kΩ	1%	0,1W
3755	© 4822 117 10833	10kΩ	1%	0,1W
3756	© 2120 108 92632	33kΩ	1%	0,1W
3757	© 4822 051 20399	39Ω	5%	0,1W
3758	© 4822 117 10833	10kΩ	1%	0,1W
3759	© 2120 108 92632	33kΩ	1%	0,1W
3760	© 4822 051 20399	39Ω	5%	0,1W
3761	© 4822 117 10833	10kΩ	1%	0,1W
3762	© 2120 108 92632	33kΩ	1%	0,1W
3763	© 4822 051 20479	47Ω	5%	0,1W
3764	© 4822 117 10833	10kΩ	1%	0,1W
3765	© 2120 108 92632	33kΩ	1%	0,1W
3766	© 4822 051 20479	47Ω	5%	0,1W
3773	© 4822 117 12024	27kΩ	1%	0,1W
3775	© 4822 117 12024	27kΩ	1%	0,1W
3800	© 4822 117 11148	56kΩ	1%	0,1W
3801	© 4822 117 10833	10kΩ	1%	0,1W
3802	© 4822 117 11148	56kΩ	1%	0,1W
3803	© 4822 117 10833	10kΩ	1%	0,1W
3804	© 4822 117 10833	10kΩ	1%	0,1W
3805	© 4822 117 10833	10kΩ	1%	0,1W
3806	© 4822 117 10833	10kΩ	1%	0,1W
3807	© 4822 117 10833	10kΩ	1%	0,1W
3808	© 4822 117 10833	10kΩ	1%	0,1W
3809	© 4822 117 13577	330Ω	1%	0,1W
3810	© 4822 051 20399	39Ω	5%	0,1W
3811	© 4822 051 20273	27kΩ	5%	0,1W
3812	© 4822 117 10834	47kΩ	1%	0,1W
3813	© 4822 051 20399	39Ω	5%	0,1W
3814	© 4822 051 20339	33Ω	5%	0,1W
3815	© 4822 052 10478	4,7Ω	5%	NFR
3816	© 4822 117 10834	47kΩ	1%	0,1W
3817	© 4822 052 10228	2,2Ω	5%	0,33W
3818	© 4822 051 20399	39Ω	5%	0,1W
3819	© 4822 051 20471	470Ω	5%	0,1W
3820	© 4822 051 20472	4,7kΩ	5%	0,1W
3821	© 4822 051 20472	4,7kΩ	5%	0,1W
3822	© 4822 117 12955	2,7kΩ	1%	0,1W
3823	© 4822 051 10102	1kΩ	2%	0,25W
3824	© 4822 051 10102	1kΩ	2%	0,25W
3825	© 4822 051 10102	1kΩ	2%	0,25W
3826	© 4822 051 20223	22kΩ	5%	0,1W
3827	© 4822 051 20273	27kΩ	5%	0,1W
3828	© 4822 051 20223	22kΩ	5%	0,1W
3829	© 4822 117 10834	47kΩ	1%	0,1W
3830	© 4822 117 12024	27kΩ	1%	0,1W
3831	© 4822 051 20101	100Ω	5%	0,1W
3832	© 4822 117 10833	10kΩ	1%	0,1W
3833	© 4822 051 20223	22kΩ	5%	0,1W
3834	© 4822 051 20223	22kΩ	5%	0,1W
3835	© 4822 117 10834	47kΩ	1%	0,1W
3836	© 4822 117 12024	27kΩ	1%	0,1W
3837	© 4822 051 10102	1kΩ	2%	0,25W
3838	© 4822 051 10102	1kΩ	2%	0,25W

RESISTORS

3839	© 4822 051 20273	27kΩ	5%	0,1W
3840	© 4822 051 20273	27kΩ	5%	0,1W
3841	© 4822 117 10834	47kΩ	1%	0,1W
3842	© 4822 117 10833	10kΩ	1%	0,1W
3843	© 4822 117 12955	2,7kΩ	1%	0,1W
3844	© 4822 117 12024	27kΩ	1%	0,1W
3845	© 4822 117 10833	10kΩ	1%	0,1W
3846	© 4822 117 12955	2,7kΩ	1%	0,1W
3847	© 4822 051 20399	39Ω	5%	0,1W
3848	© 4822 117 10965	18kΩ	2%	0,1W
3849	© 4822 117 10965	18kΩ	2%	0,1W
3850	© 4822 051 20399	39Ω	5%	0,1W
3851	© 4822 052 10228	2,2Ω	5%	0,33W
3852	© 4822 052 10228	2,2Ω	5%	0,33W
3853	© 4822 051 20471	470Ω	5%	0,1W
3854	© 4822 051 20101	100Ω	5%	0,1W
3855	© 4822 051 20101	100Ω	5%	0,1W
3856	© 4822 117 12521	68Ω	1%	0,1W
3857	© 4822 117 12521	68Ω	1%	0,1W
3858	© 4822 051 20223	22kΩ	5%	0,1W
3859	© 4822 051 20223	22kΩ	5%	0,1W
3860	© 4822 117 10833	10kΩ	1%	0,1W
3861	© 4822 117 10833	10kΩ	1%	0,1W
3862	© 4822 051 20121	120Ω	5%	0,1W
3863	© 4822 051 20101	100Ω	5%	0,1W
3863	© 4822 051 20339	33Ω	5%	0,1W
3864	© 4822 051 20101	100Ω	5%	0,1W
3865	© 4822 052 10228	2,2Ω	5%	0,33W
3866	© 4822 117 10833	10kΩ	1%	0,1W
3867	© 4822 051 20121	120Ω	5%	0,1W
3869	© 4822 051 20478	4,7Ω	5%	0,1W
3870	© 4822 051 20101	100Ω	5%	0,1W
3871	© 4822 117 10833	10kΩ	1%	0,1W
3873	© 4822 051 20471	470Ω	5%	0,1W
3875	© 4822 117 10833	10kΩ	1%	0,1W
3876	© 4822 117 10837	100kΩ	1%	0,1W
3877	© 4822 117 10833	10kΩ	1%	0,1W
3878	© 4822 117 10833	10kΩ	1%	0,1W
3879	© 4822 051 20273	27kΩ	5%	0,1W
3880	© 4822 051 20474	470kΩ	5%	0,1W
3881	© 4822 051 20273	27kΩ	5%	0,1W
3882	© 4822 051 20474	470kΩ	5%	0,1W
3883	© 4822 051 20273	27kΩ	5%	0,1W
3884	© 4822 051 20474	470kΩ	5%	0,1W
3885	© 4822 051 20273	27kΩ	5%	0,1W
3886	© 4822 051 20474	470kΩ	5%	0,1W
3887	© 4822 117 11503	220Ω	5%	0,1W
3888	© 4822 117 10833	10kΩ	1%	0,1W
3889	© 4822 051 20471	470Ω	5%	0,1W
3890	© 4822 051 10102	1kΩ	2%	0,25W
3891	© 4822 051 10102	1kΩ	2%	0,25W
3892	© 4822 051 20471	470Ω	5%	0,1W
3893	© 4822 051 20471	470Ω	5%	0,1W
3894	© 4822 051 20101	100Ω	5%	0,1W
3895	© 4822 051 20159	15Ω	5%	0,1W
3896	© 4822 052 10228	2,2Ω	5%	0,33W
3897	© 4822 051 20101	100Ω	5%	0,1W
3898	© 4822 117 11503	220Ω	5%	0,1W
3899	© 4822 051 20101	100Ω	5%	0,1W
4800	© 4822 051 20008			CHIP JUMPER 0805
4801	© 4822 051 20008			CHIP JUMPER 0805
4802	© 4822 051 20008			CHIP JUMPER 0805
4804	© 4822 051 20008			CHIP JUMPER 0805
4805	© 4822 051 20008			CHIP JUMPER 0805
4806	© 4822 051 20008			CHIP JUMPER 0805

ELECTRICAL PARTSLIST 3CDC-LC-MB MODULE**RESISTORS**

4807 ©	4822 051 20008	CHIP JUMPER 0805
4808 ©	4822 051 20008	CHIP JUMPER 0805
4809 ©	4822 051 20008	CHIP JUMPER 0805
4810 ©	4822 051 20008	CHIP JUMPER 0805
4812 ©	4822 051 20008	CHIP JUMPER 0805
4814 ©	4822 051 20008	CHIP JUMPER 0805
4815 ©	4822 051 20008	CHIP JUMPER 0805
4816 ©	4822 051 20008	CHIP JUMPER 0805
4817 ©	4822 051 20008	CHIP JUMPER 0805
4818 ©	4822 051 20008	CHIP JUMPER 0805
4819 ©	4822 051 20008	CHIP JUMPER 0805
4820 ©	4822 051 20008	CHIP JUMPER 0805
4821 ©	4822 051 20008	CHIP JUMPER 0805
4822 ©	4822 051 20008	CHIP JUMPER 0805
4823 ©	4822 051 20008	CHIP JUMPER 0805
4824 ©	4822 051 20008	CHIP JUMPER 0805
4825 ©	4822 051 20008	CHIP JUMPER 0805
4826 ©	4822 051 20008	CHIP JUMPER 0805
4827 ©	4822 051 20008	CHIP JUMPER 0805
4828 ©	4822 051 20008	CHIP JUMPER 0805
4831 ©	4822 051 20008	CHIP JUMPER 0805
4832 ©	4822 051 20008	CHIP JUMPER 0805
4834 ©	4822 051 20008	CHIP JUMPER 0805
4835 ©	4822 051 20008	CHIP JUMPER 0805
4836 ©	4822 051 20008	CHIP JUMPER 0805
4838 ©	4822 051 20008	CHIP JUMPER 0805
4843 ©	4822 051 20008	CHIP JUMPER 0805
4845 ©	4822 051 20008	CHIP JUMPER 0805
4846 ©	4822 051 20008	CHIP JUMPER 0805
4847 ©	4822 051 20008	CHIP JUMPER 0805
4849 ©	4822 051 20008	CHIP JUMPER 0805
4856 ©	4822 051 20008	CHIP JUMPER 0805
4857 ©	4822 051 20008	CHIP JUMPER 0805
4858 ©	4822 051 20008	CHIP JUMPER 0805
4859 ©	4822 051 20008	CHIP JUMPER 0805
4860 ©	4822 051 20008	CHIP JUMPER 0805
4861 ©	4822 051 20008	CHIP JUMPER 0805
4862 ©	4822 051 20008	CHIP JUMPER 0805
4863 ©	4822 051 20008	CHIP JUMPER 0805
4864 ©	4822 051 20008	CHIP JUMPER 0805
4865 ©	4822 051 20008	CHIP JUMPER 0805
4867 ©	4822 051 20008	CHIP JUMPER 0805
4868 ©	4822 051 20008	CHIP JUMPER 0805
4869 ©	4822 051 20008	CHIP JUMPER 0805
4870 ©	4822 051 20008	CHIP JUMPER 0805
4876 ©	4822 051 20008	CHIP JUMPER 0805
4879 ©	4822 051 20008	CHIP JUMPER 0805
4884 ©	4822 051 20008	CHIP JUMPER 0805
4885 ©	4822 051 20008	CHIP JUMPER 0805
4886 ©	4822 051 20008	CHIP JUMPER 0805
4887 ©	4822 051 20008	CHIP JUMPER 0805
4890 ©	4822 051 20008	CHIP JUMPER 0805
4893 ©	4822 051 20008	CHIP JUMPER 0805
4894 ©	4822 051 20008	CHIP JUMPER 0805
4896 ©	4822 051 20008	CHIP JUMPER 0805
4897 ©	4822 051 20008	CHIP JUMPER 0805

COILS

1810	2422 543 01068	RESONATOR 8MHZ
1810	4822 242 73557	CERAMIC RES. 8,46MHz
5802	4822 156 31058	FILTER DIGITAL OUT

DIODES


6871 ©	4822 130 11397	BAS316
6872 ©	4822 130 11397	BAS316
6873 ©	4822 130 11397	BAS316
6874 ©	4822 130 11397	BAS316
6875 ©	9340 548 52115	BZX284-C5V1
6877 ©	9322 129 34685	BZX284-C3V9
6878 ©	4822 130 11397	BAS316
6879 ©	9322 129 34685	BZX284-C3V9

TRANSISTORS

7812 ©	5322 130 60159	BC846B
7874 ©	5322 130 60159	BC846B
7875 ©	5322 130 60159	BC846B

INTEGRATED CIRCUITS

7801 ©	9352 622 36118	TZA1025T/V2, HF-Amplifier
7805 ©	4822 209 33165	TDA1308T/N1, OPAMP
7806	4822 209 62059	TCA0372DP1, Motor driver
7807	4822 209 62059	TCA0372DP1, Motor driver
7808	4822 209 62059	TCA0372DP1, Motor driver
7821	4822 209 62059	TCA0372DP1, Motor driver
7822	4822 209 62059	TCA0372DP1, Motor driver
7873	5322 209 11306	HEF4094BT, Shift register
7876	4822 209 16143	LC89170M, CD TEXT IC
7877 ©	9352 642 17557	SAA7325H/M2B Signal processor CD10

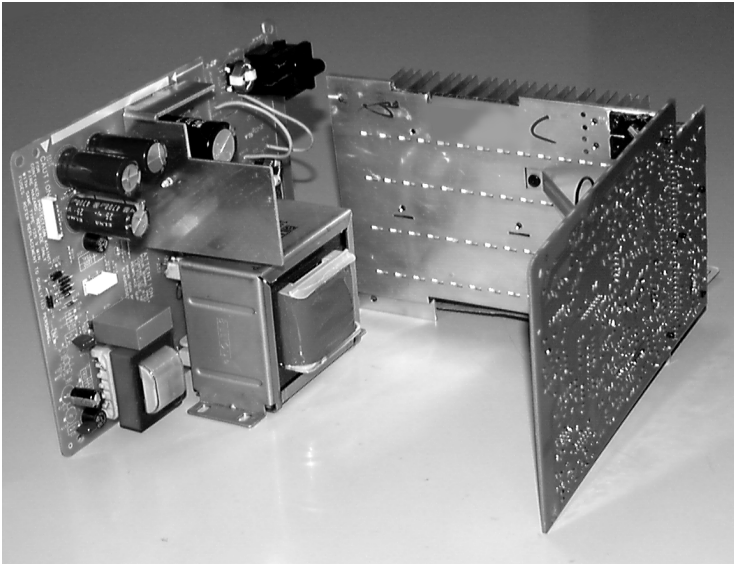

POWER 2001 Module
(30 - 70W Version) stage .6

TABLE OF CONTENTS

Brief Circuit Description.....11-1
 Block Diagram.....11-3
 Component Layout *Mains part*.....11-4
 Circuit Diagram *Mains part*.....11-5
 Component Layout *Power part*.....11-6
 Circuit Diagram *Power part*.....11-7
 Partslist11-8

Circuit details:

Amplifier:



Attention: In the POWER 2001 module the power amplifier IC AN7591 is used as a bridge-amplifier.
 Any connection from output to ground will destroy the output stages!

- Via the AMP_ON control line, connected to pins 6 (Stby), the power amplifiers are switched on/off by the μP .
 High level (approx. 4.5V): power amplifiers switched on
 Low level (approx. 0V): power amplifiers switched off

• Super class G - operation

The power amplifiers operate as so-called super class G - amplifiers:
 The supply pins 12 (Vcc) are not just connected to one fixed DC-supply as in conventional amplifiers.
 Dependent on the output power there are three different DC-voltages supplied to the power amplifiers:
 ⇒ +C1 (+20V) for low output power
 ⇒ +B1 (+29V) for medium output power
 ⇒ +A1 (+41V) for high output power

Principle / benefit of Super Class G

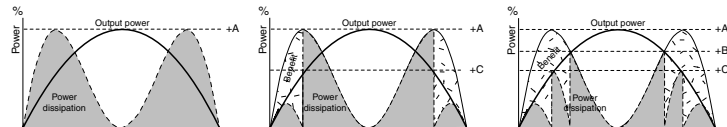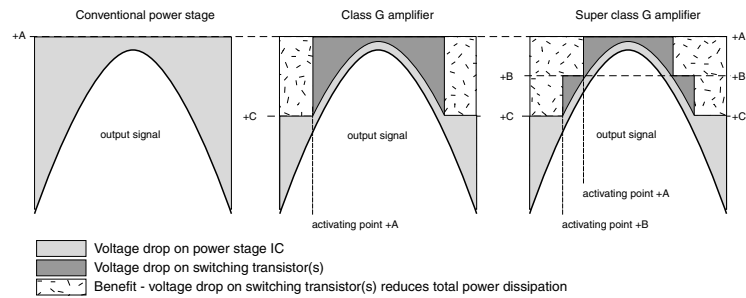

Circuit details continued:

• Low power standby feature

An additional small standby transformer, reduces power consumption in standby-mode. In case power is switched on, the control line ECO is low → relay 1210 is activated → contacts 1 and 2 are closed → transformer 5001 is connected to mains. When the set is switched off (standby) the control line ECO is high → relay 1210 is not activated → mainstransformer is disconnected. Via standby transformer and rectifiers 6210-6214 the supply voltage LOW_PWR_SUP is substituted. This voltage is always available and so the microprocessor is kept running.

• DC voltages +A1, +B1, +C1


These voltages supply the Super Class G amplifier, described on previous page. The whole power supply is optimized for the special characteristic of this type of amplifier. For that reason several "tricky" details have been applied to ensure optimal efficiency and symmetrical load to the mains transformer.

Generation of +A1

Common full wave rectifying with bridge rectifier 6202, using 100% secondary winding of mains transformer (pin 10-14).

Generation of +B1


The supply for +B1 consists of one full wave rectifier: - 2 diodes of bridge rectifier 6202, with 6200(6220 in parallel) 6201(6221 in parallel) for generation of +B1 using approx. 70% secondary winding of mains transformer (pin 10-13 respectively pin 11-14). As example for generation of +B1 see picture 1.

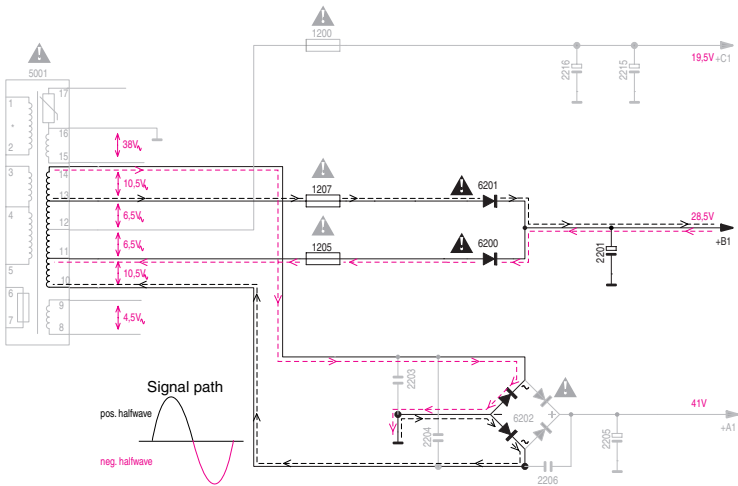


picture 1

Generation of +C1

Full wave rectifying with 2 diodes of bridge rectifier 6202, using 50% secondary winding of mains transformer (pin 13-15/13-11). See picture 2 below.


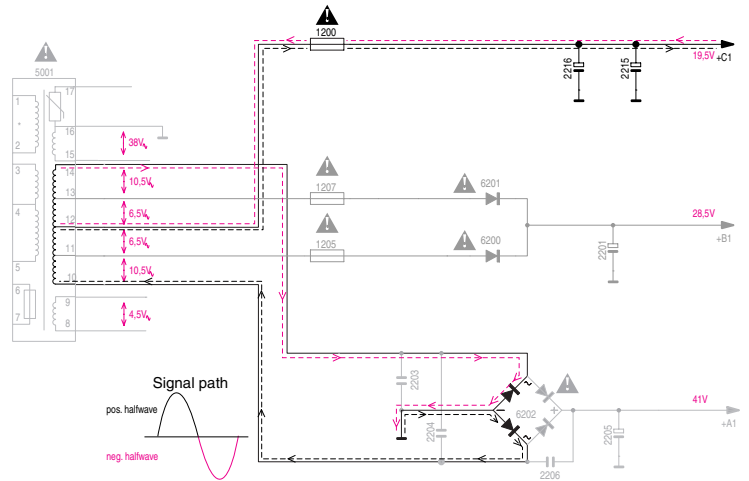


simplified:

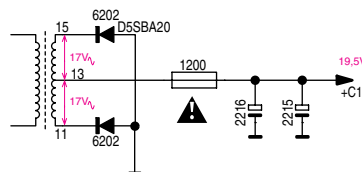


picture 2

Block Diagram

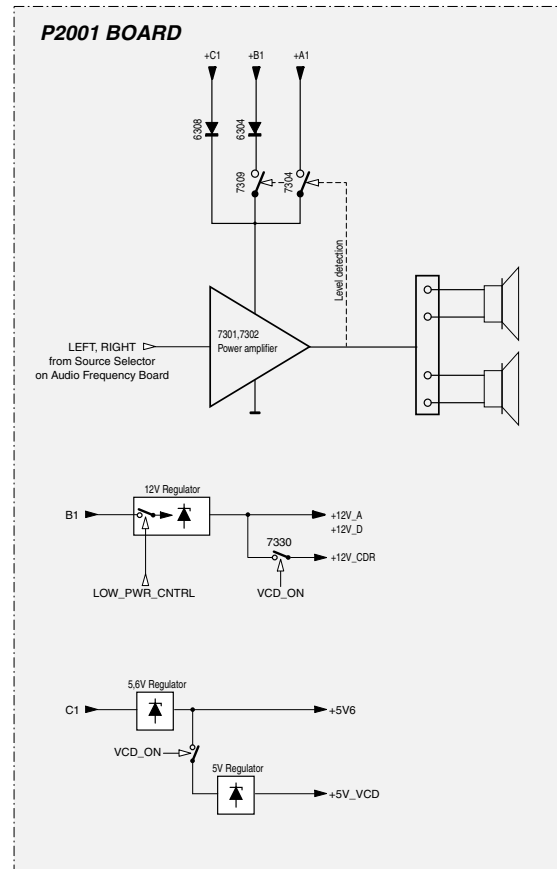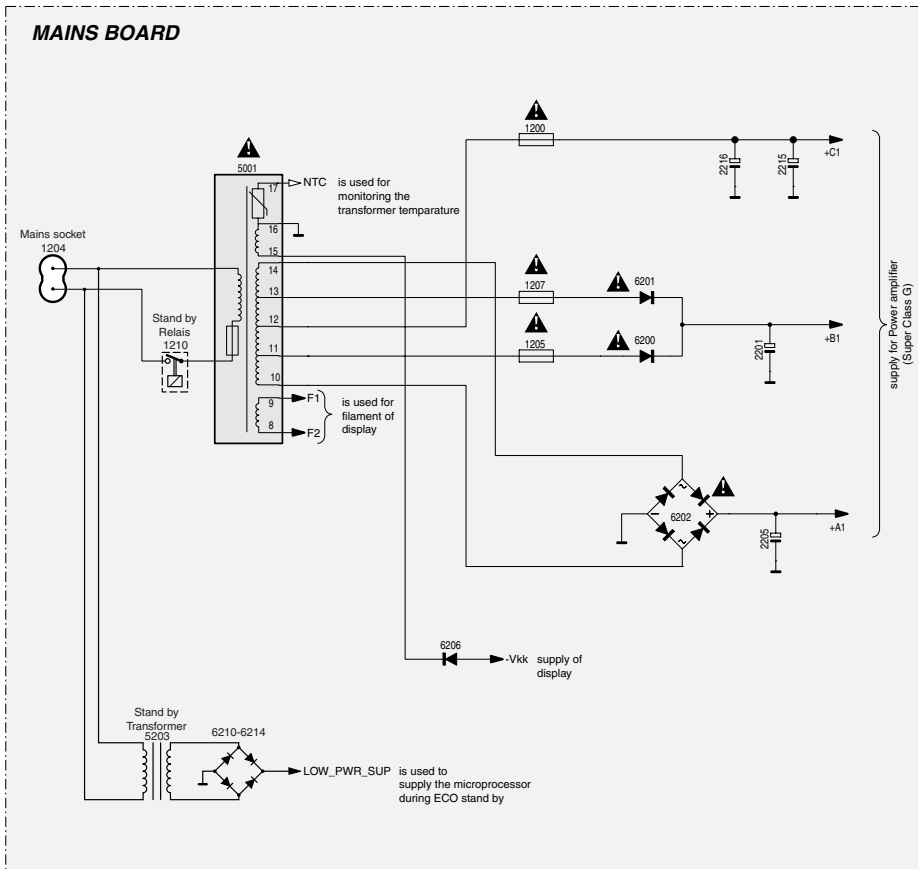


1200 A6	1207 B6	1222 A2	2204 D7	2210 E7	2216 A7	3205 E4	3212 D9	6202 C8	6209 E4	6215 F3	7200 D7	9211 C4
1201 A9	1208 B4	1223 B2	2205 D8	2211 E3	2217 A8	3206 E3	5001 C5	6203 D6	6210 E3	6216 F4	7201 E4	9212 D2
1202 A4	1209 E9	2200 A7	2206 D8	2212 E3	3200 C2	3207 E4	5202 A2	6204 D9	6211 E3	6217 F5	7202 F5	9213 E1
1203 B9	1210 D4	2201 C8	2207 D8	2213 E4	3201 D6	3208 F4	5203 E1	6206 E6	6212 E5	6218 F6	9206 A2	9214 E5
1205 B6	1211 E2	2202 C8	2208 E8	2214 F3	3202 E7	3209 F3	6200 B8	6207 F7	6213 E5	6220 B8	9208 B2	9215 F6
1206 B3	1212 E1	2203 C7	2209 E6	2215 A7	3204 E7	3211 E6	6201 B8	6208 D4	6214 E3	6221 C8	9210 B4	

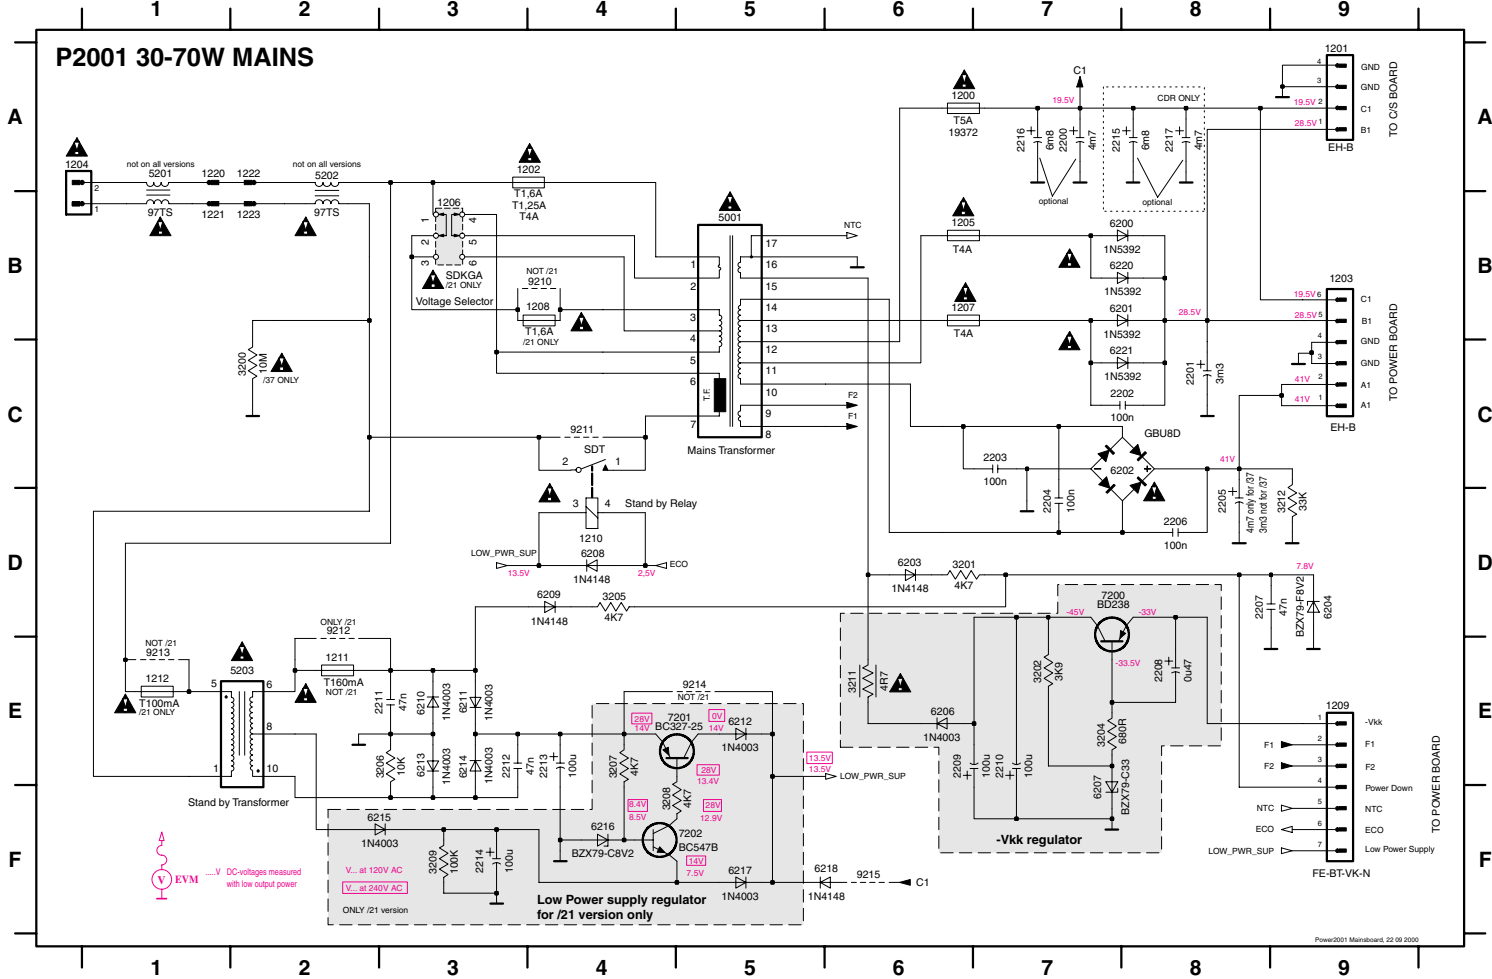

1300 B3	1307 B5	2301 C4	2308 A4	2315 C4	2322 A5	2329 A4	2336 A1	2343 A3	3305 C4	3312 B5	3319 B1	3326 C4	3333 B2	3342 A4	3349 C2	3356 A1	3363 A1	3370 A1	3377 B3	3391 C1	7303 A3
1300 A5	1308 A2	2302 B4	2309 B5	2316 A4	2323 A3	2330 A4	2337 A1	2344 C2	3306 A4	3313 B3	3320 B1	3327 B2	3336 A2	3343 A3	3350 B1	3357 A1	3364 C5	3371 B1	3378 A3	3392 B1	7304 B4
1301 B5	1310 B2	2303 C4	2310 A5	2317 C5	2324 B4	2331 A3	2338 A2	2345 C3	3307 C4	3314 B4	3321 B1	3328 A4	3337 B3	3344 A3	3351 C2	3358 A2	3365 C5	3372 A1	3379 C5	3393 C2	7305 A4
1302 A3	1312 B2	2304 B4	2311 B4	2318 B5	2325 B2	2332 A2	2339 A1	2346 C1	3308 A4	3315 C5	3322 C1	3329 C3	3338 B3	3345 A2	3352 C3	3359 A1	3366 C1	3373 B1	3380 B2	3394 C1	7306 C2
1304 C1	1313 B1	2305 C4	2312 A4	2319 B5	2326 C3	2333 B4	2340 C1	2347 B1	3309 B5	3316 C3	3323 B3	3330 C3	3339 A3	3346 A3	3353 C3	3360 B1	3367 C1	3374 C2	3381 B3	3395 C3	7307 C5
1305 A3	1314 A2	2306 B4	2313 B4	2320 A5	2327 B3	2334 C2	2341 B1	2348 B1	3310 C4	3317 C3	3324 A3	3331 C1	3340 C5	3347 A3	3354 A4	3361 B1	3368 A4	3375 C1	3382 C2	3396 A1	7308 B4
1306 C1	2300 B4	2307 C4	2314 A4	2321 C5	2328 A3	2335 C2	2342 B1	2349 B4	3311 C5	3318 C5	3325 A3	3332 B3	3341 C5	3348 C2	3355 A2	3362 A1	3369 B1	3376 A1	3383 C1	3397 C2	7309 C4


Power Board Copperside view

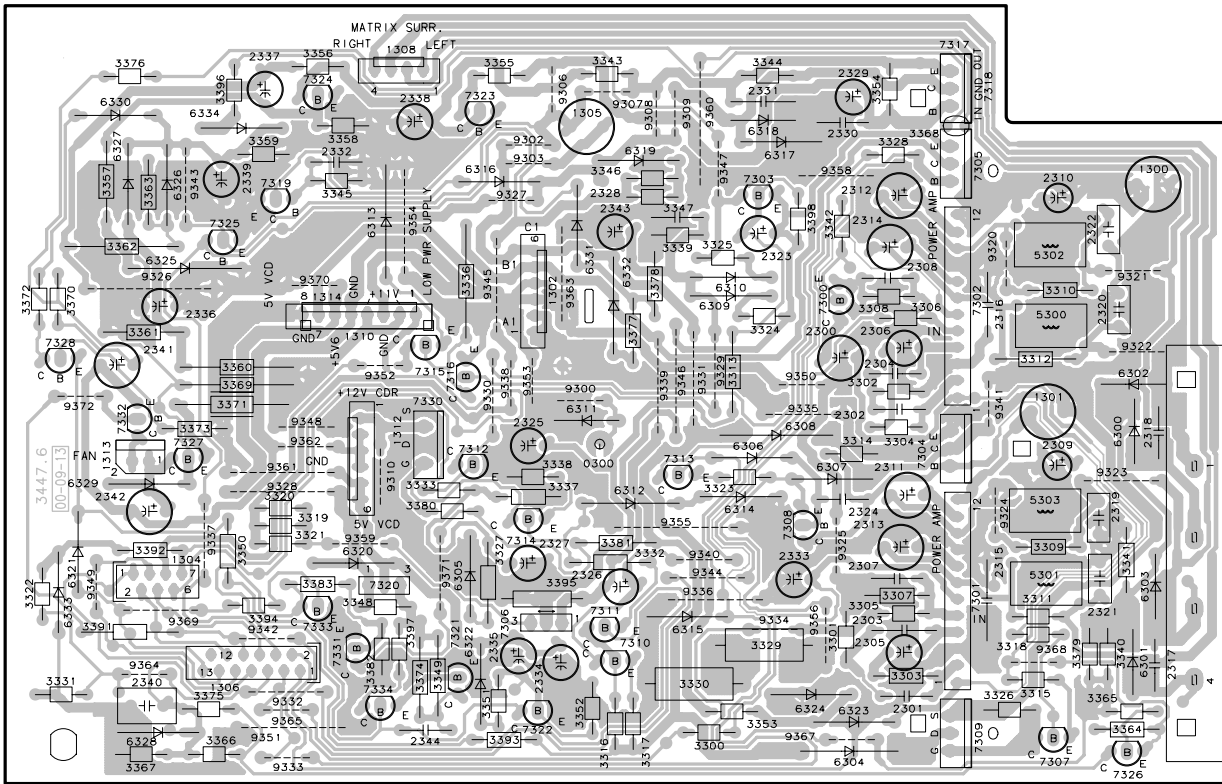

This assembly drawing shows a summary of all possible versions.
 For components used in a specific version see schematic diagram respectively partlist.

Power 2001, PowerBoard Layout stage 6 2000-09-22

0300	D10	1307	F14	2301	B7	2308	H8	2315	D9	2322	F13	2329	E5	2336	E4	2343	D3	3306	H7	3313	A5	3320	B5	3327	B6	3336	C5	3343	F3	3350	H5	3357	F5	3364	I2	3371	H8	3378	A10	3380	G10	3385	E12	3392	C4	3397	E6	3404	E7	3411	E8	3418	E5	3425	E5	3432	A11	3439	A2	3446	D12	3453	G4	3460	H	3467	D3	3474	H	3481	D3	3488	D3	3495	C3	3502	E3	3509	C3	3516	C3	3523	E3	3530	C3	3537	E3	3544	C3	3551	E3	3558	C3	3565	E3	3572	C3	3579	E3	3586	C3	3593	E3	3600	C3	3607	E3	3614	C3	3621	E3	3628	C3	3635	E3	3642	C3	3649	E3	3656	C3	3663	E3	3670	C3	3677	E3	3684	C3	3691	E3	3698	C3	3705	E3	3712	C3	3719	E3	3726	C3	3733	E3	3740	C3	3747	E3	3754	C3	3761	E3	3768	C3	3775	E3	3782	C3	3789	E3	3796	C3	3803	E3	3810	C3	3817	E3	3824	C3	3831	E3	3838	C3	3845	E3	3852	C3	3859	E3	3866	C3	3873	E3	3880	C3	3887	E3	3894	C3	3901	E3	3908	C3	3915	E3	3922	C3	3929	E3	3936	C3	3943	E3	3950	C3	3957	E3	3964	C3	3971	E3	3978	C3	3985	E3	3992	C3	3999	E3	4006	C3	4013	E3	4020	C3	4027	E3	4034	C3	4041	E3	4048	C3	4055	E3	4062	C3	4069	E3	4076	C3	4083	E3	4090	C3	4097	E3	4104	C3	4111	E3	4118	C3	4125	E3	4132	C3	4139	E3	4146	C3	4153	E3	4160	C3	4167	E3	4174	C3	4181	E3	4188	C3	4195	E3	4202	C3	4209	E3	4216	C3	4223	E3	4230	C3	4237	E3	4244	C3	4251	E3	4258	C3	4265	E3	4272	C3	4279	E3	4286	C3	4293	E3	4300	C3	4307	E3	4314	C3	4321	E3	4328	C3	4335	E3	4342	C3	4349	E3	4356	C3	4363	E3	4370	C3	4377	E3	4384	C3	4391	E3	4398	C3	4405	E3	4412	C3	4419	E3	4426	C3	4433	E3	4440	C3	4447	E3	4454	C3	4461	E3	4468	C3	4475	E3	4482	C3	4489	E3	4496	C3	4503	E3	4510	C3	4517	E3	4524	C3	4531	E3	4538	C3	4545	E3	4552	C3	4559	E3	4566	C3	4573	E3	4580	C3	4587	E3	4594	C3	4601	E3	4608	C3	4615	E3	4622	C3	4629	E3	4636	C3	4643	E3	4650	C3	4657	E3	4664	C3	4671	E3	4678	C3	4685	E3	4692	C3	4699	E3	4706	C3	4713	E3	4720	C3	4727	E3	4734	C3	4741	E3	4748	C3	4755	E3	4762	C3	4769	E3	4776	C3	4783	E3	4790	C3	4797	E3	4804	C3	4811	E3	4818	C3	4825	E3	4832	C3	4839	E3	4846	C3	4853	E3	4860	C3	4867	E3	4874	C3	4881	E3	4888	C3	4895	E3	4902	C3	4909	E3	4916	C3	4923	E3	4930	C3	4937	E3	4944	C3	4951	E3	4958	C3	4965	E3	4972	C3	4979	E3	4986	C3	4993	E3	5000	C3
------	-----	------	-----	------	----	------	----	------	----	------	-----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	-----	------	-----	------	-----	------	----	------	----	------	----	------	----	------	----	------	----	------	-----	------	----	------	-----	------	----	------	---	------	----	------	---	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----	------	----

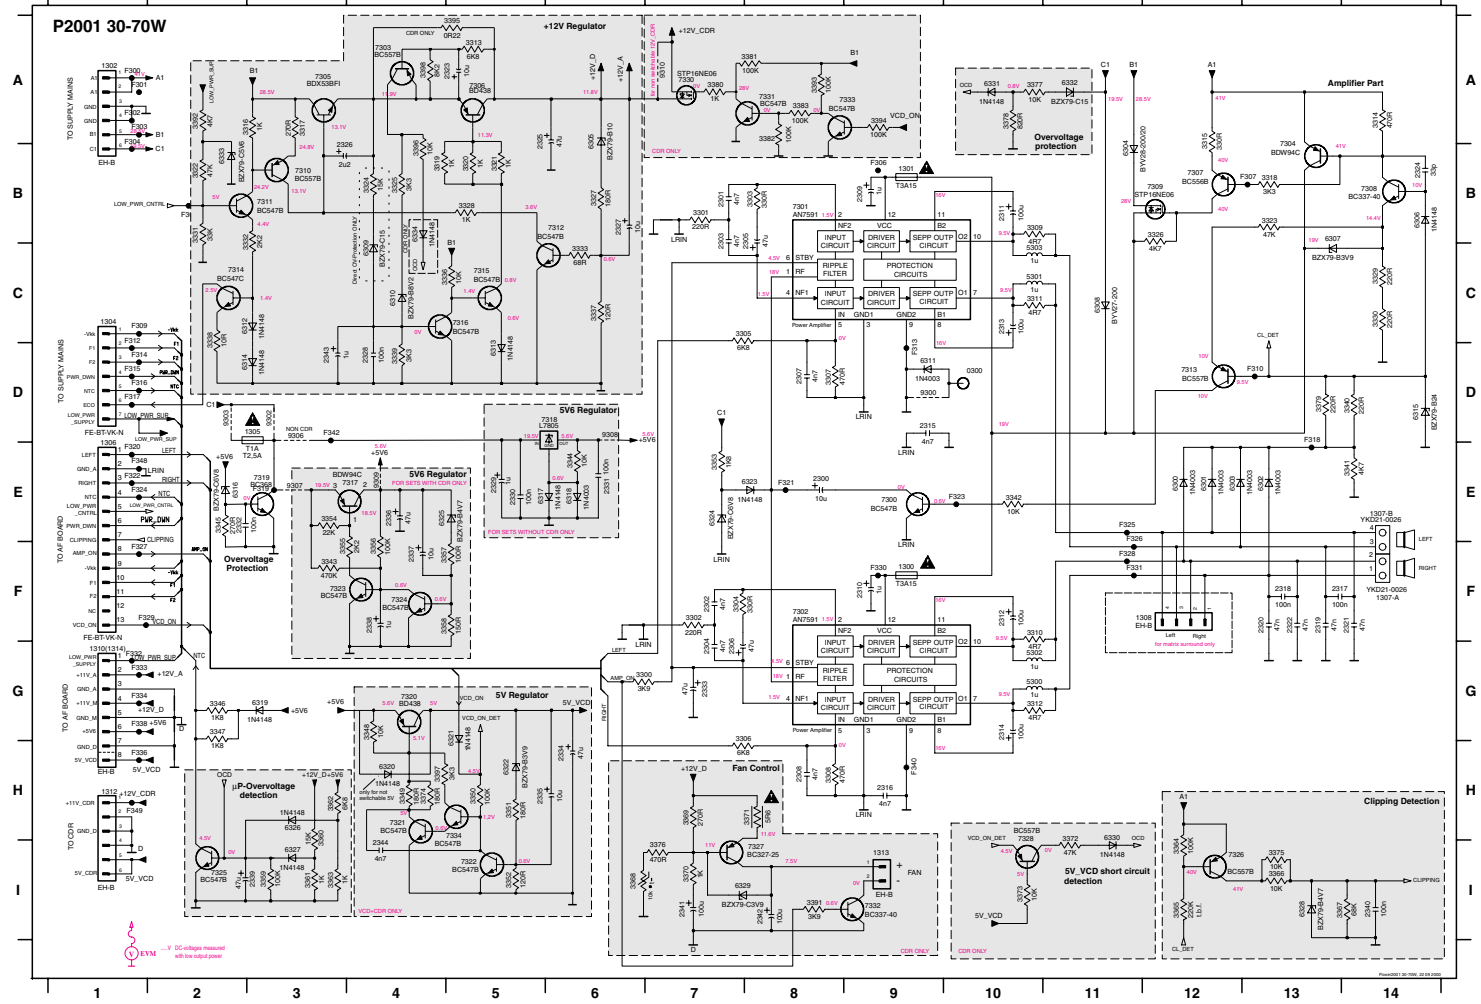

ELECTRICAL PARTSLIST POWER2001 MODULE

Table listing electrical parts for the POWER2001 module, including components like FUSE RAD 5A, FUSE 1.25A, MAINS SOCKET, MAINS SOCKET IEC, FUSE RAD 4A 250V IEC, VOLTAGE SELECTOR, RELAY 1P 12V, FUSE RAD 160mA 250V IEC, FUSE 100mA, FUSE F3.15A IEC 250V, FLEX FOIL CABLE 7Pin, 280mm, and various capacitors.

Table listing electrical parts for the POWER2001 module, including various capacitors and resistors with their respective part numbers, values, and tolerances.

ELECTRICAL PARTSLIST POWER2001 MODULE

Table listing electrical parts for the POWER2001 module, including resistors and diodes with their respective part numbers, values, and tolerances.

Table listing electrical parts for the POWER2001 module, including diodes and transistors with their respective part numbers and descriptions.

AF9 BOARD

TABLE OF CONTENTS

Brief Introduction of the AF9 Board	12-1
AF9 Board - Component layout	12-2
AF9 Board - Chip layout	12-3
AF9 Board - Circuit Diagram (Part 1)	12-4
AF9 Board - Circuit Diagram (Part 2)	12-5
Video Out Cinch part - Layout & Circuit diagram	12-6
Electrical parts list	12-6

BRIEF INTRODUCTION OF THE AF9 BOARD

The AF9 Board consists of the following features :

a. TDA7468D IC

TDA7468D IC (7501) which includes functions such as source selection, loudness control, dynamic bass control, treble control, volume control and muting function. Sound features such as ALC, DBB, DSC and IS are controllable via I²C Bus from the microprocessor.

The TDA7468D IC caters for 4 input sources namely TUNER, TAPE, CD and AUX. It also has a Mic mix input. In our application, software will switch the input source to previous source MUTE during STANDBY mode and some other occasions where noise from other input source is undesirable.

Note that the input to the TDA7468D IC must be ac coupled to prevent 'pop' noise. Input networks are included to provide appropriate attenuation for various sources.

b. SIMPLE MIC MIXING

The AF9 Board has provisions which can be configured to cater for one of the following:

MM : which caters for Mic mixing with additional Mic amplifier board.
NM : non Mic mixing.

c. DOLBY PRO LOGIC (DPL) INTERFACE

The AF9 Board has provisions which can be configured to cater for DPL.

d. LINE OUT

Line out cinch socket for connection to external amplifier.

e. SUB-WOOFER OUT

Sub-woofer out cinch socket for connection to active sub-woofer speaker.

f. INCREDIBLE SURROUND

Incredible surround effect using transistor circuit to create phase shifting and spatial effect.

g. HEADPHONE AMPLIFIER

Headphone amplifier to drive 32 ohm to 1kohm headphone.

h. CD STANDBY CONTROL

CD Standby Control circuit which switches on the supply to CD servo control IC, digital out buffer IC, HF circuit and the laser light pen in CD mode only.


i. ATTENUATION NETWORK

Attenuation network is provided at the output of the AF9 Board for interfacing with power board of different output power.

j. CD DIGITAL OUT


CD Digital out cinch socket for connection to external digital audio decoders.

AF9 BOARD - COMPONENT LAYOUT

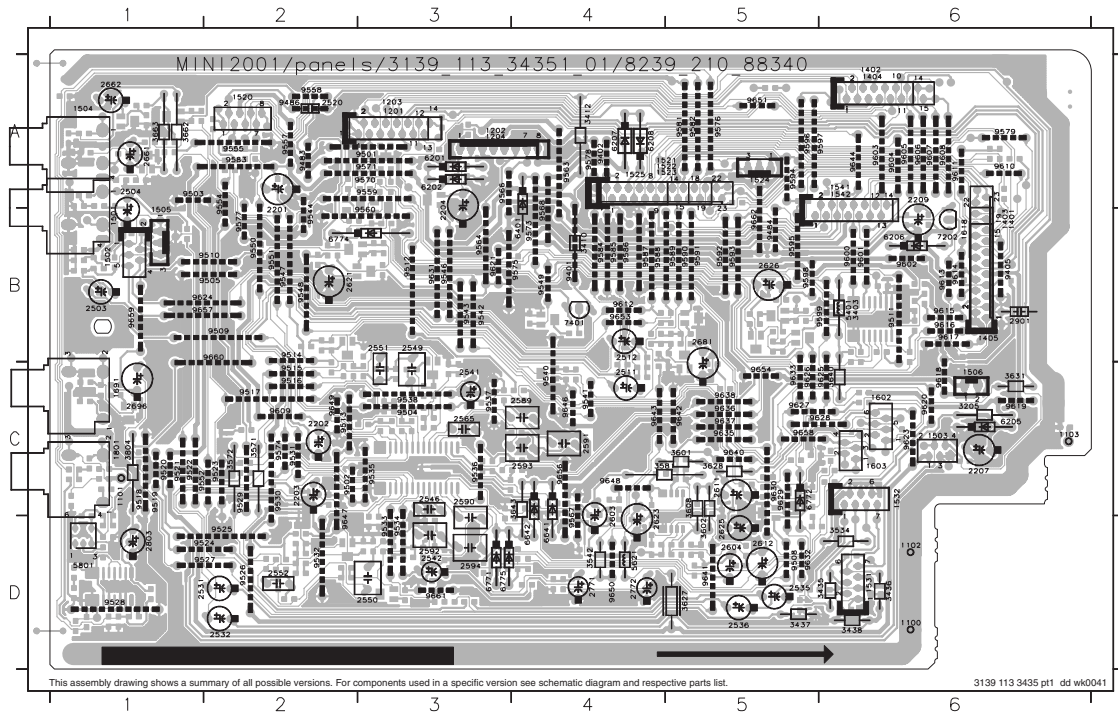


1100 D6	2628 B5	9515 C2	9594 A5
1101 C1	2661 A1	9516 C2	9595 B5
1102 D6	2664 A1	9517 C2	9596 A5
1103 C6	2681 B5	9518 C1	9597 A6
1201 A3	2698 C1	9519 C1	9598 B5
1202 A3	2771 D4	9520 C1	9599 B6
1203 A3	2772 D4	9521 C1	9600 B6
1204 A3	2803 D1	9522 C1	9601 B6
1401 B6	2901 B6	9523 C2	9602 B6
1402 A6	3205 C6	9524 D2	9603 B6
1403 B6	3403 B6	9525 D2	9604 A6
1404 A6	3410 B4	9526 D2	9605 A6
1405 B6	3412 A4	9527 D2	9606 A6
1501 B1	3435 D6	9528 D1	9607 A6
1502 B1	3436 D6	9529 C2	9608 A6
1503 C6	3437 D5	9530 C2	9609 C2
1504 A1	3438 D6	9531 C2	9610 A6
1505 B1	3534 D6	9532 D2	9611 A6
1506 C6	3542 D4	9533 D3	9612 B4
1520 A2	3571 C2	9534 D3	9613 B6
1521 A5	3572 C2	9535 C3	9614 B6
1522 A5	3581 C4	9536 C3	9615 B6
1523 A5	3601 C5	9537 C3	9616 B6
1524 A5	3602 D5	9538 C3	9617 B6
1525 A4	3608 C5	9540 C4	9618 C6
1531 D6	3627 D5	9541 C4	9619 C6
1532 C6	3628 C5	9542 B3	9620 C6
1541 A6	3631 C6	9543 B3	9621 B3
1542 A6	3640 C6	9544 B2	9623 C6
1602 C6	3643 C4	9546 B3	9624 B1
1603 C6	3662 A1	9547 B2	9625 C6
1691 C1	3665 A1	9548 B2	9626 C5
1801 C1	3804 C1	9549 B4	9627 C5
2201 B2	5401 B6	9550 B2	9628 C6
2202 C2	5621 D4	9551 B2	9629 C5
2203 C2	5601 D1	9552 C1	9630 C5
2204 B3	6201 A3	9554 A2	9631 B3
2207 C6	6202 A3	9555 A2	9632 D5
2209 A6	6205 C6	9557 A2	9633 C5
2503 B1	6206 B6	9558 A2	9635 C5
2504 A1	6207 A4	9559 A3	9636 C5
2511 C4	6208 A4	9560 B3	9637 C5
2512 B4	6401 B4	9563 A4	9638 C5
2520 A2	6441 D4	9564 B3	9640 C5
2531 D1	6642 D4	9566 A3	9641 D5
2532 D2	6771 D3	9567 D4	9642 C5
2535 D5	6772 C5	9568 B4	9643 C4
2536 D5	6774 B2	9570 A3	9644 A6
2541 C3	6775 D3	9571 A3	9646 C4
2542 D3	7202 B6	9573 B4	9647 D2
2546 C3	7401 B4	9574 C2	9648 C4
2549 B3	9401 B4	9575 B4	9649 C2
2550 D3	9402 A4	9576 A5	9650 D4
2551 B3	9405 B6	9577 B2	9651 A5
2552 D2	9483 A2	9578 A4	9653 B4
2565 C3	9484 B5	9579 A6	9654 C5
2589 C4	9488 A2	9581 A5	9656 C4
2590 C3	9501 A3	9582 A5	9657 B1
2591 C4	9502 C2	9583 A2	9658 C5
2592 D3	9503 A1	9584 B4	9659 B1
2593 C4	9504 C3	9585 B4	9660 B2
2594 D3	9505 B2	9586 B4	9661 D3
2603 D4	9508 D5	9587 B4	9662 B6
2604 D5	9509 B2	9588 B4	
2611 C5	9510 B2	9589 B5	
2612 D5	9511 B6	9590 B5	
2621 B2	9512 B3	9591 B5	
2623 D4	9513 C2	9592 B5	
2625 D5	9514 B2	9593 B5	

AF9 BOARD - CHIP LAYOUT

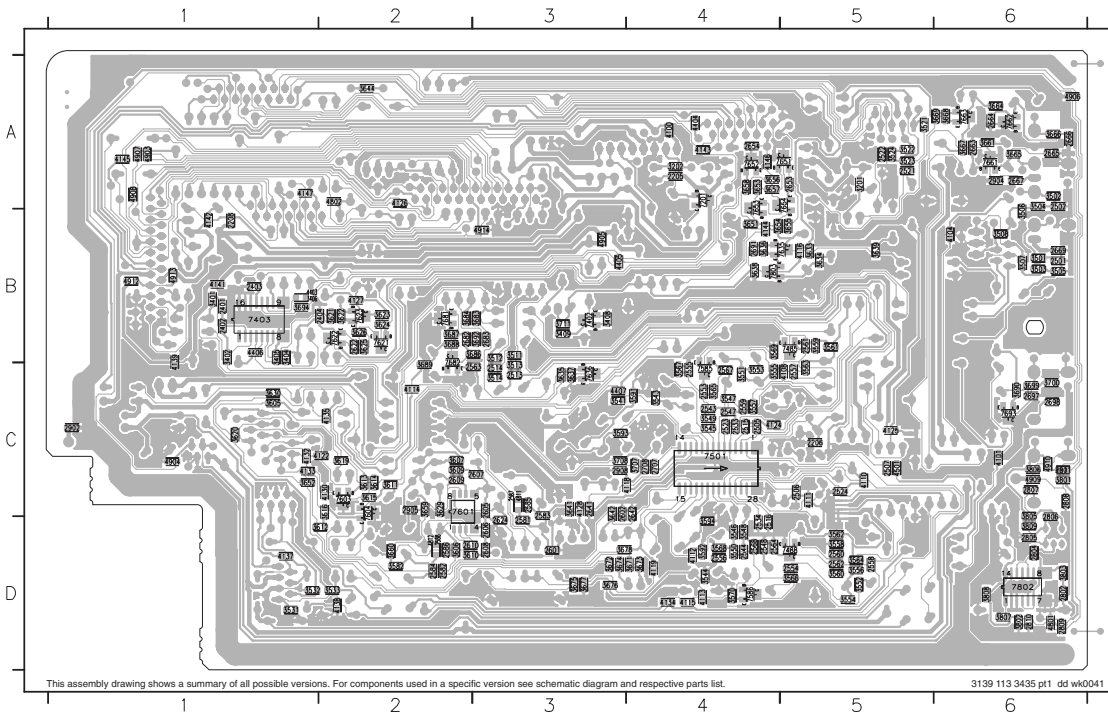


2205 A4	2683 B3	3564 D5	3684 B2	4907 A1
2208 C5	2691 B4	3565 C4	3686 B3	4908 A1
2208 B1	2697 C6	3566 D5	3687 B2	4909 C6
2401 B1	2698 C6	3567 C4	3688 B2	4910 C6
2402 B1	2707 C4	3568 D4	3689 C2	4911 C6
2403 B1	2708 C4	3569 B4	3690 C6	4912 B1
2404 B2	2801 C6	3570 D4	3692 B3	4913 B1
2501 B6	2802 D6	3582 D2	3694 B1	4914 B3
2502 A6	2804 D6	3591 C4	3699 C6	7201 A4
2505 C4	2805 D6	3599 D4	3700 C6	7402 B3
2506 C5	2806 C6	3593 C3	3707 C4	7403 B1
2507 C5	2807 C6	3594 D4	3708 C3	7485 B5
2513 C3	2808 C6	3605 C1	3711 B3	7488 D5
2514 C3	2809 D6	3606 D2	3801 C6	7501 C4
2515 C4	2810 D6	3607 C2	3802 D6	7585 C4
2516 D4	2902 C1	3609 C2	3803 D6	7586 D4
2521 A5	2904 A6	3610 D2	3805 C6	7601 C2
2522 A5	2905 C2	3611 C2	3806 C6	7603 C2
2523 C4	2908 C3	3612 D2	3807 D6	7604 C2
2524 C5	3201 A5	3613 C2	3808 D6	7621 B2
2533 C4	3202 A4	3614 C2	3809 D6	7622 B2
2534 D4	3401 B1	3615 C2	4100 A4	7623 B2
2543 C4	3402 B1	3616 C2	4101 C6	7635 B5
2544 D4	3404 B1	3619 C2	4104 B6	7636 C3
2547 C4	3405 B1	3620 C1	4108 C5	7651 A5
2548 D4	3406 B1	3621 B2	4110 C5	7652 A4
2553 C4	3408 B3	3622 B2	4111 C5	7653 A4
2554 D5	3409 B3	3623 B2	4112 D4	7654 A5
2555 C4	3501 B6	3624 B2	4113 D4	7661 A6
2556 D4	3502 A6	3625 B2	4114 C2	7662 A6
2557 C5	3503 B6	3626 B2	4115 D4	7663 A6
2558 D5	3504 A6	3629 C2	4116 B5	7681 B2
2559 C4	3505 B6	3630 C1	4118 C4	7682 B2
2560 D5	3506 B6	3633 B5	4119 D4	7693 C6
2561 B5	3507 B6	3634 B5	4122 C2	7802 D6
2562 D5	3508 B6	3635 C3	4124 C4	7803 B4
2563 C3	3511 B3	3636 B4	4125 C5	
2564 D4	3512 B3	3637 C3	4126 A2	
2567 C4	3513 C3	3638 B4	4127 B2	
2568 D4	3514 C3	3639 B5	4128 C3	
2581 D3	3521 A5	3641 C3	4130 C2	
2582 D2	3522 A5	3642 C3	4132 C1	
2583 C3	3523 A5	3644 A2	4133 C1	
2584 D2	3524 A5	3650 B4	4134 D4	
2585 C3	3531 D1	3656 C1	4135 C2	
2586 D2	3532 D1	3653 A4	4137 D1	
2587 C3	3533 D2	3654 B4	4138 D2	
2588 D2	3541 C3	3655 B5	4139 B1	
2601 D3	3543 C4	3656 A4	4141 B1	
2602 C3	3544 D4	3657 A4	4142 B1	
2605 C3	3545 C4	3658 A4	4143 A4	
2606 D3	3546 D4	3659 C3	4144 B4	
2607 C3	3547 C4	3660 D2	4145 A1	
2608 D3	3548 D4	3661 A6	4146 A4	
2609 C2	3549 C4	3664 A6	4147 A1	
2610 D2	3550 D4	3665 A6	4403 B1	
2622 B2	3551 C4	3666 A6	4404 A4	
2624 D3	3552 D5	3667 A6	4405 B3	
2641 C3	3553 C4	3668 A6	4406 B1	
2642 C4	3554 D5	3669 A6	4407 C1	
2653 A5	3555 C4	3671 D4	4501 C5	
2654 A4	3556 D5	3672 D3	4801 D6	
2655 A6	3557 C4	3673 D4	4802 A2	
2664 A6	3558 D5	3674 D3	4811 C3	
2665 A6	3559 B6	3675 D3	4812 D2	
2666 A6	3560 D5	3676 D3	4903 A1	
2667 A6	3561 B5	3677 D3	4904 C1	
2669 B6	3562 D5	3678 D3	4905 B3	
2682 B2	3563 C5	3683 B3	4906 A6	


AF9 BOARD - CIRCUIT DIAGRAM (PART 1)

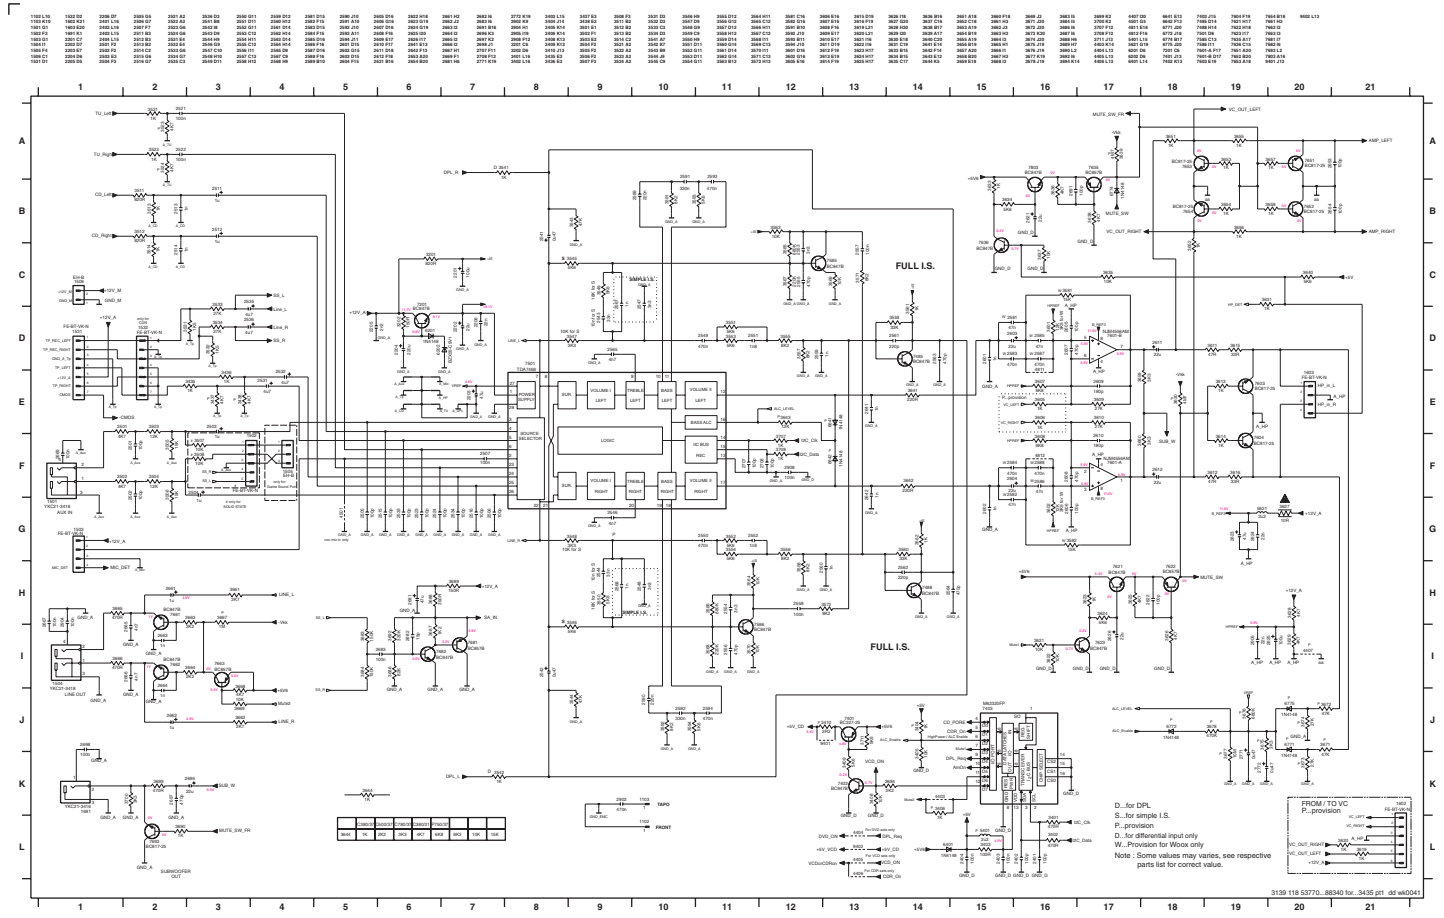


VIDEO OUT CINCH BOARD - COMPONENT LAYOUT

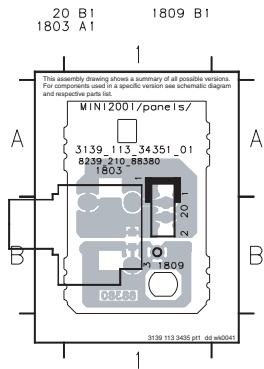

VIDEO OUT CINCH BOARD - CHIP LAYOUT

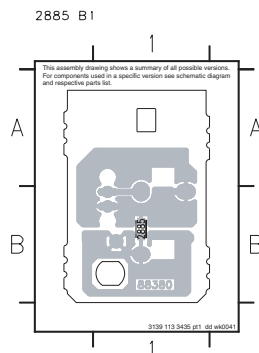

VIDEO OUT CINCH PART - CIRCUIT DIAGRAM

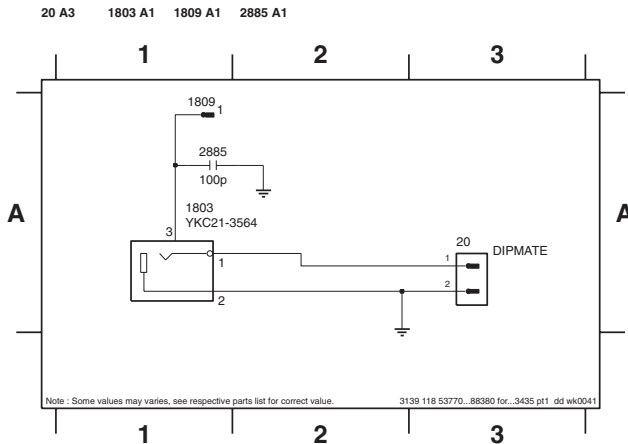

ELECTRICAL PARTS LIST - AF9 BOARD

MISCELLANEOUS

1201	4822 267 10738	Flex Connector 13P
1401	4822 265 11553	Flex Connector 19P
1402	4822 267 11039	Flex Connector 11P
1501	4822 265 20553	Cinch Socket - Aux in
1503	4822 267 10733	Flex Connector 4P
1520	4822 265 11515	Flex Connector 8P
1522	4822 265 11553	Flex Connector 19P
1531	4822 267 10953	Flex Connector 7P
1603	4822 267 10733	Flex Connector 4P
1691	4822 267 31729	Cinch Socket - Subwoofer out
1801	4822 267 31729	Cinch Socket - Digital out

CAPACITORS

2201	4822 124 40207	100µF 20% 25V
2202	4822 124 81151	22µF 50V
2203	4822 124 40433	47µF 20% 25V
2204	4822 124 40196	220µF 20% 16V
2205	4822 126 14238	2,2nF 50V
2206	4822 126 14494	22nF 10% 25V
2207	4822 124 40433	47µF 20% 25V
2208	4822 126 14305	100nF 10% 16V
2209	4822 124 41751	47µF 20% 50V
2401	4822 122 31765	100pF 2% 63V
2402	4822 122 31765	100pF 2% 63V
2403	4822 126 14305	100nF 10% 16V
2404	4822 126 14305	100nF 10% 16V
2501	4822 122 31765	100pF 2% 63V
2502	4822 122 31765	100pF 2% 63V
2503	4822 124 21913	1µF 20% 63V
2504	4822 124 21913	1µF 20% 63V
2505	4822 122 31765	100pF 2% 63V
2506	4822 122 31765	100pF 2% 63V
2507	4822 126 14305	100nF 10% 16V
2511	4822 124 21913	1µF 20% 63V
2512	4822 124 21913	1µF 20% 63V
2513	3198 016 31020	1nF 25V
2514	3198 016 31020	1nF 25V
2515	4822 122 31765	100pF 2% 63V
2516	4822 122 31765	100pF 2% 63V
2521	4822 126 14305	100nF 10% 16V
2522	4822 126 14305	100nF 10% 16V
2523	4822 122 31765	100pF 2% 63V
2524	4822 122 31765	100pF 2% 63V
2531	4822 124 40769	4,7µF 20% 100V
2532	4822 124 40769	4,7µF 20% 100V
2533	4822 122 31765	100pF 2% 63V
2534	4822 122 31765	100pF 2% 63V
2535	4822 124 40769	4,7µF 20% 100V
2536	4822 124 40769	4,7µF 20% 100V
2541	4822 124 41407	0,47µF 20% 63V
2542	4822 124 41407	0,47µF 20% 63V
2543	5322 126 11583	10nF 10% 50V

2544	5322 126 11583	10nF 10% 50V
2546	4822 121 43856	4,7nF 5% 250V
2547	5322 126 11579	3,3nF 10% 63V
2548	5322 126 11579	3,3nF 10% 63V
2565	4822 121 43856	4,7nF 5% 250V
2567	3198 016 31020	1nF 25V
2568	3198 016 31020	1nF 25V
2589	4822 121 42408	220nF 5% 63V
2590	4822 121 42408	220nF 5% 63V
2591	5322 121 42661	330nF 5% 63V
2592	5322 121 42661	330nF 5% 63V
2593	4822 121 51252	470nF 5% 63V
2594	4822 121 51252	470nF 5% 63V
2601	3198 016 31020	1nF 25V
2602	3198 016 31020	1nF 25V
2603	4822 124 81151	22µF 50V
2604	4822 124 81151	22µF 50V
2605	4822 122 31765	100pF 2% 63V
2606	4822 122 31765	100pF 2% 63V
2607	4822 126 13881	470pF 5% 50V
2608	4822 126 13881	470pF 5% 50V
2609	4822 126 14508	180pF 5% 50V
2610	4822 126 14508	180pF 5% 50V
2611	4822 124 81151	22µF 50V
2612	4822 124 81151	22µF 50V
2621	4822 124 81151	22µF 50V
2622	4822 122 31765	100pF 2% 63V
2623	4822 124 40433	47µF 20% 25V
2624	3198 017 42230	22nF 50V
2625	4822 124 40207	100µF 20% 25V
2626	4822 124 81151	22µF 50V
2641	3198 016 31020	1nF 25V
2642	3198 016 31020	1nF 25V
2653	4822 122 31765	100pF 2% 63V
2654	4822 122 31765	100pF 2% 63V
2669	4822 126 14305	100nF 10% 16V
2681	4822 124 40433	47µF 20% 25V
2682	4822 122 33752	15pF 5% 50V
2683	4822 126 14305	100nF 10% 16V
2691	4822 122 31765	100pF 2% 63V
2696	4822 124 81151	22µF 50V
2697	4822 126 13881	470pF 5% 50V
2698	4822 126 14305	100nF 10% 16V
2707	4822 122 31765	100pF 2% 63V
2708	4822 122 31765	100pF 2% 63V
2771	4822 124 41407	0,47µF 20% 63V
2801	4822 126 14305	100nF 10% 16V
2802	3198 016 31020	1nF 25V
2803	4822 124 21913	1µF 20% 63V
2804	4822 126 14305	100nF 10% 16V
2805	4822 126 14305	100nF 10% 16V
2806	4822 122 33753	150pF 5% 50V

ELECTRICAL PARTS LIST - AF9 BOARD**CAPACITORS**

2807	4822 126 14305	100nF 10% 16V	3607	4822 051 30682	6k8 5% 0,062W
2808	4822 126 14305	100nF 10% 16V	3608	4822 116 83961	6k8 5%
2809	4822 126 14305	100nF 10% 16V	3609	4822 051 30273	27k 5% 0,062W
2810	4822 122 33777	47pF 5% 63V	3610	4822 051 30273	27k 5% 0,062W
2901	4822 126 12882	100nF +80/-20% 50V	3611	4822 051 30479	47R 5% 0,062W
2902	3198 017 44740	470nF 10V	3612	4822 051 30479	47R 5% 0,062W
2905	3198 017 42230	22nF 50V	3613	4822 051 30102	1k 5% 0,062W
2908	4822 126 14305	100nF 10% 16V	3614	4822 051 30102	1k 5% 0,062W

RESISTORS

3201	4822 117 12968	820R 5% 0,62W	3615	4822 051 30339	33R 5% 0,062W
3202	4822 051 30151	150R 5% 0,062W	3616	4822 051 30339	33R 5% 0,062W
3205	4822 116 52289	5k6 5% 0,5W	3621	4822 051 30103	10k 5% 0,062W
3401	4822 051 30471	470R 5% 0,062W	3622	4822 051 30103	10k 5% 0,062W
3402	4822 051 30471	470R 5% 0,062W	3623	4822 051 30102	1k 5% 0,062W
3403	4822 116 52175	100R 5% 0,5W	3624	4822 051 30562	5k6 5% 0,063W
3405	4822 051 30103	10k 5% 0,062W	3625	4822 051 30472	4k7 5% 0,062W
3408	4822 051 30103	10k 5% 0,062W	3626	4822 051 30472	4k7 5% 0,062W
3409	4822 051 30562	5k6 5% 0,063W	3627	4822 052 10109	△ 10R 5% 0,33W
3412	4822 050 11002	1k 1% 0,4W	3628	4822 116 52283	4k7 5% 0,5W
3435	4822 050 11002	1k 1% 0,4W	3629	4822 051 30472	4k7 5% 0,062W
3436	4822 050 11002	1k 1% 0,4W	3631	4822 050 11002	1k 1% 0,4W
3501	4822 051 30472	4k7 5% 0,062W	3633	4822 051 30102	1k 5% 0,062W
3502	4822 051 30472	4k7 5% 0,062W	3634	4822 051 30562	5k6 5% 0,063W
3503	4822 051 30123	12k 5% 0,062W	3635	4822 051 30103	10k 5% 0,062W
3504	4822 051 30123	12k 5% 0,062W	3636	4822 051 30472	4k7 5% 0,062W
3505	4822 051 30153	15k 5% 0,062W	3637	4822 051 30103	10k 5% 0,062W
3506	4822 051 30153	15k 5% 0,062W	3638	4822 051 30472	4k7 5% 0,062W
3511	4822 117 12968	820R 5% 0,62W	3640	4822 116 52289	5k6 5% 0,5W
3512	4822 117 12968	820R 5% 0,62W	3641	4822 051 30221	220R 5% 0,062W
3513	4822 051 30102	1k 5% 0,062W	3642	4822 051 30221	220R 5% 0,062W
3514	4822 051 30102	1k 5% 0,062W	3644	4822 051 30102	1k 5% 0,062W
3521	4822 051 30102	1k 5% 0,062W	3644	4822 051 30472	4k7 5% 0,062W /21
3522	4822 051 30102	1k 5% 0,062W	3651	4822 051 30102	1k 5% 0,062W
3531	4822 051 30152	1k5 5% 0,062W	3652	4822 051 30102	1k 5% 0,062W
3532	4822 051 30152	1k5 5% 0,062W	3653	4822 051 30102	1k 5% 0,062W
3533	4822 051 30273	27k 5% 0,062W	3654	4822 051 30102	1k 5% 0,062W
3534	4822 116 52264	27k 5% 0,5W	3655	4822 051 30102	1k 5% 0,062W
3543	4822 117 12925	47k 1% 0,063W	3656	4822 051 30102	1k 5% 0,062W
3544	4822 117 12925	47k 1% 0,063W	3657	4822 051 30102	1k 5% 0,062W
3545	4822 051 30562	5k6 5% 0,063W	3658	4822 051 30102	1k 5% 0,062W
3546	4822 051 30562	5k6 5% 0,063W	3659	4822 051 30332	3k3 5% 0,062W
3547	4822 051 30103	10k 5% 0,062W	3660	4822 051 30332	3k3 5% 0,062W
3548	4822 051 30103	10k 5% 0,062W	3662	4822 051 30272	2k7 5% 0,062W
3549	4822 051 30183	18k 5% 0,062W	3683	4822 051 30154	150k 5% 0,062W
3550	4822 051 30183	18k 5% 0,062W	3684	4822 051 30154	150k 5% 0,062W
3591	4822 117 12902	8k2 1% 0,063W	3686	4822 117 12864	82k 5% 0,6W
3592	4822 117 12902	8k2 1% 0,063W	3687	4822 117 11817	1k2 1% 1/16W
3593	4822 051 30562	5k6 5% 0,063W	3688	4822 051 30391	390R 5% 0,062W
3594	4822 051 30562	5k6 5% 0,063W	3689	4822 051 30151	150R 5% 0,062W
3601	4822 116 52238	12k 5% 0,5W	3690	4822 051 30102	1k 5% 0,062W
3602	4822 116 52238	12k 5% 0,5W	3692	4822 051 30334	330k 5% 0,062W
			3694	4822 051 30222	2k2 5% 0,062W
			3699	4822 051 30471	470R 5% 0,062W

ELECTRICAL PARTS LIST - AF9 BOARD**RESISTORS**

3700	4822 051 30332	3k3 5% 0,062W
3707	4822 051 30102	1k 5% 0,062W
3708	4822 051 30102	1k 5% 0,062W
3711	4822 051 30562	5k6 5% 0,063W
3801	4822 051 30471	470R 5% 0,062W
3802	4822 051 30223	22k 5% 0,062W
3803	4822 051 30561	560R 5% 0,062W
3804	4822 116 83872	220R 5% 0,5W
3805	4822 051 30221	220R 5% 0,062W
3807	4822 051 30222	2k2 5% 0,062W
3808	4822 051 30223	22k 5% 0,062W
3809	4822 051 30479	47R 5% 0,062W
4100	4822 051 30008	0R Jumper 0603
4101	4822 051 30008	0R Jumper 0603
4102	4822 051 30008	0R Jumper 0603
4104	4822 051 30008	0R Jumper 0603
4108	4822 051 30008	0R Jumper 0603
4110	4822 051 30008	0R Jumper 0603
4111	4822 051 30008	0R Jumper 0603
4112	4822 051 30008	0R Jumper 0603
4113	4822 051 30008	0R Jumper 0603
4114	4822 051 30008	0R Jumper 0603
4115	4822 051 30008	0R Jumper 0603
4116	4822 051 30008	0R Jumper 0603
4118	4822 051 30008	0R Jumper 0603
4119	4822 051 30008	0R Jumper 0603
4122	4822 051 30008	0R Jumper 0603
4124	4822 051 30008	0R Jumper 0603
4125	4822 051 30008	0R Jumper 0603
4126	4822 051 30008	0R Jumper 0603
4127	4822 051 30008	0R Jumper 0603
4128	4822 051 30008	0R Jumper 0603
4130	4822 051 30008	0R Jumper 0603
4132	4822 051 30008	0R Jumper 0603
4133	4822 051 30008	0R Jumper 0603
4134	4822 051 30008	0R Jumper 0603
4135	4822 051 30008	0R Jumper 0603
4137	4822 051 30008	0R Jumper 0603
4138	4822 051 30008	0R Jumper 0603
4139	4822 051 30008	0R Jumper 0603
4141	4822 051 30008	0R Jumper 0603
4142	4822 051 30008	0R Jumper 0603
4143	4822 051 30008	0R Jumper 0603
4144	4822 051 30008	0R Jumper 0603
4145	4822 051 30008	0R Jumper 0603
4146	4822 051 30008	0R Jumper 0603
4147	4822 051 30008	0R Jumper 0603
4403	4822 051 30008	0R Jumper 0603
4501	4822 051 30008	0R Jumper 0603
4801	4822 051 30008	0R Jumper 0603
4811	4822 051 30008	0R Jumper 0603
4812	4822 051 30008	0R Jumper 0603

4903	4822 051 30008	0R Jumper 0603
4904	4822 051 30008	0R Jumper 0603
4908	4822 051 30008	0R Jumper 0603
4913	4822 051 30008	0R Jumper 0603

COILS & FILTERS

5621	4822 157 62552	Coil 2,2 μ H 5%
5801	2422 536 00019	Transformer 6RG

DIODES

6201	4822 130 30621	1N4148
6202	4822 130 30862	BZX55-C9V1
6205	4822 130 61219	BZX79-C10
6206	4822 130 30621	1N4148
6207	4822 130 31878	1N4003G
6208	4822 130 31878	1N4003G
6401	4822 130 30621	1N4148
6774	4822 130 30621	1N4148

TRANSISTORS & INTEGRATED CIRCUITS

7201	5322 130 60159	BC847B
7202	4822 209 72042	MC78L05ACP
7401	4822 130 41246	BC327-25
7402	5322 130 60159	BC847B
7403	4822 209 17345	M62320FP
7501	9322 150 74668	TDA7468D
7601	4822 209 31378	NJM4556AM
7603	4822 130 42804	BC817-25
7604	4822 130 42804	BC817-25
7621	5322 130 60159	BC847B
7622	4822 130 60373	BC857B
7623	5322 130 60159	BC847B
7635	4822 130 60373	BC857B
7636	5322 130 60159	BC847B
7651	4822 130 42804	BC817-25
7652	4822 130 42804	BC817-25
7653	4822 130 42804	BC817-25
7654	4822 130 42804	BC817-25
7681	4822 130 60373	BC857B
7682	5322 130 60159	BC847B
7693	4822 130 42804	BC817-25
7802	4822 209 17235	74LVU04D
7803	5322 130 60159	BC847B

Note : Only the parts mentioned in this list are normal service spare parts.

MECHANICAL & ACCESSORIES PARTS LIST - MAIN UNIT

0101	3139 118 14640	Cabinet Front /21	0256	3139 114 73090	Panel Rear /34
0101	3139 118 14590	Cabinet Front /22/34	0271	3139 114 71010	Stopper Heatsink
0101	3139 118 13030	Cabinet Front /37	0350	3139 118 78410	L/R Loudspeaker Box
0103	3139 118 13040	Cover Front CDC	0350	3139 118 78150	L/R Loudspeaker Box /37
0105	3139 118 14730	Button Set CDC Select /21/37	0351	4822 303 50063	FM Aerial
0105	3139 118 13120	Button Set P/CDC Select /22/34	0351	4822 320 11094	FM Antenna Wire /37
0106	3139 118 13050	Cover Tray CDC	0356	3139 228 86350	Remote Control
0107	3139 118 13060	Button Set Open/Close	0384	4822 303 50082	AM Frame Aerial
0108	4822 454 13408	Badge Philips	0385	4822 321 10249	Δ Mains Cord
0128	3139 118 14650	Window Display /21	0385	4822 321 11466	Δ Mains Cord /37
0128	3139 118 14580	Window Display /22/34	0386	4822 263 21092	Δ Adaptor Plug 6A 250V /21
0128	3139 118 13110	Window Display /37	0387	3139 115 20700	Instruction For Use /21
0129	3139 118 13090	Cover Front Display	0387	3139 115 20640	Instruction For Use /22
0130	3139 118 13100	Cover Front Orna.	0387	3139 115 20660	Instruction For Use /34
0132	3139 118 13130	Button Set Source	0387	3139 115 20460	Instruction For Use /37
0134	3139 118 15140	Button Set C/Prog	1201	3139 110 34600	FFC Foil 07P/280/07P AD
0135	3139 118 13150	Button Max	1300	4822 320 12246	FFC Foil 13P/220/13P AD
0136	3139 118 13160	Button DSC/DBB/VEC/IS	1400	3139 110 35110	FFC Foil 04P/220/04P AD
0137	3139 118 13170	Ring Volume	1401	4822 320 12703	FFC Foil 07P/140/07P BD
0138	3139 118 13180	Knob Rotary	1402	3139 110 35100	FFC Foil 19P/140/19P AD
0139	3139 118 13190	Knob Volume	1403	3139 110 34610	FFC Foil 11P/180/11P AD
0142	3139 118 13200	Knob Level Karaoke /21	1500	3139 110 33960	FFC Foil 04P/120/04P BD
0142	3139 118 13910	Button Set RDS/NEWS /22/34	1600	3139 110 35050	FFC Foil 08P/220/08P AD
0158	3139 118 13080	Cover Cassette Right	1700	4822 320 12752	FFC Foil 07P/180/07P AD
0159	3139 118 13070	Cover Cassette Left	1800	3139 110 34910	FFC Foil 19P/120/19P BD
0160	3139 118 13900	Lens Cassette Right	5001	3103 308 30640	Δ Mains Transformer /21
0161	3139 118 13890	Lens Cassette Left	5001	3103 308 30630	Δ Mains Transformer /22/34
0197	3139 114 68630	Door Cassette Right ETF	5001	3103 308 30620	Δ Mains Transformer /37
0198	3139 114 68620	Door Cassette Left ETF			
0199	4822 402 10621	Push-Catch	Note :	Only the parts mentioned in this list are normal service spare parts.	
0200	4822 529 10322	Damper Assembly			
0201	3139 114 68640	Push Catch Left			
0203	4822 492 11344	Spring Compression			
0204	4822 402 11246	Bracket Right			
0205	4822 402 11245	Bracket Left			
0206	3139 111 01380	Spring Torsion Right			
0207	3139 111 01390	Spring Torsion Left			
0209	4822 492 42787	Spring Cassette			
0242	4822 462 40683	Foot Rubber (SQ)			
0251	3139 114 70970	Bracket CDC Left			
0252	3139 114 70980	Bracket CDC Right			
0253	3139 114 70930	Panel Left			
0254	3139 114 70940	Panel Right			
0255	3139 114 70960	Cover Top			
0256	3139 114 70950	Panel Rear			

SCREW LISTS - MAIN UNIT

185	D3 x 10
186	D3 x 10
211	D3 x 12
212	D3 x 12
213	D3 x 12
214	M3 x 12
215	M3 x 12
226	M3 x 6
227	M3 x 6
231	M3 x 10
276	D3 x 12
277	D3 x 12
278	D3 x 12
279	D3 x 12
280	D3 x 12
283	D3 x 20
285	D3 x 12
287	D3 x 12
292	D3 x 12
293	D3 x 12
295	D3 x 12
296	D3 x 12
297	D2 x 8
298	D3 x 12
299	D3 x 12
300	D3 x 12
301	D3 x 12
302	D3 x 12
304	D3 x 12