

SwitchBlade x908 GEN2 (SBx908 GEN2) Switch

Advanced Layer 3+ Modular Switch

AlliedWare Plus™ v5.4.9-2

SBx908 GEN2 Chassis

XEM2-8XSTm Ethernet Line Card

XEM2-12XT Ethernet Line Card

XEM2-12XTm Ethernet Line Card

XEM2-12XS Ethernet Line Card


XEM2-4QS Ethernet Line Card

XEM2-1CQ Ethernet Line Card

FAN08 Fan Module

SBxPWRSYS2 AC Power Supply

SBxPWRSYS1-80 DC Power Supply

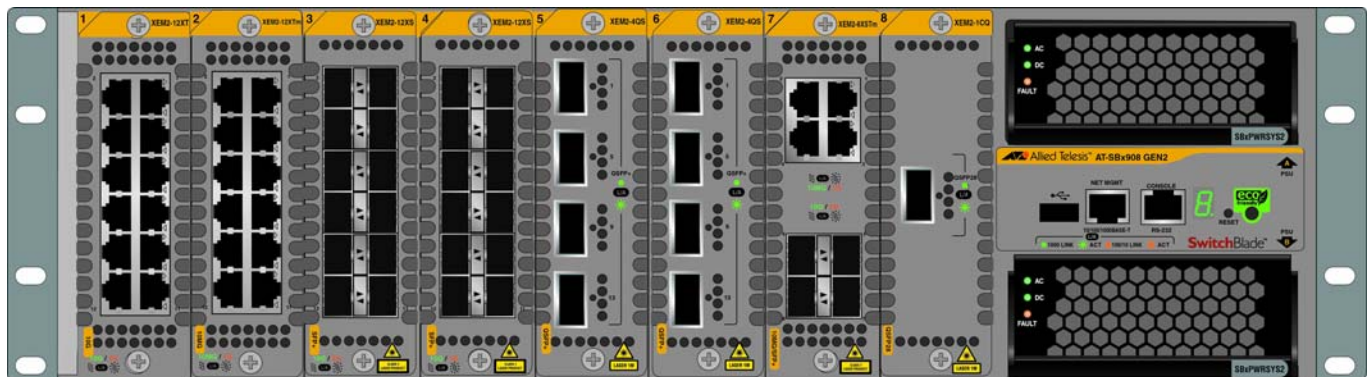

Installation Guide for Stand-alone Switches

Copyright © 2020 Allied Telesis, Inc.

All rights reserved. No part of this publication may be reproduced without prior written permission from Allied Telesis, Inc.

Allied Telesis, VCStack, and the Allied Telesis logo are trademarks of Allied Telesis, Incorporated. All other product names, company names, logos or other designations mentioned herein are trademarks or registered trademarks of their respective owners.

Allied Telesis, Inc. reserves the right to make changes in specifications and other information contained in this document without prior written notice. The information provided herein is subject to change without notice. In no event shall Allied Telesis, Inc. be liable for any incidental, special, indirect, or consequential damages whatsoever, including but not limited to lost profits, arising out of or related to this manual or the information contained herein, even if Allied Telesis, Inc. has been advised of, known, or should have known, the possibility of such damages.

Electrical Safety and Emissions Standards

This product meets the following standards.

U.S. Federal Communications Commission

Radiated Energy

Note: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Note: Modifications or changes not expressly approved of by the manufacturer or the FCC, can void your right to operate this equipment.

Industry Canada

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

RFI Emissions: FCC Class A, CISPR 22 Class A, EN55032 Class A, VCCI Class A, ICES-003 Class A, RCM

Warning: In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

EMC (Immunity): EN55024, EN61000-3-2, EN61000-3-3

Electrical Safety: UL 60950-1 (cUL_{US}), EN60825-1 (TUV),




Laser Safety

EN60825

RoHS: RoHS6

Translated Safety Statements

Important: Safety statements that have the  symbol are translated into multiple languages in the *Translated Safety Statements* document at www.alliedtelesis.com/library.

Remarque: Les consignes de sécurité portant le symbole  sont traduites dans plusieurs langues dans le document *Translated Safety Statements*, disponible à l'adresse www.alliedtelesis.com/library.

Contents

Preface	13
Document Conventions	14
Contacting Allied Telesis	15
Chapter 1: Overview	17
Overview	18
SBx908 GEN2 Chassis	18
XEM2 Ethernet Line Cards	18
Management Software and Interfaces	18
Management Methods	19
Management Panel	19
Power Supplies	19
SBx908 GEN2 Chassis	20
XEM2 Ethernet Line Cards	21
XEM2-8XSTm Line Card	24
Twisted Pair Ports	24
Twisted Pair Port LEDs	25
Transceiver Ports	26
Transceiver Port LEDs	26
XEM2-12XT Line Card	27
Twisted Pair Ports	27
LEDs	28
XEM2-12XTm Line Card	29
Twisted Pair Ports	29
LEDs	30
XEM2-12XS Line Card	31
Transceiver Ports	31
LEDs	32
XEM2-4QS Line Card	33
Transceiver Ports	33
LEDs	33
XEM2-1CQ Line Card	35
Transceiver Port	35
LEDs	35
Management Panel	37
USB Port	37
NET MGMT Ethernet Management Port	38
Console (RS-232) Port	39
Switch ID LED	39
eco-friendly Button	40
Reset Button	40
Power Supplies	41
FAN08 Units	43
Specifying Ports in the Command Line Interface	44
Software and Hardware Releases	45
Chapter 2: Beginning the Installation	47
Reviewing Safety Precautions	48
Choosing a Site for the Chassis	53
Unpacking the Chassis	54

Unpacking SBxPWRSYS2 AC Power Supplies.....	59
Unpacking SBxPWRSYS1-80 DC Power Supplies	60
Chapter 3: Installing the Chassis	61
Tools and Material	62
Adjusting the Equipment Rack Brackets.....	63
Installing the Chassis in an Equipment Rack.....	67
Installing the Chassis Grounding Wire.....	68
Installing SBxPWRSYS2 AC Power Supplies.....	71
Installing SBxPWRSYS1-80 DC Power Supplies	75
Installing Ethernet Line Cards.....	79
Installing Blank Line Card Slot Covers.....	83
Installing the Blank Power Supply Slot Cover.....	85
Installing the Power Cord Retaining Clips.....	87
Chapter 4: Powering On the Chassis	89
Verifying the Installation.....	90
Powering On SBxPWRSYS2 Power Supplies.....	91
Powering On SBxPWRSYS1-80 DC Power Supplies.....	94
Choosing a Method for Attaching the Grounding Wire	96
Connecting the Grounding Wire with the Grounding Terminal	96
Connecting the Grounding Wire with Bare Wire	101
Choosing a Method for Attaching the Power Wires	103
Connecting the DC Power Wires with the Straight Terminals	103
Connecting the DC Power Wires with the Right Angle Terminals	111
Connecting Bare DC Power Wires	117
Monitoring the Initialization Processes.....	121
Chapter 5: Verifying the Hardware Operations	125
Determining the Status of the Switch.....	126
Starting a Local Management Session	127
Disabling VCStack	129
Verifying Support for the Ethernet Line Cards	133
Verifying the Switch with the AlliedWare Plus Commands	134
Chapter 6: Cabling the Networking Ports	135
Cabling Twisted Pair Ports.....	136
Guidelines to Handling Fiber Optic or Twisted Pair Transceivers.....	137
Installing and Cabling Fiber Optic Transceivers	138
Installing Direct Connect Cables.....	141
Chapter 7: Replacing Modules	145
Replacing SBxPWRSYS2 AC Power Supplies.....	146
Replacing SBxPWRSYS1-80 DC Power Supplies	149
Replacing XEM2 Line Cards.....	160
Replacing FAN08 Modules	167
Removing FAN08 Modules.....	167
Installing FAN08 Modules.....	168
Chapter 8: Troubleshooting	171
Appendix A: Technical Specifications	175
Physical Specifications	176
Environmental Specifications.....	179
Power Specifications.....	180
Certifications	182
Pin Signals for RJ-45 Twisted Pair Ports.....	183
Pin Signals for the RJ-45 Style Serial Console Port	185
Pin Signals for the NET MGMT Port.....	186

Figures

Figure 1: Front Panel of the SBx908 GEN2 Chassis.....	20
Figure 2: Rear Panel of the SBx908 GEN2 Chassis	20
Figure 3: XEM2 Ethernet Line Cards.....	21
Figure 4: XEM2-8XSTm Line Card.....	24
Figure 5: XEM2-12XT Line Card	27
Figure 6: XEM2-12XTm Line Card	29
Figure 7: XEM2-12XS Line Card	31
Figure 8: XEM2-4QS Line Card.....	33
Figure 9: XEM2-1CQ Line Card.....	35
Figure 10: Management Panel	37
Figure 11: Switch ID LED	39
Figure 12: SBxPWRSYS2 and SBxPWRSYS1-80 Power Supplies.....	41
Figure 13: FAN08 Module	43
Figure 14: PORT Parameter in the Command Line Interface.....	44
Figure 15: NEMA 5-20P Plug and Receptacle	53
Figure 16: SBx908 Gen2 Switch Shipping Box	54
Figure 17: Lifting the Switch from the Shipping Box.....	55
Figure 18: Removing the Switch from the Protective Shipping Bag.	55
Figure 19: Pre-installed Items on the Front and Side Panels	56
Figure 20: Pre-installed Items on the Rear Panel.....	57
Figure 21: Accessory Kit.....	58
Figure 22: Items in the Shipping Box for the SBxPWRSYS2 AC Power Supply	59
Figure 23: Items in the Shipping Box for the SBxPWRSYS1-80 DC Power Supply.....	60
Figure 24: Chassis Orientations in the Equipment Rack	63
Figure 25: Chassis Orientations in the Equipment Rack	64
Figure 26: Chassis Orientations in the Equipment Rack	65
Figure 27: Example of Adjusting the Equipment Rack Brackets	66
Figure 28: Securing the Chassis to the Equipment Rack	67
Figure 29: Stripping the Grounding Wire	68
Figure 30: Removing the Grounding Lug from the Chassis.....	69
Figure 31: Attaching the Grounding Wire to the Grounding Lug.....	69
Figure 32: Installing the Grounding Lug and Wire	70
Figure 33: Removing the Blank Power Supply Panel from Power Supply Slot B.....	72
Figure 34: Lifting the Locking Handle on the SBxPWRSYS2 Power Supply.....	72
Figure 35: Sliding the SBxPWRSYS2 AC Power Supply into the Chassis.....	73
Figure 36: Lowering the Locking Handle on the SBxPWRSYS2 AC Power Supply.....	73
Figure 37: On/Off Switch on the SBxPWRSYS1-80 DC Power Supply.....	75
Figure 38: Loosening the Handle locking Screw on the SBxPWRSYS1-80 DC Power Supply.....	76
Figure 39: Lifting the Locking Handle on the SBxPWRSYS1-80 DC Power Supply	76
Figure 40: Inserting the SBxPWRSYS1-80 DC Power Supply	77
Figure 41: Lowering the Locking Handle on the SBxPWRSYS1-80 DC Power Supply	77
Figure 42: Removing a Blank Line Card Cover	79
Figure 43: Removing the Ethernet Line Card from the Anti-static Bag.....	80
Figure 44: Sliding the Ethernet Line Card into the Slot.....	81
Figure 45: Seating an Ethernet Line Card in the Chassis.....	82
Figure 46: Tightening the Two Captive Screws on the Ethernet Line Card.....	82
Figure 47: Installing a Blank Slot Cover.....	83
Figure 48: Tightening the Captive Screws on a Blank Slot Cover.....	84
Figure 49: Lifting the Locking Handle on the Blank Power Supply Slot Cover	85

Figure 50: Aligning the Blank Power Supply Cover in the Slot	86
Figure 51: Lowering the Locking Handle on the Blank Power Supply Slot Cover	86
Figure 52: Installing the Power Cord Retaining Clips	87
Figure 53: Connecting the AC Power Cord.....	92
Figure 54: Securing the Power Cord with the Retaining Clip.....	92
Figure 55: Connecting the Power Cord to an AC Power Source	93
Figure 56: Components on the SBxPWRSYS1-80 DC Power Supply.....	95
Figure 57: Grounding Wire Terminal.....	96
Figure 58: Stripping the Stranded Grounding Wire.....	96
Figure 59: Attaching the Stranded Grounding Wire to the Grounding Terminal	96
Figure 60: On/Off Switch on the SBxPWRSYS1-80 DC Power Supply.....	97
Figure 61: Removing the Nut and Washer from the Grounding Post	98
Figure 62: Attaching the Grounding Lug and Wire to the Grounding Post.....	99
Figure 63: Securing the Grounding Wire	100
Figure 64: Stripping the solid or Stranded Grounding Wire	101
Figure 65: Attaching the Bare Grounding Wire to the Grounding Post.....	101
Figure 66: Securing the Bare Grounding Wire to the Grounding Post.....	102
Figure 67: Power Wire Terminals	103
Figure 68: Stripping the Power Wires	104
Figure 69: Attaching the Power Wires to the Straight Terminal Lugs	104
Figure 70: Opening the Plastic Cover.....	105
Figure 71: Removing the Terminal Screws.....	106
Figure 72: Connecting the Positive (+) Power Wire with a Straight Terminal	107
Figure 73: Connecting the Negative (-) Power Wire with a Straight Terminal	108
Figure 74: Closing the Plastic Cover over the Terminal Connectors	109
Figure 75: Tightening the Handle Locking Screw	110
Figure 76: Attaching the Power Wires to the Right Angle Terminal Lugs.....	111
Figure 77: Removing the Plastic Cover	112
Figure 78: Removing the Terminal Screws.....	113
Figure 79: Connecting the Positive (+) Power Wire with a Right Angle Terminal.....	114
Figure 80: Connecting the Negative (-) Power Wire with a Right Angle Terminal	115
Figure 81: Tightening the Handle Locking Screw	116
Figure 82: Stripping Solid or Stranded DC Power Wires	117
Figure 83: Connecting the Positive Wire With Bare Wire	118
Figure 84: Connecting the Negative Lead Wire with Bare Wire.....	119
Figure 85: Switch Initialization Messages.....	121
Figure 86: Switch Initialization Messages (Continued).....	122
Figure 87: Switch Initialization Messages (Continued).....	123
Figure 88: Connecting the Management Cable to the Console RS-232 Port	127
Figure 89: User Exec Mode Prompt.....	128
Figure 90: SHOW STACK Command.....	130
Figure 91: Moving to the Global Configuration Mode	130
Figure 92: Confirmation Prompt for the NO STACK ENABLE Command	131
Figure 93: Disabling VCStack.....	131
Figure 94: Returning to the Privileged Exec Mode	131
Figure 95: Saving the Changes with the WRITE Command.....	131
Figure 96: SHOW CARD Command.....	134
Figure 97: Handle on 100Gbps Transceivers for the XEM2-1CQ Line Card	137
Figure 98: Installing an SFP Transceiver in the XEM2-12XS Line Card.....	139
Figure 99: Installing a Fiber Optic Transceiver in the XEM2-4QS Line Card.....	139
Figure 100: Installing an 100Gbps QSFP28 Transceiver in the XEM2-1CQ Line Card.....	140
Figure 101: Installing SP10TW Cables in the XEM2-12XS Line Card.....	142
Figure 102: Sliding the QSFP28 Cable into the Slot.....	142
Figure 103: Disconnecting the AC Power Cord from the Power Source	146
Figure 104: Disconnecting the AC Power Cord from the Chassis	147
Figure 105: Lifting the Locking Handle on the SBxPWRSYS2 AC Power Supply.....	147
Figure 106: Removing the SBxPWRSYS2 AC Power Supply	148
Figure 107: Loosening the Screw on the Locking Handle	149
Figure 108: Opening the Plastic Window over the Terminal Block.....	150
Figure 109: Removing the Negative Lead Wire	151

Figure 110: Removing the Positive Lead Wire from the Terminal Block	152
Figure 111: Reinstalling the Screws on the Positive and Negative Terminals.....	153
Figure 112: Closing the Plastic Cover	154
Figure 113: Removing the Grounding Wire	155
Figure 114: Reinstalling the Nut and Washer on the Grounding Post.....	156
Figure 115: Lifting the Locking Handle and Removing the Power Supply.....	157
Figure 116: Installing the Blank Power Supply Slot Cover	158
Figure 117: Lowering the Locking Handle on the Power Supply Slot Cover	159
Figure 118: Loosening the Screws on the Ethernet Line Card.....	163
Figure 119: Disconnecting an Ethernet Line Card from the Chassis.....	164
Figure 120: Sliding an Ethernet Line Card from the Chassis.....	165
Figure 121: Placing the Ethernet Line Card in its Anti-static Bag.....	166
Figure 122: Loosening the Screws on the FAN08 Module	167
Figure 123: Disconnecting the FAN08 Module from the Chassis	168
Figure 124: Aligning the FAN08 Module in the Chassis Slot.....	169
Figure 125: Seating the FAN08 Module on the Connector in the Chassis	169
Figure 126: Tightening the Two Captive Screws on the FAN08 Module.....	170
Figure 127: Switch Height and Width	176
Figure 128: Switch Depth and Locations of Bracket Holes.....	177
Figure 129: Pin Layout (Front View) of Twisted Pair Ports.....	183

Tables

Table 1: XEM2 Series Line Cards	22
Table 2: Twisted Pair Ports on the XEM2-8XSTm Line Card	24
Table 3: Link and Activity LEDs for the Twisted Pair Ports on the XEM2-8XSTm Line Card	25
Table 4: Link and Activity LEDs for the SFP Ports on the XEM2-8XSTm Line Card	26
Table 5: Twisted Pair Ports on the XEM2-12XT Line Card	27
Table 6: Link and Activity LEDs on the XEM2-12XT Line Card	28
Table 7: Twisted Pair Ports on the XEM2-12XTm Line Card	29
Table 8: Link and Activity LEDs on the XEM2-12XTm Line Card	30
Table 9: Link and Activity LEDs on the XEM2-12XS Line Card	32
Table 10: Link and Activity LEDs on the XEM2-4QS Line Card	33
Table 11: Link and Activity LED on the XEM2-1CQ Line Card	35
Table 12: NET MGMT Port LED	38
Table 13: PORT Parameter Format	44
Table 14: Software and Hardware Releases	45
Table 15: XEM2 Line Cards and Fiber Optic Transceivers	138
Table 16: XEM2 Line Cards and Direct Connect Cables	141
Table 17: Hotswapping Guidelines for XEM2 Line Cards	160
Table 18: Product Dimensions	176
Table 19: Product Weights	178
Table 20: Ventilation Requirements	178
Table 21: Environmental Specifications	179
Table 22: AC Voltage and Frequency Requirements	180
Table 23: DC Voltage Requirements	180
Table 24: Maximum Power Consumption (Watts)	180
Table 25: Typical Power Savings in eco-friendly Mode (Watts)	181
Table 26: Maximum Power Supply Efficiency (Based on 100V Input Voltage)	181
Table 27: Heat Dissipation (British Thermal Units/Hour)	181
Table 28: Product Certifications	182
Table 29: Pin Signals on RJ-45 Twisted Pair Ports at 100Mbps	183
Table 30: Pin Signals on Twisted Pair Ports at 1/2.5/5/10Gbps	184
Table 31: RJ-45 Pin Signals for the Console Port on the Management Panel	185
Table 32: RJ-45 Pin Signals for 10 or 100Mbps for the NET MGMT Port on the Management Panel	186

Preface

This guide contains the installation instructions for the SBx908 GEN2 advanced modular, Layer 3 Ethernet switch. The instructions explain how to install the chassis as a stand-alone switch. For instructions on how to build a stack of up to four chassis with the VCStack feature, refer to the SBx908 GEN2 Installation Guide for VCStack.

This preface contains the following sections:

- ❑ “Document Conventions” on page 14
- ❑ “Contacting Allied Telesis” on page 15

Document Conventions

This document uses the following conventions:

Note

Notes provide additional information.



Caution

Cautions inform you that performing or omitting a specific action may result in equipment damage or loss of data.



Warning

Warnings inform you that performing or omitting a specific action may result in bodily injury.

Contacting Allied Telesis

If you need assistance with this product, you may contact Allied Telesis technical support by going to the Support & Services section of the Allied Telesis web site at **www.alliedtelesis.com/support**. You can find links for the following services on this page:

- ❑ 24/7 Online Support — Enter our interactive support center to search for answers to your product questions in our knowledge database, to check support tickets, to learn about RMAs, and to contact Allied Telesis technical experts.
- ❑ USA and EMEA phone support — Select the phone number that best fits your location and customer type.
- ❑ Hardware warranty information — Learn about Allied Telesis warranties and register your product online.
- ❑ Replacement Services — Submit a Return Merchandise Authorization (RMA) request via our interactive support center.
- ❑ Documentation — View the most recent installation and user guides, software release notes, white papers, and data sheets for your products.
- ❑ Software Downloads — Download the latest software releases for your managed products.

For sales or corporate information, go to **www.alliedtelesis.com/purchase** and select your region.

Chapter 1

Overview

The chapter contains the following sections:

- ❑ “Overview” on page 18
- ❑ “SBx908 GEN2 Chassis” on page 20
- ❑ “XEM2 Ethernet Line Cards” on page 21
- ❑ “XEM2-8XSTm Line Card” on page 24
- ❑ “XEM2-12XT Line Card” on page 27
- ❑ “XEM2-12XTm Line Card” on page 29
- ❑ “XEM2-12XS Line Card” on page 31
- ❑ “XEM2-4QS Line Card” on page 33
- ❑ “XEM2-1CQ Line Card” on page 35
- ❑ “Management Panel” on page 37
- ❑ “Power Supplies” on page 41
- ❑ “FAN08 Units” on page 43
- ❑ “Specifying Ports in the Command Line Interface” on page 44
- ❑ “Software and Hardware Releases” on page 45

Overview

The SBx908 GEN2 Chassis is an advanced Layer 3+ modular switch. The main features are listed here.

SBx908 GEN2 Chassis

The chassis has the following hardware features:

- ❑ 3RU height
- ❑ Eight slots for XEM2 Ethernet line cards
- ❑ Each line card slot has 160Gbps backplane connectivity.
- ❑ The unit supports two power supplies for primary and redundant power.
- ❑ The chassis comes with two pre-installed brackets for a standard 19-inch equipment rack.
- ❑ The unit comes with two pre-installed fan modules, providing front-to-back airflow.
- ❑ The line cards, power supplies, and fan modules are hot-swappable.

XEM2 Ethernet Line Cards

The XEM2 Ethernet line cards are listed here:

- ❑ XEM2-8XSTm Card features four 100Mbps and 1/2.5/5/10Gbps, twisted pair ports with RJ-45 connectors and four ports for 1Gbps SFP or 10Gbps SFP+ transceivers.
- ❑ XEM2-12XT Card features 12 100Mbps and 1/10Gbps, twisted pair ports with RJ-45 connectors.
- ❑ XEM2-12XTm Card features 12 100Mbps and 1/2.5/5/10Gbps, twisted pair ports with RJ-45 connectors.
- ❑ XEM2-12XS Card features 12 ports for 1Gbps SFP or 10Gbps SFP+ transceivers.
- ❑ XEM2-4QS Card features four ports for 40Gbps QSFP+ transceivers.
- ❑ XEM2-1CQ Card features one port for an 100Gbps QSFP28 transceiver.

Ethernet line cards are ordered separately. Refer to the product data sheet on the Allied Telesis web site for a list of approved transceivers.

Management Software and Interfaces

Here are the management software and interfaces:

- ❑ AlliedWare Plus management software
- ❑ Command line interface, available locally through the Console port or remotely over the network.

- ❑ Web browser interface available remotely over the network.

The AlliedWare Plus management software comes pre-installed on the chassis.

Management Methods

You can manage the switch as follows:

- ❑ Command line interface accessed locally through the Console port or remotely using Telnet or Secure Shell.
- ❑ Web browser interface accessed remotely using HTTP.
- ❑ Remote access of SNMPv1, v2c, or v3.

Management Panel

The pre-installed management panel has the following features:

- ❑ Console RS-232 port for local management (no IP address required),
- ❑ USB 2.0 port for storing backup copies of system configuration files, transferring management software among units, and other management functions.
- ❑ An eco-friendly button for turning off the system LEDs to reduce power consumption.
- ❑ Network management port for initial configuration and maintenance access to the chassis.
- ❑ Chassis reset button.

Power Supplies

The chassis has slots for two power supplies. A single power supply can support a full chassis. Adding a second power supply provides power redundancy. Power supplies are ordered separately. Refer to “Power Supplies” on page 41.

SBx908 GEN2 Chassis

The front panel of the SBx908 GEN2 Chassis is shown in Figure 1.

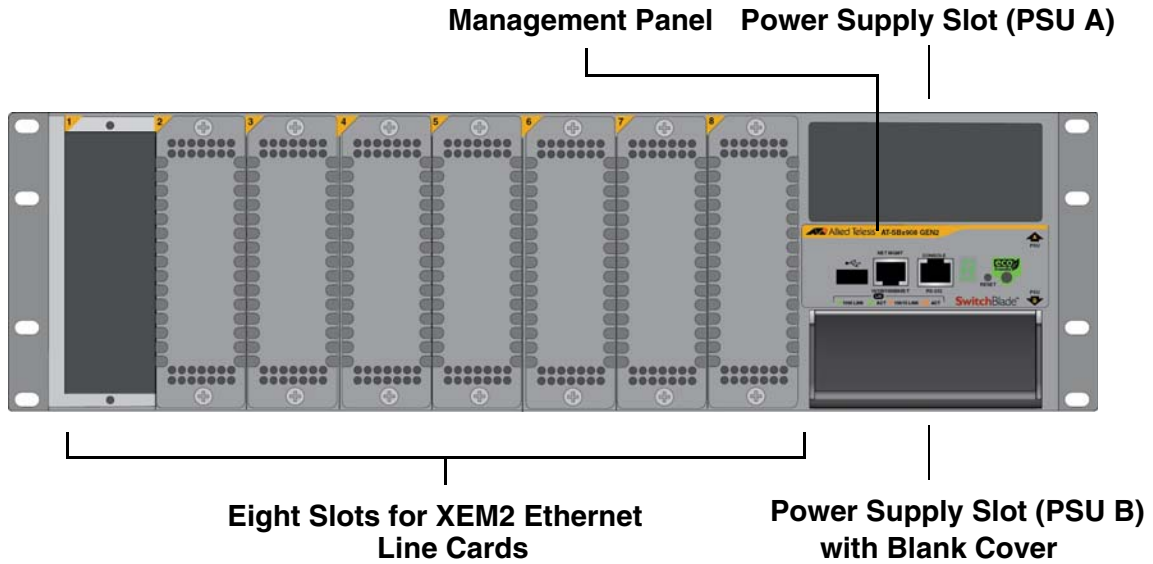


Figure 1. Front Panel of the SBx908 GEN2 Chassis

Note

The switch comes with slot covers on line card slots 2 to 8. Do not remove the slot covers until after the unit is installed in the equipment rack. You might bend the chassis and cause misalignment of the slots and card guides if you lift the chassis into the equipment rack without the line card slot covers.

The rear panel is shown in Figure 2.

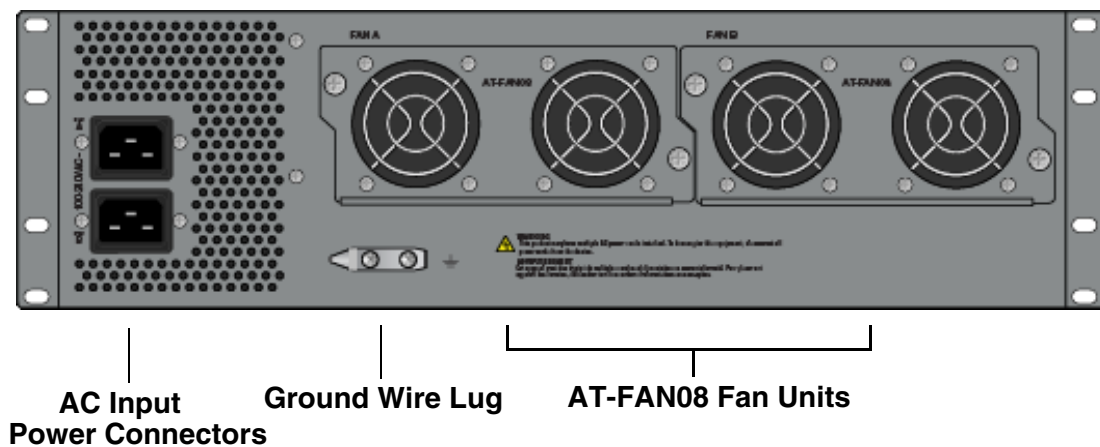


Figure 2. Rear Panel of the SBx908 GEN2 Chassis

XEM2 Ethernet Line Cards

The XEM2 Ethernet line cards are shown in Figure 3 and briefly described in Table 1 on page 22.

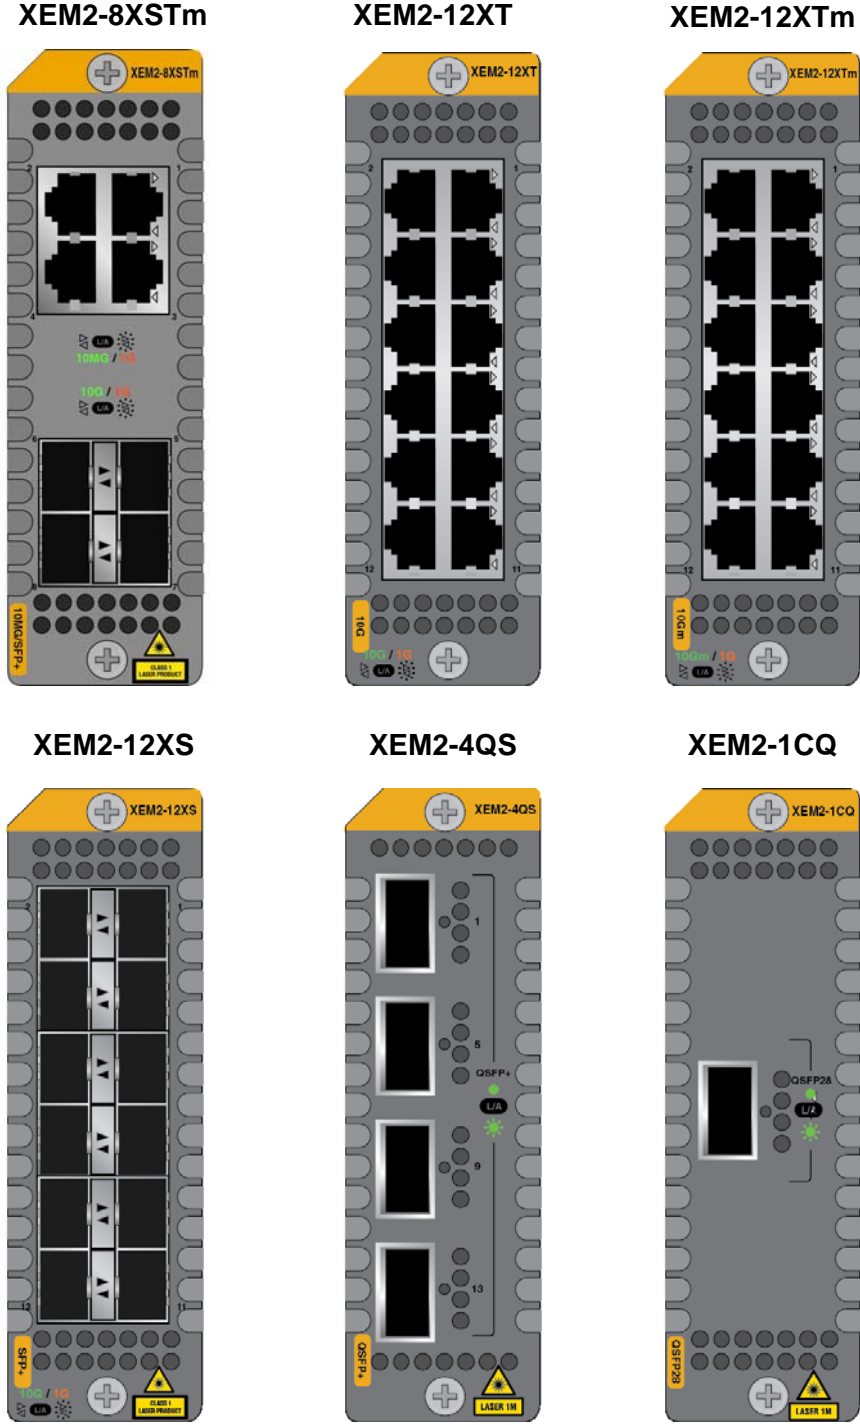


Figure 3. XEM2 Ethernet Line Cards

Table 1. XEM2 Series Line Cards

Line Card	Description
XEM2-8XSTm	<p>Four twisted pair ports (1-4) with RJ-45 connectors that support the following speeds:</p> <ul style="list-style-type: none"> - 100Mbps - 1/2.5/5/10Gbps <p>Four ports (5-8) that support the following types of transceivers and cables:</p> <ul style="list-style-type: none"> - 1Gbps SFP - 10Gbps SFP+ - 10Gbps one meter SP10TW1, three meter SP10TW3, and seven meter SP10TW7 direct connect twinax cables
XEM2-12XT	<p>12 twisted pair ports with RJ-45 connectors that support the following speeds:</p> <ul style="list-style-type: none"> - 100Mbps - 1/10Gbps
XEM2-12XTm	<p>12 twisted pair ports with RJ-45 connectors that support the following speeds:</p> <ul style="list-style-type: none"> - 100Mbps - 1/2.5/5/10Gbps
XEM2-12XS	<p>12 ports that support the following types of transceivers and cables:</p> <ul style="list-style-type: none"> - 1Gbps SFP - 10Gbps SFP+ - 10Gbps one meter SP10TW1, three meter SP10TW3, and seven meter SP10TW7 direct connect twinax cables
XEM2-4QS	<p>Four ports for 40Gbps QSFP+ transceivers or 40Gbps QSFP40 direct connect cables.</p>

Table 1. XEM2 Series Line Cards (Continued)

Line Card	Description
XEM2-1CQ	One port for the 100Gbps QSFP28 transceiver.

Please review the following:

- ❑ The XEM2-8XSTm Card requires AlliedWare Plus v5.4.9-2 or later.
- ❑ The 100Mbps port speed on the XEM2-12XT Card requires AlliedWare Plus v5.4.9-0 or later.
- ❑ The XEM2-12XTm Card requires AlliedWare Plus v5.4.9-0 or later.

For more information, refer to “Software and Hardware Releases” on page 45.

XEM2-8XSTm Line Card

The XEM2-8XSTm Line Card is shown in Figure 4.

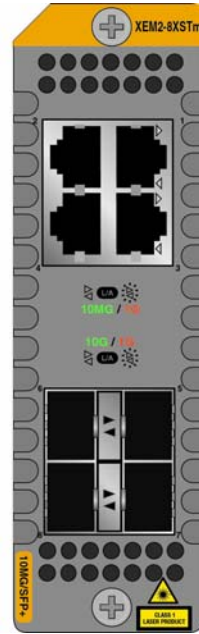


Figure 4. XEM2-8XSTm Line Card

Twisted Pair Ports

The XEM2-8XSTm Card has four twisted pair ports and four SFP ports. The specifications for the twisted pair ports are listed in Table 2.

Table 2. Twisted Pair Ports on the XEM2-8XSTm Line Card

Specification	Description
Port Speed	<p>The ports support the following speeds:</p> <ul style="list-style-type: none"> - 100Mbps - 1/2.5/5/10Gbps <p>The ports do not support 10Mbps.</p> <p>You can set port speed with Auto-Negotiation or manually. The default is Auto-Negotiation.</p>
Duplex Mode	Full-duplex only.

Table 2. Twisted Pair Ports on the XEM2-8XSTm Line Card (Continued)

Specification	Description
Cabling	Minimum cable requirements are: <ul style="list-style-type: none"> - 100Mbps - Standard TIA/EIA 568-B-compliant Category 3 unshielded cabling. - 1/2.5/5Gbps - Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) unshielded cabling. - 10Gbps -Standard TIA/EIA 568-C-compliant Category 6a unshielded cabling.
Maximum Distance	100 meters (328 feet)
Connector	8-pin RJ-45

Twisted Pair Port LEDs

Each port has a single LED that displays link and activity information. The states of LEDs are described in Table 3.

Table 3. Link and Activity LEDs for the Twisted Pair Ports on the XEM2-8XSTm Line Card

State	Description
Solid Green	The port has established a 2.5Gbps, 5Gbps, or 10Gbps link to a network device.
Flashing Green	The port is transmitting or receiving data at 2.5Gbps, 5Gbps, or 10Gbps.
Solid Amber	The port has established a 100Mbps or 1Gbps link to a network device.
Flashing Amber	The port is transmitting or receiving data at 100Mbps or 1Gbps.
Off	Possible causes of this state are listed here: <ul style="list-style-type: none"> - The port has not established a link with another network device. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

Transceiver Ports

The XEM2-8XSTm Card also has four transceiver ports that support the following types of 1Gbps SFP transceivers, 10Gbps SFP+ transceivers, and 10Gbps direct connect cables:

- ❑ 1Gbps SX or LX SFP fiber optic transceivers
- ❑ 10Gbps SR or LR SFP+ fiber optic transceivers
- ❑ 10Gbps one meter SP10TW1, three meter SP10TW3, and seven meter SP10TW7 direct connect twinax cables, with SFP+ transceiver-style connectors

Guidelines about the SFP+ transceiver ports are listed here:

- ❑ The ports do not support 100Mbps transceivers.
- ❑ The ports support full-duplex mode only.
- ❑ You can set the port speeds with Auto-Negotiation or manually. The default is Auto-Negotiation.

SFP and SFP+ transceivers are purchased separately. For a list of supported transceivers, refer to the SBx908 GEN2 Series data sheet on the Allied Telesis web site.

Transceiver Port LEDs

The ports have link and activity LEDs. The states of the LEDs are described in Table 4.

Table 4. Link and Activity LEDs for the SFP Ports on the XEM2-8XSTm Line Card

State	Description
Solid Green	The transceiver in the slot has established a 10GBase link to a network device.
Flashing Green	The transceiver is transmitting or receiving data at 10GBase.
Solid Amber	The transceiver has established a 1GBase link to a network device.
Flashing Amber	The transceiver is transmitting or receiving data at 1GBase.
Off	Possible causes of this state are listed here: <ul style="list-style-type: none"> - The transceiver has not established a link with another network device. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

XEM2-12XT Line Card

The XEM2-12XT Line Card is shown in Figure 5.

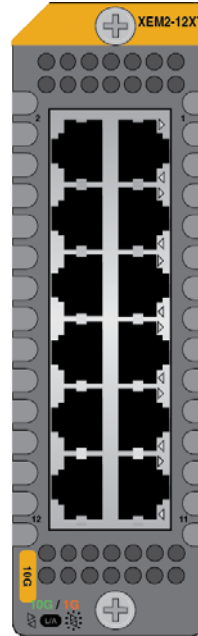


Figure 5. XEM2-12XT Line Card

Twisted Pair Ports

The XEM2-12XT Card has 12 twisted pair ports with standard 8-pin RJ-45 ports. The port specifications are listed in Table 5.

Table 5. Twisted Pair Ports on the XEM2-12XT Line Card

Specification	Description
Port Speed	<p>The ports support the following speeds:</p> <ul style="list-style-type: none"> - 100Mbps¹ - 1/10Gbps <p>The ports do not support 10Mbps.</p> <p>You can set port speed with Auto-Negotiation or manually. The default is Auto-Negotiation.</p>
Duplex Mode	Full-duplex only

Table 5. Twisted Pair Ports on the XEM2-12XT Line Card (Continued)

Specification	Description
Cabling	<p>Minimum cable requirements are:</p> <ul style="list-style-type: none"> - 100Mbps - Standard TIA/EIA 568-B-compliant Category 3 unshielded cabling. - 1Gbps - Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) unshielded cabling. - 10Gbps -Standard TIA/EIA 568-C-compliant Category 6a unshielded cabling.
Maximum Distance	100 meters (328 feet)
Connector	8-pin RJ-45

1. Requires AlliedWare Plus v5.4.9-0 or later.

LEDs Each port has a single LED that displays link and activity information. The states of LEDs are described in Table 6.

Table 6. Link and Activity LEDs on the XEM2-12XT Line Card

State	Description
Solid Green	The port has established a 10GBase link to a network device.
Flashing Green	The port is transmitting or receiving data at 10GBase.
Solid Amber	The port has established a 100Mbps or 1GBase link to a network device.
Flashing Amber	The port is transmitting or receiving data at 100Mbps or 1GBase.
Off	<p>Possible causes of this state are listed here:</p> <ul style="list-style-type: none"> - The port has not established a link with another network device. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

XEM2-12XTm Line Card

The XEM2-12XTm Line Card is shown in Figure 6.

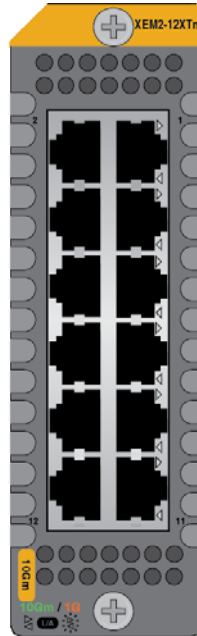


Figure 6. XEM2-12XTm Line Card

Twisted Pair Ports

The XEM2-12XTm Card has 12 twisted pair ports with standard 8-pin RJ-45 ports. The specifications of the ports are listed in Table 7.

Table 7. Twisted Pair Ports on the XEM2-12XTm Line Card

Specification	Description
Port Speed	<p>The ports support the following speeds:</p> <ul style="list-style-type: none"> - 100Mbps - 1/2.5/5/10Gbps <p>The ports do not support 10Mbps.</p> <p>You can set port speed with Auto-Negotiation or manually. The default is Auto-Negotiation.</p>
Duplex Mode	Full-duplex only.

Table 7. Twisted Pair Ports on the XEM2-12XTm Line Card (Continued)

Specification	Description
Cabling	Minimum cable requirements are: <ul style="list-style-type: none"> - 100Mbps - Standard TIA/EIA 568-B-compliant Category 3 unshielded cabling. - 1/2.5/5Gbps - Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) unshielded cabling. - 10Gbps -Standard TIA/EIA 568-C-compliant Category 6a unshielded cabling.
Maximum Distance	100 meters (328 feet)
Connector	8-pin RJ-45

LEDs Each port has a single LED that displays link and activity information. The states of LEDs are described in Table 8.

Table 8. Link and Activity LEDs on the XEM2-12XTm Line Card

State	Description
Solid Green	The port has established a 2.5Gbps, 5Gbps, or 10Gbps link to a network device.
Flashing Green	The port is transmitting or receiving data at 2.5Gbps, 5Gbps, or 10Gbps.
Solid Amber	The port has established a 100Mbps or 1GBase link to a network device.
Flashing Amber	The port is transmitting or receiving data at 100Mbps or 1GBase.
Off	Possible causes of this state are listed here: <ul style="list-style-type: none"> - The port has not established a link with another network device. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

XEM2-12XS Line Card

The XEM2-12XS Line Card is shown in Figure 7.

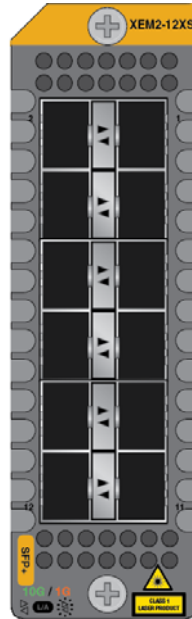


Figure 7. XEM2-12XS Line Card

Transceiver Ports

The card has twelve ports that support the following types of 1Gbps SFP transceivers, 10Gbps SFP+ transceivers, and 10Gbps direct connect cables:

- 1Gbps SX or LX SFP transceivers
- 10Gbps SR or LR fiber optic transceivers
- 10Gbps one meter SP10TW1, three meter SP10TW3, and seven meter SP10TW7 direct connect twinax cables with SFP+ transceiver-style connectors
- 1Gbps SPTX transceivers with RJ-45 ports for twisted pair cable
- 1Gbps/10Gbps SP10T transceivers with RJ-45 ports for twisted pair cable

Port guidelines are listed here:

- The card does not support 100Mbps transceivers.
- The card supports full-duplex mode only.
- You can set the port speeds with Auto-Negotiation or manually. The default is Auto-Negotiation.

SFP or SFP+ transceivers are purchased separately. For a list of supported transceivers, refer to the SBx908 GEN2 Series data sheet on the Allied Telesis web site.

LEDs The ports have link and activity LEDs. The states of the LEDs are described in Table 9 on page 32.

Table 9. Link and Activity LEDs on the XEM2-12XS Line Card

State	Description
Solid Green	The transceiver in the port has established a 10GBase link to a network device.
Flashing Green	The transceiver is transmitting or receiving data at 10GBase.
Solid Amber	The transceiver has established a 1GBase link to a network device.
Flashing Amber	The transceiver is transmitting or receiving data at 1GBase.
Off	Possible causes of this state are listed here: <ul style="list-style-type: none"> - The transceiver has not established a link with another network device. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

XEM2-4QS Line Card

The XEM2-4QS Line Card is shown in Figure 8.

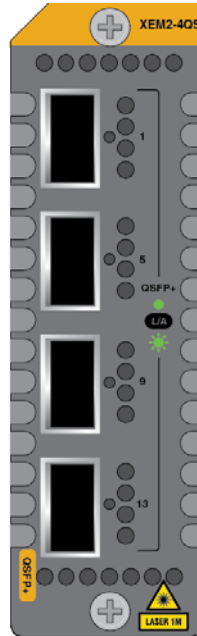


Figure 8. XEM2-4QS Line Card

Transceiver Ports

The XEM2-4QS Line Card has four ports that support the following types of 40Gbps QSFP+ transceivers:

- ❑ QSFP4SR4 transceiver - Has a maximum operating distance of 150m (492 ft). Requires 12-strand OM4 fiber optic cable.
- ❑ QSFP4PLR4 transceiver - Has an operating range of 2m (6.6 ft) to 10km (6.2 mi). Requires single-mode fiber optic cable.
- ❑ QSFP1CU and QSFP3CU direct connect cables in lengths of 1 and 3 meters, respectively

LEDs

The LED states for the ports on the XEM2-4QS Line Card are described in Table 10.

Table 10. Link and Activity LEDs on the XEM2-4QS Line Card

State	Description
Solid Green	The transceiver has established a 40GBase link to a network device.
Flashing Green	The transceiver is transmitting or receiving data.

Table 10. Link and Activity LEDs on the XEM2-4QS Line Card (Continued)

State	Description
Off	<p>Possible causes of this state are listed here:</p> <ul style="list-style-type: none"> - The port does not have a transceiver. - The transceiver has not established a link to a network device. - The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

Note

The eight line card slots in the SBx908 GEN2 Switch are divided into four slot groups, with each group consisting of two slots, as listed here:

Group 1 - Line card slots 1 and 2

Group 2 - Line card slots 3 and 4

Group 3 - Line card slots 5 and 6

Group 4 - Line card slots 7 and 8

The bandwidth of a card slot group with two XEM2-4QS Line Cards is slightly less than line-rate when all the traffic packets are 193 bytes or less in size. This limitation is likely to occur only in lab-test scenarios and can be avoided by not installing two XEM2-4QS Line Cards in the same card slot group.

XEM2-1CQ Line Card

The XEM2-1CQ Line Card is shown in Figure 9.

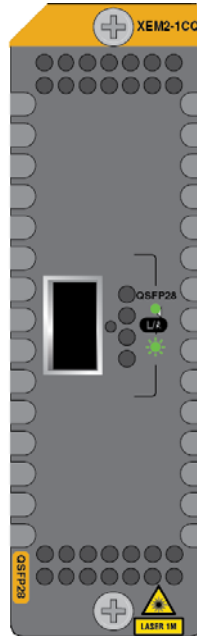


Figure 9. XEM2-1CQ Line Card

Transceiver Port

The XEM2-1CQ Line Card has one port and supports the following 100Gbps QSFP28 transceivers:

- ❑ QSFP28SR4 transceiver - Has a maximum operating distance of 70m (230 ft) or 100m (328 ft) with 12-strand OM3 or OM4 fiber optic cable, respectively. Requires an MPO pluggable optical connector.
- ❑ QSFP28LR4 transceiver - Has an operating range of 2m (6.6 ft) to 10km (6.2 mi). Requires single-mode fiber optic cable with a duplex LC connector.

LEDs

The LED states for the port on the XEM2-1CQ Line Card are described in Table 11.

Table 11. Link and Activity LED on the XEM2-1CQ Line Card

State	Description
Solid Green	The transceiver has established a link to a network device.

Table 11. Link and Activity LED on the XEM2-1CQ Line Card (Continued)

State	Description
Flashing Green	The transceiver is transmitting or receiving data.
Off	Possible causes of this state are listed here: <ul style="list-style-type: none">- The port does not have a transceiver.- The transceiver has not established a link to a network device.- The LEDs are turned off. To turn on the LEDs, use the eco-friendly button.

Management Panel

The components on the management panel are identified in Figure 10.

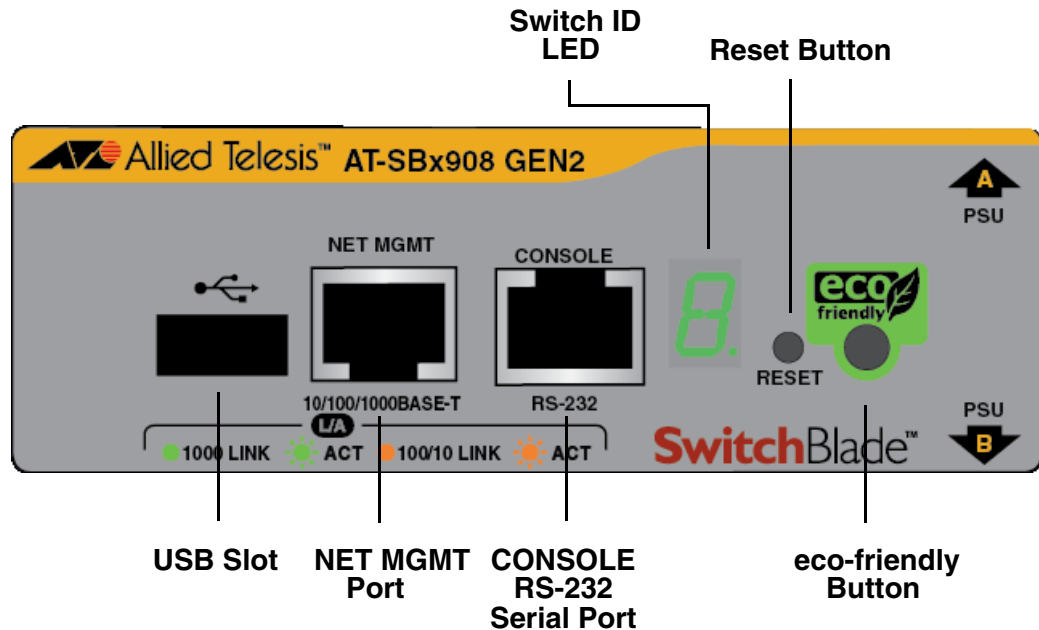


Figure 10. Management Panel

Note

The management panel is not field-replaceable.

USB Port You can use the USB port with a flash drive to perform the following management functions:

- Provide a centralized network backup location for Allied Telesis Management Framework.
- Store backup copies of configuration files.
- Transfer configuration files between switches that are to have similar configurations.
- Store or transfer log files.
- Store or transfer debug files (for example, the output of the SHOW TECH-SUPPORT command).
- Boot the AlliedWare Plus operating system and master configuration file from flash drive.

Using a flash drive with the switch is optional.

NET MGMT Ethernet Management Port

The switch uses the NET MGMT port as a separate routed eth0 interface. The interface is not part of the switching matrix of the Ethernet line cards, but the switch can route traffic in or out of the port from the line cards. Here are the guidelines:

- ❑ The port should only be used for initial configuration and maintenance access to the chassis.
- ❑ The NET MGMT port has a standard 8-pin RJ-45 connector and operates at 10, 100, or 1000Mbps in either half- or full-duplex mode.
- ❑ The default setting for the port is Auto-Negotiation, which sets the speed and duplex mode automatically. You may disable Auto-Negotiation and configure the port manually.
- ❑ The wiring configuration of the NET MGMT port is set automatically with automatic MDIX detection. You may disable automatic MDIX detection and set the wiring configuration manually.
- ❑ The port is referred to as eth0 in the management software.

The minimum cable requirements for the port are listed here:

- ❑ 10 or 100Mbps: Standard TIA/EIA 568-B-compliant Category 3 shielded or unshielded cabling with 100 ohm impedance and a frequency of 16 MHz.
- ❑ 1000Mbps: Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) shielded or unshielded cabling with 100 ohm impedance and a frequency of 100 MHz.

For instructions on how to configure the NET MGMT port, refer to the Software Reference for SwitchBlade x908 Gen2 Switch.

The Network Management (NET MGMT) port has one Status LED, described in Table 12.

Table 12. NET MGMT Port LED

State	Description
Solid Green	The port has established a 1000 Mbps link with a network device.
Flashing Green	The port is transmitting or receiving data at 1000 Mbps.
Solid Amber	The port has established a 10 or 100 Mbps link.

Table 12. NET MGMT Port LED (Continued)

State	Description
Flashing Amber	The port is transmitting or receiving data at 10 or 100 Mbps.
Off	The port has not established a link to a network device.

Console (RS-232) Port


You can use the Console Port to conduct local management sessions of the switch. Local management sessions require a terminal or PC with a terminal emulation program, and the management cable that comes with the switch.

Local management sessions are not conducted over a network. Consequently, the switch does not need an Internet Protocol (IP) address for this type of management.


Because the switch does not come with a default IP address, your initial management session must be a local management session. For instructions on how to start a local management session, refer to “Starting a Local Management Session” on page 127 or the Software Reference for SwitchBlade x908 Gen2 Switch.

Switch ID LED

The Switch ID LED, shown in Figure 11, displays the ID number of the switch. A stand-alone switch has the ID number 0. The states of the LED when the switch is not operating in the low power mode are shown in Figure 11.



The chassis is booting up.




The chassis has encountered a fault condition.



The chassis is operating as a stand-alone switch, with the ID number 1.



The chassis is a member of a VCStack and has an ID number in the range of 1 to 4.



The dot in the lower right corner flashes when the switch accesses USB memory.

Figure 11. Switch ID LED

The switch displays the letter “F” for fault on the ID LED if it detects one of the following problems:

- ❑ A cooling fan has failed.
- ❑ The internal temperature of the switch has exceeded the normal operating range and the switch may shut down.

Note

You can use the `SHOW SYSTEM ENVIRONMENT` command in the command line interface to identify the source of the problem.

**eco-friendly
Button**

You can use the eco-friendly button on the management panel to turn the LEDs on or off. You may turn off the LEDs when you are not using them to monitor the control and Ethernet line cards, to conserve electricity. When the LEDs are off, the overall power consumption of the chassis is slightly reduced by approximately 2 watts.

The button controls all of the port LEDs on the Ethernet line cards and controller card, except for the L/A LED for the NET MGMT port. The button does not control the LEDs on power supply systems.

Reset Button

Pressing the Reset button resets all the Ethernet line cards in the chassis. You might perform this function if the chassis and line cards are experiencing a problem.



Caution

The Ethernet line cards do not forward network traffic for about three minutes while they initialize the AlliedWare Plus operating system and configure their parameter settings. Some network traffic may be lost.

Note

To reset individual line cards in the chassis, use the `REBOOT` or `RELOAD` command in the AlliedWare Plus operating system.

Power Supplies

The power supply units for the chassis are the SBxPWRSYS2 AC and SBxPWRSYS1-80 DC Power Supplies. Refer to Figure 12.

SBxPWRSYS2 AC Power Supply



SBxPWRSYS1-80 DC Power Supply

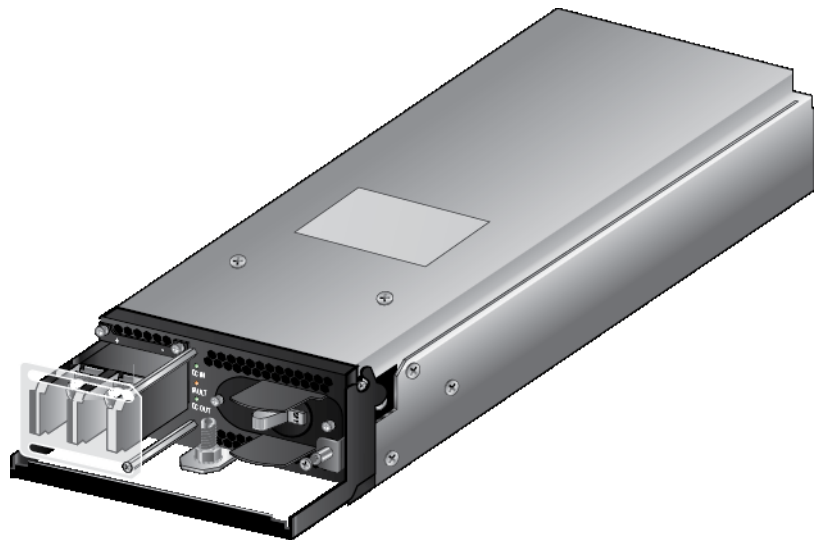


Figure 12. SBxPWRSYS2 and SBxPWRSYS1-80 Power Supplies

Here are the power supply guidelines:

- ❑ The SBxPWRSYS2 AC Power Supply uses the AC connectors on the back panel of the switch and is intended for AC environments.
- ❑ The SBxPWRSYS1-80 Power Supply has DC power connectors on its front panel and is intended for DC environments.
- ❑ You can install either one or two power supplies in the chassis. A single power supply can power a fully equipped chassis.

- ❑ Installing two power supplies adds power redundancy. If a power supply fails or loses power, the second power supply continues to power the system, thus preventing a disruption to network operations.
- ❑ The power supplies are installed in the PSU A and PSU B slots in the front panel of the chassis. If you are installing only one power supply, Allied Telesis recommends installing it in PSU A slot because that slot does not come with a blank slot cover.
- ❑ The switch does not come with power supplies. They must be purchased separately.
- ❑ The power supplies are field-replaceable and hot-swappable. You do not have to power off the switch to replace them.



Caution

The SBxPWRSYS2 and SBxPWRSYS1-80 Power Supplies are not compatible with each other. Do not install both types of power supplies in the same chassis.

FAN08 Units

The cooling unit for the chassis is the FAN08 Fan module. Refer to Figure 13.

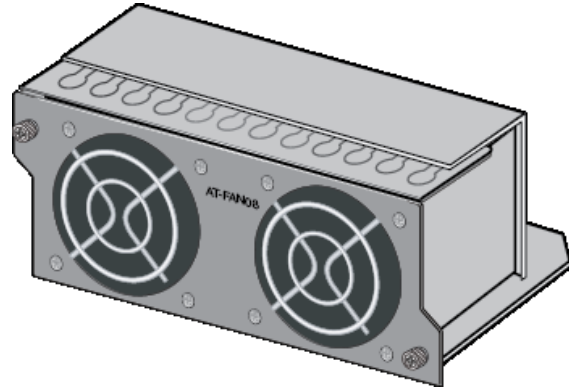


Figure 13. FAN08 Module

The chassis comes with two pre-installed fan modules in FAN A and FAN B slots on the rear panel. The air flow is from the front to the back of the chassis, with the fans drawing air out of the device.

The fan module has two fans. The switch automatically adjusts the speeds of the fans, depending on its internal temperature.

The FAN08 module is field-replaceable and hot-swappable. You do not have to power off the switch to replace a fan module.

Specifying Ports in the Command Line Interface

The individual ports on the switches in a stack are specified in the command line interface with the PORT parameter. The format of the parameter is shown in Figure 14.

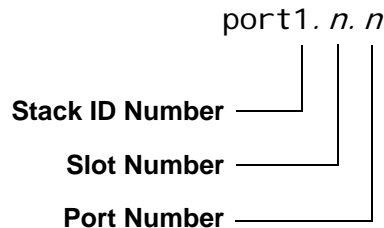


Figure 14. PORT Parameter in the Command Line Interface

The three parts of the PORT parameter are described in Table 13.

Table 13. PORT Parameter Format

Number	Description
Stack ID Number	Identifies the switch's ID number. The ID number is always 1 for a chassis that is operating as a stand-alone switch. (The Switch ID LED on the front panel displays "0" on a switch that is operating as a stand-alone unit. However, its ID number is 1.)
Slot Number	Identifies the slot number with the line card whose ports you want to configure. For the SBx908 GEN2 Switch this value can be 1 to 8.
Port Number	Identifies a port number on an SBx908 GEN2 Ethernet line card.

Here is an example of the PORT parameter on a switch in a stack. It uses the INTERFACE command to enter the Port Interface mode for ports 3 and 4 on the line card in slot 2:

```
awpl us> enable
awpl us# configure terminal
awpl us(config)# interface port1. 2. 3, port1. 2. 4
```

For instructions on the command line interface, refer to the *Software Reference for SBx908 GEN2 Switch, AlliedWare Plus Operating System*.

Software and Hardware Releases

Software releases of the AlliedWare Plus operating software for the SBx908 GEN2 Switch are listed in Table 14.

Table 14. Software and Hardware Releases

Software Version	Hardware
v5.4.7A-1	SBx908 GEN2 Chassis XEM2-12XT Line Card XEM2-12XS Line Card XEM2-4QS Line Card FAN08 Fan Module SBxPWRSYS2 AC Power Supply SBxPWRSYS1-80 DC Power Supply
v5.4.8-0.2	XEM2-1CQ Line Card VCStack Feature
v5.4.9-0	XEM2-12XTm Line Card XEM2-12XT Line Card: Adds 100Mbps port speed
v5.4.9-2	XEM2-8XSTm Line Card

Chapter 2

Beginning the Installation


The chapter contains the following sections:

- ❑ “Reviewing Safety Precautions” on page 48
- ❑ “Choosing a Site for the Chassis” on page 53
- ❑ “Unpacking the Chassis” on page 54
- ❑ “Unpacking SBxPWRSYS2 AC Power Supplies” on page 59
- ❑ “Unpacking SBxPWRSYS1-80 DC Power Supplies” on page 60

Reviewing Safety Precautions


Please review the following safety precautions before beginning the installation procedure.

Note

Safety statements that have the  symbol are translated into multiple languages in the *Translated Safety Statements* document at www.alliedtelesis.com/support.



Warning

Class 1 Laser product. L1




Warning

Laser Radiation.
Class 1M Laser product.



Warning

Do not stare into the laser beam. L2




Warning

Do not look directly at the fiber optic ends or inspect the cable ends with an optical lens. L6




Warning

To prevent electric shock, do not remove the cover. No user-serviceable parts inside. This unit contains hazardous voltages and should only be opened by a trained and qualified technician. To avoid the possibility of electric shock, disconnect electric power to the product before connecting or disconnecting the LAN cables. E1



Warning

Do not work on equipment or cables during periods of lightning activity. E2

**Warning**

Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. [E3](#)

**Warning**

Class I Equipment. This equipment must be earthed. The power plug must be connected to a properly wired earth ground socket outlet. An improperly wired socket outlet could place hazardous voltages on accessible metal parts. [E4](#)

Note

Pluggable Equipment. The socket outlet shall be installed near the equipment and shall be easily accessible. [E5](#)

**Caution**

Air vents must not be blocked and must have free access to the room ambient air for cooling. [E6](#)

**Warning**

Operating Temperatures. This product is designed for a maximum ambient temperature of 50° degrees C. [E52](#)

Note

All Countries: Install product in accordance with local and National Electrical Codes. [E8](#)

**Warning**

When installing this equipment, always ensure that the frame ground connection is installed first and disconnected last. [E11](#)

**Warning**

Only trained and qualified personnel are allowed to install or replace this equipment. [E14](#)



Caution

Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern. [E21](#)



Caution

Risk of explosion if battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Attention: Le remplacement de la batterie par une batterie de type incorrect peut provoquer un danger d'explosion. La remplacer uniquement par une batterie du même type ou de type équivalent recommandée par le constructeur. Les batteries doivent être éliminées conformément aux instructions du constructeur. [E22](#)



Warning

Mounting of the equipment in the rack should be such that a hazardous condition is not created due to uneven mechanical loading. [E25](#)



Warning

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. [E28](#)

Note


Use dedicated power circuits or power conditioners to supply reliable electrical power to the device. [E27](#)



Warning


This unit might have more than one power cord. To reduce the risk of electric shock, disconnect all power cords before servicing the unit. [E30](#)

Note

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than the room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra). 
E35




Caution

Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. 
E36




Warning

Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuits (e.g., use of power strips). 
E37




Warning

This product may have multiple AC power cords installed. To de-energize this equipment, disconnect all power cords from the device. 
E41




Caution

An Energy Hazard exists inside this equipment. Do not insert hands or tools into open chassis slots or plugs. 
E44




Warning

This equipment shall be installed in a Restricted Access location. 
E45



Caution

The unit does not contain serviceable components. Please return damaged units for servicing. 
E42



Warning

The temperature of an operational SFP or SFP+ transceiver may exceed 70° C (158° F). Exercise caution when removing or handling transceivers with unprotected hands. [E43](#)



Warning

The grounding lug on the rear panel of the chassis is for supplemental grounding. The chassis must be supplied by a grounded three wire AC source through the power supply cord.

Choosing a Site for the Chassis

Observe these site requirements.

- ❑ The SBx908 Gen2 Chassis should be installed in a standard 19-inch equipment rack. It should not be installed on a table, desk, or wall.
- ❑ Check that the equipment rack is safely secured so that it will not tip over. Devices should be installed in the rack starting at the bottom, with the heavier devices near the bottom of the rack.
- ❑ The power outlet should be located near the chassis and be easily accessible.
- ❑ The site should allow for easy access to the ports on the front of the switch, so that you can easily connect and disconnect cables, and view the port LEDs.
- ❑ The site should allow for adequate air flow around the unit and through the cooling vents on the front and rear panels. (The ventilation direction is from front to back, with the fans on the back panel drawing the air out of the unit.)
- ❑ The site should not expose the chassis to moisture or water.
- ❑ The site should be a dust-free environment.
- ❑ The site should include dedicated power circuits or power conditioners to supply reliable electrical power to the network devices.
- ❑ Twisted pair cabling should not be exposed to sources of electrical noise, such as radio transmitters, broadband amplifiers, power lines, electric motors, or fluorescent fixtures.
- ❑ Switch ports are suitable for intra-building connections, or where non-exposed cabling is required.
- ❑ Do not install the chassis in a wiring or utility box because it might overheat and fail from inadequate airflow.
- ❑ The power cords included with SBxPWRSYS2 Power Supplies for 100-125 VAC installations have 20 Amp, 125 V NEMA 5-20P plugs that require NEMA 5-20R receptacles. Refer to Figure 15.

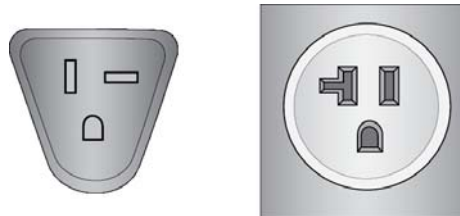


Figure 15. NEMA 5-20P Plug and Receptacle

Unpacking the Chassis

Figure 16 shows the contents of the shipping box.

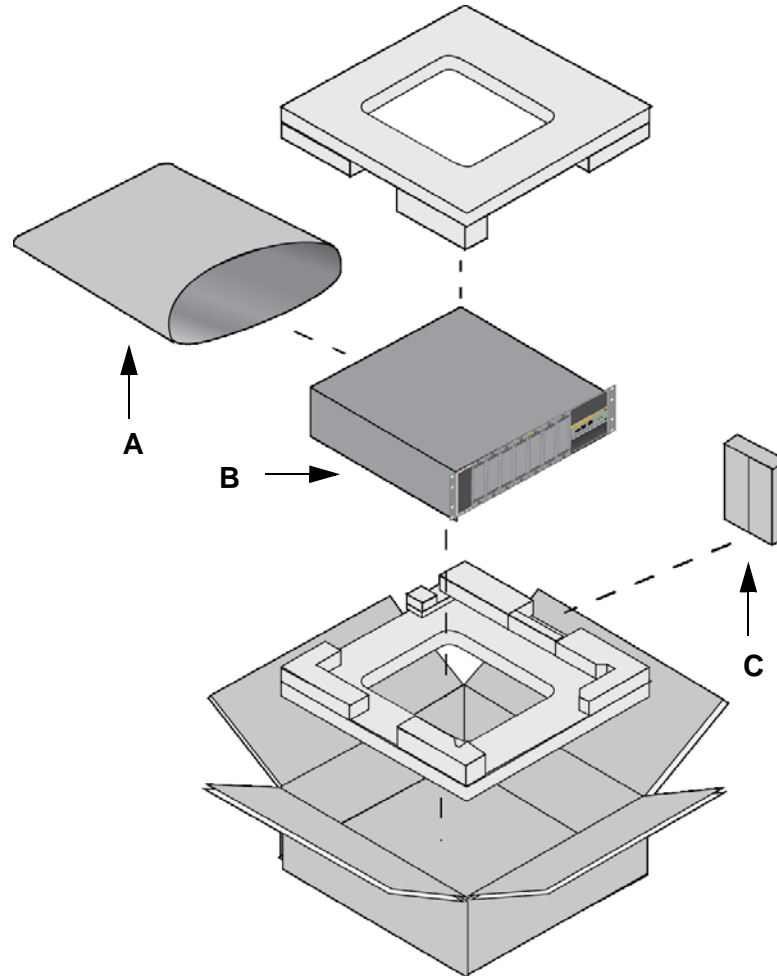


Figure 16. SBx908 Gen2 Switch Shipping Box

The items in the box are listed here:

- ❑ A - Protective bag
- ❑ B - SBx908 Gen2 Switch
- ❑ C - Accessory kit

To unpack the switch, perform the following procedure:

1. Lift the switch from the shipping box and place it on a level, secure table. Refer to Figure 17 on page 55.

**Warning**

The switch is heavy. Ask for assistance lifting the device out of the shipping box. You might injure yourself or damage the device if you lift it without assistance.

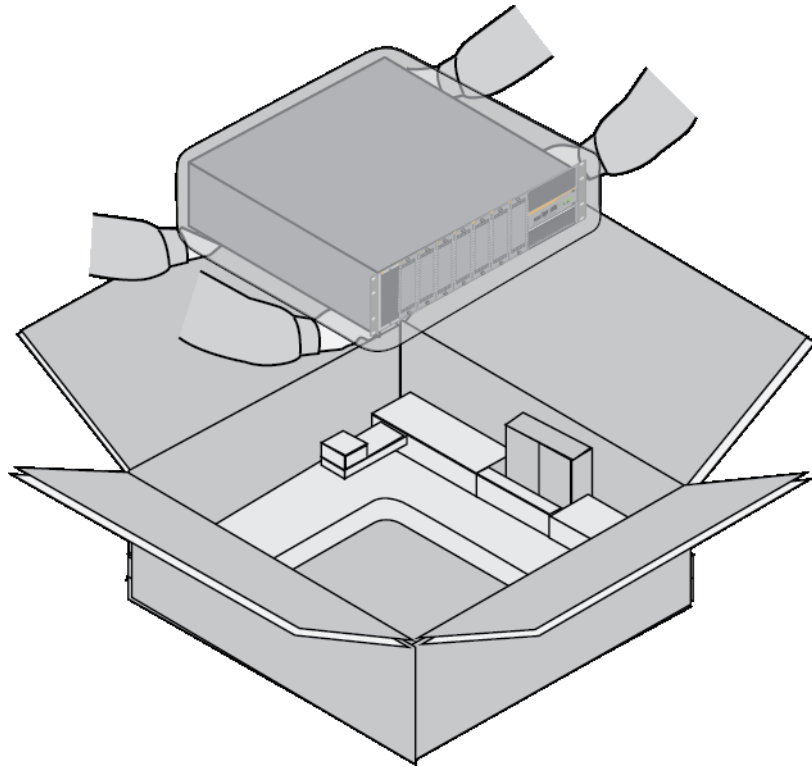


Figure 17. Lifting the Switch from the Shipping Box

2. Remove the switch from the protective shipping bag and place it on a level, secure table. Refer to Figure 18.

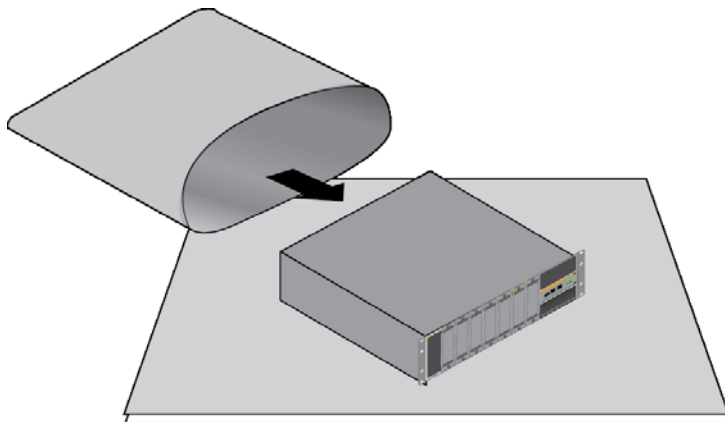


Figure 18. Removing the Switch from the Protective Shipping Bag.

3. Visually inspect the front panel of the switch for the pre-installed components shown in Figure 19.

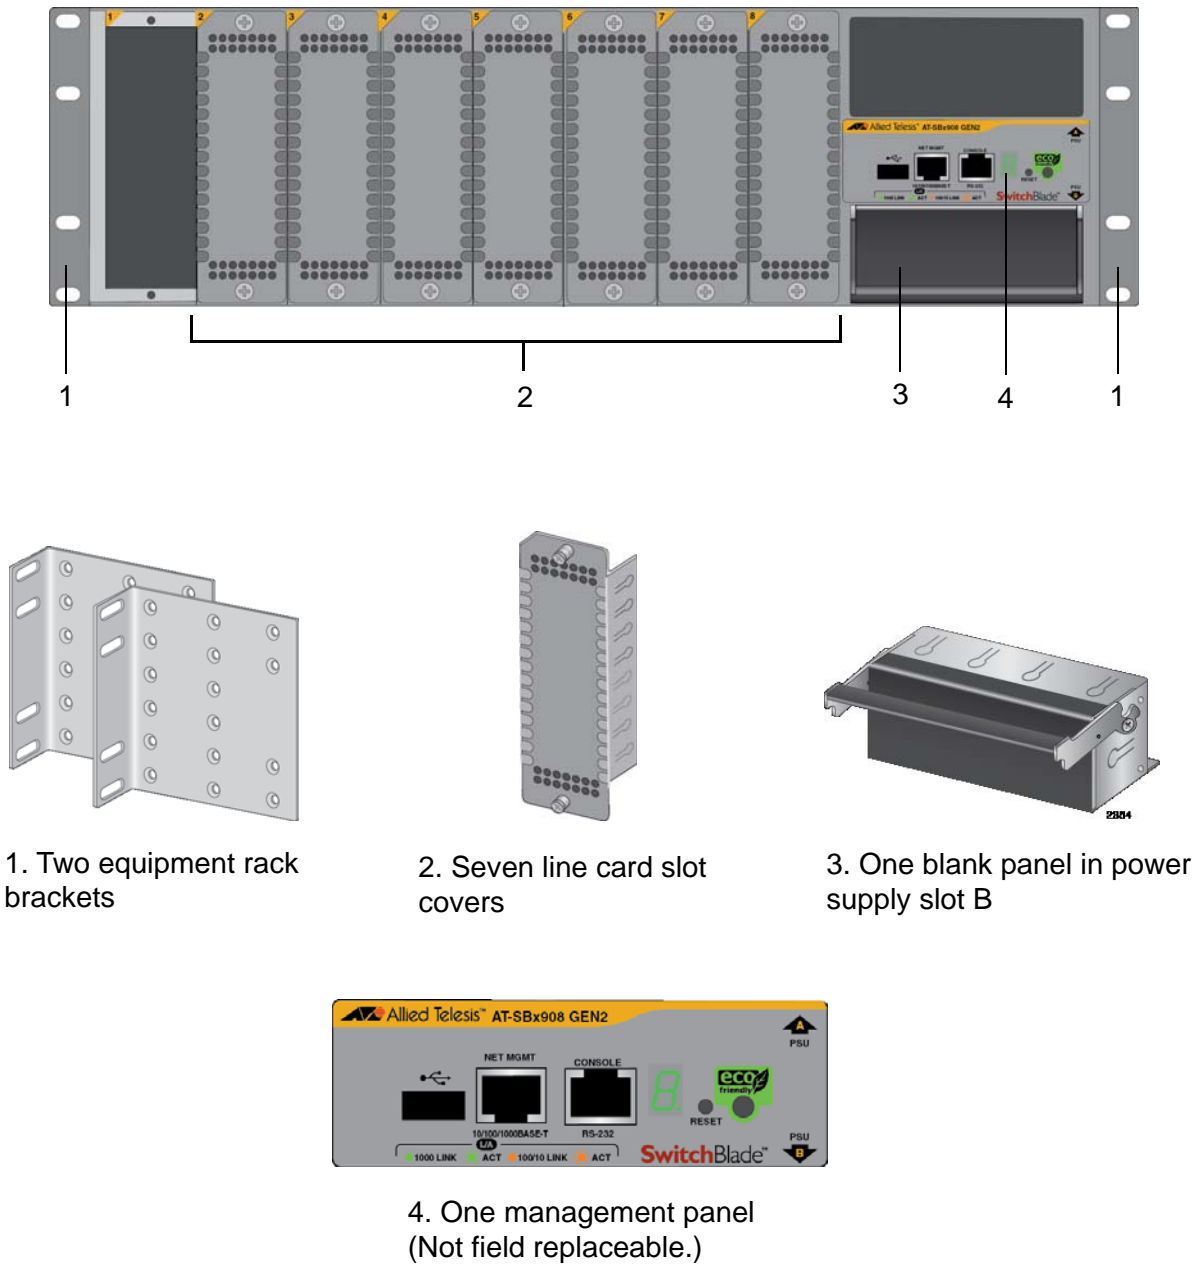


Figure 19. Pre-installed Items on the Front and Side Panels

4. Visually inspect the rear panel for the pre-installed components shown in Figure 20 on page 57.

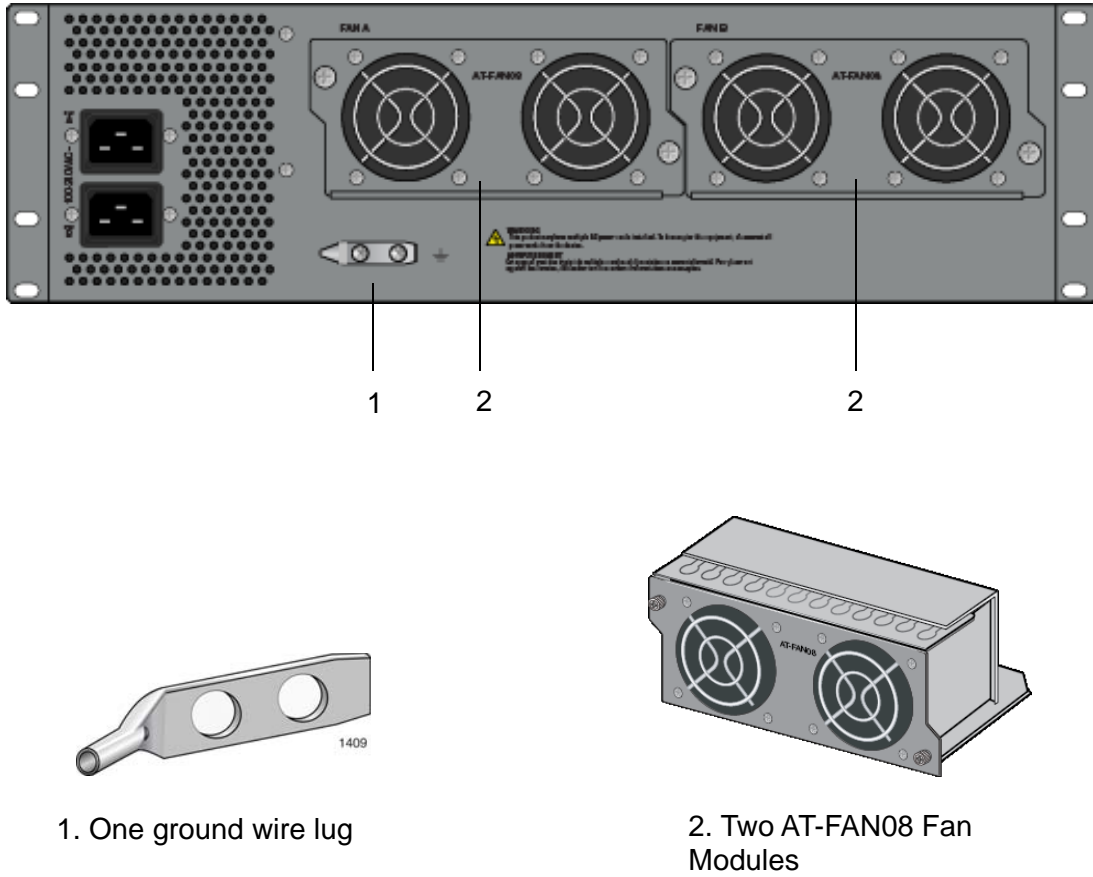


Figure 20. Pre-installed Items on the Rear Panel


Note

You should retain the original packaging material in the event you need to return the unit to Allied Telesis.

Note

The product does not come with power supplies. Power supplies must be ordered separately.

5. Remove the accessory kit from the shipping box and verify its components, listed in Figure 21 on page 58.

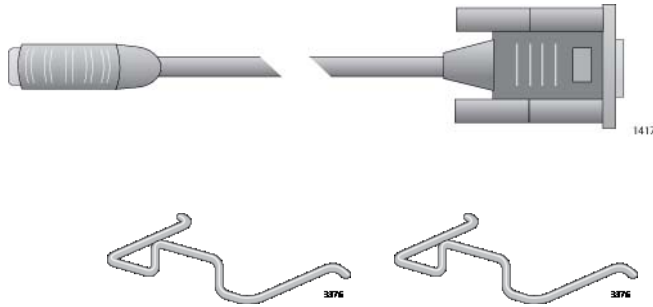

One 2 m (6.6 ft) local management cable with RJ-45 (8P8C) and DB-9 (D-sub 9-pin) connectors.

Two power cord retaining clips

Figure 21. Accessory Kit

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

6. After unpacking the switch, do one of the following:
 - To unpack the power supplies, go to “Unpacking SBxPWRSYS2 AC Power Supplies” on page 59 or “Unpacking SBxPWRSYS1-80 DC Power Supplies” on page 60.
 - Otherwise, go to Chapter 3, “Installing the Chassis” on page 61.

Unpacking SBxPWRSYS2 AC Power Supplies

The SBxPWRSYS2 AC Power Supply shipping box should include the items in Figure 22.



One SBxPWRSYS2 Power Supply



One regional AC power supply cord



One tie wrap

Figure 22. Items in the Shipping Box for the SBxPWRSYS2 AC Power Supply


The tie wrap included with the power supply is not used with the SBx908 Gen2 chassis.

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

After unpacking the chassis and power supplies, go to Chapter 3, "Installing the Chassis" on page 61.

Unpacking SBxPWRSYS1-80 DC Power Supplies

The shipping box for the SBxPWRSYS1-80 DC Power Supply should include the items in Figure 23.

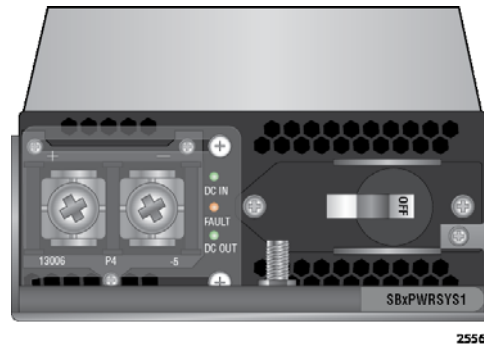

One SBxPWRSYS1-80 DC Power Supply



Two straight power wire ring lugs



One grounding wire ring lug



Two right angle power wire ring lugs

Figure 23. Items in the Shipping Box for the SBxPWRSYS1-80 DC Power Supply

If any item is missing or damaged, contact your Allied Telesis sales representative for assistance.

After unpacking the chassis and power supplies, go to Chapter 3, "Installing the Chassis" on page 61.

Chapter 3

Installing the Chassis

The procedures in this chapter explain how to install the chassis in a standard 19-inch equipment rack. The procedures are listed here:

- ❑ “Tools and Material” on page 62
- ❑ “Adjusting the Equipment Rack Brackets” on page 63
- ❑ “Installing the Chassis in an Equipment Rack” on page 67
- ❑ “Installing the Chassis Grounding Wire” on page 68
- ❑ “Installing SBxPWRSYS2 AC Power Supplies” on page 71
- ❑ “Installing SBxPWRSYS1-80 DC Power Supplies” on page 75
- ❑ “Installing Ethernet Line Cards” on page 79
- ❑ “Installing Blank Line Card Slot Covers” on page 83
- ❑ “Installing the Blank Power Supply Slot Cover” on page 85
- ❑ “Installing the Power Cord Retaining Clips” on page 87

Tools and Material

You need to provide the following tools and material to install the chassis:

- #2 Phillips-head screwdriver
- Eight screws for a standard 19-inch equipment rack
- 10 AWG stranded grounding wire
- Wire insulation stripper
- Crimping tool

Adjusting the Equipment Rack Brackets

The chassis comes with two pre-installed equipment rack brackets. The default positions of the brackets align the front of the chassis with the front of the equipment rack. You can re-position the brackets on the sides of the chassis to have the device extend in front of the rack. Figure 24 here and Figure 25 on page 64 and Figure 26 on page 65 show the various bracket and chassis orientations. The first illustration in Figure 24 shows the default positions of the brackets.

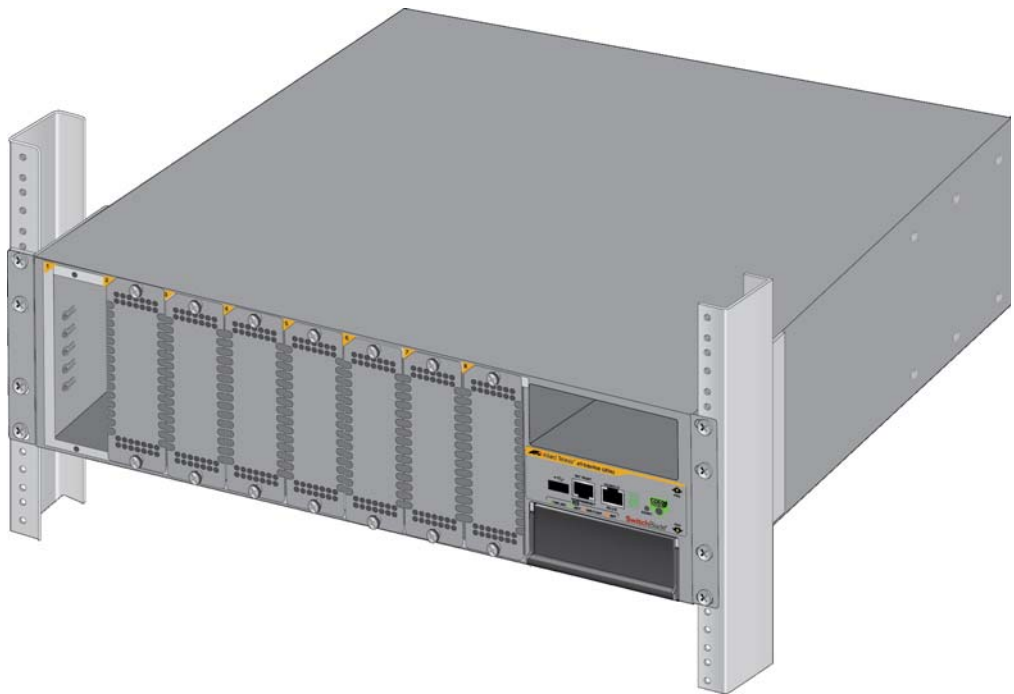


Figure 24. Chassis Orientations in the Equipment Rack

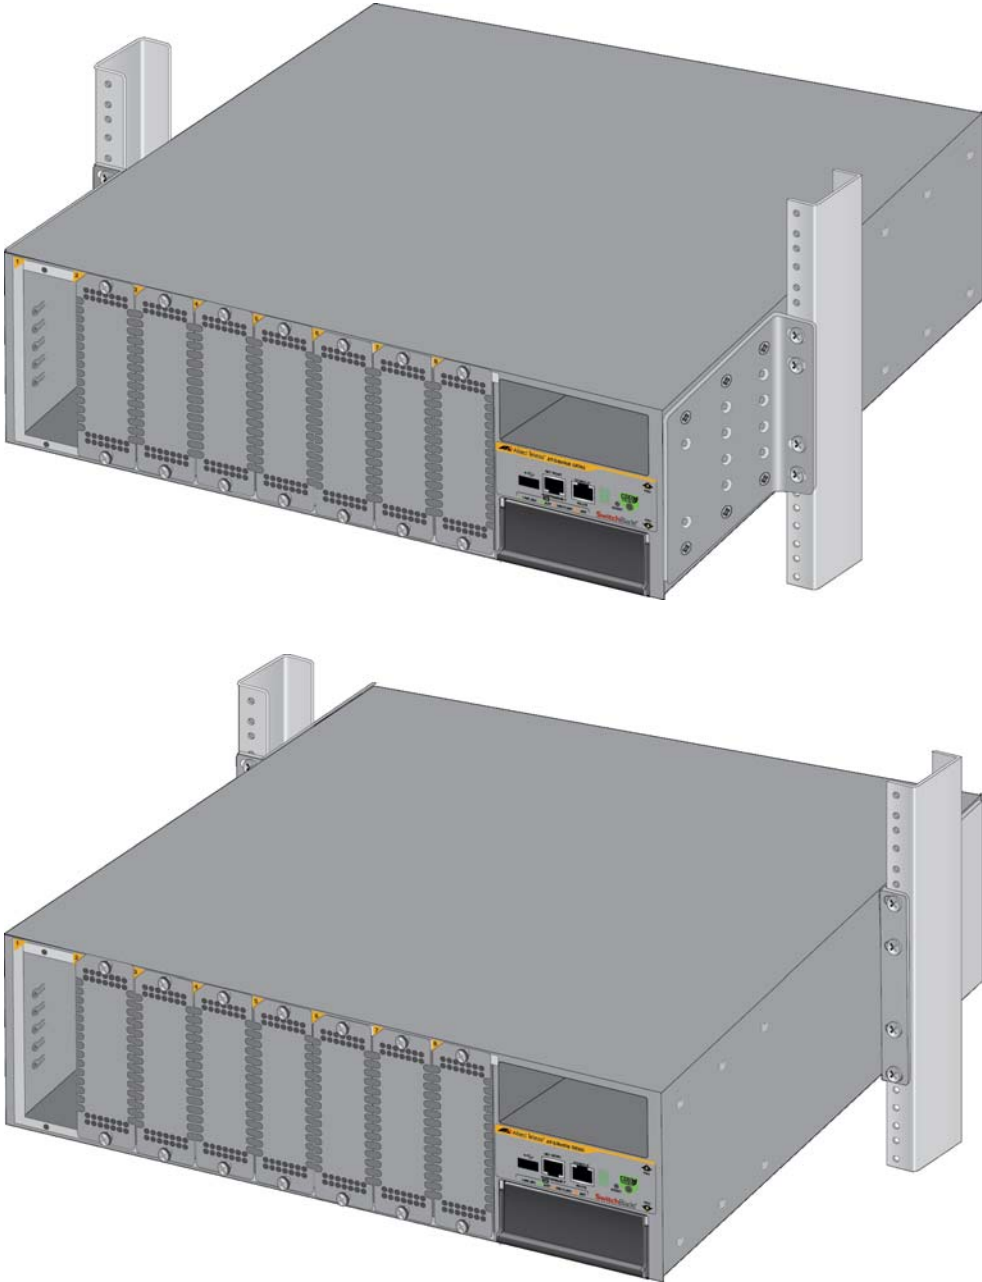


Figure 25. Chassis Orientations in the Equipment Rack

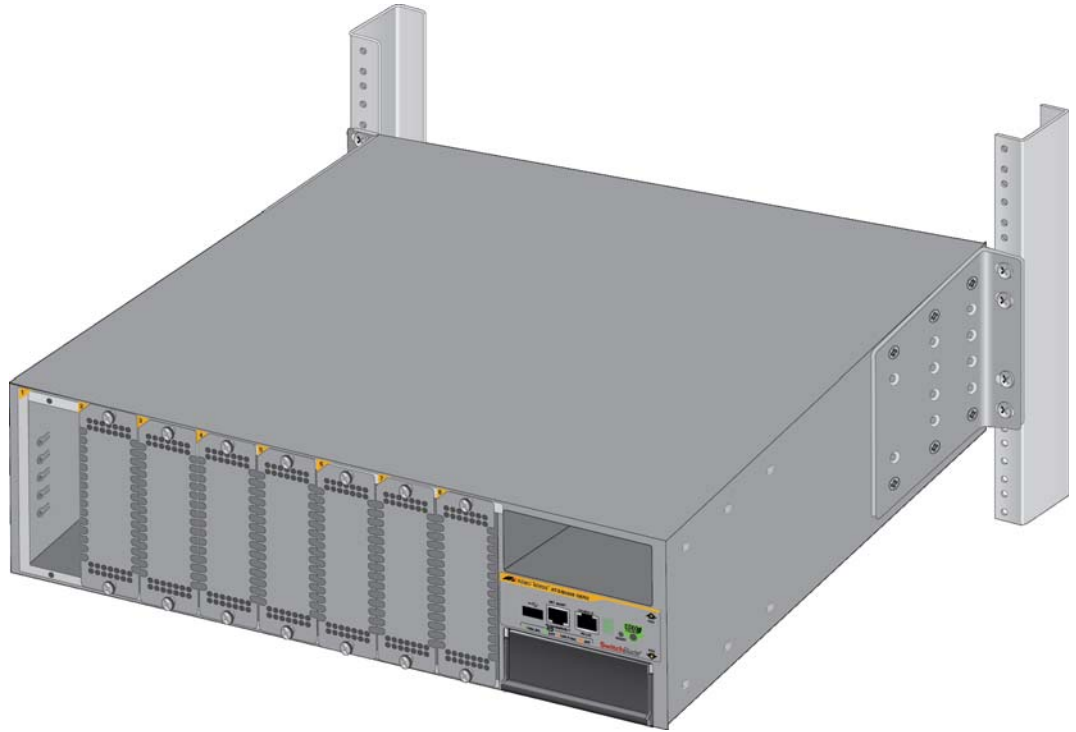


Figure 26. Chassis Orientations in the Equipment Rack

To change the positions of the brackets, use a #2 Phillips-head screwdriver to remove them from their default positions and secure them to the new locations. An example is shown in Figure 27 on page 66.

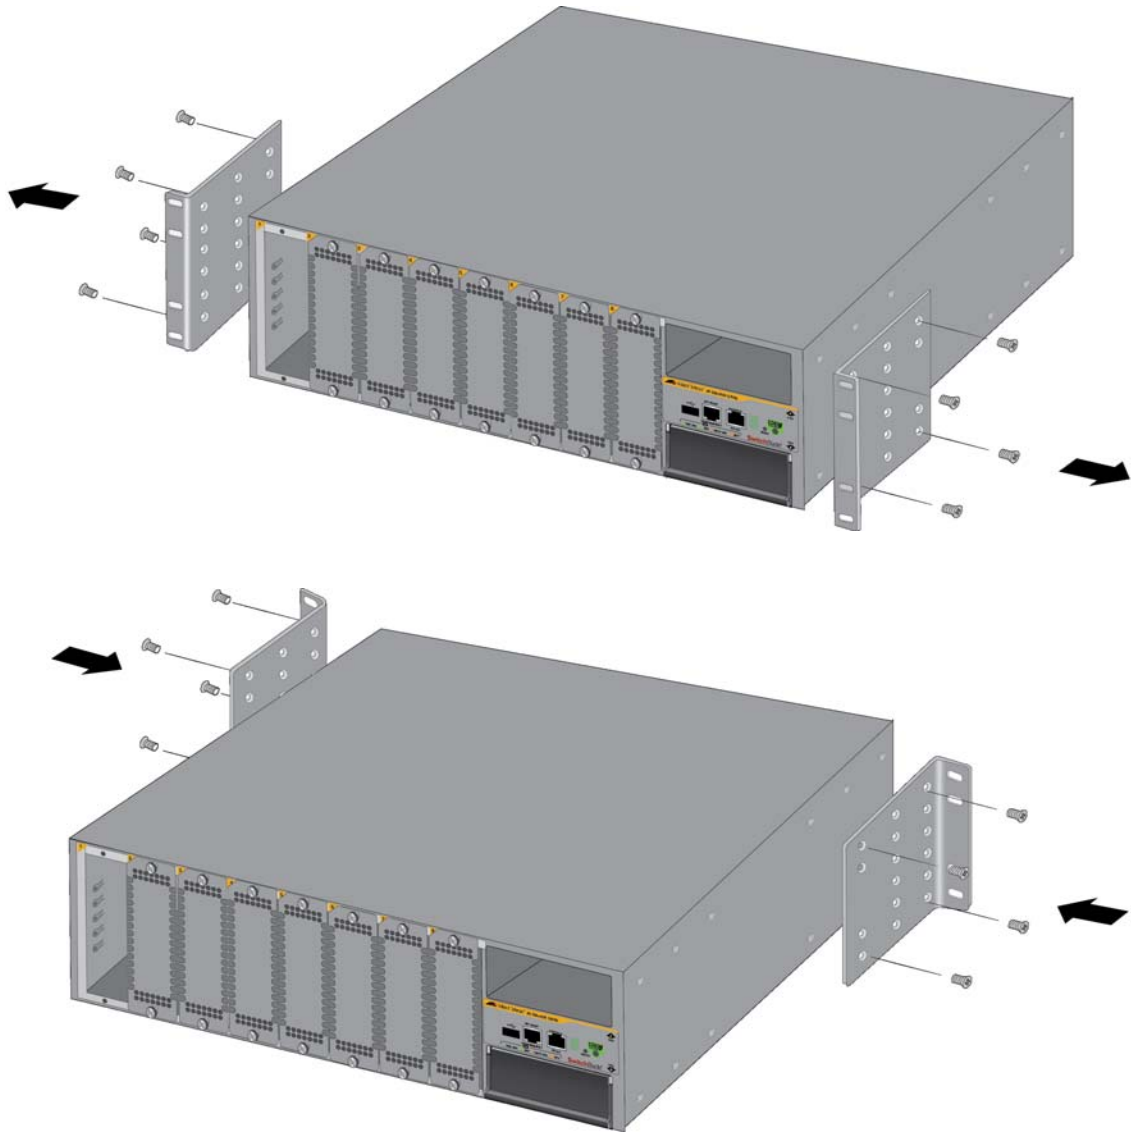


Figure 27. Example of Adjusting the Equipment Rack Brackets

Installing the Chassis in an Equipment Rack

This chassis is designed for a standard 19-inch equipment rack. Please review the installation guidelines in “Choosing a Site for the Chassis” on page 53 before installing the chassis.



Caution

The chassis may be heavy and awkward to lift. Allied Telesis recommends that you get assistance when mounting the chassis in an equipment rack. [E28](#)

To install the chassis, perform the following procedure:

1. Place the chassis on a level, secure surface.
2. If you want to reposition the brackets from their pre-installed positions, remove them using a #2 Phillips-head screwdriver and secure them in their new position. Refer to Figure 27 on page 66 for an example.
3. Have two other people hold the chassis in the equipment rack at the desired location while you secure it using eight standard equipment rack screws (not provided). Refer to Figure 28.

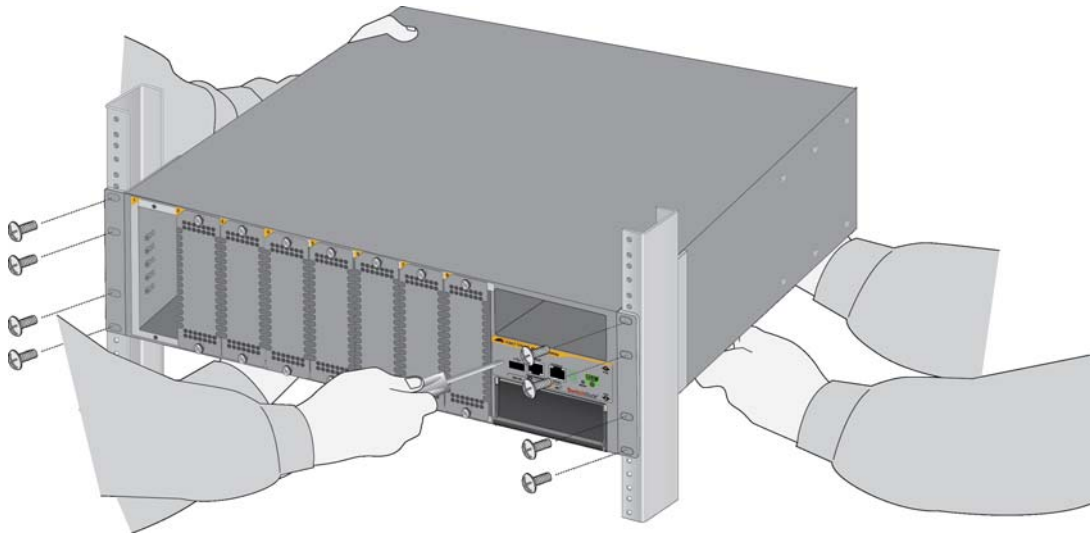


Figure 28. Securing the Chassis to the Equipment Rack

4. Go to “Installing the Chassis Grounding Wire” on page 68.

Installing the Chassis Grounding Wire

This procedure explains how to connect a grounding wire to the chassis. The chassis requires a permanent connection to a good earth ground for the line cards and power supplies. The procedure requires the following items:

- ❑ Grounding lug (pre-installed on the rear panel of the chassis)
- ❑ #2 Phillips-head screwdriver (not provided)
- ❑ Crimping tool (not provided)
- ❑ 10 AWG stranded grounding wire (not provided)

To connect the chassis to an earth ground, perform the following procedure:

1. Prepare an adequate length of stranded grounding wire (10 AWG) for the ground connection by stripping it as shown in Figure 29.

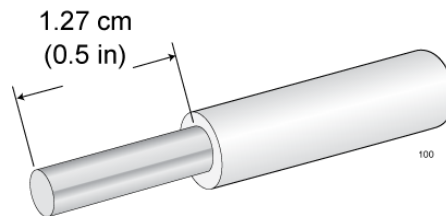


Figure 29. Stripping the Grounding Wire

2. Use a #2 Phillips-head screwdriver to remove the two screws that secure the grounding lug to the rear panel of the chassis. Refer to Figure 30 on page 69.



Figure 30. Removing the Grounding Lug from the Chassis

3. Insert one end of the grounding wire into the grounding lug, as shown in Figure 31, and use a crimping tool to secure the wire to the grounding lug.

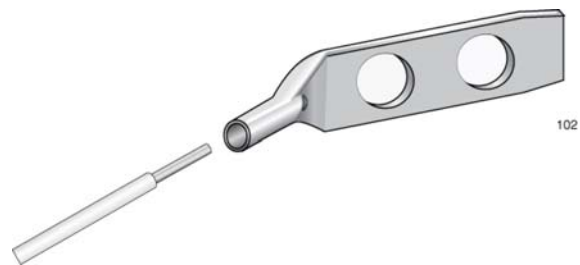


Figure 31. Attaching the Grounding Wire to the Grounding Lug

4. Install the grounding lug on the rear panel of the chassis. Refer to Figure 32 on page 70.

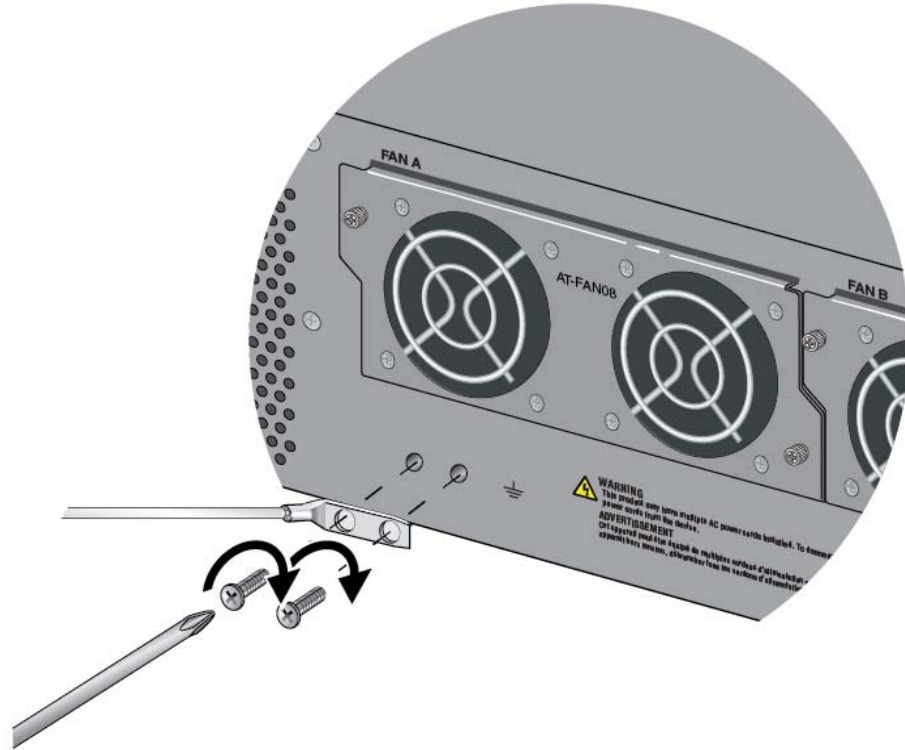


Figure 32. Installing the Grounding Lug and Wire

5. Connect the other end of the grounding wire to the building protective earth.
6. Go to “Installing SBxPWRSYS2 AC Power Supplies” on page 71 or “Installing SBxPWRSYS1-80 DC Power Supplies” on page 75.

Installing SBxPWRSYS2 AC Power Supplies

This section contains the procedure for installing SBxPWRSYS2 AC Power Supplies in the chassis. For a list of the components that come with the power supply, refer to “Unpacking SBxPWRSYS2 AC Power Supplies” on page 59.



Warning

The power supply is heavy. Use both hands to lift it. You might injure yourself or damage the equipment if you drop it.



Caution

The device can be damaged by static electricity. Be sure to follow proper anti-static precautions when installing the device. Allied Telesis recommends using a properly grounded wrist strap or other personal anti-static device and an anti-static mat.

To install power supplies in the chassis, perform the following procedure:

1. Choose a slot for the power supply. The power supply slots are labeled PSU A and PSU B

If you are installing only one power supply, you may install it in either slot. Allied Telesis recommends PSU A because that slot does not come with a blank power supply panel.

2. If there is already a power supply in PSU A, lift the handle on the blank power supply panel in PSU B and slide the panel from the slot. Refer to Figure 33 on page 72.

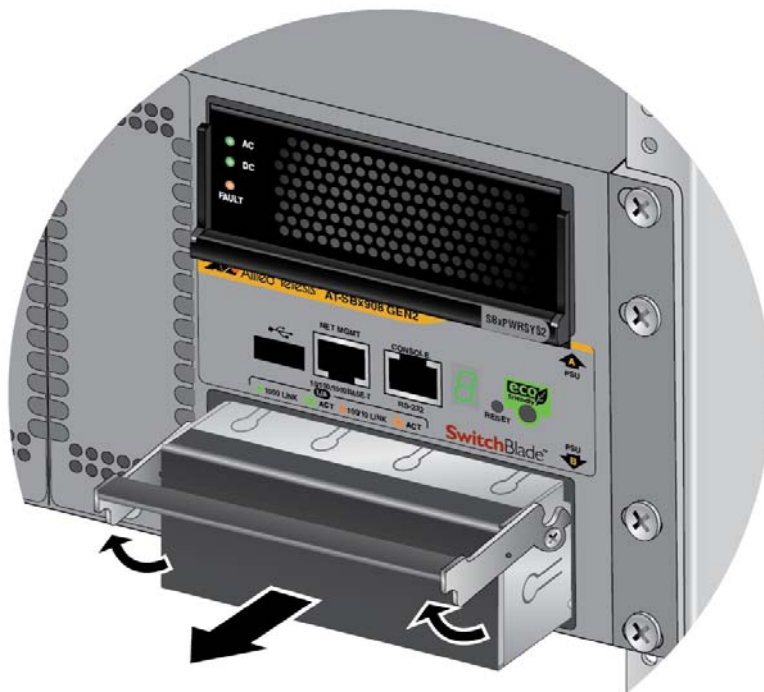


Figure 33. Removing the Blank Power Supply Panel from Power Supply Slot B

3. Lift the handle on the SBxPWRSYS2 AC Power Supply. Refer to Figure 34.



Figure 34. Lifting the Locking Handle on the SBxPWRSYS2 Power Supply

4. Carefully align the power supply in the slot and slide it into the slot until it makes contact with the connector inside the chassis. Refer to Figure 35 on page 73.

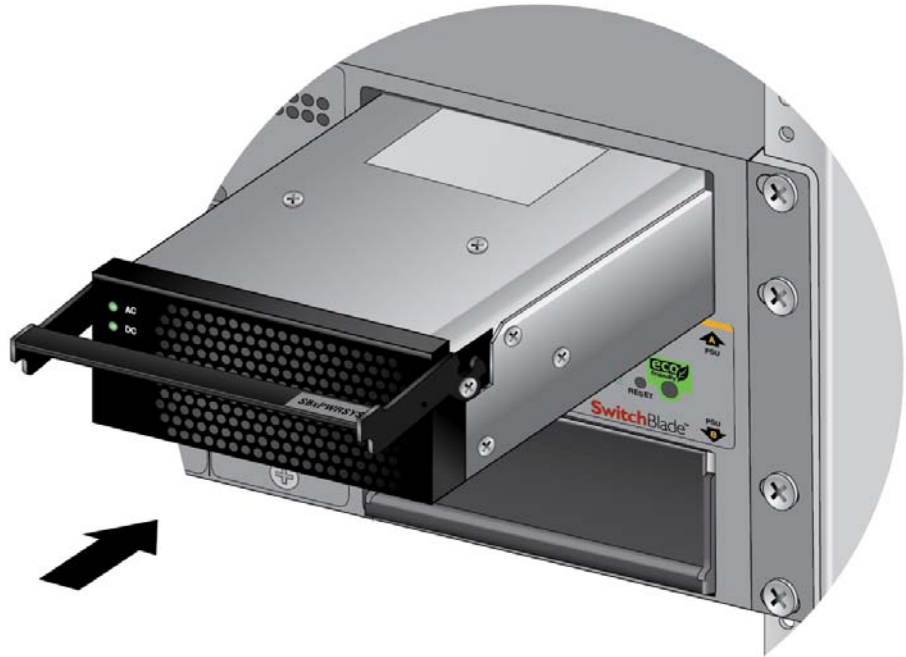


Figure 35. Sliding the SBxPWRSYS2 AC Power Supply into the Chassis

5. Gently press on the faceplate of the power supply to seat the unit on the connector on the backplane of the chassis, and lower the locking handle to secure the unit in the chassis. Refer to Figure 36.



Figure 36. Lowering the Locking Handle on the SBxPWRSYS2 AC Power Supply

6. Visually inspect the power supply to be sure that its faceplate is flush against the front panel of the chassis and the locking handle is fully down.
7. If necessary, repeat this procedure to install a second power supply.
8. After installing the power supplies, go to “Installing Ethernet Line Cards” on page 79.

Installing SBxPWRSYS1-80 DC Power Supplies

This section contains the installation procedure for SBxPWRSYS1-80 DC Power Supplies. For a list of the components that come with the power supply, refer to “Unpacking SBxPWRSYS1-80 DC Power Supplies” on page 60.



Warning

The power supply is heavy. Use both hands to lift it. You might injure yourself or damage the equipment if you drop it.



Caution

The device can be damaged by static electricity. Be sure to follow proper anti-static precautions when installing the device. Allied Telesis recommends using a properly grounded wrist strap or other personal anti-static device and an anti-static mat.

To install SBxPWRSYS1-80 DC Power Supplies in the chassis, perform the following procedure:

1. Choose a slot for the power supply. The power supply slots are labeled PSU A and PSU B

If you are installing only one power supply, you may install it in either slot. Allied Telesis recommends PSU A because that slot does not come with a blank power supply panel.

2. If there is already a power supply in PSU A, lift the handle on the blank power supply panel in PSU B and slide the panel from the slot. Refer to Figure 33 on page 72.
3. Verify that the On/Off switch on the power supply is in the Off position. Refer to Figure 37.

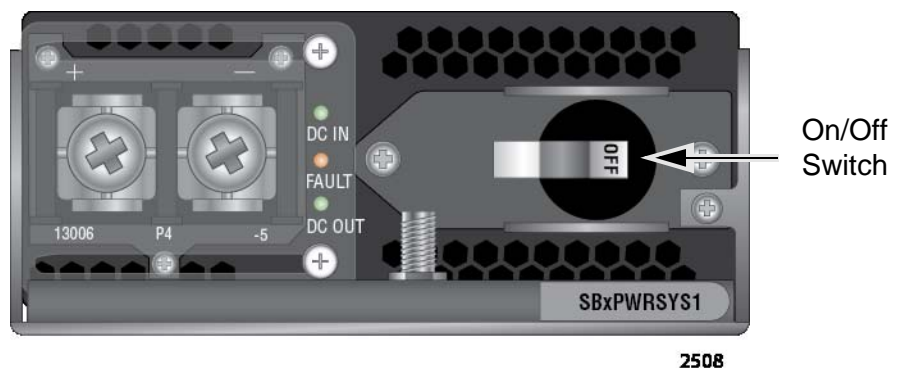


Figure 37. On/Off Switch on the SBxPWRSYS1-80 DC Power Supply

4. With a #2 Phillips-head screwdriver, loosen the handle locking screw on the power supply, as shown in Figure 38.

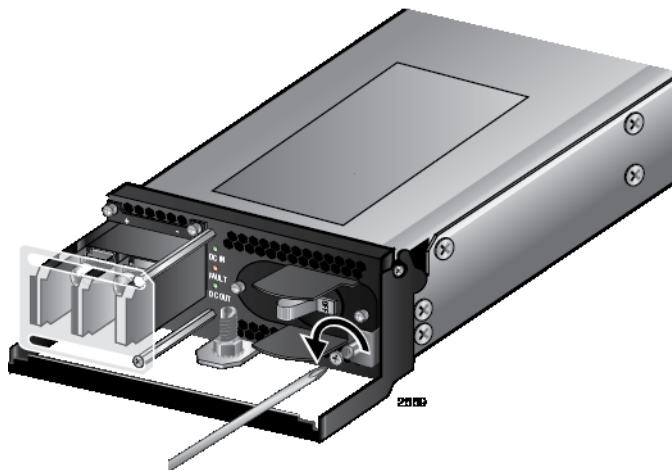


Figure 38. Loosening the Handle locking Screw on the SBxPWRSYS1-80 DC Power Supply

5. Lift the handle on the SBxPWRSYS1-80 DC Power Supply. Refer to Figure 39.



Figure 39. Lifting the Locking Handle on the SBxPWRSYS1-80 DC Power Supply

6. Carefully align the power supply in the slot and slide it into the slot until it makes contact with the connector inside the chassis. Refer to Figure 40 on page 77.



Figure 40. Inserting the SBxPWRSYS1-80 DC Power Supply

7. Gently press on the faceplate of the power supply to seat the unit on the connector on the backplane of the chassis, and lower the locking handle to secure the unit in the chassis. Refer to Figure 41.



Figure 41. Lowering the Locking Handle on the SBxPWRSYS1-80 DC Power Supply

8. Visually inspect the power supply to be sure that its faceplate is flush against the front panel of the chassis and the locking handle is fully down.

Note

Do not tighten the handle locking screw yet. You may need to slightly lift the handle to move the plastic guard panel when you connect the positive and negative wires.

9. If necessary, repeat this procedure to install a second power supply.
10. After installing the power supplies, go to “Installing Ethernet Line Cards” on page 79.

Installing Ethernet Line Cards

This section contains the procedure for installing Ethernet line cards in the chassis. The illustrations show the XEM2-12XT Line Card. The procedure is the same for all line card models.



Caution

The device can be damaged by static electricity. Be sure to follow proper anti-static precautions when installing the device. Allied Telesis recommends using a properly grounded wrist strap or other personal anti-static device and an anti-static mat.

To install Ethernet line cards, perform the following procedure:

1. Choose a slot in the chassis for the card. You can install cards in slots 1 to 8.
2. If the slot is covered with a blank panel, use a #2 Phillips-head screwdriver to loosen the two captive screws on the panel and remove it from the chassis. Refer to Figure 42.

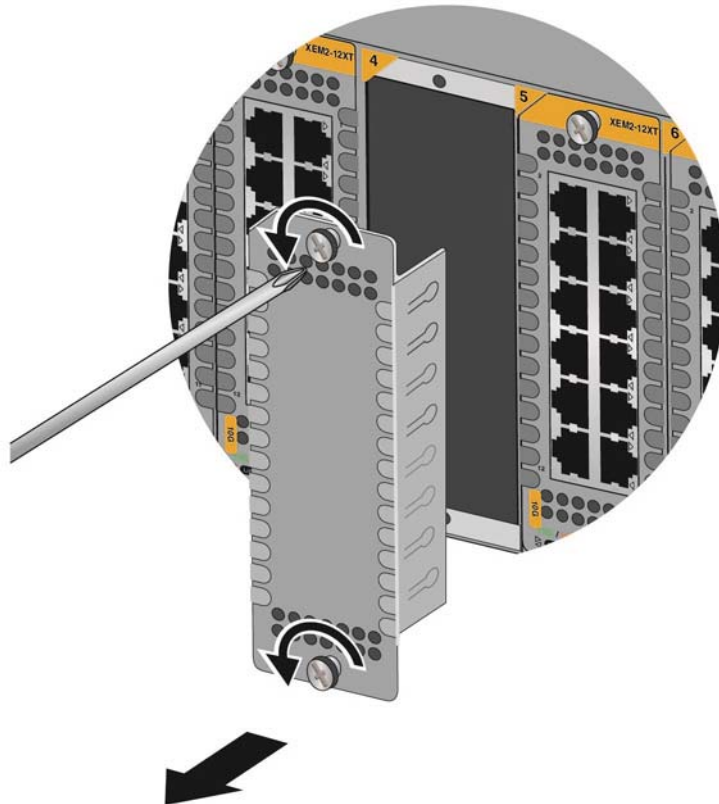


Figure 42. Removing a Blank Line Card Cover

3. Carefully remove the new Ethernet line card from its shipping container and anti-static bag. Refer to Figure 43.



Figure 43. Removing the Ethernet Line Card from the Anti-static Bag

4. Position the line card with the notch on the faceplate in the upper left corner, as shown in Figure 44 on page 81 and carefully slide it into the slot. The slot in the chassis has top and bottom flanges that fit into grooves on the top and bottom of the card.

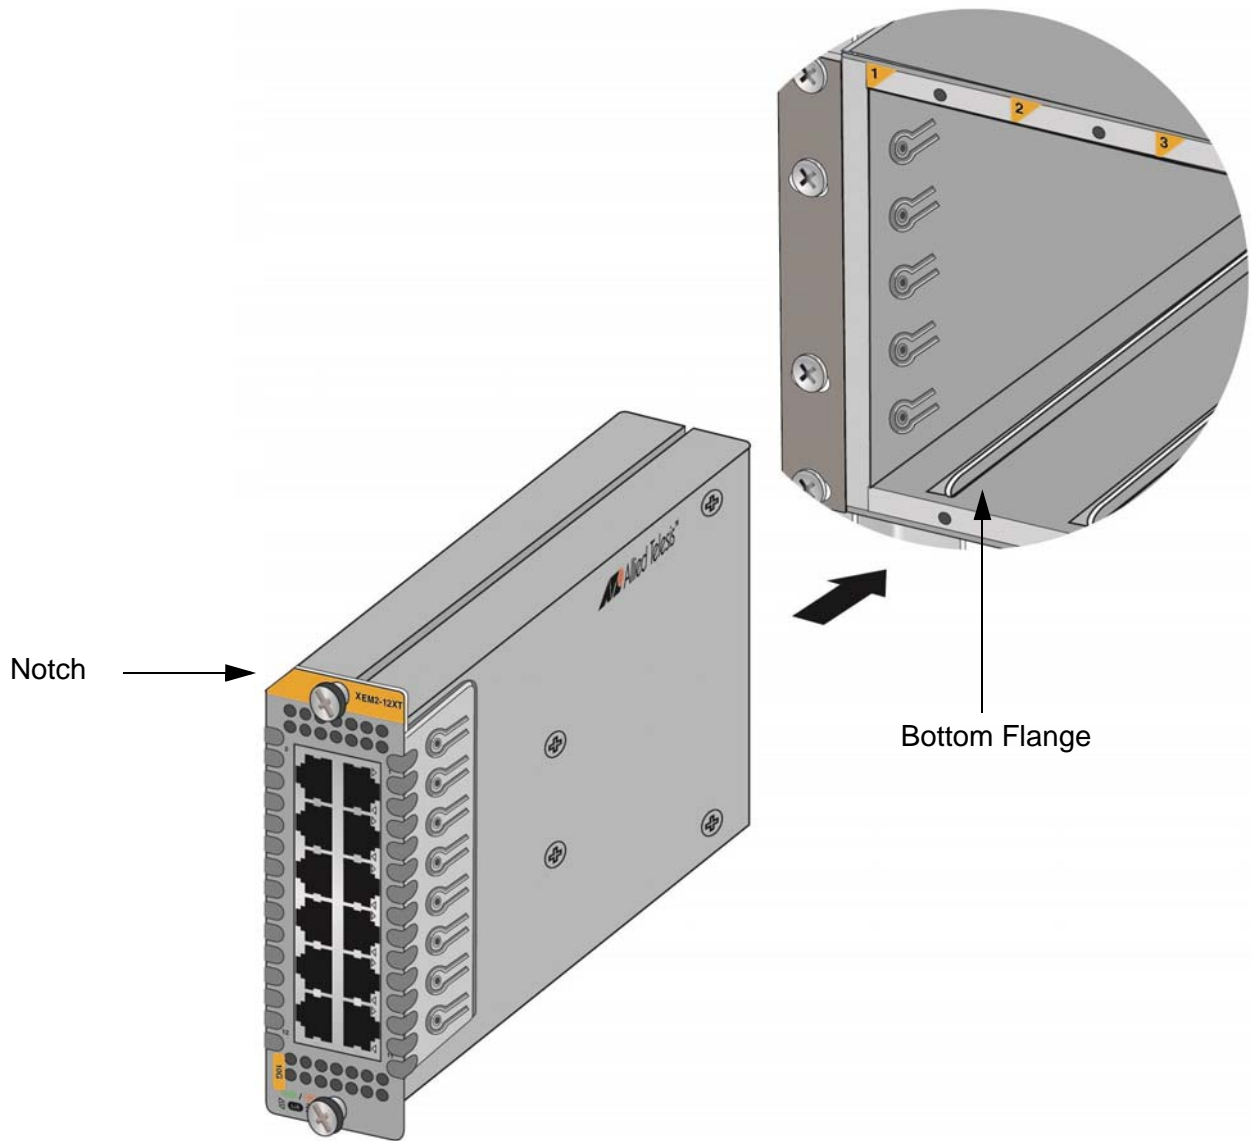


Figure 44. Sliding the Ethernet Line Card into the Slot



Caution

Do not force the card into the slot. If you feel resistance, remove it and try again.

5. When you feel the line card make contact with the connector on the backplane of the chassis, gently press on the top and bottom of the faceplate to seat the card on the connector. Refer to Figure 45 on page 82.

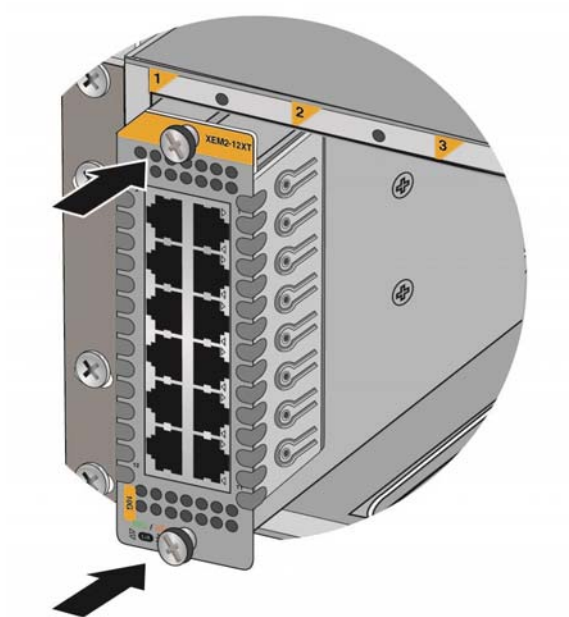


Figure 45. Seating an Ethernet Line Card in the Chassis

6. Visually inspect the line card to verify that its faceplate is flush against the front panel of the chassis.
7. Tighten the two captive screws on the card to secure it in the chassis. Refer to Figure 46.

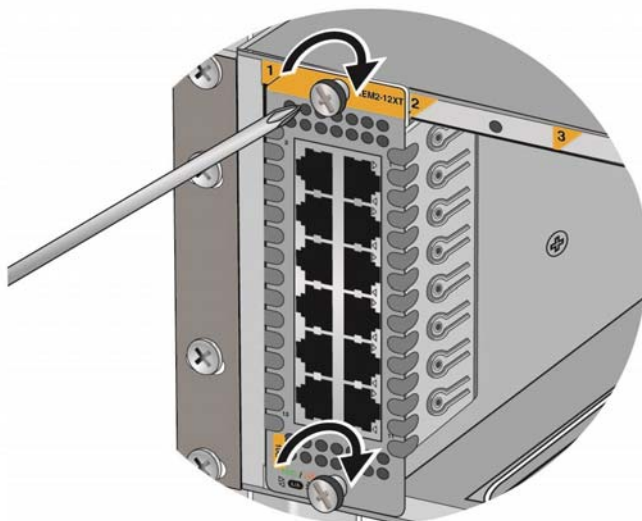


Figure 46. Tightening the Two Captive Screws on the Ethernet Line Card

8. Repeat this procedure to install additional cards.
9. After installing the line cards, go to “Installing Blank Line Card Slot Covers” on page 83.

Installing Blank Line Card Slot Covers

After installing the Ethernet line cards, inspect slots 1 to 8 for empty slots. Empty slots need to be covered with the blank slot covers that come with the chassis. Do one of the following:

- ❑ If there are no empty, uncovered line card slots, go to “Installing the Blank Power Supply Slot Cover” on page 85.
- ❑ If there are empty, uncovered line card slots, perform the following procedure.

To install blank slot covers, perform the following procedure:

1. Position the blank slot cover with the notch in the upper left and slide it into the empty slot. Refer to Figure 47.

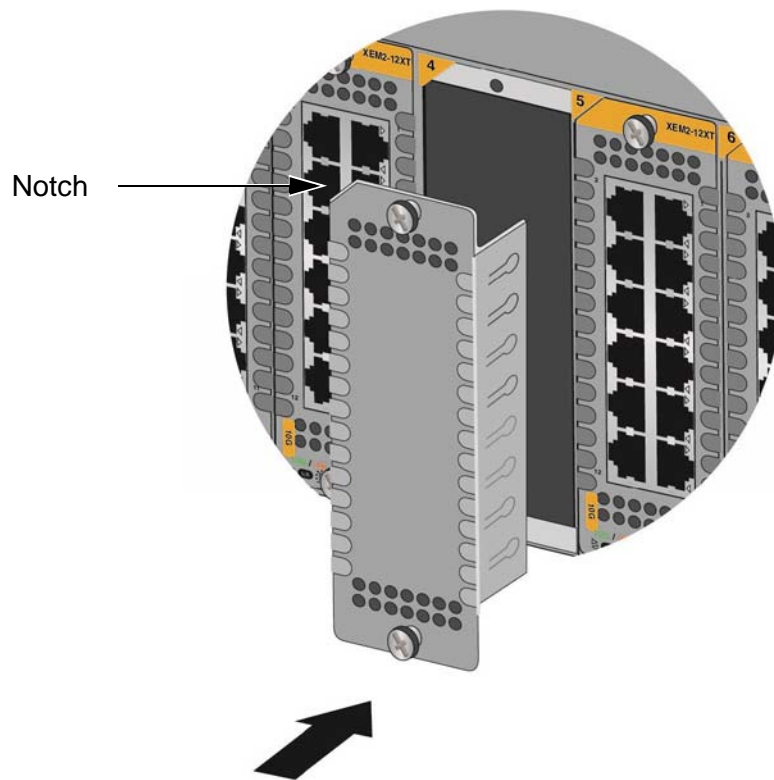


Figure 47. Installing a Blank Slot Cover

2. Tighten the two captive screws with a #2 Phillips-head screwdriver to secure the cover to the chassis. Refer to Figure 48 on page 84.

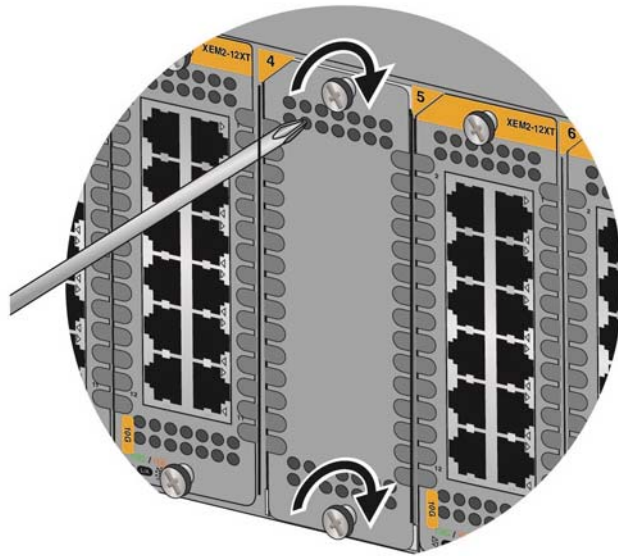


Figure 48. Tightening the Captive Screws on a Blank Slot Cover

3. Repeat this procedure to install additional blank slot covers.
4. Go to “Installing the Blank Power Supply Slot Cover” on page 85

Installing the Blank Power Supply Slot Cover

If you installed only one power supply in the chassis, check that the empty power supply slot is covered with the blank power supply slot cover included with the chassis. Do one of the following:

- ❑ If the chassis has two power supplies or if the empty power supply is already covered, go to “Installing the Power Cord Retaining Clips” on page 87.
- ❑ If a power supply slot is uncovered, continue with the procedure in this section.

To install the blank power supply slot cover, perform the following procedure:

1. Lift the locking handle on the blank power supply slot cover. Refer to Figure 49.

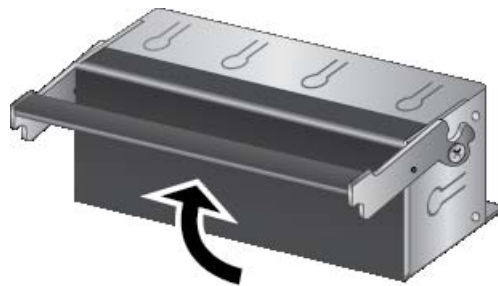


Figure 49. Lifting the Locking Handle on the Blank Power Supply Slot Cover

2. Align the cover in the empty power supply slot and carefully slide it into the slot. Figure 50 on page 86 shows the cover being installed in the PSU B slot.

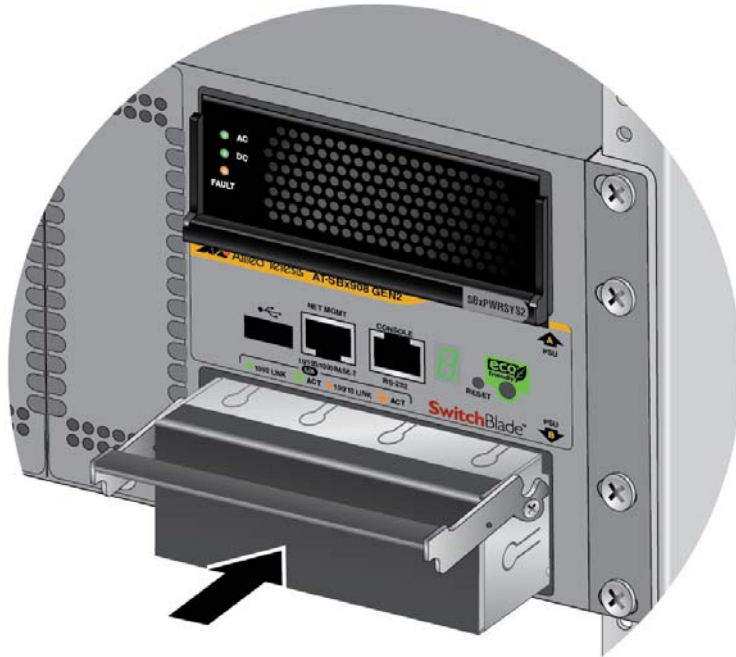


Figure 50. Aligning the Blank Power Supply Cover in the Slot

3. Lower the locking handle on the blank power supply slot cover to secure the cover in the chassis. Refer to Figure 51.



Figure 51. Lowering the Locking Handle on the Blank Power Supply Slot Cover

4. Go to “Installing the Power Cord Retaining Clips” on page 87.

Installing the Power Cord Retaining Clips

The chassis comes with two power cord retaining clips in its accessory kit. The clips are used to prevent the power cords for the SBxPWRSYS2 AC power supply from being accidentally disconnected from the unit. To install a power cord retaining clip, press in the sides and insert the ends into the holes above and below the AC connector. Repeat to install the second power cord retaining clip. Refer to Figure 52.

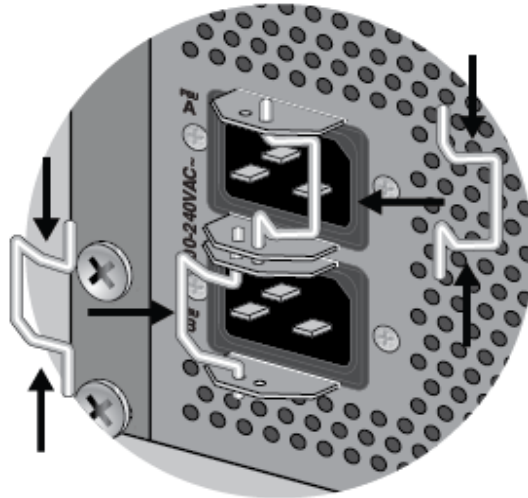


Figure 52. Installing the Power Cord Retaining Clips

Note

The power cord retaining clips are not required for the SBxPWRSYS1-80 DC power supply.

After installing the retaining clips, go to Chapter 4, “Powering On the Chassis” on page 89.

Chapter 4

Powering On the Chassis

This chapter contains the following procedures:

- ❑ “Verifying the Installation” on page 90
- ❑ “Powering On SBxPWRSYS2 Power Supplies” on page 91
- ❑ “Powering On SBxPWRSYS1-80 DC Power Supplies” on page 94
- ❑ “Monitoring the Initialization Processes” on page 121

Verifying the Installation

Please perform the following procedure before powering on the chassis:

1. Verify that the chassis has at least one power supply in slot PSU A or B.
2. If the chassis has only one power supply, verify that the empty power supply slot on the front panel is covered with a blank panel. For instructions, refer to “Installing the Blank Power Supply Slot Cover” on page 85.
3. Verify that you installed the power cord retaining clips on the AC power connectors on the rear panel of the chassis. For instructions, refer to “Installing the Power Cord Retaining Clips” on page 87
4. Verify that the grounding lug on the back panel of the chassis is properly grounded. For instructions, refer to “Installing the Chassis Grounding Wire” on page 68.
5. Verify that all empty line card slots on the front panel of the chassis are covered with slot covers. If there are open slots, perform the procedure “Installing Blank Line Card Slot Covers” on page 83.

You may now power on the chassis. For instructions, refer to “Powering On SBxPWRSYS2 Power Supplies” on page 91 or “Powering On SBxPWRSYS1-80 DC Power Supplies” on page 94:

Powering On SBxPWRSYS2 Power Supplies

The procedure in this section explains how to power on SBxPWRSYS2 Power Supplies. If you have not installed the power supplies, refer to “Installing SBxPWRSYS2 AC Power Supplies” on page 71 for instructions.

Before powering on the chassis, review the information in “Power Specifications” on page 180 for the power specifications of the switches.



Warning

Power cord is used as a disconnection device. To de-energize equipment, disconnect the power cord. [E3](#)

Note

Pluggable Equipment. The socket outlet shall be installed near the equipment and shall be easily accessible. [E5](#)



Caution

If the chassis has two SBxPWRSYS2 Power Supplies, you should power them on within 90 seconds of each other. Otherwise, the switch might restart its operating software, which will delay the completion of the initialization process of the management software.

To power on the switch, perform the following procedure:

1. Connect the AC power cord included with the power supply to the AC power connector on the rear panel of the chassis. If the chassis has two power supplies, you may power them on one at a time or simultaneously. Refer to Figure 53 on page 92.

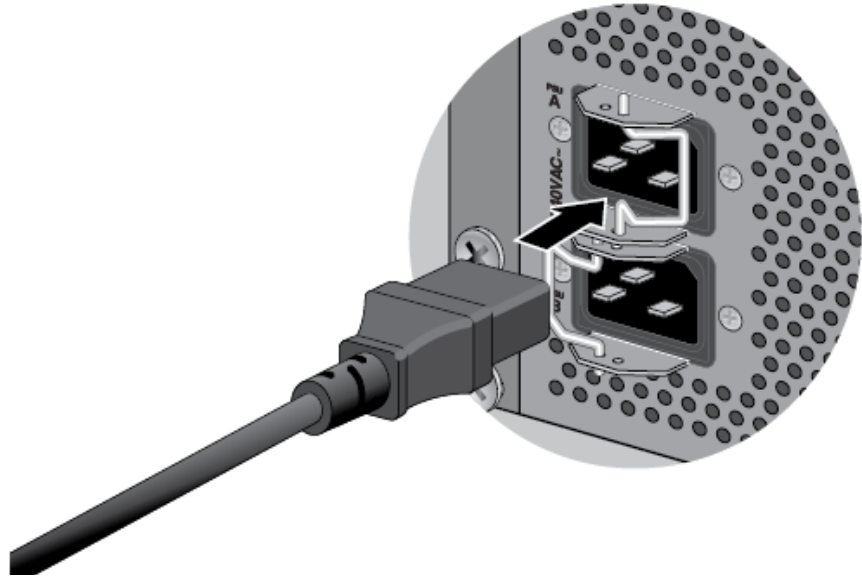


Figure 53. Connecting the AC Power Cord

2. Move the retaining clip over the power cord to secure the cord to the chassis. Refer to Figure 54.

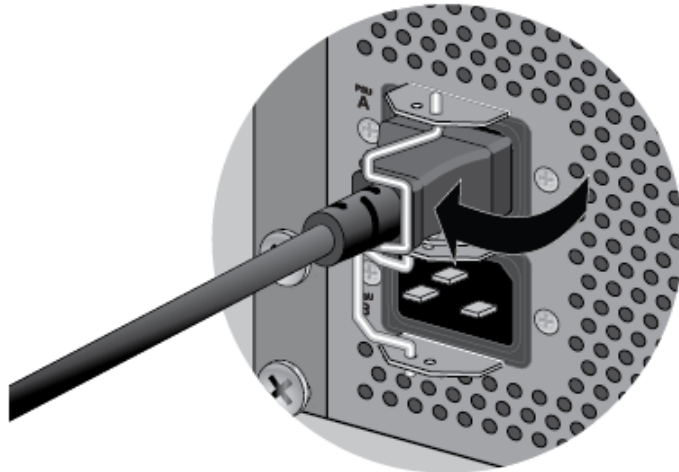


Figure 54. Securing the Power Cord with the Retaining Clip

3. Connect the power cord to an appropriate AC power source. Refer to Figure 55 on page 93.

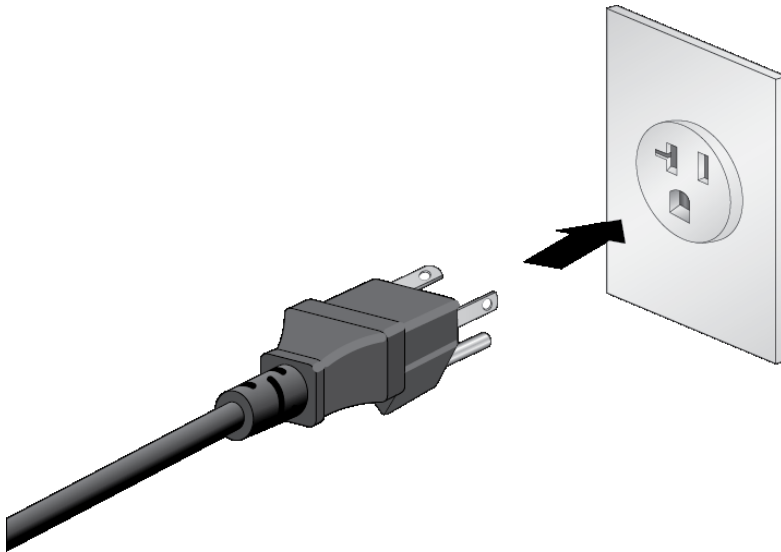


Figure 55. Connecting the Power Cord to an AC Power Source

Note

The illustration shows the North American power cord. Your power cord may be different.

Note

The power cords included with SBxPWRSYS2 Power Supplies for 100-125 VAC installations have 20 Amp, 125 V NEMA 5-20P plugs. The plugs require NEMA 5-20R receptacles. Refer to Figure 15 on page 53.

4. If the switch has two power supplies, repeat this procedure to connect a power cord to the second power supply.
5. Do one of the following:
 - To monitor the switch as it initializes the management software, go to “Monitoring the Initialization Processes” on page 121.
 - Wait three minutes for the switch to initialize its management software. Afterwards, go to Chapter 5, “Verifying the Hardware Operations” on page 125.

Powering On SBxPWRSYS1-80 DC Power Supplies

The procedure in this section explains how to power on SBxPWRSYS1-80 DC Power Supplies. If you have not installed the power supplies, refer to “Installing SBxPWRSYS1-80 DC Power Supplies” on page 75 for instructions.

Before powering on the chassis, review the information in “Power Specifications” on page 180 for the power specifications of the switches.

The power supply unit has a ground connection and positive and negative DC terminals. You may install the ground and power lead wires with the terminal lugs that come with the unit or with bare wire. The wire requirements are slightly different for terminal installation versus bare wire installation. Here are the wire requirements if you are using the terminals that come with the power supply:

- Two 8 AWG stranded power wires (not provided)
- One 10 AWG stranded grounding wire (not provided)

Here are the wire requirements for bare wire installation:

- Two 8 AWG solid or stranded power wires (not provided)
- One 10 AWG solid or stranded grounding wire (not provided)

Here is a list of the required tools:

- Crimping tool (not provided)
- 8 mm wrench (not provided)
- #1, #2, and #3 Phillips-head screwdrivers (not provided)
- #3 Phillips-head 30 to 40 inch-lbs Phillips-head torque screwdriver (optional - not provided)

Here are the procedures for powering on SBxPWRSYS1-80 DC Power Supplies:

- “Choosing a Method for Attaching the Grounding Wire” on page 96
- “Connecting the Grounding Wire with the Grounding Terminal” on page 96
- “Connecting the Grounding Wire with Bare Wire” on page 101
- “Choosing a Method for Attaching the Power Wires” on page 103
- “Connecting the DC Power Wires with the Straight Terminals” on page 103
- “Connecting the DC Power Wires with the Right Angle Terminals” on page 111

- “Connecting Bare DC Power Wires” on page 117

The components on the power supply are identified in Figure 56.

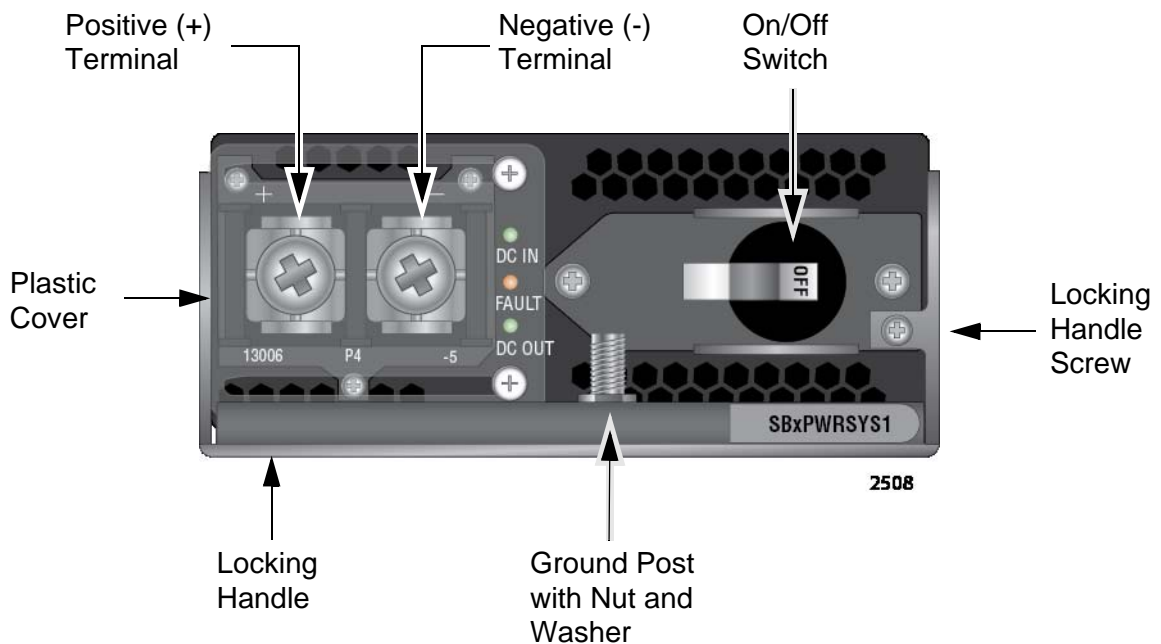


Figure 56. Components on the SBxPWRSYS1-80 DC Power Supply



Warning

As a safety precaution, install a circuit breaker with a minimum value of 50 Amps between the equipment and the DC power source.

Always connect the wires to the LAN equipment first before you connect the wires to the circuit breaker. Do not work with HOT feeds to avoid the danger of physical injury from electrical shock. Always be sure that the circuit breaker is in the OFF position before connecting the wires to the breaker. [E9](#)



Warning

For centralized DC power connection, install only in a restricted access area. [E23](#)

Note

A tray cable is required to connect the power source if the unit is powered by centralized DC power. The tray cable must be a UL listed Type TC tray cable and rated at 600 V and 90 degrees C, with two conductors, 8 AWG. [E24](#)

Choosing a Method for Attaching the Grounding Wire

You may attach the grounding wire to the power supply using the supplied terminal, shown in Figure 57, or bare wire.



Figure 57. Grounding Wire Terminal

The two methods are described in the following sections:

- “Connecting the Grounding Wire with the Grounding Terminal,” next
- “Connecting the Grounding Wire with Bare Wire” on page 101

Connecting the Grounding Wire with the Grounding Terminal

To attach a grounding wire with the grounding terminal provided with the power supply, perform the following procedure:

1. Prepare an adequate length of stranded 10 AWG grounding wire by stripping it as shown in Figure 58.

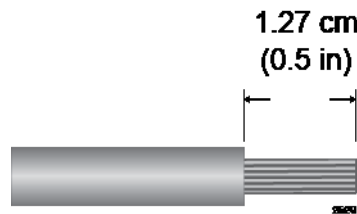


Figure 58. Stripping the Stranded Grounding Wire

Note

You must use stranded wire when using the grounding terminal to connect the ground wire to the grounding post. You may not use solid wire.

2. Insert the grounding wire into the grounding terminal provided with the power supply and use a crimping tool to secure it to the grounding terminal. See Figure 59,

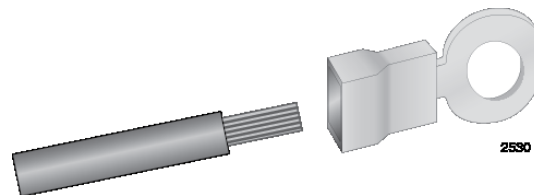


Figure 59. Attaching the Stranded Grounding Wire to the Grounding Terminal

3. Verify that the On/Off switch on SBxPWRSYS1-80 DC Power Supply is in the Off position. Refer to Figure 60.

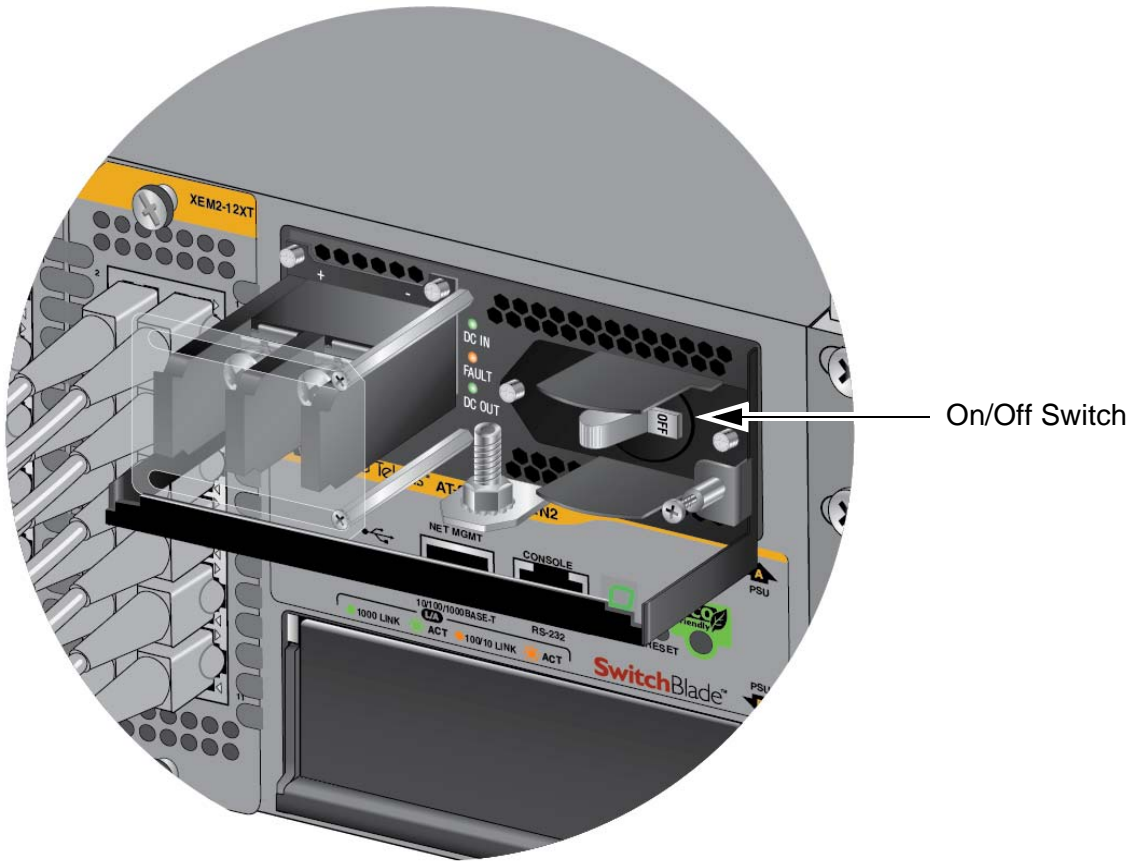


Figure 60. On/Off Switch on the SBxPWRSYS1-80 DC Power Supply

4. Use an 8 mm wrench to remove the grounding post nut and washer, shown in Figure 61 on page 98, from the power supply.

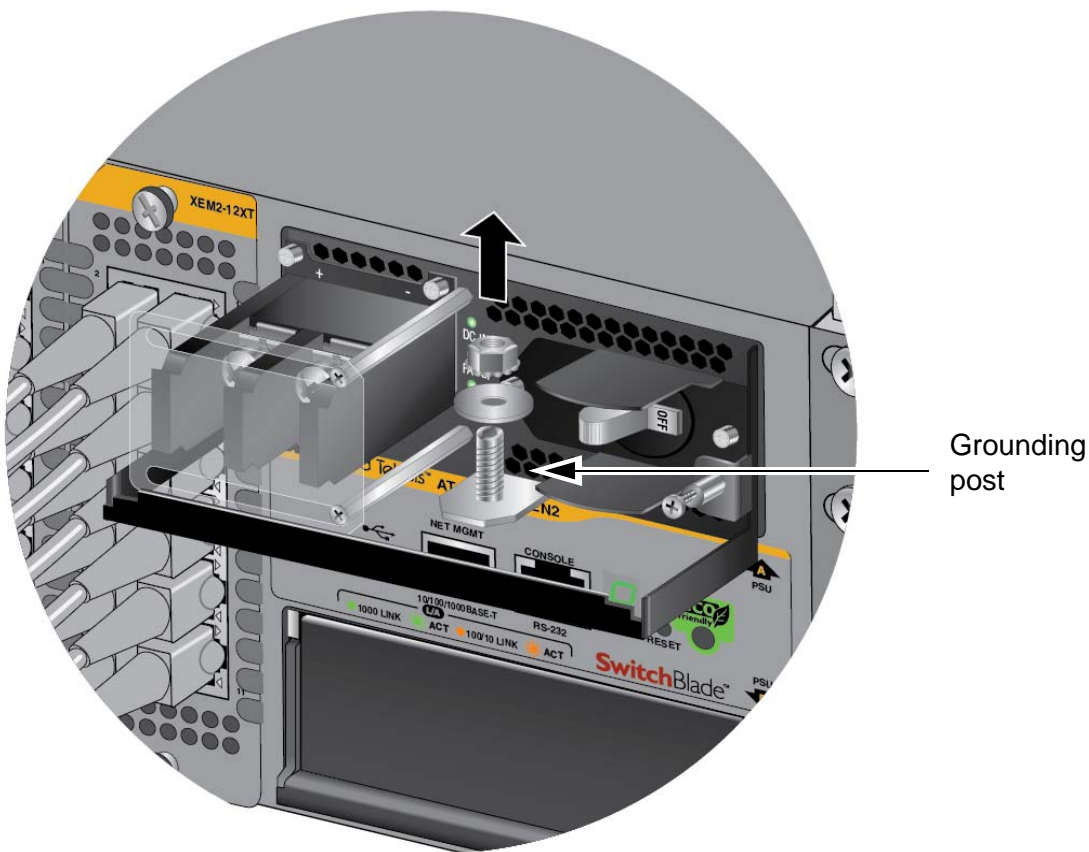


Figure 61. Removing the Nut and Washer from the Grounding Post

5. Attach the grounding lug and wire to the grounding post. Refer to Figure 62 on page 99.

Review the following before installing the grounding wire:

- You should angle the wire to the right so that you can open the plastic window to access the positive and negative terminals on the terminal block.
- You may route the cable either above or below the locking handle.

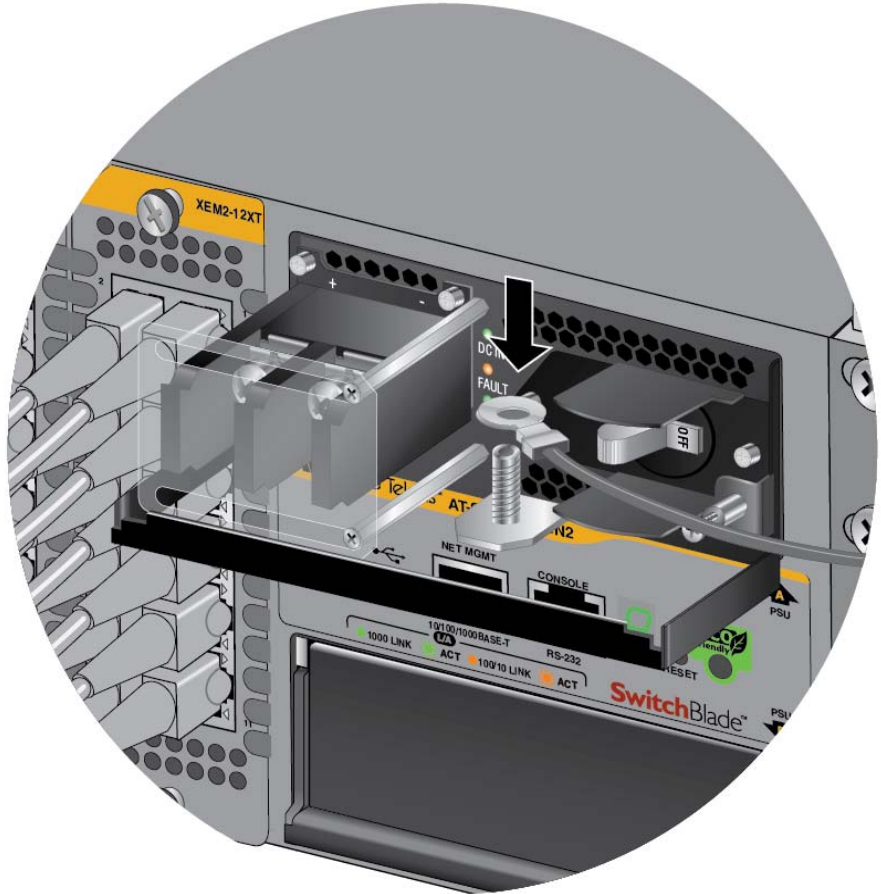


Figure 62. Attaching the Grounding Lug and Wire to the Grounding Post

6. Secure the grounding wire with the nut and washer removed in step 4, with an 8 mm wrench. Refer to Figure 63 on page 100.

Allied Telesis recommends tightening the nut and washer to 26 inch-lbs.

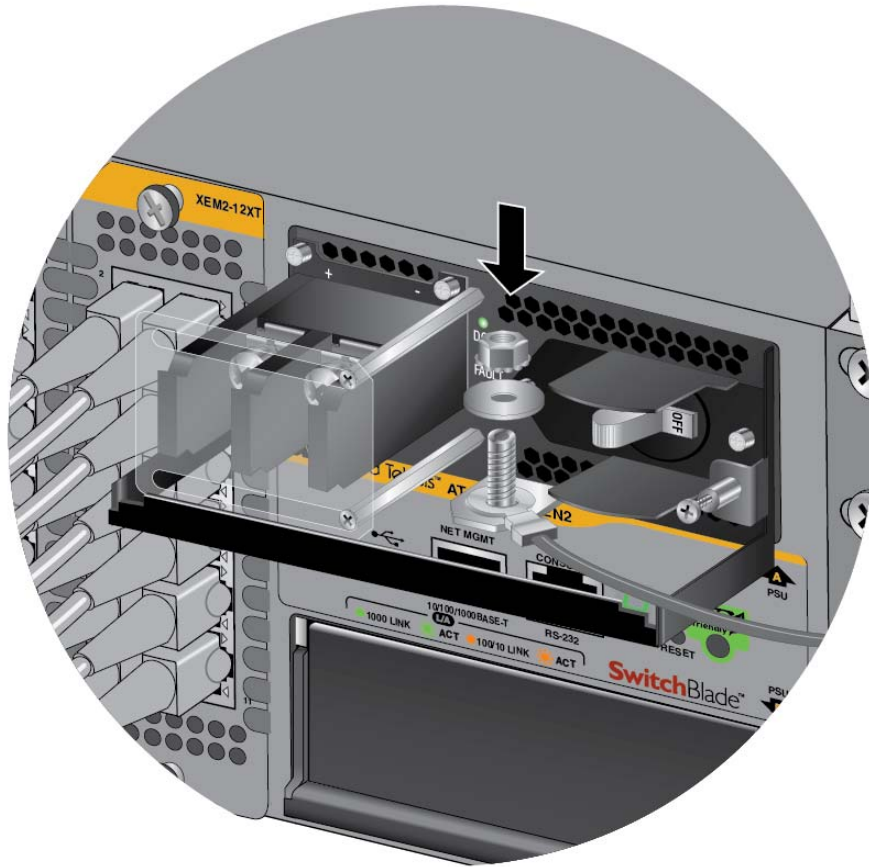


Figure 63. Securing the Grounding Wire

7. Connect the other end of the grounding wire to the building protective earth.



Warning

When installing this equipment, always ensure that the power supply ground connection is installed first and disconnected last. [E11](#)

Note

This system works with a positive grounded or negative grounded DC system. [E13](#)

8. After connecting the grounding wire, go to “Choosing a Method for Attaching the Power Wires” on page 103.

Connecting the Grounding Wire with Bare Wire

To attach the grounding wire to the power supply with bare wire, perform the following procedure:

1. Prepare an adequate length of solid or stranded 10 AWG grounding wire by stripping it as shown in Figure 64.

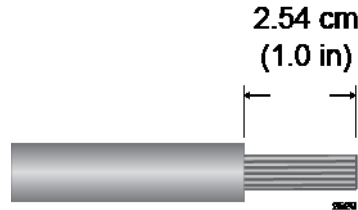


Figure 64. Stripping the solid or Stranded Grounding Wire

2. Verify that the On/Off switch on SBxPWRSYS1-80 DC Power Supply is in the Off position. Refer to Figure 60 on page 97.
3. Use an 8 mm wrench to remove the grounding post nut and washer, shown in Figure 61 on page 98, from the grounding post on the power supply.
4. Wrap the grounding wire clockwise around the base of the grounding post, as shown in Figure 65.

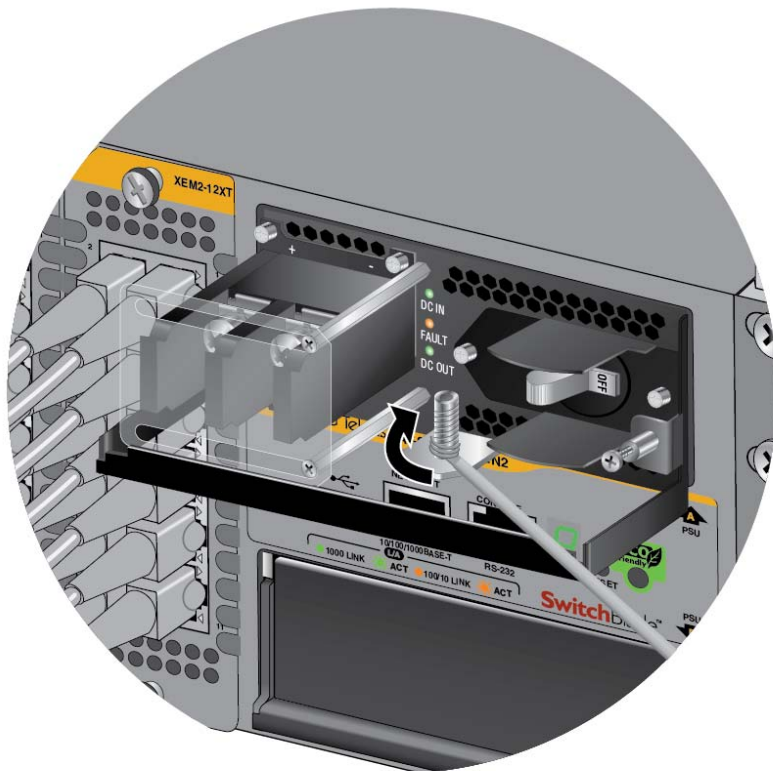


Figure 65. Attaching the Bare Grounding Wire to the Grounding Post

5. Secure the wire with the nut and washer removed in step 2, and an 8 mm wrench, as shown in Figure 66.

Allied Telesis recommends tightening the nut and washer to 26 inch-lbs.

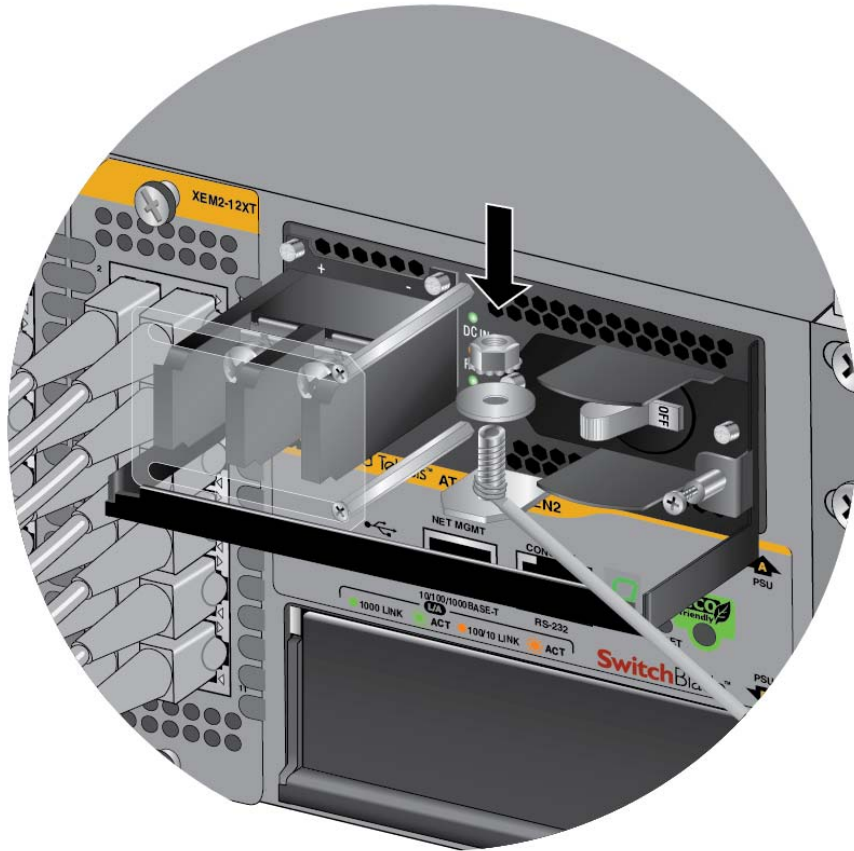


Figure 66. Securing the Bare Grounding Wire to the Grounding Post

6. After connecting the grounding wire, go to “Choosing a Method for Attaching the Power Wires” on page 103.

Choosing a Method for Attaching the Power Wires

The SBxPWRSYS1-80 DC Power Supply comes with the two sets of power wire terminals, shown in Figure 67. You may use either set to connect the positive (+) and negative (-) wires to the terminal block on the power supply. The straight terminals are used to route the wires above or below the terminal block. The right angle terminals are used to route the power wires directly away from the terminal block.

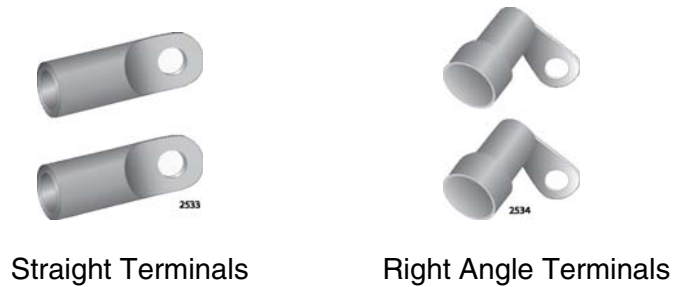


Figure 67. Power Wire Terminals

Note

The right angle terminals require the removal of the plastic cover from the terminal block.

You can also install the wires using bare wires.

Here are the procedures for wiring the positive and negative terminal block on the power supply:

- ❑ “Connecting the DC Power Wires with the Straight Terminals” on page 103
- ❑ “Connecting the DC Power Wires with the Right Angle Terminals” on page 111
- ❑ “Connecting Bare DC Power Wires” on page 117

Connecting the DC Power Wires with the Straight Terminals

To use the straight terminals to connect the DC power wires to the positive and negative terminals on the power supply, perform the following procedure:

1. Prepare adequate lengths of two stranded 8 AWG power wires by stripping them as shown in Figure 68 on page 104.



Warning

Do not strip more than the recommended amount of wire. Stripping more than the recommended amount can create a safety hazard by leaving exposed wire on the terminal block after installation. ⚠E10

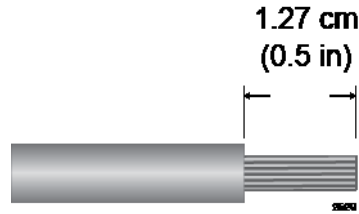


Figure 68. Stripping the Power Wires

Note

You must use stranded wires with the terminal lugs. You may not use solid wires.

2. Insert the power wires into the terminals included with the power supply and use a crimping tool to secure the wires to the terminals. See Figure 69.

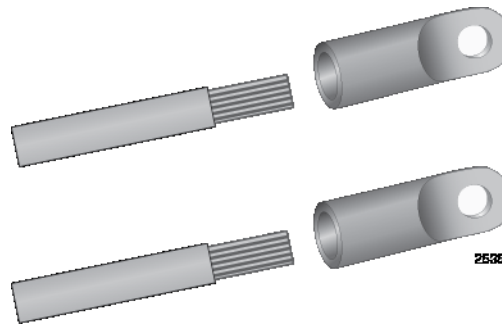


Figure 69. Attaching the Power Wires to the Straight Terminal Lugs

3. Verify that the On/Off switch on SBxPWRSYS1-80 Power Supply is in the Off position. Refer to Figure 60 on page 97.
4. Use a #1 Phillips-head screwdriver to loosen the two screws on the plastic cover over the positive and negative terminals on the power supply and slide the cover to the right, as shown in Figure 70 on page 105. You may need to lift the locking handle slightly to access the bottom screw.

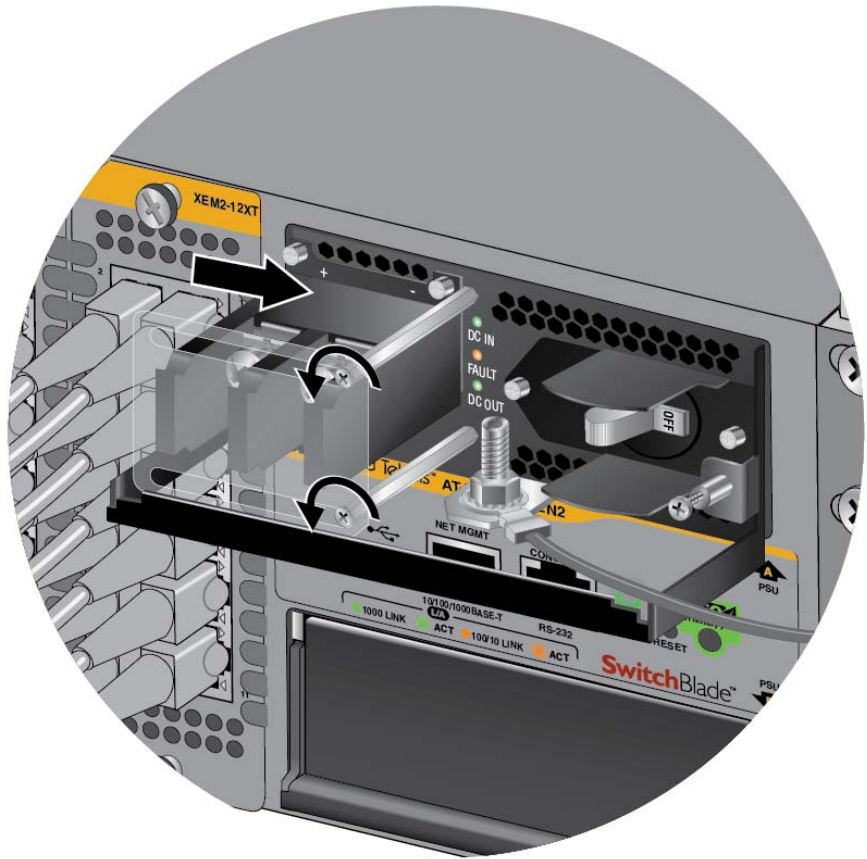


Figure 70. Opening the Plastic Cover

5. Use a #3 Phillips-head screwdriver to remove the two screws from the positive and negative terminals, as shown in Figure 71 on page 106.

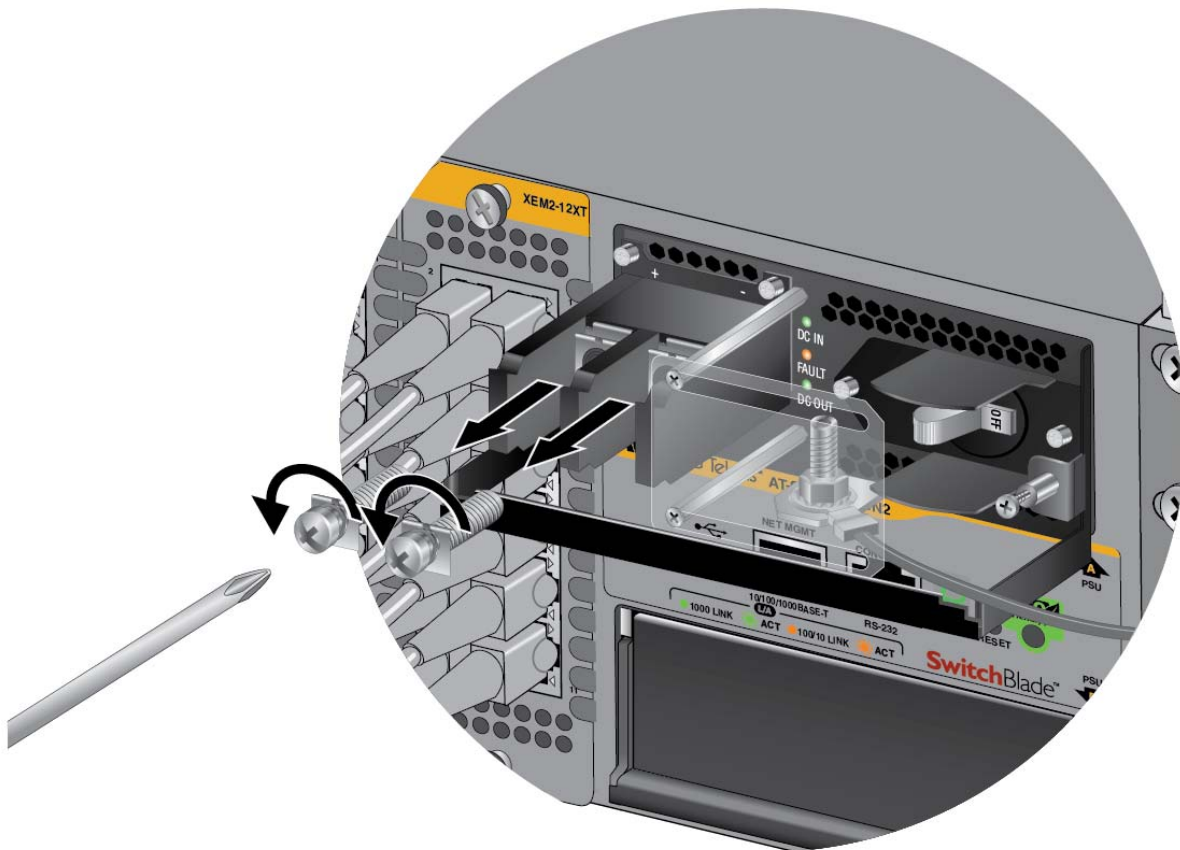


Figure 71. Removing the Terminal Screws

6. With a #3 Phillips-head screwdriver, connect the positive (+) power lead wire to the positive terminal on the power supply, with one of the terminal screws removed in the previous step. The positive terminal is on the left. You may attach the terminals with the wires either above or below the terminal block. Figure 72 on page 107 shows the positive wire above the terminal block.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

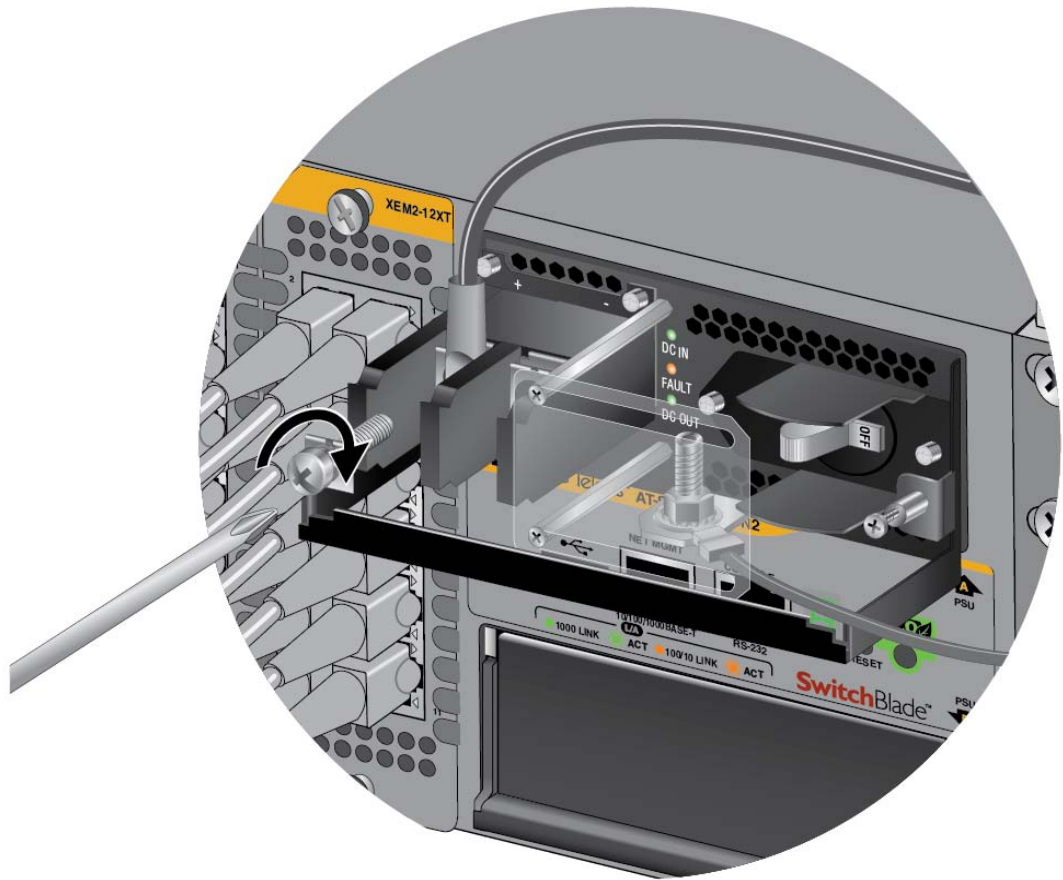


Figure 72. Connecting the Positive (+) Power Wire with a Straight Terminal

7. With a #3 Phillips-head screwdriver, connect the negative (-) power lead wire to the negative terminal on the power supply, with the remaining terminal screw removed in step 5. The negative terminal is on the right. You may attach the terminals with the wires either above or below the terminal block. Figure 73 on page 108 shows the wires above the terminal block.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

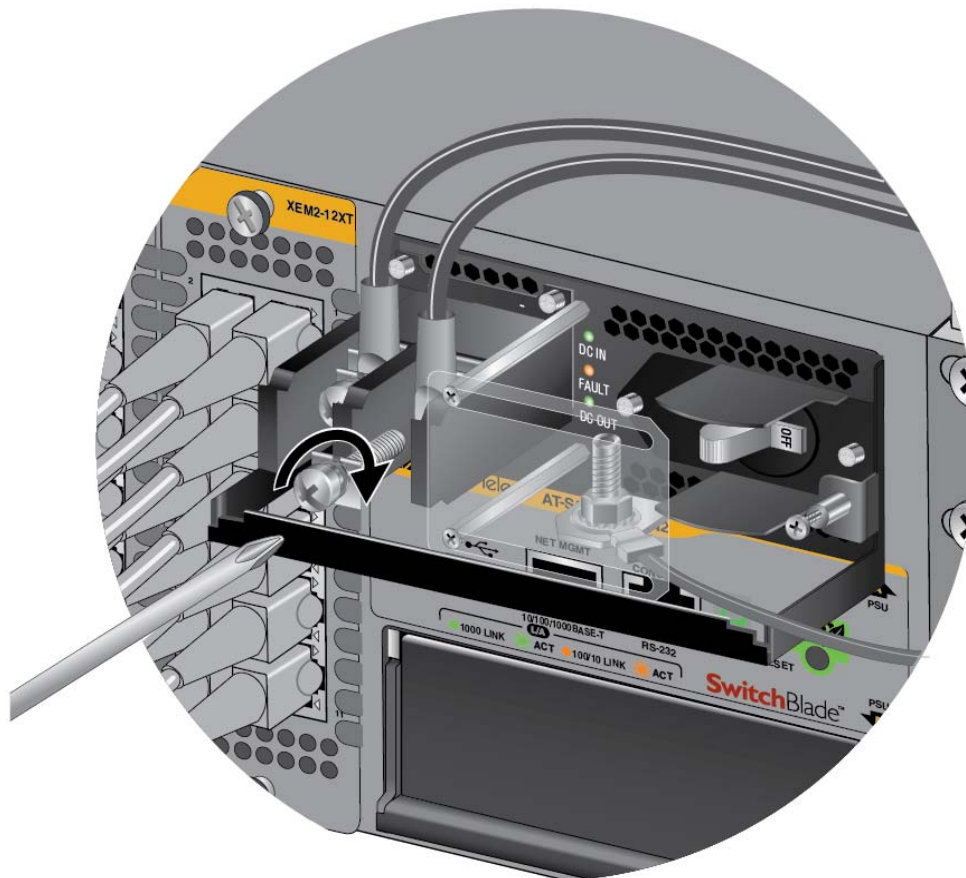


Figure 73. Connecting the Negative (-) Power Wire with a Straight Terminal



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. [GE12](#)

8. Slide the plastic cover to the left and lightly tighten the two screws with a #1 Phillips-head screwdriver to secure the cover. See Figure 74 on page 109. You might need to lift the locking handle slightly to access the bottom screw.



Caution

Do not over tighten the screws or you may crack or break the plastic cover.

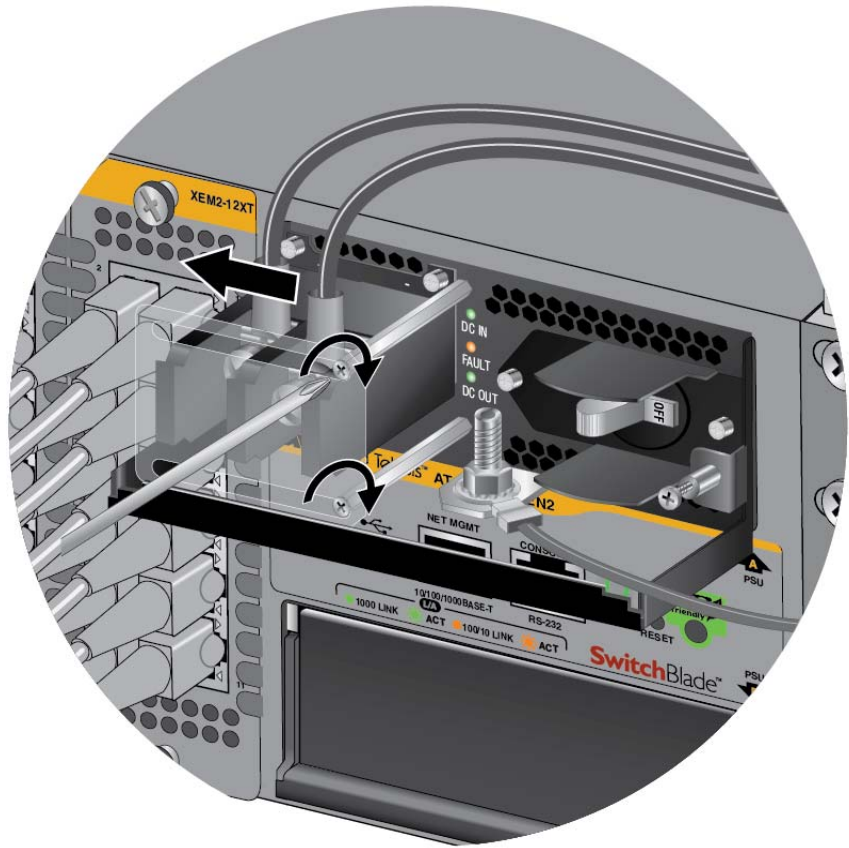


Figure 74. Closing the Plastic Cover over the Terminal Connectors

9. With a #2 Phillips-head screwdriver, tighten the handle locking screw to secure the power supply to the chassis. See Figure 75 on page 110.

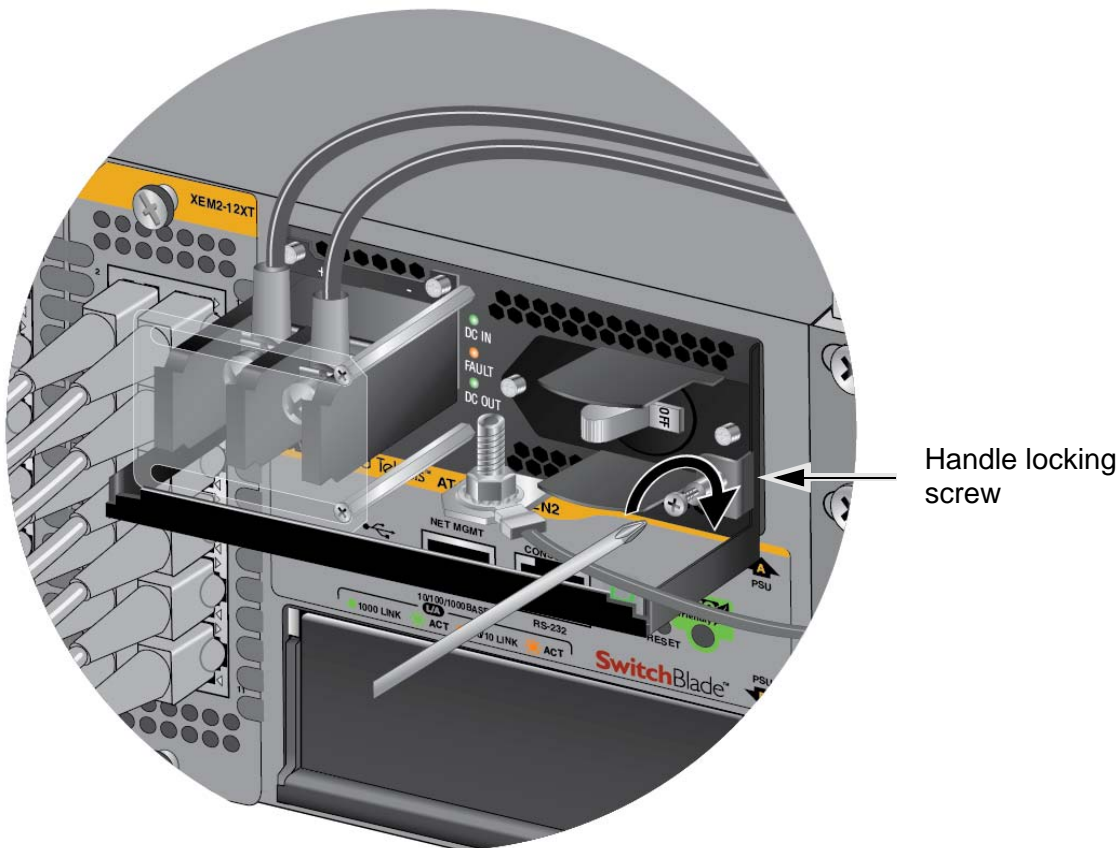


Figure 75. Tightening the Handle Locking Screw

10. Before attaching the power wires from the power supply to the circuit breaker in the wiring closet, check that the circuit breaker is off.
11. Connect the power wires to the circuit breaker.
12. If you have two SBxPWRSYS1-80 DC Power Supplies for the switch, repeat this procedure to install the second power supply.
13. Turn the DC circuit breaker(s) on.
14. Turn the On/Off switch(es) on the SBxPWRSYS1-80 DC Power Supply(ies) to the On position. See Figure 60 on page 97.
15. Do one of the following:
 - ❑ To monitor the switch as it initializes the management software, go to “Monitoring the Initialization Processes” on page 121.
 - ❑ Wait three minutes for the switch to initialize its management software. Afterwards, go to Chapter 5, “Verifying the Hardware Operations” on page 125.

Connecting the DC Power Wires with the Right Angle Terminals

To use the right angle terminals to connect the DC power wires to the positive and negative terminals on the SBxPWRSYS1-80 DC Power Supply, perform the following procedure:

1. Prepare adequate lengths of two stranded 8 AWG power wires by stripping them as shown in Figure 68 on page 104.



Warning

Do not strip more than the recommended amount of wire. Stripping more than the recommended amount can create a safety hazard by leaving exposed wire on the terminal block after installation. ⚠E10

Note

You must use stranded wires with the terminal lugs. You may not use solid wires.

2. Insert the power wires into the terminals included with the power supply and use a crimping tool to secure the wires to the terminals. See Figure 76.

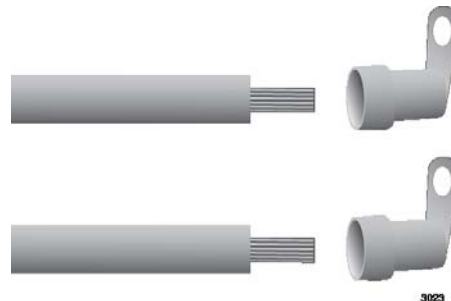


Figure 76. Attaching the Power Wires to the Right Angle Terminal Lugs

3. Verify that the On/Off switch on SBxPWRSYS1-80 DC Power Supply is in the Off position. Refer to Figure 60 on page 97.
4. Using a #1 Phillips-head screwdriver, remove the two screws that secure the plastic cover over the positive and negative terminals and remove the plastic cover from the power supply, as shown in Figure 77 on page 112. You may need to lift the locking handle slightly to access the bottom screw.

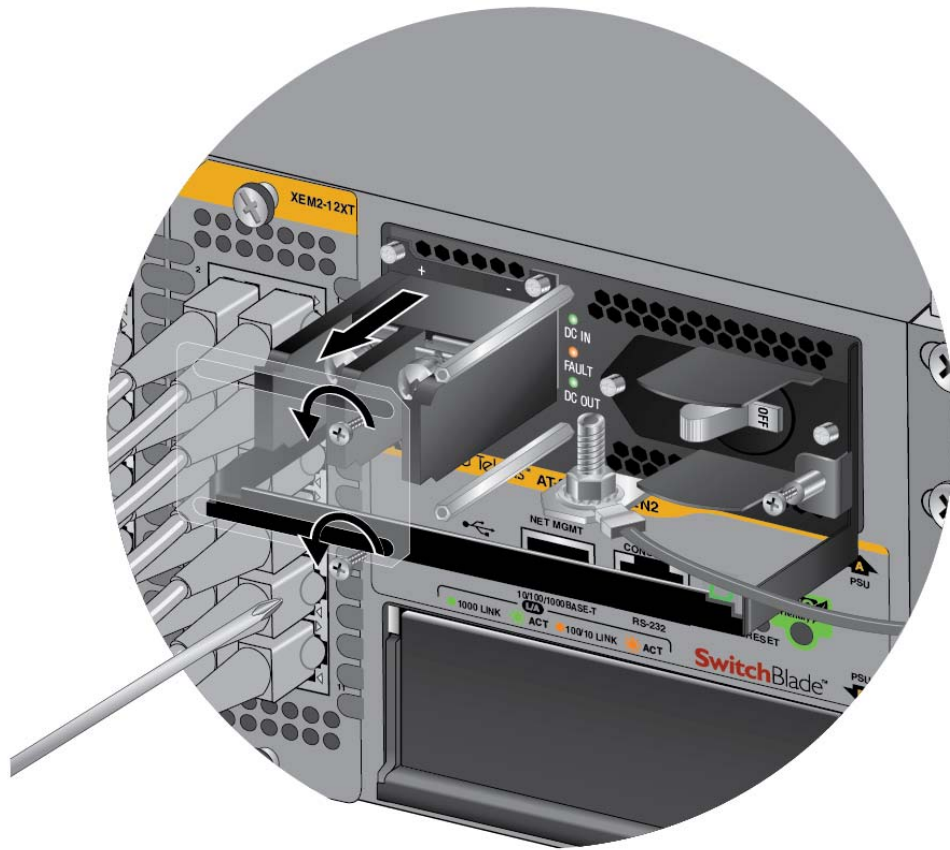


Figure 77. Removing the Plastic Cover

5. Use a #3 Phillips-head screwdriver to remove the two screws from the positive and negative terminals, as shown in Figure 78 on page 113.

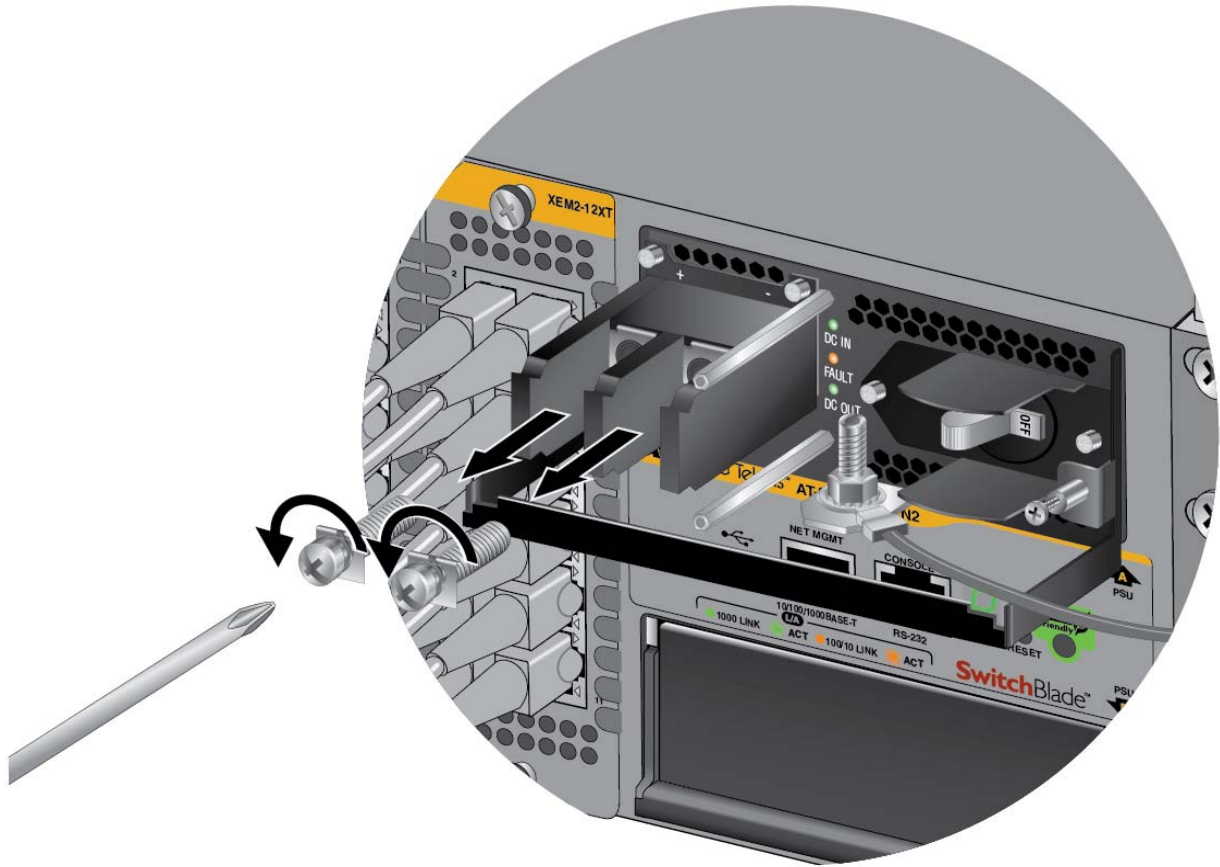


Figure 78. Removing the Terminal Screws

6. With a #3 Phillips-head screwdriver, connect the positive (+) power lead wire to the positive terminal on the power supply, with one of the terminal screws removed in the previous step. The positive terminal is on the left. Refer to Figure 79 on page 114.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

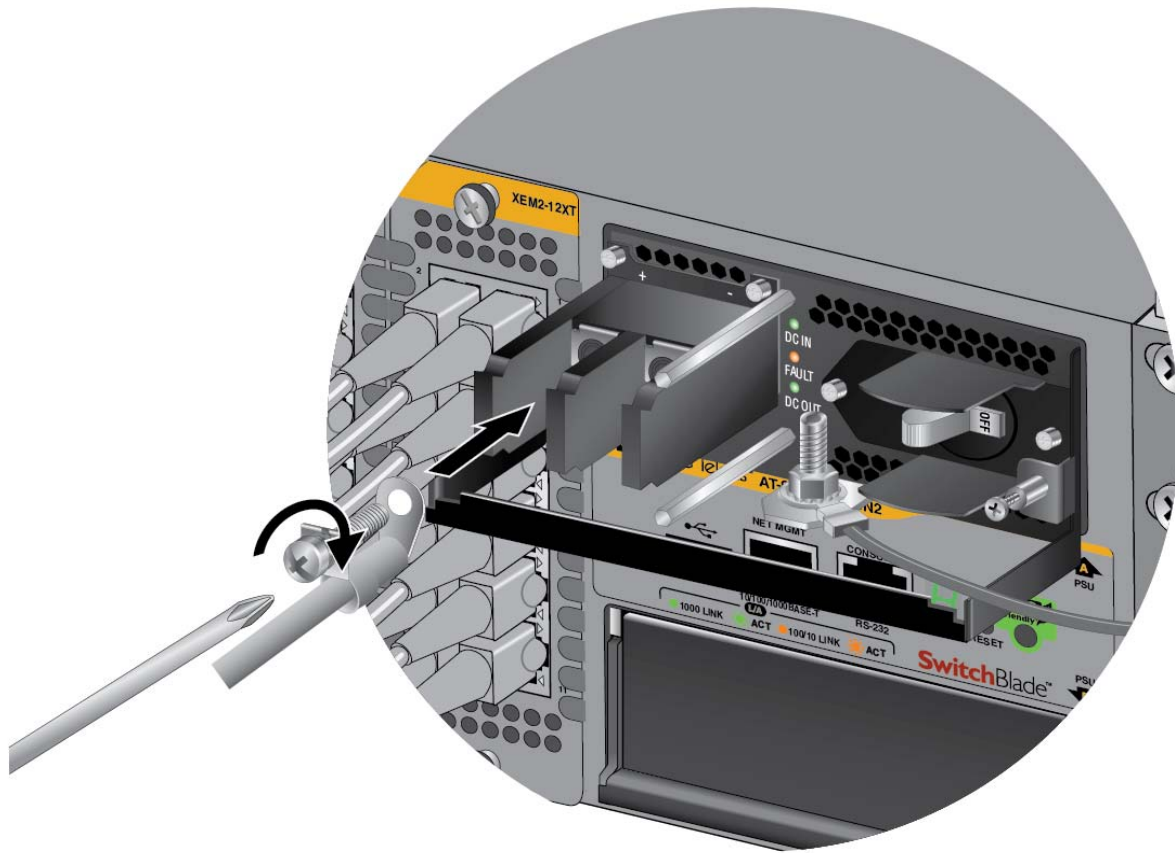


Figure 79. Connecting the Positive (+) Power Wire with a Right Angle Terminal

7. With a #3 Phillips-head screwdriver, connect the negative (-) power lead wire to the negative terminal on the power supply, with the remaining terminal screw removed in step 5. The negative terminal is on the right. Refer to Figure 80 on page 115.

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

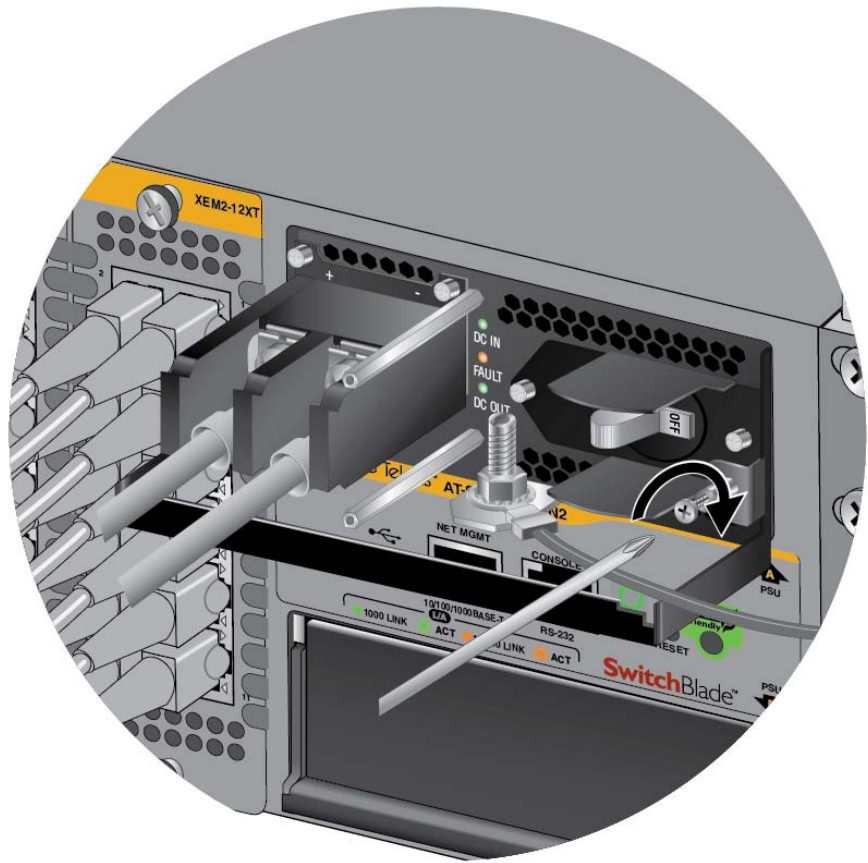


Figure 80. Connecting the Negative (-) Power Wire with a Right Angle Terminal



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. [E12](#)

8. With a #2 Phillips-head screwdriver, tighten the handle locking screw to secure the power supply to the chassis. See Figure 81 on page 116.

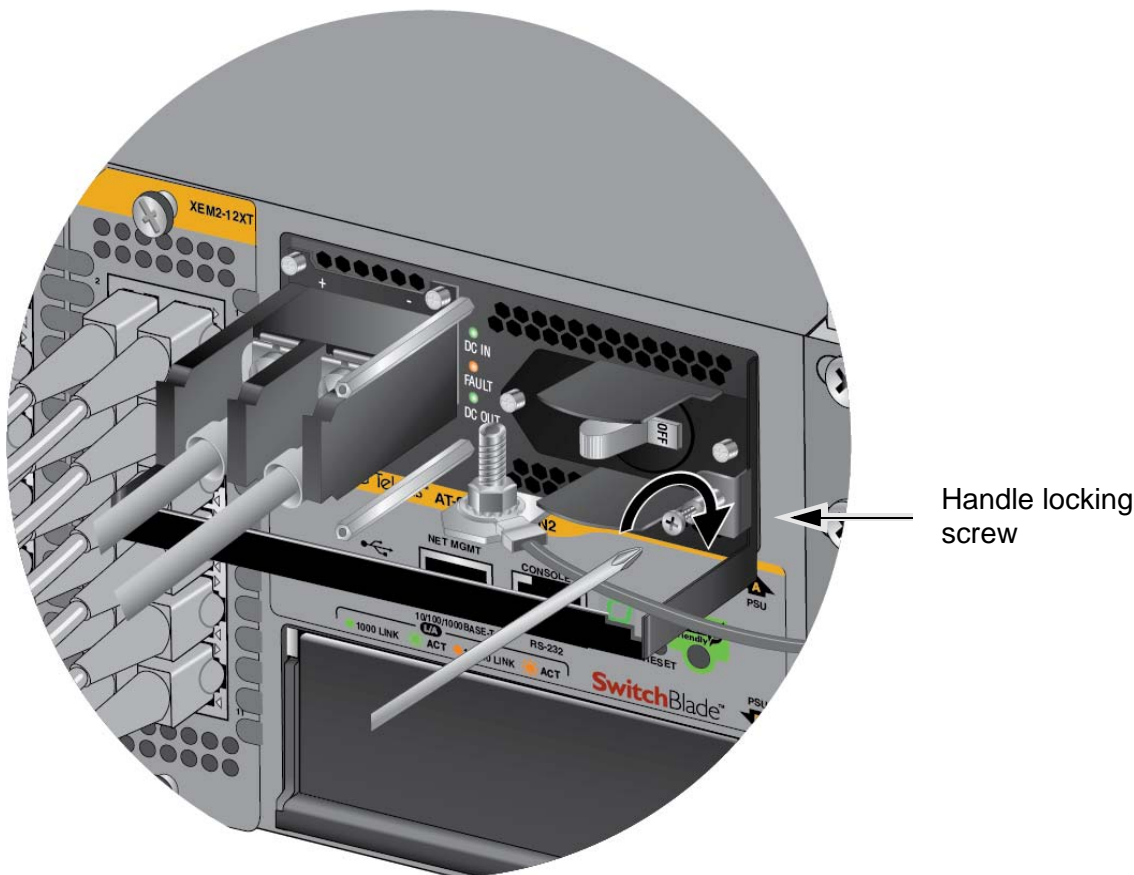


Figure 81. Tightening the Handle Locking Screw

9. Before attaching the power wires from the power supply to the circuit breaker in the wiring closet, check that the circuit breaker is off.
10. Connect the power wires to the circuit breaker.
11. If you have two SBxPWRSYS1-80 Power Supplies for the switch, repeat this procedure to install the second power supply.
12. Turn the DC circuit breaker(s) on.
13. Turn the On/Off switch(es) on the SBxPWRSYS1-80 Power Supply(ies) to the On position. See Figure 60 on page 97.
14. Do one of the following:
 - ❑ To monitor the switch as it initializes the management software, go to “Monitoring the Initialization Processes” on page 121.
 - ❑ Wait three minutes for the switch to initialize its management software. Afterwards, go to Chapter 5, “Verifying the Hardware Operations” on page 125.

Connecting Bare DC Power Wires

To attach bare lead wires to the positive and negative terminals on the power supply, perform the following procedure:

1. Prepare adequate lengths of two solid or stranded 8 AWG DC power wires by stripping them as shown in Figure 82.

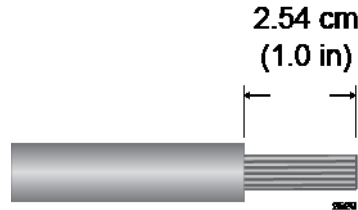


Figure 82. Stripping Solid or Stranded DC Power Wires

2. Use a #1 Phillips-head screwdriver to loosen the two screws on the plastic cover over the positive and negative terminals on the power supply and slide the cover to the right, as shown in Figure 70 on page 105. You may need to lift the locking handle slightly to access the bottom screw.
3. Use a #3 Phillips-head screwdriver to remove the two screws from the positive and negative terminals, as shown in Figure 71 on page 106.
4. Wrap the positive lead wire clockwise around one of the terminal screws and secure the screw and wire to the positive terminal connection on the terminal block with a #3 Phillips-head screwdriver. The positive terminal is on the left.

You may attach the wire to the terminal so that it extends either above or below the terminal block. Figure 83 on page 118 shows the wire above the terminal block. Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.

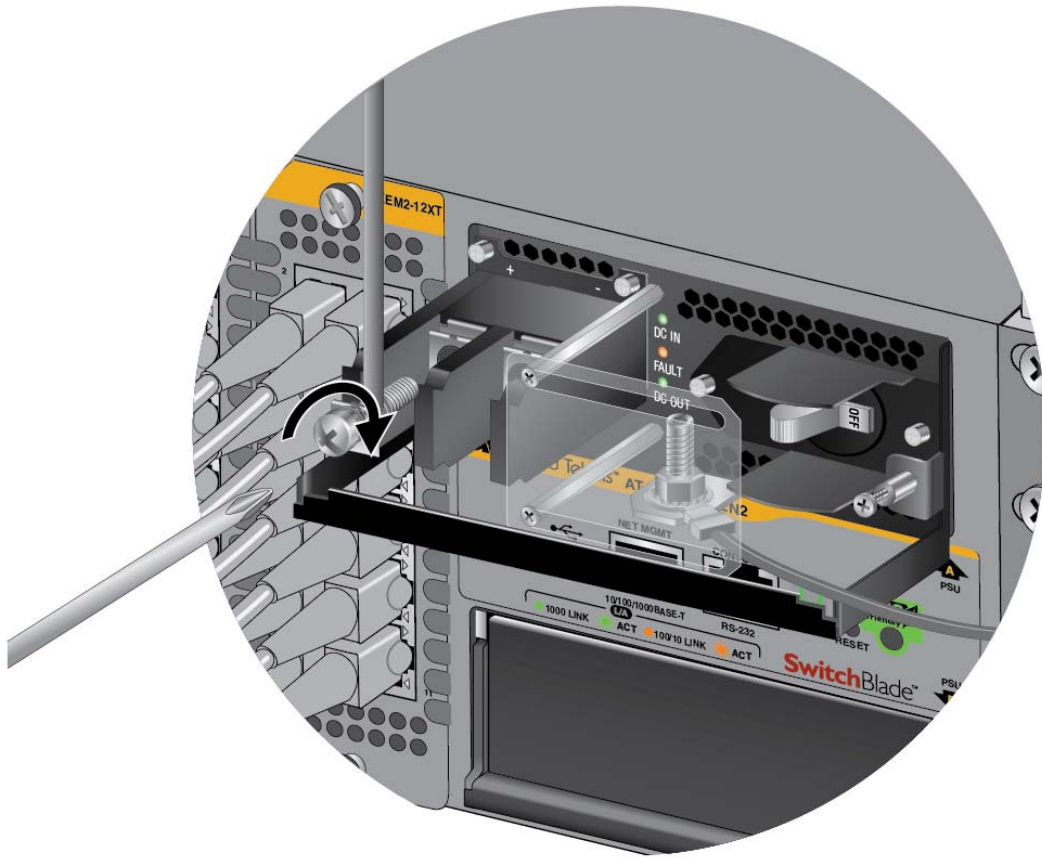


Figure 83. Connecting the Positive Wire With Bare Wire

5. Wrap the negative lead wire clockwise around the remaining terminal screw and secure the screw and wire to the negative terminal connection on the terminal block with a #3 Phillips-head screwdriver, as shown in Figure 84 on page 119. The negative terminal is on the right.

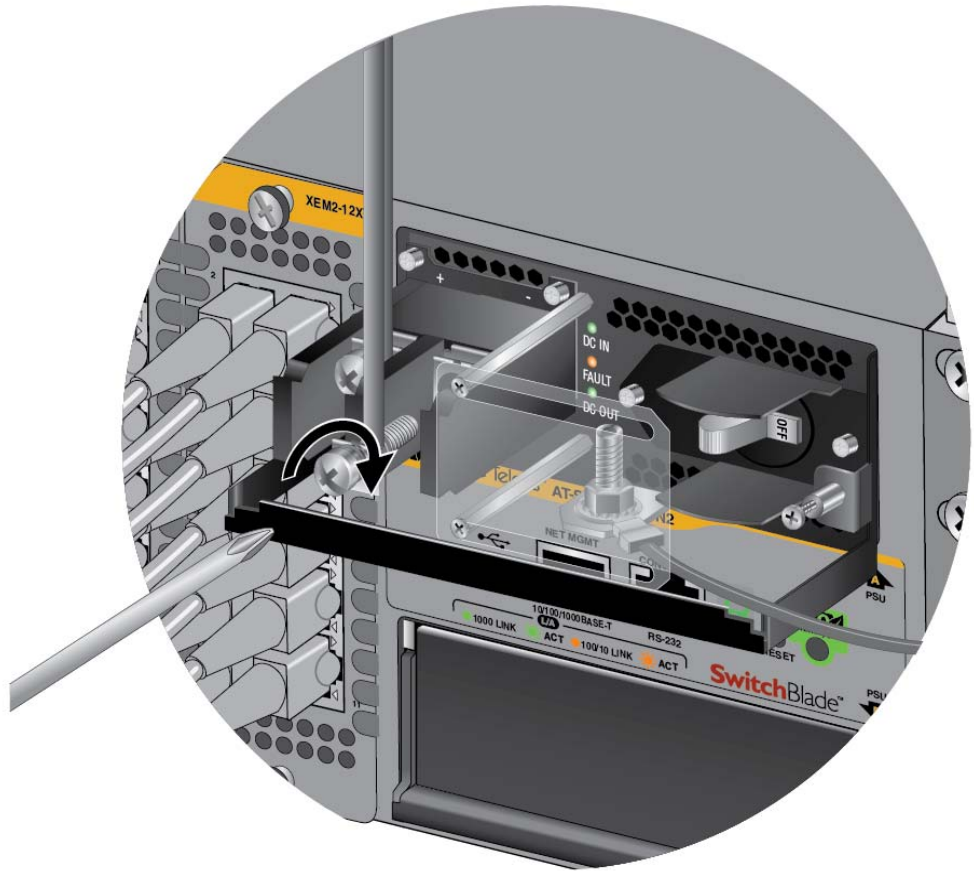


Figure 84. Connecting the Negative Lead Wire with Bare Wire

Allied Telesis recommends tightening the screw to 30 to 40 inch-lbs.



Warning

Check to see if there are any exposed copper strands coming from the installed wires. When this installation is done correctly there should be no exposed copper wire strands extending from the terminal block. Any exposed wiring can conduct harmful levels of electricity to persons touching the wires. ⚡E12

6. Slide the plastic cover to the left and lightly tighten the two screws with a #1 Phillips-head screwdriver to secure the cover. See Figure 74 on page 109. You might need to lift the locking handle slightly to access the bottom screw.



Caution

Do not over tighten the screws or you may crack or break the plastic cover.

7. With a #2 Phillips-head screwdriver, tighten the handle locking screw to secure the power supply to the chassis. See Figure 81 on page 116.
8. Before attaching the power wires from the power supply to the circuit breaker in the wiring closet, check that the circuit breaker is off.
9. Connect the power wires to the circuit breaker.
10. If you have two SBxPWRSYS1-80 DC Power Supplies for the switch, repeat this procedure to install the second power supply.
11. Turn the DC circuit breaker(s) on.
12. Turn the On/Off switch(es) on the SBxPWRSYS1-80 DC Power Supply(ies) to the On position. See Figure 60 on page 97.
13. Do one of the following:
 - ❑ To monitor the switch as it initializes the management software, go to “Monitoring the Initialization Processes” on page 121.
 - ❑ Wait three minutes for the switch to initialize its management software. Afterwards, go to Chapter 5, “Verifying the Hardware Operations” on page 125.

Monitoring the Initialization Processes

It takes about three minutes for the switch to initialize its management software programs and features, and load the default configuration. You can monitor the bootup sequence by connecting a terminal or computer that has a terminal emulator program to the Console port on the switch. (The settings of the Console port are provided in “Starting a Local Management Session” on page 127.) The switch displays the messages in Figure 85 here to Figure 87 on page 123 on the Console port as it initializes the management software.

```

Loading flash: sbx908ng-broadcomdev-20170406-1. rel
Verifying release... OK
Booting...
<- setup_system()
Starting base/first... [ OK ]
Mounting virtual filesystems... [ OK ]

      _____
     / \         / / \
    / \ \       / / \
   / \ \ \     / / \
  / \ \ \ \   / / \
 / \ \ \ \ \ / / \
/ \ \ \ \ \ / / \

Allied Telesis Inc.
AlliedWare Plus (TM) v0.0.0
Current release filename: sbx908ng-broadcomdev-20170406-1. rel
Built: Wed Apr 5 20:36:24 UTC 2017
Mounting static filesystems... [ OK ]
Attaching to /dev/mtd1... [ OK ]
Mounting file system... [ OK ]
Checking for last gasp debug output... [ OK ]
Initializing random number generator... [ OK ]
Starting base/hwrandom... [ OK ]
Starting base/dbus... [ OK ]
Starting base/syslog... [ OK ]
Starting base/loopback... [ OK ]
Starting base/sysctl... [ OK ]
Starting base/portmapper... [ OK ]
Received event syslog.done

```

Figure 85. Switch Initialization Messages

```

Starting base/modules... [ OK ]
Received event modules.done
Starting base/reboot-stability... [ OK ]
Checking system reboot stability... [ OK ]
Starting base/apteryx... [ OK ]
Starting base/crond... [ OK ]
Starting base/appmond... [ OK ]
Starting base/clockcheck... [ OK ]
Starting hardware/timeout... [ OK ]
Starting base/inet... [ OK ]
Received event apteryx.done
Starting base/alfred... [ OK ]
Starting base/kernond... [ OK ]
Starting base/plugman... [ OK ]
Starting hardware/openhpi... [ OK ]
Received event apteryx-sync.done
Received event board.inserted
Starting hardware/hardware-done... [ OK ]
Received event hardware.done
Starting network/startup... [ OK ]
Starting base/external-media... [ OK ]
Received event hostcfg.done
Starting network/lld... [ OK ]
Starting network/stackd... [ OK ]
Starting network/election.timeout... [ OK ]
17:45:46 awplus-1 VCS[908]: The Stacking Ports are currently not installed.
Please install and reboot.
Received event network.enabled

Initializing HA processes:
atmfd_agentd, atmfd, hostd, hsl, mstp, nsm, rpingd
rmon, sflowd, auth, bgpd, cntrd, epsr, imi
imiproxyd, irdpd, lACP, lldpd, loopprot, ospf6d, ospfd
pdmd, pim6d, pimd, ripd, uidd, vrrpd

Received event network.initialized

Received event vcs.elected-master

```

Figure 86. Switch Initialization Messages (Continued)

```
Assigning Active Workload to HA processes:  
hsl, authd, epsrd, imi, imiproxyd, irdpd, lacpd  
lldpd, loopprotd, mstpd, nsm, ospfd, ripd, rmond  
sflowd, vrrpd  
  
Received event network.activated  
  
Loading default configuration  
....  
done!  
Received event network.configured  
  
awplus login:
```

Figure 87. Switch Initialization Messages (Continued)

After the switch has initialized its management software, go to Chapter 5, “Verifying the Hardware Operations” on page 125.

Chapter 5

Verifying the Hardware Operations

This chapter contains the following procedures:

- ❑ “Determining the Status of the Switch” on page 126
- ❑ “Starting a Local Management Session” on page 127
- ❑ “Disabling VCStack” on page 129
- ❑ “Verifying Support for the Ethernet Line Cards” on page 133
- ❑ “Verifying the Switch with the AlliedWare Plus Commands” on page 134

Determining the Status of the Switch

After powering on the switch and waiting three minutes for it to initialize the management software, examine the switch ID LED on the front panel:

- ❑ If the LED is displaying “0”, the VCStack feature is already disabled and the switch is operating as a stand-alone unit. Perform the following procedure, but skip step 2.
- ❑ If the LED is displaying the number “1” or higher, the VCStack feature is enabled on the unit. You should disable it to use the chassis as a stand-alone switch. Perform all the steps in the following procedure.

Do the following:

1. Start by establishing a local management session with the switch, as explained in “Starting a Local Management Session” on page 127.
2. Disable VCStack, as explained in “Disabling VCStack” on page 129.
3. Verify that the version of the AlliedWare Plus management software on the switch supports all of the line cards by performing “Verifying Support for the Ethernet Line Cards” on page 133.
4. Confirm that the hardware is operating correctly by performing “Verifying the Switch with the AlliedWare Plus Commands” on page 134.
5. After confirming the hardware operations of the switch, go to Chapter 11, “Cabling the Networking Ports” on page 133.



Caution

You have to reset the switch to disable the VCStack feature. Some network traffic may be lost if the device is connected to a live network. [E89](#)

Note

The initial management session of the switch has to be a local management session through the Console port.

Starting a Local Management Session

To start a local management session on the chassis, perform the following procedure:

1. Connect the RJ-45 end of the management card included with the switch to the Console RS-232 port on the management panel. Refer to Figure 88.



Figure 88. Connecting the Management Cable to the Console RS-232 Port

2. Connect the other end of the cable to an RS-232 port on a terminal or personal computer with a terminal emulation program.
3. Configure the VT-100 terminal or terminal emulation program as follows:
 - Baud rate: 115,200 bps
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow controller: None

Note


The port settings are for a DEC VT100 or ANSI terminal, or an equivalent terminal emulator program.

4. Press Enter. You are prompted for a user name and password.
5. Enter the default user name and password. They are “manager” and “friend” (without the quotes), respectively.

Note

User names and passwords are case sensitive.

The local management session starts when the User Exec mode prompt, shown in Figure 89, is displayed.



awpl us>

Figure 89. User Exec Mode Prompt

Note

The User Exec mode is the first level in the command mode interface. For complete information on the modes and commands, refer to the *Software Reference for SBx908 GEN2 Series Switches, AlliedWare Plus Operating System* from www.alliedtelesis.com.

6. Do one of the following:
 - To disable VCStack to use the chassis as a stand-alone switch, go to “Disabling VCStack” on page 129.
 - Otherwise, go to “Verifying Support for the Ethernet Line Cards” on page 133.

Disabling VCStack

The procedure in this section explains how to disable the VCStack feature so that you can use the chassis as a stand-alone switch. In all likelihood, you will not have to perform this procedure because the default setting for the feature is disabled.

A simple way to determine whether the VCStack feature is enabled or disabled is by viewing the Switch ID LED on the management panel. If the LED is “0”, the feature is disabled. You can skip this procedure and go to “Verifying Support for the Ethernet Line Cards” on page 133 or “Verifying the Switch with the AlliedWare Plus Commands” on page 134. If the LED is “1” or higher, the VCStack feature is enabled and needs to be disabled, in which case perform the following procedure.



Caution

You have to reset the switch after disabling the VCStack feature. Some network traffic may be lost if the device is already connected to a live network. [E89](#)

If the switch is powered off, start with step 1. If the switch is powered on, start with step 3:

1. Power on the switch by doing one of the following:
 - ❑ If the switch has AC power supplies, connect the AC power cords to the power supply connectors on the back panel and to AC power sources.
 - ❑ If the switch has the DC SBxPWRSYS1-80 Power Supply, power on the DC circuit and the On/Off switch on the power supply. (If you have not yet wired the DC connector on the power supply, refer to “Powering On SBxPWRSYS1-80 DC Power Supplies” on page 94 for instructions.)
2. Wait two minutes for the switch to initialize its management software.
3. Start a local management session on the switch. Refer to “Starting a Local Management Session” on page 127.
4. Enter the SHOW STACK command in the User Exec mode prompt to display the status of the VCStack feature. An example is shown in Figure 90 on page 130.

```
awplus> show stack
Virtual Chassis Stacking summary information
ID      Pending ID  MAC address      Priority  Status  Role
1       -             eccd:6dd1:64a2   128      Ready   Active Master
Operational Status          Stacking Hardware Disabled
Stack MAC address           eccd:6dd1:64a2
awplus>
```

Figure 90. SHOW STACK Command

5. Review the following items:
 - ❑ If the Operational Status is “Stacking Hardware Disabled,” the VCStack feature is already disabled on the switch. Go to “Verifying Support for the Ethernet Line Cards” on page 133.
 - ❑ If the Operational Status is “Standalone Unit,” the VCStack feature is enabled on the unit. You need to disable it by performing the steps in the rest of this procedure to use the chassis as a standalone switch. The status says “standalone” because the switch is functioning as a stack of one switch.
6. Move to the Global Configuration mode by entering the ENABLE and CONFIGURE TERMINAL commands, as shown in Figure 91.

```
awplus> enable
awplus# configure terminal
Enter configuration commands, one per line. End with CNTL/Z
awplus#
```

Figure 91. Moving to the Global Configuration Mode

7. To disable the VCStack feature on the switch, enter the NO STACK ENABLE command, which has this format:

```
no stack id enable
```

The ID parameter is the ID number of the switch, displayed on the ID LED. Replace the parameter with whatever number is on the ID LED. For example, if the Switch ID LED number is 1, you would enter the command as follows:

```
awplus(config)# no stack 1 enable
```

This confirmation prompt in Figure 92 on page 131 is displayed.

```
Warning; This will disable the stacking hardware on member-1.
Are you sure you want to continue? (y/n):
```

Figure 92. Confirmation Prompt for the NO STACK ENABLE Command

8. Type Y to disable VCStack on the switch or N to cancel the procedure.

The switch displays the message in Figure 93.

```
awpl us(confi g)#18: 04: 12 awpl us VCS[2119]: Deacti vating
Stacking Ports on stack member 1.
```

Figure 93. Disabling VCStack.

9. Press the Return key to re-display the Global Configuration mode prompt.
10. Enter the EXIT command to return to the Privileged Exec mode, as shown in Figure 94.

```
awpl us(confi g)# exi t
awpl us#
```

Figure 94. Returning to the Privileged Exec Mode

11. Enter the WRITE command to save your change in the configuration file. The switch displays the confirmation prompt in Figure 95.

```
awpl us# wri te
Bui ldi ng confi gurati on . . .
[OK]
awpl us#
```

Figure 95. Saving the Changes with the WRITE Command

If this is the initial management session, the switch automatically creates the Default.cfg configuration file and stores your change in the file.

12. Enter the REBOOT command to reboot the switch.
13. At the confirmation prompt, type “Y” for yes.
14. Wait three minutes for the switch to initialize its management software and afterwards examine the Switch ID LED again. The switch is ready for normal network operations as a stand-alone unit if its ID number is “0.” If the number is “1 or higher,” repeat this procedure, being sure to save the configuration change with the WRITE command in step 11.

15. Go to “Verifying Support for the Ethernet Line Cards” on page 133.

Verifying Support for the Ethernet Line Cards

The first thing you should do after powering on the switch for the first time is verify that the version of the AlliedWare Plus software on the unit supports all of the installed Ethernet line cards. Older versions of the management software might not support all the cards in the switch. To confirm line card support, perform the following procedure. If the switch is powered off, start with step 1. If the switch is already powered on, start with step 3:

1. Power on the switch by doing one of the following:
 - If the switch has an AC power supply, connect the AC power cord to the power supply on the back panel and to an AC power source. If the switch has two power supplies, you need to power on only one of them for this procedure.
 - If the switch has the DC SBxPWRSYS1-80 Power Supply, power on the DC circuit and the On/Off switch on the power supply. (If you have not yet wired the DC connector on the power supply, refer to “Powering On SBxPWRSYS1-80 DC Power Supplies” on page 94.)
2. Wait three minutes for the switch to initialize the management software.
3. Start a local management session on the switch. Refer to “Starting a Local Management Session” on page 127.
4. In the User Exec mode, enter either the SHOW SYSTEM or SHOW VERSION command.
5. Examine the Software Version field in the information on your screen. This is the version number of the AlliedWare Plus software on the switch.
6. Determine whether that version supports all of the line cards in the chassis by referring to Table 14 on page 45, which lists the software and hardware releases. For example, a chassis that has XEM2-8XSTm Cards has to have v5.4.9-2 or later of the AlliedWare Plus software.
7. Do one of the following:
 - If the management software supports all the cards, go to “Verifying the Switch with the AlliedWare Plus Commands” on page 134.
 - If the management software is an older version that does not support all the installed cards, update the software by referring to the Software Reference for SwitchBlade x908 GEN2 Series Switches on the Allied Telesis web site.

Verifying the Switch with the AlliedWare Plus Commands

To confirm the hardware operations of the switch with the AlliedWare Plus Operating System, perform the following procedure:

1. Start a local management session on the switch. For instructions, refer to “Starting a Local Management Session” on page 127.
2. To display the status of the power supplies and fan modules, enter the `SHOW SYSTEM ENVIRONMENT` command in the User Exec or Privileged Exec mode. The Status column in the display provides the states of the modules. Components are operating normally when they have an “Ok” status.

The next command, `SHOW CARD`, has to be performed from the Privileged Exec mode. If you are still in the User Exec mode, enter the `ENABLE` command to move to the Privileged Exec mode. The mode prompt is “awplus#”.

3. To display the status of the line cards, enter the `SHOW CARD` command in the Privileged Exec mode. A line card has a state of “Online” when it is operating normally. An example of the status information is shown in Figure 96 on page 134.

```
awplus# show card
```

Slot	Card Type	State
1	XEM2-12XT	Online
2	XEM2-12XT	Online
3	XEM2-12XTm	Online
4	XEM2-12XS	Online
5	XEM2-12XS	Online
6	XEM2-1CQ	Online
7	XEM2-4QS	Online
8	XEM2-4QS	Online

Figure 96. SHOW CARD Command

4. To display the states of the individual ports on the Ethernet line cards, use the `SHOW INTERFACE STATUS` command in the Privileged Exec mode.

For information about the command line interface, refer to the Software Reference for SwitchBlade x908 GEN2 Series Switches on the Allied Telesis web site.

5. Go to Chapter 6, “Cabling the Networking Ports” on page 135.

Chapter 6

Cabling the Networking Ports

This chapter contains the following procedures:

- ❑ “Cabling Twisted Pair Ports” on page 136
- ❑ “Guidelines to Handling Fiber Optic or Twisted Pair Transceivers” on page 137
- ❑ “Installing and Cabling Fiber Optic Transceivers” on page 138
- ❑ “Installing Direct Connect Cables” on page 141

Cabling Twisted Pair Ports

This section applies to the twisted pair ports on the following products:

- ❑ XEM2-8XSTm Line Card
- ❑ XEM2-12XT Line Card
- ❑ XEM2-12XTm Line Card

Here are the cabling guidelines:

- ❑ Minimum cable requirements are:
 - 100Mbps - Standard TIA/EIA 568-B-compliant Category 3 unshielded cabling.
 - 1/2.5/5Gbps - Standard TIA/EIA 568-A-compliant Category 5 or TIA/EIA 568-B-compliant Enhanced Category 5 (Cat 5e) unshielded cabling.
 - 10Gbps -Standard TIA/EIA 568-C-compliant Category 6a unshielded cabling.
- ❑ The connectors on the cables should fit snugly into the ports, and the tabs should lock the connectors into place.
- ❑ The default speed setting for the ports is Auto-Negotiation. This setting is appropriate for ports connected to network devices that also support Auto-Negotiation.
- ❑ The ports must be set to Auto-Negotiation, the default setting, to operate at 1Gbps.
- ❑ The ports support full-duplex only.
- ❑ Do not attach cables to ports of static or LACP port trunks until after configuring the trunks on the switch. Otherwise, the ports will form network loops that can adversely affect network performance.

Guidelines to Handling Fiber Optic or Twisted Pair Transceivers

Please review the following guidelines before installing fiber optic or twisted pair transceivers in XEM2 line cards:

- ❑ Transceivers are hot-swappable. You can install them while the chassis is powered on.
- ❑ For a list of supported transceivers, refer to the product data sheet on the Allied Telesis web site.
- ❑ The operational specifications and fiber optic cable requirements are provided in the documents included with the transceivers.
- ❑ You should install transceivers in XEM2 line cards before connecting their fiber optic cables.
- ❑ Fiber optic transceivers are dust sensitive. Always keep the plug in the optical bores when a fiber optic cable is not installed, or when you store the transceiver. When you do remove the plug, keep it for future use.
- ❑ Repetitive removal or insertion of a transceiver can lead to premature failure.
- ❑ 100Gbps transceivers for the XEM2-1CQ line card have handles. Use the handles when installing or removing transceivers. An example is shown in Figure 97.

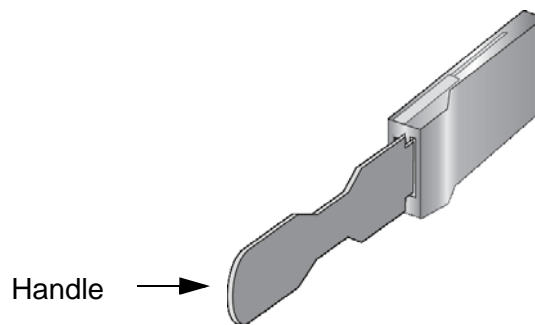


Figure 97. Handle on 100Gbps Transceivers for the XEM2-1CQ Line Card



Caution

Transceivers can be damaged by static electricity. Be sure to observe all standard electrostatic discharge (ESD) precautions, such as wearing an antistatic wrist strap, to avoid damaging the devices. [E92](#)

Installing and Cabling Fiber Optic Transceivers

Table 15 lists the types of fiber optic transceivers that are supported by the XEM2 line cards. Refer to the product datasheet for a list of approved transceivers.

Table 15. XEM2 Line Cards and Fiber Optic Transceivers

Ethernet Line Card	Fiber Optic Transceiver
XEM2-8XSTm	1Gbps SX or LX SFP 10Gbps SR or LR SFP+
XEM2-12XS	1Gbps SX or LX SFP 10Gbps SR or LR SFP+
XEM2-4QS	40Gbps QSFP+
XEM2-1CQ	100Gbps SR or LR QSFP28

Please review “Guidelines to Handling Fiber Optic or Twisted Pair Transceivers” on page 137 before performing the procedure.

Your transceivers may look different than those shown in the following illustrations.



Warning

The temperature of an operational transceiver can exceed 70° C (158° F). Exercise caution when removing or handling transceivers with unprotected hands. [E43](#)

To install a fiber optic transceiver in an Ethernet line card, perform the following procedure:

1. Select a slot in the XEM2 line card for the transceiver.
2. If the selected slot has a dust cover, remove it.
3. Remove the transceiver from its shipping container and store the packaging material in a safe location.
4. Orient the transceiver and slide it into the slot until it clicks into place. The correct orientation depends on the line card and transceiver:
 - XEM2-8XSTm or XEM2-12XS Line Card - To install a transceiver in an odd numbered slot, position its handle on the right. To install a transceiver in an even numbered slot, position its handle on the left. Refer to Figure 98 on page 139.

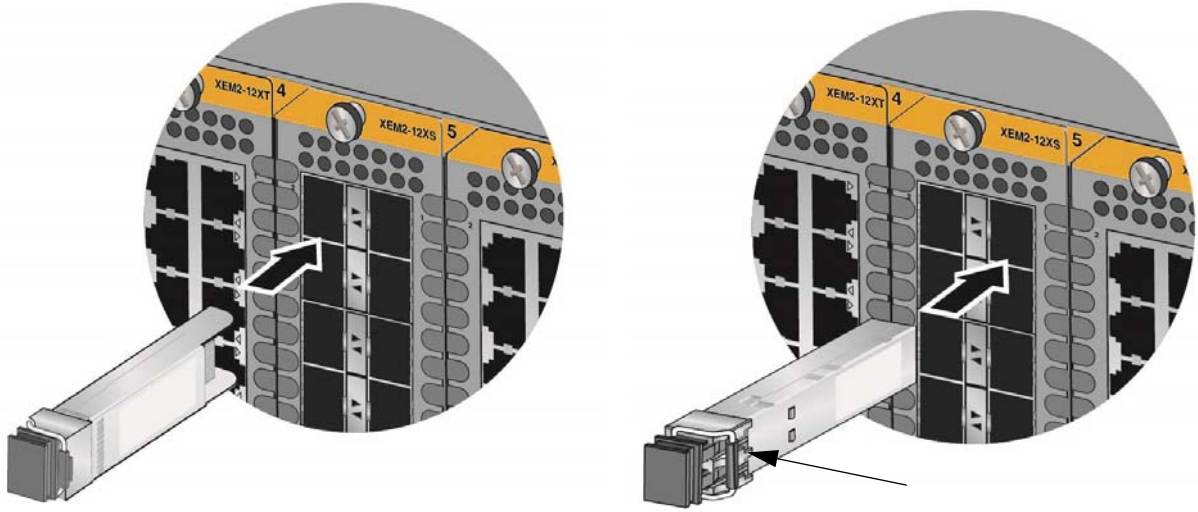


Figure 98. Installing an SFP Transceiver in the XEM2-12XS Line Card

- XEM2-4QS Line Card - Figure 99 shows a QSFP4 transceiver being installed in an XEM2-4QS Line Card.

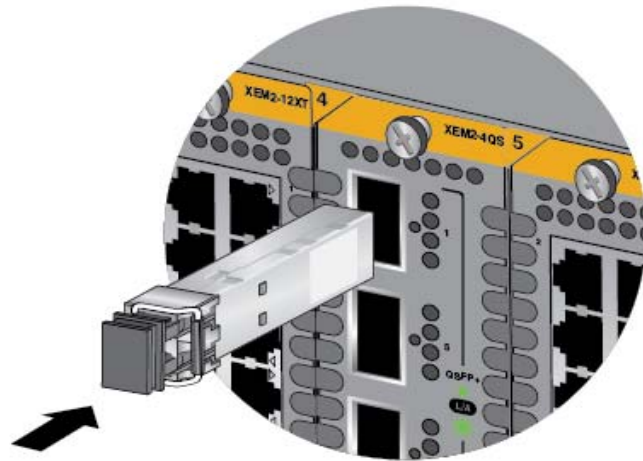


Figure 99. Installing a Fiber Optic Transceiver in the XEM2-4QS Line Card

- XEM2-1CQ line card - Position the 100Gbps QSFP28 transceiver's handle on the right. Refer to Figure 100 on page 140.

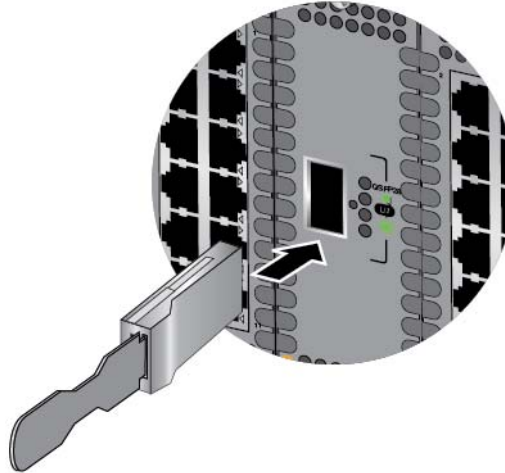


Figure 100. Installing an 100Gbps QSFP28 Transceiver in the XEM2-1CQ Line Card

Note

If you are ready to attach the fiber optic cable to the transceiver, continue with the next step. Otherwise, repeat steps 1 to 4 to install additional transceivers.

5. If the fiber optic connector on the transceiver has a dust cover, remove the cover.
6. Connect the fiber optic cable to the connector on the transceiver. The cable is keyed such that it can connect to the transceiver only one way.
7. Repeat this procedure to install additional transceivers.

Installing Direct Connect Cables

The XEM2-8XSTm, XEM2-12XS, and XEM2-4QS line cards support direct connect cables, which offer an economical way to add 10Gbps or 40Gbps connections over short distances. Refer to Table 16.

Table 16. XEM2 Line Cards and Direct Connect Cables

XEM2 Line Card	Direct Connect Cable
XEM2-8XSTm XEM2-12XS	SP10TW1 - 1 meter SP10TW3 - 3 meters SP10TW7 - 7 meters
XEM2-4QS	QSFP1CU - 1 meter QSFP3CU - 3 meters

To install direct connect cables, perform the following procedure:

1. Select a slot in the XEM2 Line Card for the direct connect cable.
2. If the selected slot has a dust cover, remove the cover.
3. Remove the transceiver from its shipping container and store the packaging material in a safe location.
4. Orient the transceiver and slide it into the slot until it clicks into place. The correct orientation depends on the line card and transceiver:
 - ❑ XEM2-8XSTm or XEM2-12XS Line Card - To install a SP10TW direct connect cable in an odd numbered slot, position the transceiver with the release tab on the right. To install a cable in an even numbered slot, position the release tab on the left. Refer to Figure 101 on page 142. Slide the connector into the slot until it clicks into place.

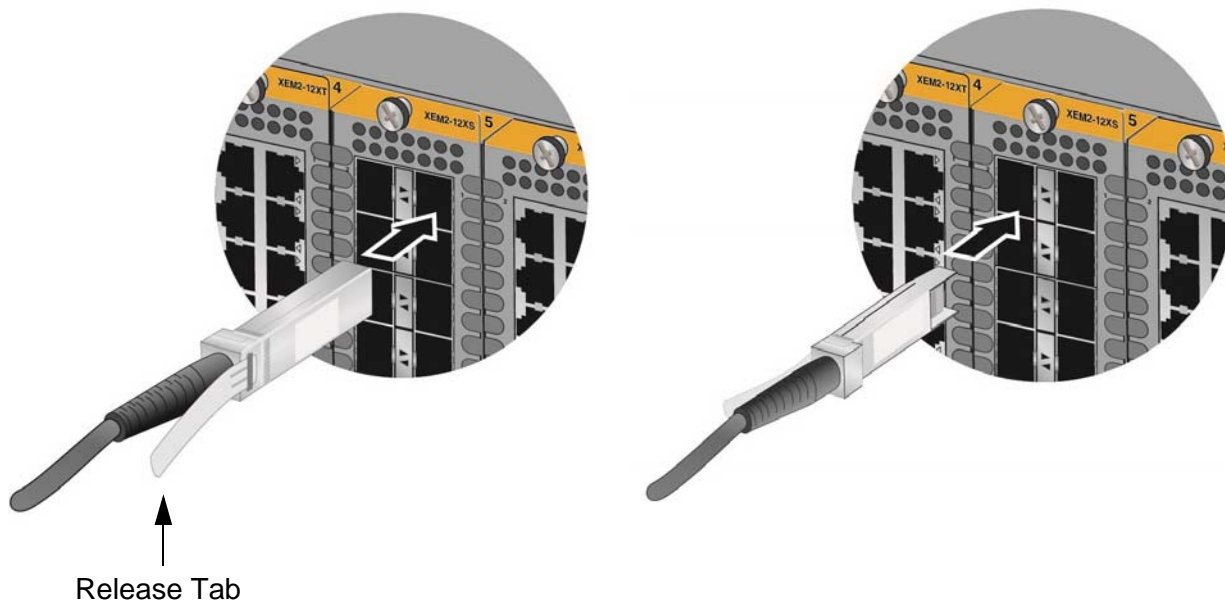


Figure 101. Installing SP10TW Cables in the XEM2-12XS Line Card

- ❑ XEM2-4QS Line Card - Orient the connector on the QSFP+ Cable with the release tab on the left side and slide it into the slot until it clicks into place. Refer to Figure 102.

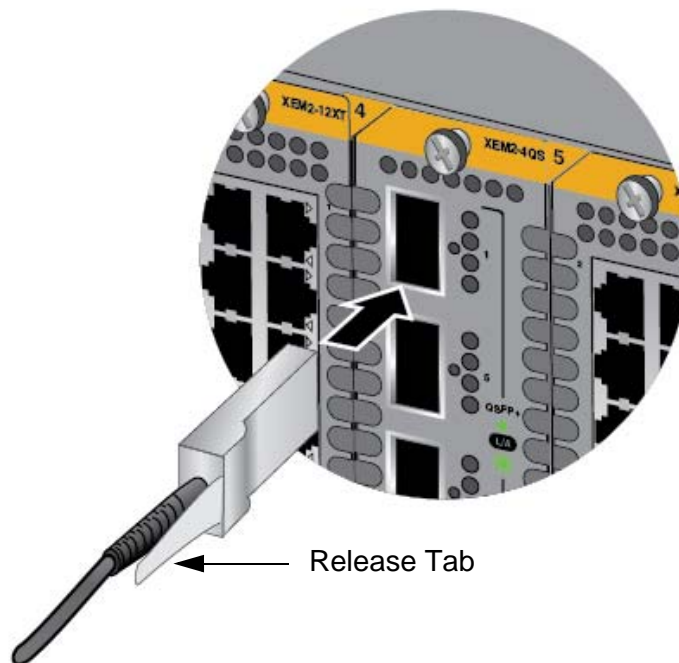


Figure 102. Sliding the QSFP+ Cable into the Slot

5. Connect the other end of the cable into a compatible slot on another network device.

6. Repeat this procedure to install additional direct connect cables.

Note

To remove the connector and cable from the slot, gently push on the connector, pull on the release tab, and slide the connector from the slot.

Chapter 7

Replacing Modules

This chapter contains the following procedures:

- ❑ “Replacing SBxPWRSYS2 AC Power Supplies” on page 146
- ❑ “Replacing SBxPWRSYS1-80 DC Power Supplies” on page 149
- ❑ “Replacing XEM2 Line Cards” on page 160
- ❑ “Replacing FAN08 Modules” on page 167

Replacing SBxPWRSYS2 AC Power Supplies

This section contains the procedure for removing or replacing SBxPWRSYS2 AC Power Supplies in the SBx908 Gen2 Chassis. The illustrations show the removal of the power supply from slot PSU A. The procedure is the same for removing a power supply from slot PSU B.

Note

Allied Telesis recommends saving a backup copy of the configuration file in the chassis before removing or replacing a power supply. For instructions, refer to the Software Reference for SwitchBlade x908 Gen2 Switches.



Caution

If you are installing the SBxPWRSYS2 AC Power Supply in an active, operational chassis, you should connect the AC power cord to the chassis before installing the power supply. Attaching the power cord after installing the SBxPWRSYS2 AC Power Supply might cause the switch to restart its operating system, resulting in a temporary interruption of network operations of the chassis.

To remove power supplies from the chassis, perform the following procedure:

1. Disconnect the AC power cord for the power supply from the AC power source. Refer to Figure 103.

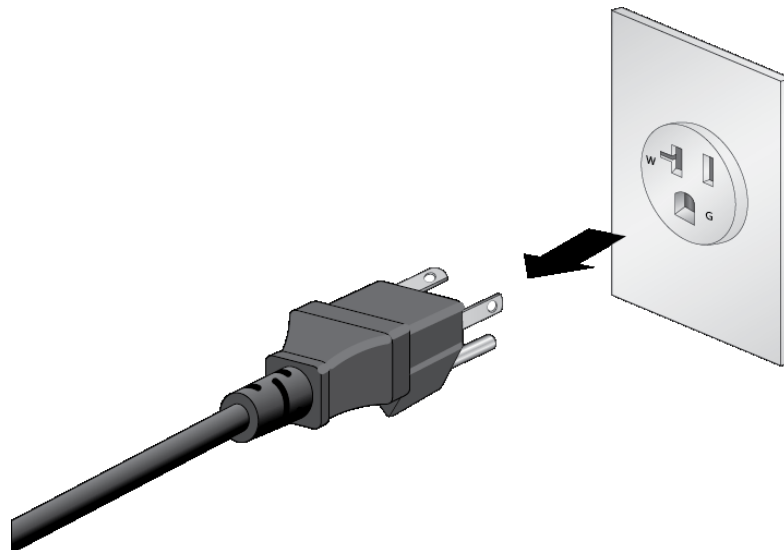


Figure 103. Disconnecting the AC Power Cord from the Power Source

2. Move the retaining clip from the power cord on the rear panel of the chassis, and disconnect the cord. Refer to Figure 104.

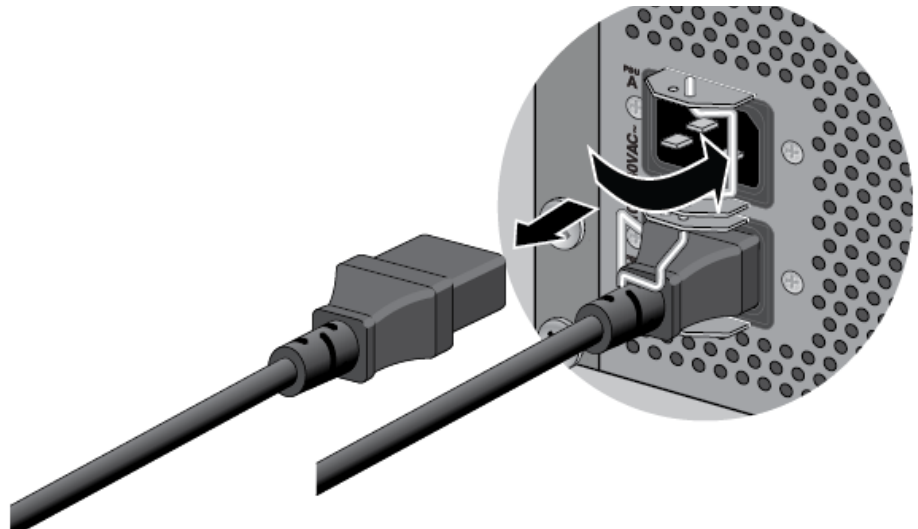


Figure 104. Disconnecting the AC Power Cord from the Chassis

3. Lift the locking hand on the power supply. Refer to Figure 105 on page 147.



Figure 105. Lifting the Locking Handle on the SBxPWRSYS2 AC Power Supply

4. Carefully pull on the locking handle to slide the power supply from the chassis. Refer to Figure 106 on page 148.



Warning

The power supply is heavy. Use both hands to hold the module as you remove it from the chassis.



Figure 106. Removing the SBxPWRSYS2 AC Power Supply

5. Do one of the following:
 - To install a new power supply, refer to “Installing SBxPWRSYS2 AC Power Supplies” on page 71 for instructions.
 - If you are not installing a new power supply in the chassis, cover the empty PSU slot with the blank panel, as explained in “Installing the Blank Power Supply Slot Cover” on page 85.

Replacing SBxPWRSYS1-80 DC Power Supplies

To replace an SBxPWRSYS1-80 DC Power Supply, perform the following procedure:

1. Turn off the circuit breaker to the SBxPWRSYS1-80 DC Power Supply.
2. Turn off the On/Off switch on the front panel of the power supply. Refer to Figure 60 on page 97.
3. Use a #2 screwdriver to loosen the screw on the locking handle. Refer to Figure 107.

Note

Do not lift the locking handle yet.

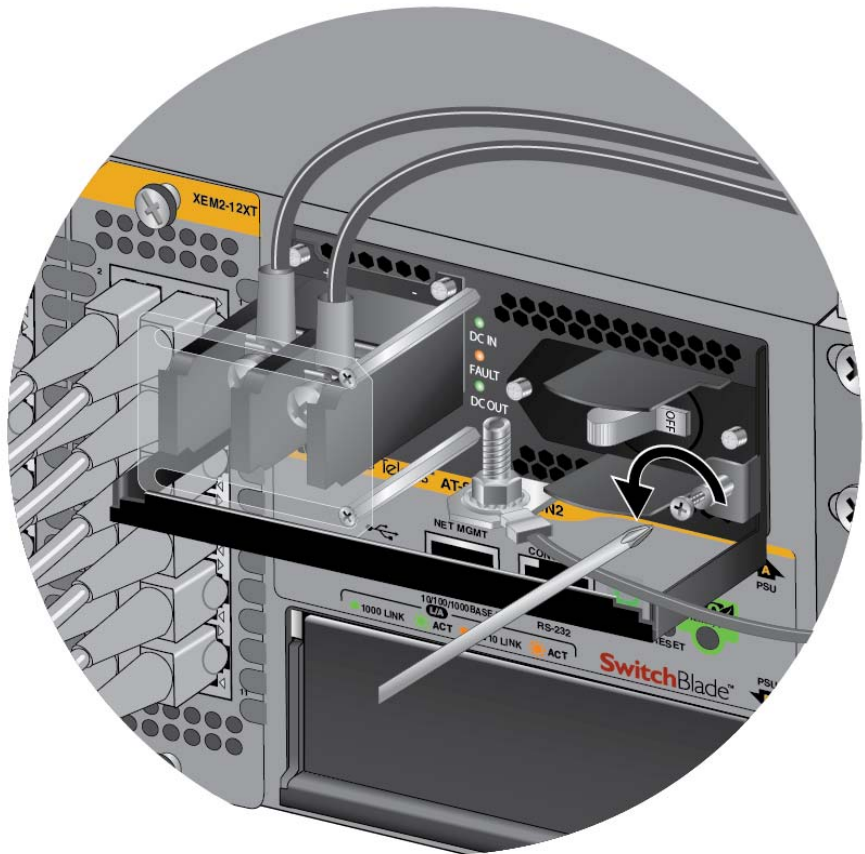


Figure 107. Loosening the Screw on the Locking Handle

Note

If the power wires are connected to the terminal block with the right angle terminals, go to step 5.

4. Use a #1 screwdriver to loosen the two screws that secure the plastic cover over the terminal block and slide the cover to the right. You may need to slightly lift the locking handle to access the bottom screw. Refer to Figure 108

The plastic cover might not be present if you used the right angle terminals to connect the lead wires to the terminal block. If this is the case, skip this step.

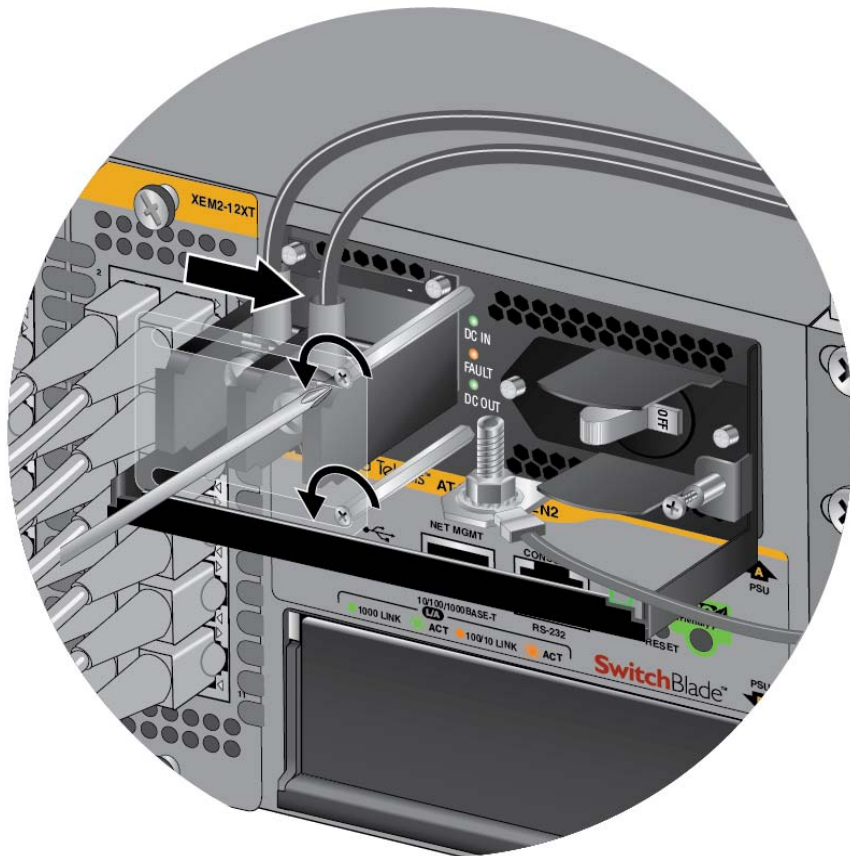


Figure 108. Opening the Plastic Window over the Terminal Block

5. Use a #3 screwdriver to remove the negative (-) lead wire from the terminal block. The negative lead wire is on the right. Refer to Figure 109 on page 151.

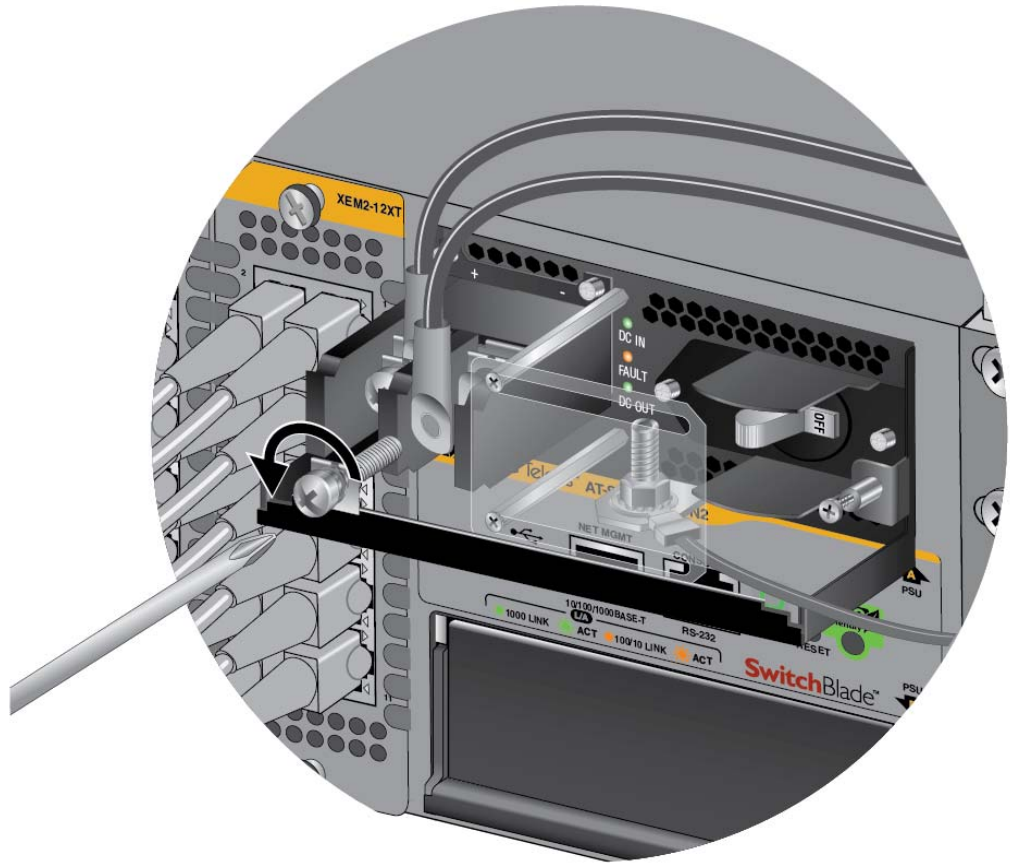


Figure 109. Removing the Negative Lead Wire

6. Use a #3 screwdriver to remove the positive (+) lead wire from the terminal block. Refer to Figure 110 on page 152.

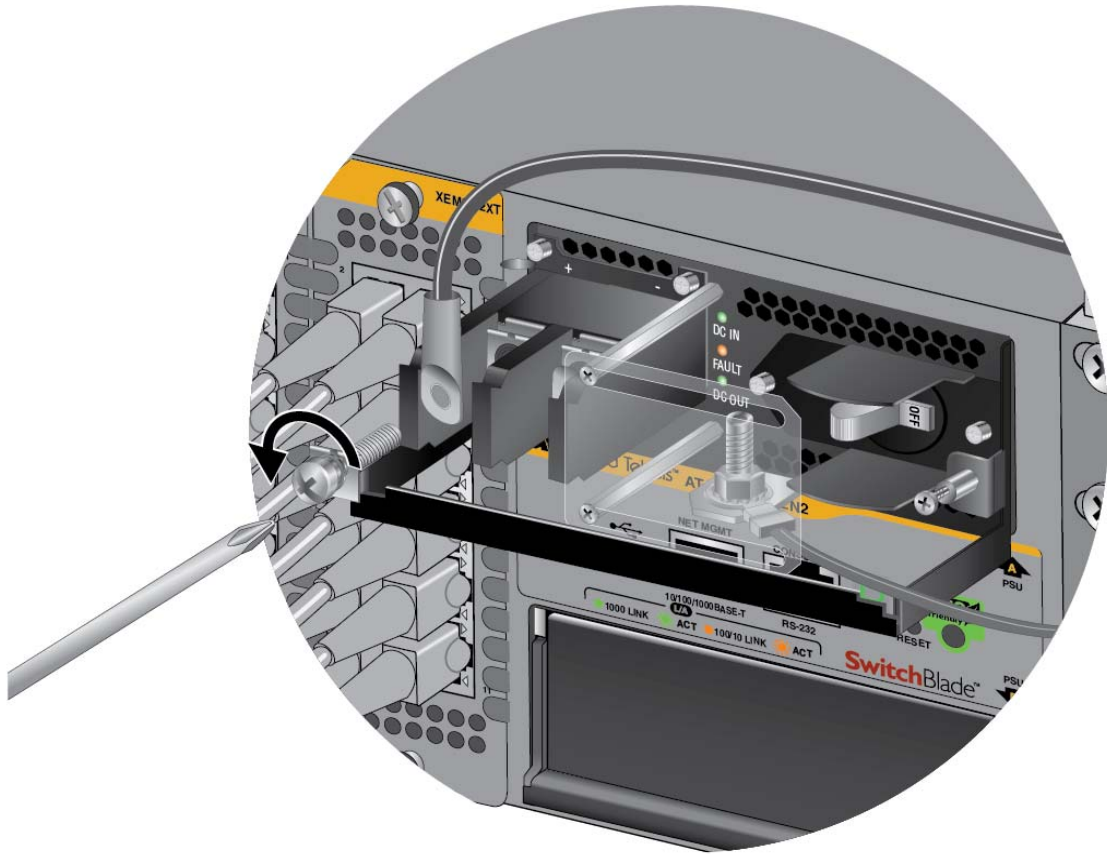


Figure 110. Removing the Positive Lead Wire from the Terminal Block

7. Reinstall the two screws on the negative (-) and positive (+) terminals. Refer to Figure 111 on page 153.

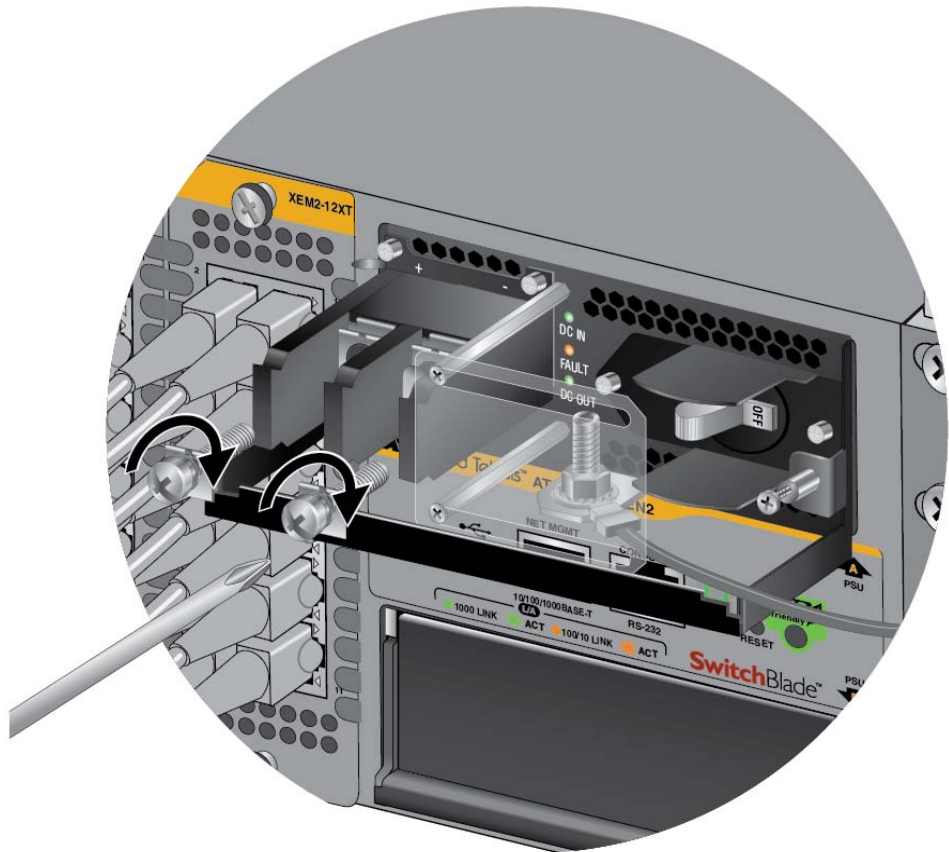


Figure 111. Reinstalling the Screws on the Positive and Negative Terminals

8. Slide the plastic cover to the left and lightly tighten the two screws to secure it in place. Refer to Figure 112 on page 154.



Caution

Do not over tighten the screws or you might crack or break the plastic cover.

The plastic cover might not be present if the lead wires were connected to the terminal block with the right angle terminals. If this is the case, you may either skip this step or reinstall the plastic cover on the power supply.

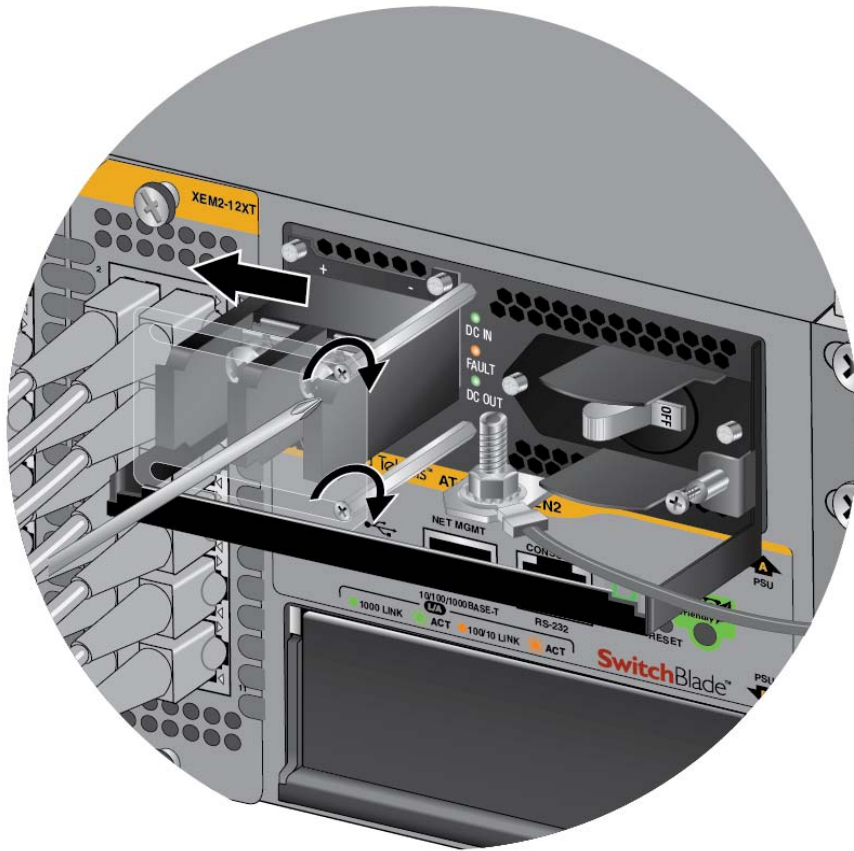


Figure 112. Closing the Plastic Cover

9. Use an 8 mm wrench to remove the grounding wire from the grounding post. Refer to Figure 113 on page 155.

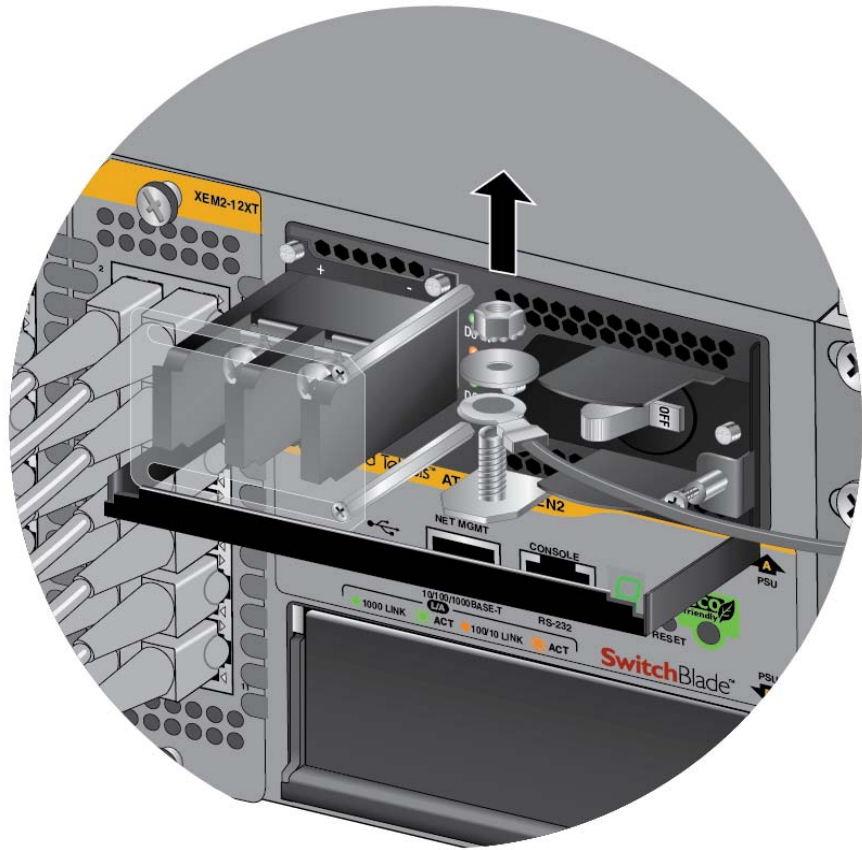


Figure 113. Removing the Grounding Wire

10. Reinstall the nut and washer on the grounding post. Refer to Figure 114 on page 156.

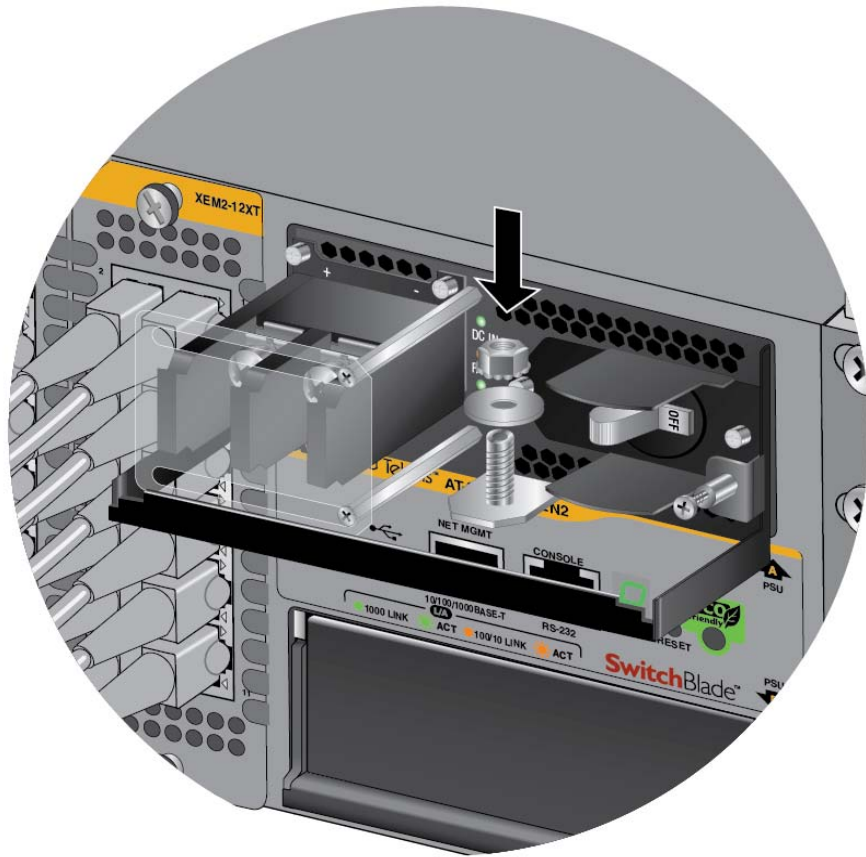


Figure 114. Reinstalling the Nut and Washer on the Grounding Post

Note

If you did not perform step 3 to loosen the retaining screw on the power supply, perform the step before continuing.

11. Lift the locking handle and slide the power supply from the chassis. Refer to Figure 115 on page 157.



Warning

The power supply is heavy. Use both hands to hold the module as you remove it from the chassis.

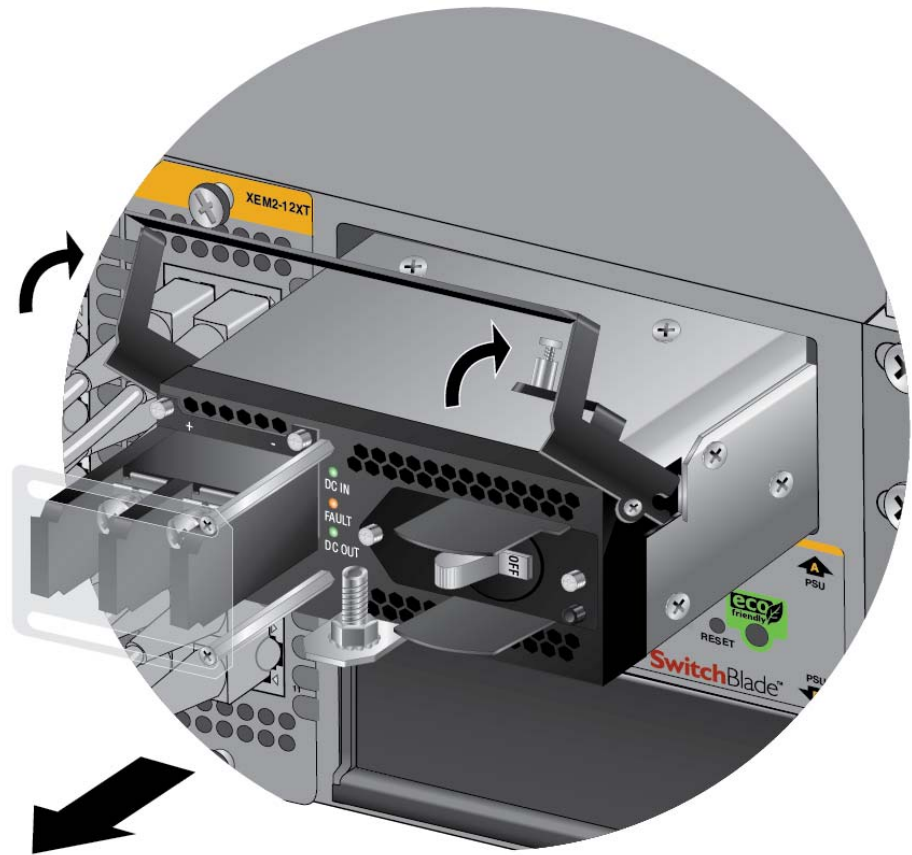


Figure 115. Lifting the Locking Handle and Removing the Power Supply

12. Do one of the following:

- To install a new power supply, refer to “Installing SBxPWRSYS2 AC Power Supplies” on page 71 or “Installing SBxPWRSYS1-80 DC Power Supplies” on page 75.
- If you are not installing a new power supply, continue with this procedure to install the blank power supply slot cover.

13. Place the locking handle on the blank power supply slot cover in the up position and slide the cover into the empty power supply slot. Refer to Figure 116 on page 158.

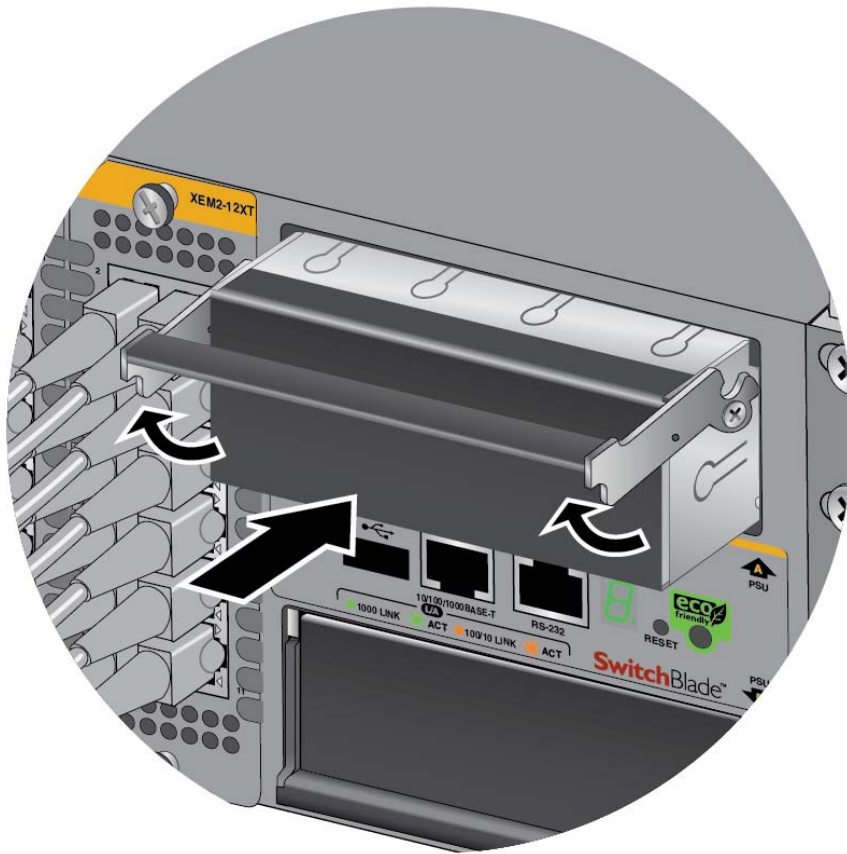


Figure 116. Installing the Blank Power Supply Slot Cover

14. Lower the locking handle to secure the slot cover to the slot. Refer to Figure 117 on page 159.



Figure 117. Lowering the Locking Handle on the Power Supply Slot Cover

Replacing XEM2 Line Cards

This section contains the procedure for replacing XEM2 Ethernet line cards in the SBx908 Gen2 Chassis. Please review the guidelines in Table 17 before performing the procedure.

Table 17. Hotswapping Guidelines for XEM2 Line Cards

XEM2 Line Card	Description
XEM2-8XSTm XEM2-12XT XEM2-12XS XEM2-4QS	<p>No reset of the switch is required when hotswapping the cards in the following situations:</p> <ul style="list-style-type: none"> - Installing a card in an unused line card slot that was not provisioned for any card. - Installing a card in a line card slot that was provisioned for it or one of the other cards. - Replacing a card with the same model (for example, replacing an XEM2-12XT Card with another XEM2-12XT Card). - Replacing a card with a different model (for example, replacing an XEM2-12XS Card with an XEM2-4QS Card). <p>Resetting the switch is required when installing one of the cards in a line card slot that was used by or provisioned for the XEM2-1CQ Card.</p>
XEM2-1CQ	<p>No reset of the switch is required when hotswapping the XEM2-1CQ Card in the following situations:</p> <ul style="list-style-type: none"> - Replacing the XEM2-1CQ Card with another XEM2-1CQ Card. - Installing the XEM2-1CQ Card in a line card slot that was provisioned for it with the SWITCH BAY PROVISION command. (The switch, however, must be reset after the provisioning command.)

Table 17. Hotswapping Guidelines for XEM2 Line Cards (Continued)

XEM2 Line Card	Description
XEM2-1CQ (Continued)	<p>You must reset the switch after hotswapping the card under these conditions:</p> <ul style="list-style-type: none"> - Installing the XEM2-1CQ Card in a line card slot that was not provisioned for it. - Replacing one of the other cards with the XEM2-1CQ Card. - Replacing the XEM2-1CQ Card with one of the other cards. - Provisioning a line card slot for the XEM2-1CQ Card with the SWITCH BAY PROVISION command. The provision is not implemented until the switch is reset

Here are additional hot-swapping guidelines:

- ❑ Allied Telesis recommends saving a backup copy of the switch's configuration file before removing or replacing XEM2 Line Cards. For instructions, refer to the Software Reference for SwitchBlade x908 GEN2 Switches.
- ❑ When hot-swapped, XEM2 Line Cards might require up to thirty seconds to become fully operational.
- ❑ Remember to save the switch's configuration with the WRITE FILE command after issuing the SWITCH BAY PROVISION command to provision a line card slot for a card.
- ❑ AlliedWare Plus alerts you with critical log messages on the console and in the buffered log if you need to reset the switch after hot-swapping line cards. (The buffered log is displayed with the SHOW LOG command.) Here are examples of the messages. The first example is from replacing an XEM2-1CQ Card with an XEM2-12XT Card:

Console Message:

```
23: 22: 28 awplus HSL[996]: Stack member 1 must be
rebooted to configure for XEM2-12XT, di sabl ing
XEM.
```

Buffered log:

```
2018 May 15 23: 22: 28 local6.cri t awplus HSL[996]:
Stack member 1 must be rebooted to configure for
XEM2-12XT, di sabl ing XEM.
```

The next example is from replacing an XEM2-12XT Card with an XEM2-1CQ Card:

Console Message:

```
23: 26: 02 awpl us HSL[996]: Stack member 1 must be
rebooted to configure for XEM2-1CQ, di sabl ing
XEM.
```

Buffered log:

```
2018 May 15 23: 26: 02 local 6. cri t awpl us HSL[996]:
Stack member 1 must be rebooted to configure for
XEM2-1CQ, di sabl ing XEM.
```

This procedure requires a #2 Phillips-head screwdriver (not provided). The illustrations show the XEM2-12XT line card. The procedure is the same for all cards.

This procedure requires the following tool:

- #2 Phillips-head screwdriver (not provided)

To remove an XEM2 line card from the chassis, perform the following procedure:

1. Label and remove the cables from the line card.
2. If the line card has fiber optic transceivers, install dust covers on the ports.
3. If the line card has transceivers or direct connect cables, label and remove the transceivers or cables.



Warning

The temperature of an operational transceiver may exceed 70° C (158° F). Exercise caution when removing or handling transceivers with unprotected hands. [GE43](#)

Note

100Gbps transceivers for the XEM2-1CQ line card have handles. Use the handles when installing or removing transceivers.

4. Use a #2 Phillips-head screwdriver to loosen the two screws on the faceplate of the card. Refer to Figure 118 on page 163.

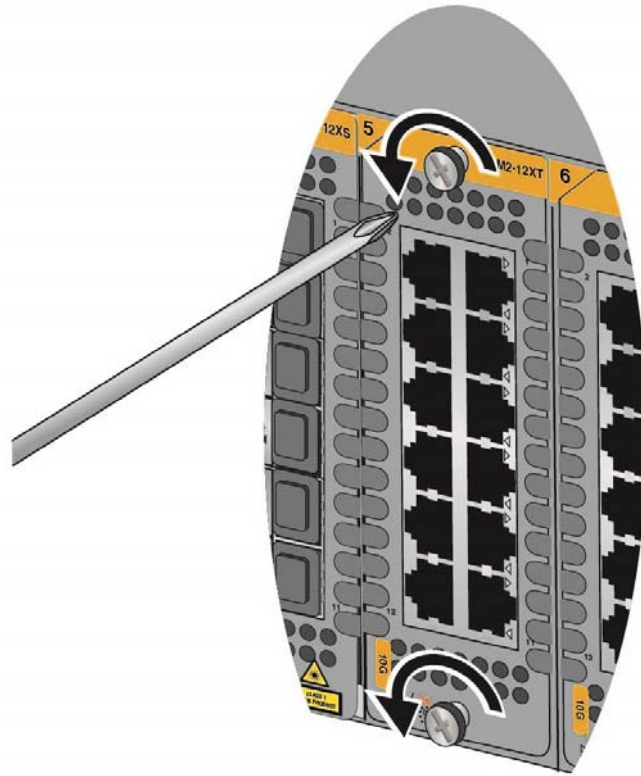


Figure 118. Loosening the Screws on the Ethernet Line Card

5. Carefully pull on the screws on the faceplate to disconnect the line card from the connector on the backplane in the chassis. Refer to Figure 119 on page 164.

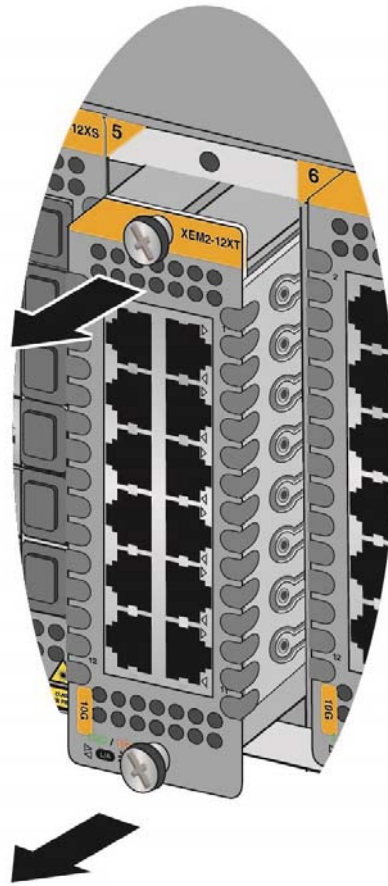


Figure 119. Disconnecting an Ethernet Line Card from the Chassis

6. Carefully slide the card from the chassis. Refer to Figure 120 on page 165.

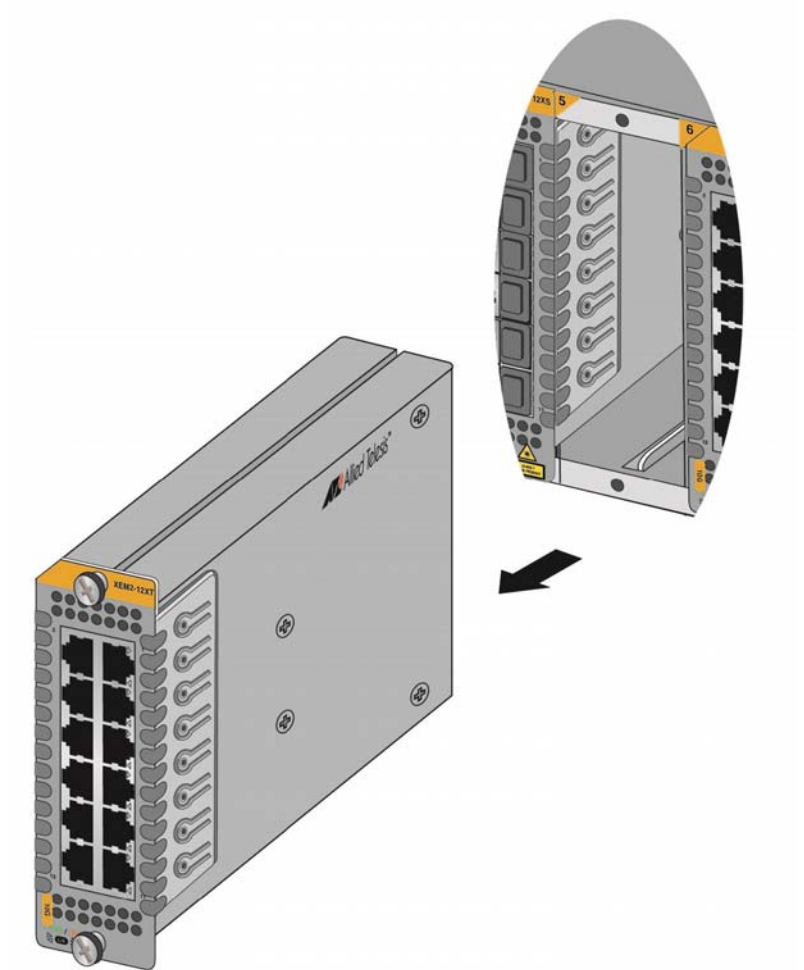


Figure 120. Sliding an Ethernet Line Card from the Chassis

7. If you are not installing the line card in another slot or chassis, return it to its anti-static bag and shipping container. Refer to Figure 121 on page 166.



Figure 121. Placing the Ethernet Line Card in its Anti-static Bag

8. For instructions on how to install the card in another slot in either the same or a different chassis, refer to “Installing Ethernet Line Cards” on page 79.
9. If you are not planning to install another line card in the slot now, cover the slot with a blank cover. For instructions, refer to “Installing Blank Line Card Slot Covers” on page 83.

Replacing FAN08 Modules

This section contains the procedure for replacing FAN08 Modules in the SBx908 Gen2 Chassis.

Removing FAN08 Modules

This procedure requires the following tool:

- #2 Phillips-head screwdriver (not provided)

The illustrations show the removal of the fan module from the Fan A slot on the back panel. The procedure is the same for removing the module from the Fan B slot.

To remove an FAN08 Module from the chassis, perform the following procedure:

1. Use a #2 Phillips-head screwdriver to loosen the two screws on the faceplate of the fan module. Refer to Figure 122.



Figure 122. Loosening the Screws on the FAN08 Module

2. Carefully pull on the screws on the faceplate to disconnect the line card from the connector on the backplane in the chassis. Refer to Figure 123 on page 168.

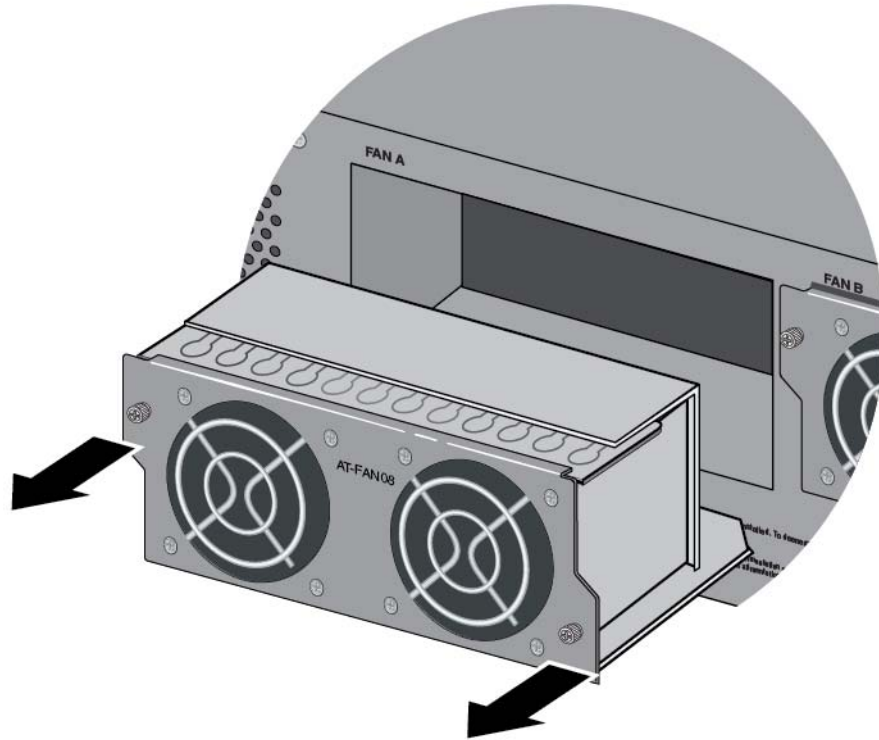


Figure 123. Disconnecting the FAN08 Module from the Chassis

3. Continue with the next procedure to install a new FAN08 Module.

Installing FAN08 Modules

This procedure requires the following tool:

- #2 Phillips-head screwdriver (not provided)

The illustrations show the installation of the fan module in Fan A slot on the back panel. The procedure is the same for installing the module in the Fan B slot.

To install an FAN08 Module, perform the following procedure:

1. Align the FAN08 Module in the slot as shown in Figure 124 on page 169.

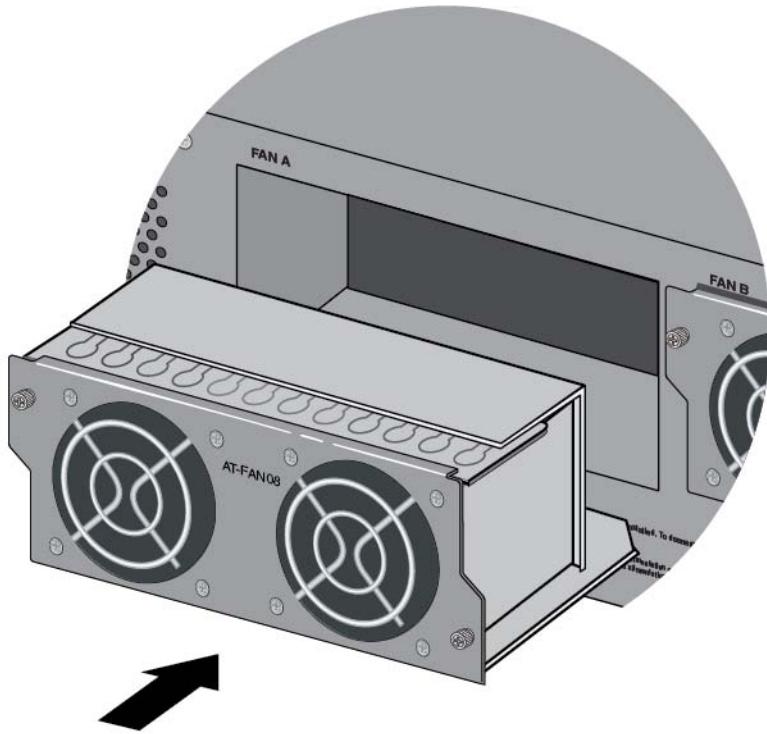


Figure 124. Aligning the FAN08 Module in the Chassis Slot

2. When you feel the module make contact with the connector inside the chassis, gently press on both sides to seat the module on the connector. Refer to Figure 125.

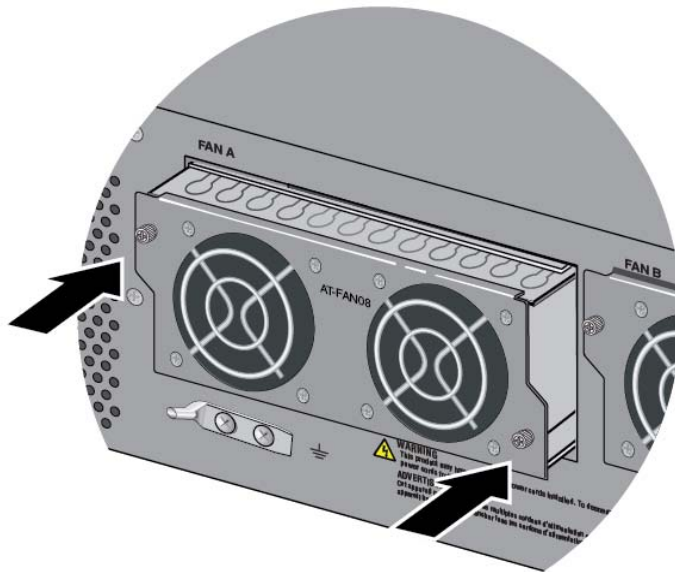


Figure 125. Seating the FAN08 Module on the Connector in the Chassis

3. Tighten the two screws on the module to secure it in the chassis. Refer to Figure 126.



Figure 126. Tightening the Two Captive Screws on the FAN08 Module

Chapter 8

Troubleshooting

This chapter contains suggestions on how to troubleshoot problems with the switch.

Note

For further assistance, please contact Allied Telesis Technical Support at www.alliedtelesis.com/support.

Problem 1: All the port LEDs and the Switch ID LED are off, and the fans are not operating.

Solutions: The unit is not receiving power. If the switch has SBxPWRSYS2 AC Power Supplies, try the following:

- Verify that the power cord is securely connected to the power source and the AC connector on the back panel of the switch.
- Verify that the power outlet has power by connecting another device to it.
- Try connecting the unit to another power source.
- Try a different power cord.
- Verify that the voltage from the power source is within the required levels for your region. The power requirements for the switch are listed in “Power Specifications” on page 180.

If the switch has SBxPWRSYS1-80 Power Supplies, examine the LEDs on the power supplies. The power supplies are operating normally when the DC IN and DC OUT LEDs are solid green and the Fault LED is off.

Possible fault conditions and their solutions are described here:

Fault Condition 1: If the DC IN LED is off, the power supply is not receiving power, has overheated and been disabled, or has failed and needs to be replaced. Try the following:

- Verify that the On/Off switch on the power supply is in the On position.
- Verify that the DC circuit breaker is on.
- Verify that the positive and negative power wires are correctly and securely connected to the terminal block on the power supply and circuit breaker.

- ❑ Verify that the DC circuit break has power by attaching another device to it.
- ❑ Verify that the power from the DC circuit break is within the required levels of the power supply. Refer to “Power Specifications” on page 180.
- ❑ If the chassis is still operating, use the SHOW SYSTEM ENVIRONMENT command in the User Exec or Privileged Exec mode to determine if the power supply has overheated and shutdown. The Status column in the display provides the states of the chassis modules. Components that have an “Ok” status are operating normally.

Fault Condition 2: If the DC IN LED is solid green but the DC OUT LED is off, the power unit is generating insufficient DC power. Replace the power supply.

Fault Condition 3: If the Fault LED is solid amber, try the solutions in Fault Condition 1. If they do not resolve the problem, replace the power supply.

Note

The power supply is hot swappable. If the chassis has two power supplies and one of them fails, you do not have to power off the operational power supply to replace the failed unit.

Problem 2: All the port LEDs are off even though the ports are connected to active network devices.

Solution: The switch might be operating in the low power mode. To toggle on the LEDs, press the eco-friendly button on the front panel of the switch. You may also toggle the LEDs off and on with the ECOFRIENDLY LED and NO ECOFRIENDLY LED commands in the command line interface.

Problem 3: A twisted pair port on the XEM2-8XSTm, XEM2-12XT, or XEM2-12XTm Ethernet Line Card is connected to an active network device but its LINK/ACT LED is off.

Solutions: The port is unable to establish a link to the device. Try the following:

- ❑ Verify that the network device connected to the twisted pair port is powered on and is operating properly.
- ❑ Verify that the network device operates at a speed supported by the card. The twisted pair ports on the XEM2-12XT Card support 100Mbps and 1/10Gbps. The ports on the XEM2-8XSTm and XEM2-12XTm Cards support 100Mbps and 1/2.5/5/10Gbps. The cards do not support 10Mbps devices.
- ❑ Try connecting another network device to the twisted pair port with

a different cable. If the twisted pair port is able to establish a link, then the problem is with the cable or the other network device.

- ❑ Verify that the twisted pair cable does not exceed 100 meters (328 feet).
- ❑ Verify that you are using the appropriate category of twisted pair cable. Cable requirements are listed in Table 5 on page 27.
- ❑ Verify that the port is connected to the correct twisted pair cable.

Note

A 1GBase/10GBase connection may require five to ten seconds to establish a link.

Problem 4: The LINK/ACT LED for an SFP, SFP+, or QSFP+ transceiver is off.

Solutions: The fiber optic port on the transceiver is unable to establish a link to a network device. Try the following:

- ❑ Verify that the line card supports the transceiver by referring to the line card's description in Chapter 1, "Overview" on page 17.
- ❑ Verify that the remote network device connected to the fiber optic port is operating properly.
- ❑ Verify that the fiber optic cable is securely connected to the port on the transceiver and to the port on the remote network device.
- ❑ Check that the transceiver is fully inserted in the slot.
- ❑ Verify that the operating specifications of the fiber optic ports on the transceiver and remote network device are compatible.
- ❑ Verify that the correct type of fiber optic cabling is being used.
- ❑ Verify that the port is connected to the correct fiber optic cable.
- ❑ Try connecting another network device to the fiber optic port using a different cable. If the port is able to establish a link, then the problem is with the cable or with the other network device.
- ❑ Use the switch's management software to verify that the port is enabled.
- ❑ If the remote network device is a managed device, use its management firmware to determine whether its port is enabled.
- ❑ Test the attenuation of both directions on the fiber optic cable with a fiber optic tester to determine whether the optical signal is too weak (sensitivity) or too strong (maximum input power).

Problem 5: A line card is not forwarding traffic on its ports.

Solution: The version of the AlliedWare Plus management software on the switch might not support the card. The minimum software requirements are listed here:

- ❑ XEM2-8XSTm Card - v5.4.9-2
- ❑ XEM2-12XTm Card - v5.4.9-0
- ❑ XEM2-1CQ Card - v5.4.8-0.2

All other cards require v5.4.7A-1 or later. To view the version number of the management software, use the SHOW VERSION command. Refer to “Verifying Support for the Ethernet Line Cards” on page 133.

Problem 6: The XEM2-1CQ Line Card is not forwarding traffic after it is hot-swapped in the chassis.

Solution: You have to reboot the switch after hotswapping XEM2-1CQ Line Cards

Problem 7: The switch functions intermittently.

Solutions: Check the system hardware status through the management software:

- ❑ Use the SHOW SYSTEM ENVIRONMENT command in the Privileged Exec mode to verify that the input voltage from the power source to the switch is stable and within the approved operating range. The unit will shut down if the input voltage fluctuates above or below the approved operating range.
- ❑ Use the SHOW SYSTEM ENVIRONMENT command in the Privileged Exec mode to verify that the fan is operating correctly.
- ❑ Verify that the location of the switch allows for adequate airflow. The unit will shut down if it is overheating.

Problem 8: The Switch ID LED on the front of the switch is flashing the letter “F.”

Solutions: One or more of the following problems has occurred:

- ❑ A cooling fan has failed.
- ❑ The internal temperature of the switch has exceeded the normal operating range and the switch might shut down.

Appendix A

Technical Specifications

This appendix contains the following sections:

- "Physical Specifications" on page 176
- "Environmental Specifications" on page 179
- "Power Specifications" on page 180
- "Certifications" on page 182
- "Pin Signals for RJ-45 Twisted Pair Ports" on page 183
- "Pin Signals for the RJ-45 Style Serial Console Port" on page 185
- "Pin Signals for the NET MGMT Port" on page 186

Physical Specifications

Dimensions (H x W x D)

Table 18 lists the product dimensions. The chassis dimensions are also shown in Figure 127 and Figure 128 on page 177.

Table 18. Product Dimensions

SBx908 Gen2 Chassis	13.3 x 44.1 x 47.3 cm (5.22 x 17.34 x 18.64 in.) (H x W x D)
SBxPWRSYS2 AC Power Supply System	4.34 x 10.16 x 32.21 cm (1.71 x 4.00 x 12.68 in.)
SBxPWRSYS1-80 DC Power Supply System	4.34 x 10.16 x 32.21 cm (1.71 x 4.00 x 12.68 in.)
XEM2-8XSTm Line Card XEM2-12XT Line Card XEM2-12XTm Line Card XEM2-12XS Line Card XEM2-4QS Line Card XEM2-1CQ Line Card	4.0 x 13.0 x 16.6 cm (1.57 x 5.11 x 6.53 in.)
FAN08 Fan Module	6.91 x 16.46 x 8.64 cm (2.72 x 6.48 x 3.40 in.)

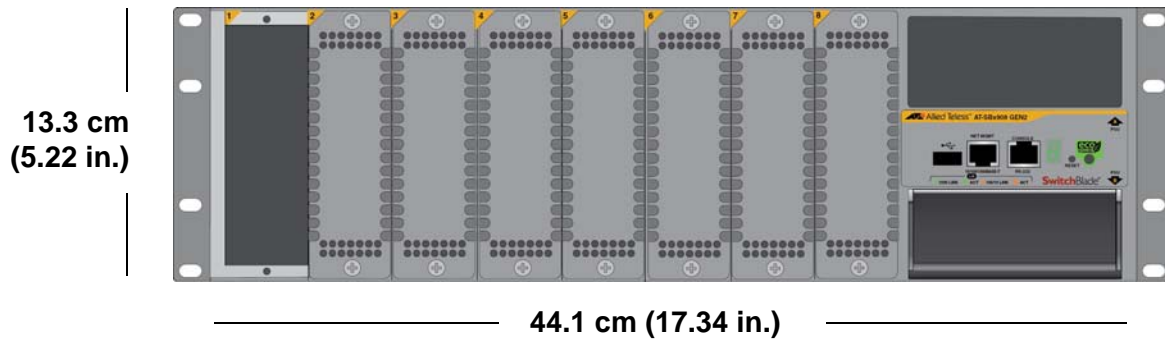


Figure 127. Switch Height and Width

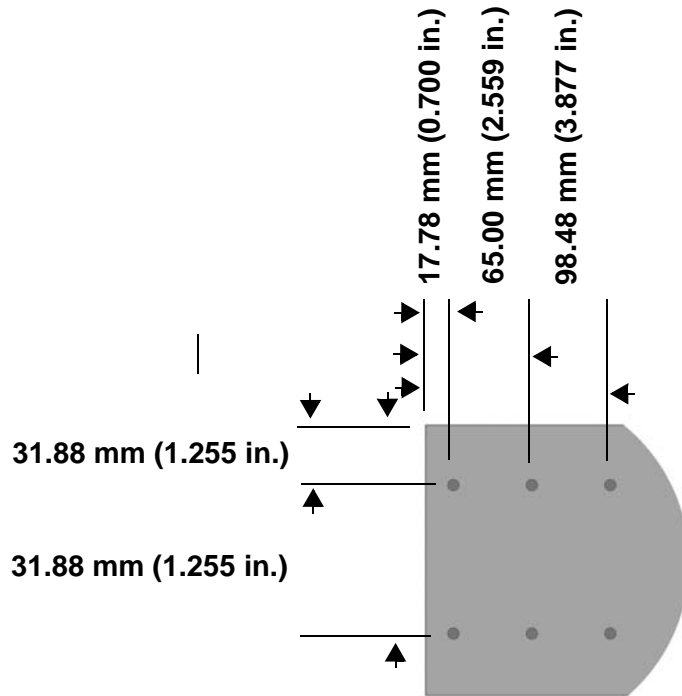
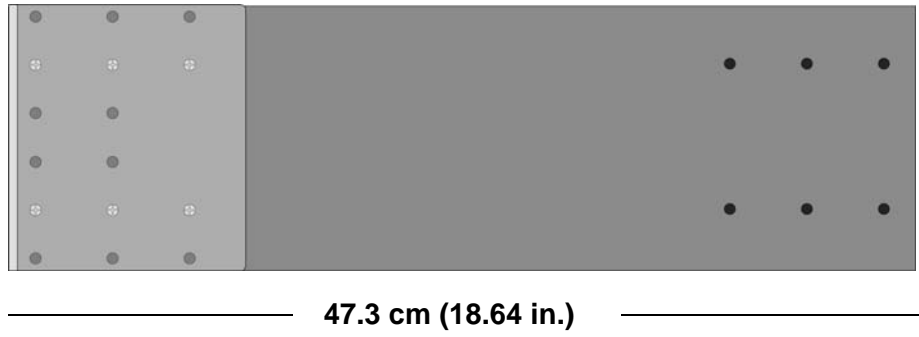


Figure 128. Switch Depth and Locations of Bracket Holes

Weights

Table 19 lists the weights of the components.

Table 19. Product Weights

SBx908 Gen2 Chassis	15.81 kg (34.85 lb.)
SBxPWRSYS2 AC Power Supply System	2.70 kg (6.05 lb.) with power cord
SBxPWRSYS1-80 DC Power Supply System	1.9 kg (4.2 lb)
XEM2-8XSTm Line Card	0.70 kg (1.54 lb.)
XEM2-12XT Line Card	0.75 kg (1.65 lb.)
XEM2-12XTm Line Card	1.04 kg (2.3 lb.)
XEM2-12XS Line Card	0.75 kg (1.65 lb.)
XEM2-4QS Line Card	0.66 kg (1.45 lb.)
XEM2-1CQ Line Card	0.62 kg (1.37 lb.)
FAN08 Fan Module	0.72 kg (1.60 lb.)

Ventilation

Table 20 lists the ventilation requirements.

Table 20. Ventilation Requirements

Recommended Minimum Ventilation on All Sides	10 cm (4.0 in)
--	----------------

Environmental Specifications

Table 21 lists the environmental specifications of the switches.

Table 21. Environmental Specifications

Operating Temperature Range	0° C to 50° C (32° F to 122° F)
Storage Temperature Range	-25° C to 70° C (-13° F to 158° F)
Operating Humidity Range	5% to 90% noncondensing
Storage Humidity Range	5% to 95% noncondensing
Maximum Operating Altitude	3,000 m (9,843 ft)

Power Specifications

This section contains the maximum power consumption values, input voltages, and heat dissipation values.

AC Voltage, Frequency Requirements (Volts, Hertz)

Table 22 lists the AC voltage and frequency requirements.

Table 22. AC Voltage and Frequency Requirements

SBxPWRSYS2 AC Power Supply	100 - 120 / 200 - 240 VAC 12/6A 50/60 Hz (per input)
----------------------------	---

DC Voltage Requirements

Table 23 lists the DC voltage requirements.

Table 23. DC Voltage Requirements

SBxPWRSYS1-80 DC Power Supply	40 - 60V dc (-0% - +20%), 36A (maximum per input)
-------------------------------	--

Maximum Power Consumption

Table 24 lists the maximum power consumptions.

Table 24. Maximum Power Consumption (Watts)

XEM2-8XSTm Line Card	17.78 W
XEM2-12XT Line Card	39.73 W
XEM2-12XTm Line Card	29.83 W
XEM2-12XS Line Card	30.31 W
XEM2-4QS Line Card	16.14 W
XEM2-1CQ Line Card	6.71 W

Typical Power Savings in eco-friendly Mode

Table 25 lists the typical power savings in eco-friendly mode.

Table 25. Typical Power Savings in eco-friendly Mode (Watts)

XEM2-8XSTm Line Card	0.08 W
XEM2-12XT Line Card	0.11 W
XEM2-12XTm Line Card	0.10 W
XEM2-12XS Line Card	0.13 W
XEM2-4QS Line Card	0.11 W
XEM2-1CQ Line Card	0.02 W

Maximum Power Supply Efficiency

Table 26 on page 181 lists the maximum power supply efficiency.

Table 26. Maximum Power Supply Efficiency (Based on 100V Input Voltage)

SBxPWRSYS2 AC Power Supply	Up to 85%
SBxPWRSYS1-80 DC Power Supply	Up to 90%

Heat Dissipation

Table 27 lists the heat dissipation.

Table 27. Heat Dissipation (British Thermal Units/Hour)

XEM2-8XSTm Line Card	60.69 BTU/hr
XEM2-12XT Line Card	135.58 BTU/hr
XEM2-12XTm Line Card	101.81 BTU/hr
XEM2-12XS Line Card	103.43 BTU/hr
XEM2-4QS Line Card	55.08 BTU/hr
XEM2-1CQ Line Card	22.90 BTU/hr
SBxPWRSYS2 AC Power Supply	5118.21 BTU/hr
SBxPWRSYS1-80 DC Power Supply	5118.21 BTU/hr

Certifications

Table 28 lists the product certificates.

Table 28. Product Certifications

EMI (Emissions)	FCC Class A CISPR 22 Class A EN55032 Class A VCCI Class A ICES-003 Class A RCM
EMC (Immunity)	EN55024 EN61000-3-2 EN61000-3-3
Electrical and Laser Safety	UL 60950-1 (CULUS) EN60825-1 (TUV)
RoHS	RoHS6

Pin Signals for RJ-45 Twisted Pair Ports

Figure 129 illustrates the pin layout of the RJ-45 connectors on the following line cards:

- ❑ XEM2-8XSTm
- ❑ XEM2-12XT
- ❑ XEM2-12XTm

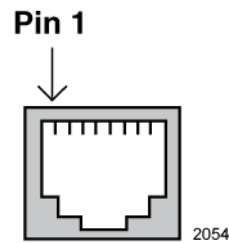


Figure 129. Pin Layout (Front View) of Twisted Pair Ports

Table 29 lists the pin signals at 100Mbps.

Table 29. Pin Signals on RJ-45 Twisted Pair Ports at 100Mbps

Pin	MDI Signal	MDI-X Signal
1	TX+	RX+
2	TX-	RX-
3	RX+	TX+
4	Not used	Not used
5	Not used	Not used
6	RX-	TX-
7	Not used	Not used
8	Not used	Not used

Table 30 lists the pin signals at 1/2.5/5/10Gbps.

Table 30. Pin Signals on Twisted Pair Ports at 1/2.5/5/10Gbps

Pin	Pair	Signal
1	1 +	TX and RX+
2	1 -	TX and RX-
3	2 +	TX and RX+
4	3 +	TX and RX+
5	3 -	TX and RX-
6	2 -	TX and RX-
7	4 +	TX and RX+
8	4 -	TX and RX-

Pin Signals for the RJ-45 Style Serial Console Port

Table 31 lists the pin signals of the RJ-45 style serial Console port on the management panel.

Table 31. RJ-45 Pin Signals for the Console Port on the Management Panel

Pin	Signal
1	Looped to pin 8.
2	Looped to pin 7.
3	Transmit Data
4	Ground
5	Ground
6	Receive Data
7	Looped to pin 2.
8	Looped to pin 1.

Pin Signals for the NET MGMT Port

Table 32 lists the pin signals for 10 and 100Mbps.

Table 32. RJ-45 Pin Signals for 10 or 100Mbps for the NET MGMT Port on the Management Panel

Pin	MDI Signal	MDI-X Signal
1	TX+	RX+
2	TX-	RX-
3	RX+	TX+
4	Not used	Not used
5	Not used	Not used
6	RX-	TX-
7	Not used	Not used
8	Not used	Not used