

nRF Connect Programmer v1.4.1

User Guide

v1.2

Contents

Revision history	iii
1 Introduction	4
2 Installing the Programmer app	5
3 nRF Connect Programmer overview	6
4 Programming a Development Kit or the nRF51 Dongle	9
5 Programming the nRF52840 Dongle	10
6 Programming the nRF9160 DK	11
6.1 Programming applications on nRF9160 DK	11
6.2 Programming the nRF9160 DK cellular modem	11
7 Programming Nordic Thingy:91	13
7.1 Programming applications on Nordic Thingy:91	13
7.1.1 Programming applications through USB (MCUboot)	13
7.1.2 Programming applications through an external debug probe	17
7.2 Programming the Nordic Thingy:91 modem	18
7.2.1 Programming the modem through USB (MCUboot)	18
7.2.2 Programming the modem through an external debug probe	20
8 Troubleshooting	22
Legal notices	23

Revision history

Date	Version	Description
April 2020	1.2	<ul style="list-style-type: none">• Updated Supported devices in Introduction on page 4• Updated nRF Connect Programmer overview on page 6• Added Programming the nRF9160 DK on page 11• Added Programming Nordic Thingy:91 on page 13
September 2019	1.1	Updated to match nRF Connect Programmer v1.2.3: <ul style="list-style-type: none">• Added Programming the nRF9160 DK cellular modem on page 11• Updated nRF Connect Programmer overview on page 6• Updated Installing the Programmer app on page 5
May 2019	1.0.1	Updated Installing the Programmer app on page 5
February 2019	1.0	First release

1 Introduction

nRF Connect Programmer is an app available from [nRF Connect for Desktop](#) that you can use to program firmware to Nordic devices. The application allows you to see the memory layout for both J-Link and Nordic USB devices. It also allows you to display content for the HEX files and write it to the devices.

Supported devices

- Nordic Thingy:91
- nRF91 Series DKs
- nRF53 Series DKs
- nRF52 Series DKs and Dongle
- nRF51 Series DKs and Dongle

2 Installing the Programmer app

The Programmer app is installed as an app for nRF Connect for Desktop.

Before you can install the Programmer app, you must download and install [nRF Connect for Desktop](#) (version 3.2.0 or later).

To install the Programmer app:

1. Open nRF Connect for Desktop.
2. Find the Programmer app in the list of apps and click **Install**.

Once the app is installed, you can launch it by clicking **Open**.

For easy access, you can create a desktop shortcut by clicking the **arrow down** button and selecting **Create shortcut**.

If a new version of the app becomes available, an **Update** button is displayed next to the **Open** button. Click this button to install the latest version. To uninstall the app, click the **arrow down** button and select **Uninstall**.

3 nRF Connect Programmer overview

The nRF Connect Programmer main window shows the memory layout of device and file you want to work with. It also provides you with options to program the device and inspect the whole process through the log.

When you start the Programmer app, the following main window appears:

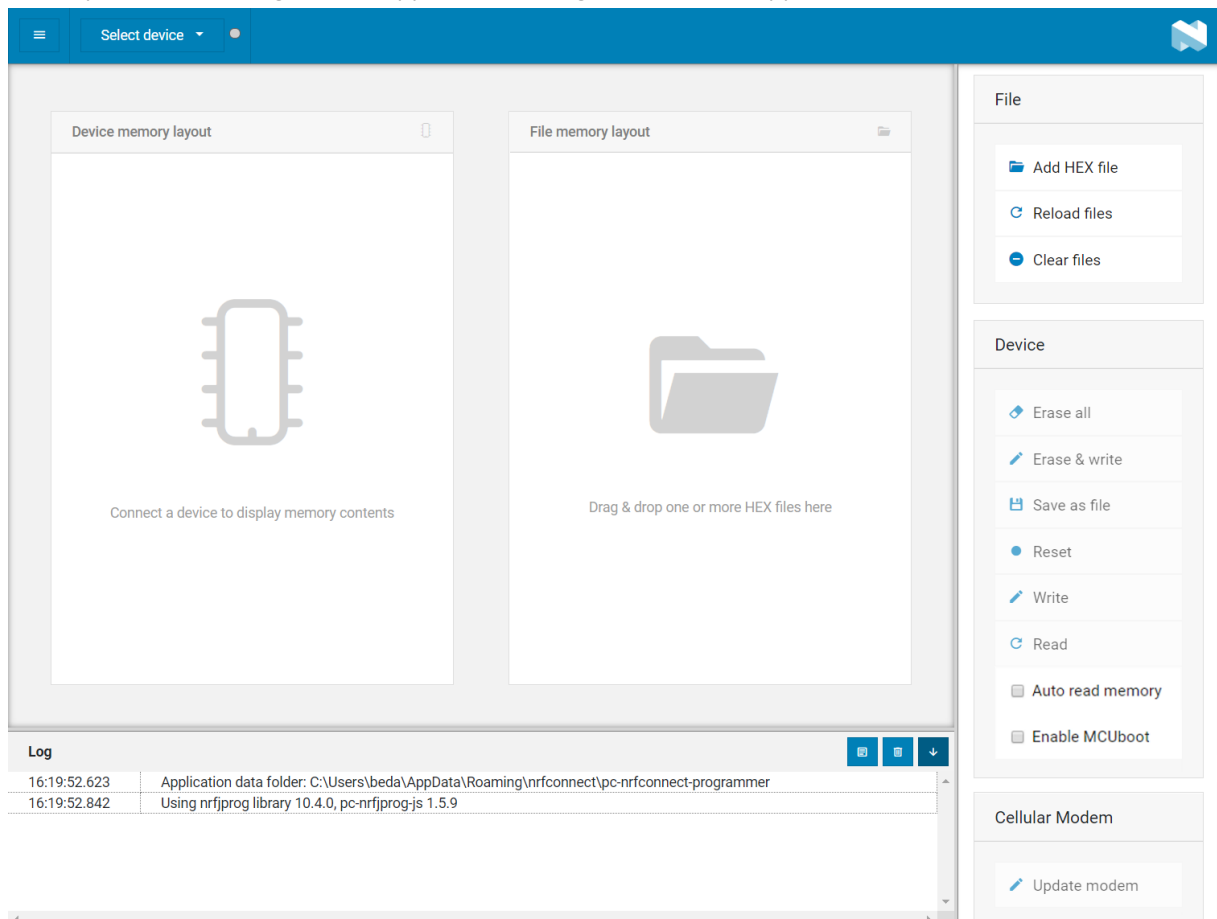


Figure 1: nRF Connect Programmer default view at startup

This main window is composed of the navigation bar and the smaller windows, which are described in the following sections.

Navigation bar

In the navigation bar at the top, you can access the menu, select a device, and see the connection status of the selected device.

Click the three-dash button in the top-left corner to open the menu through which you can launch another app, create a system report, or view information about the Programmer app.

Once you connect a device to the system, it becomes visible and available as you click on the **Select device** drop-down list. You can choose a device from the list of connected devices to perform further actions on the device such as programming.

The status indicator to the right of the **Select device** drop-down list shows the connection status of the selected device. The indicator is green when the Programmer app has established a connection to the device.

Device Memory Layout and File Memory Layout

In the **Device Memory Layout** window, you can see the memory sections for the device selected by using the **Select device** option in the navigation bar.

The **File Memory Layout** window displays the memory layout for files added into the Programmer app with the **Add HEX file** option. Once added, these files can be programmed onto the device.

Both windows use graphs that display the different sections in the memory with different colors.

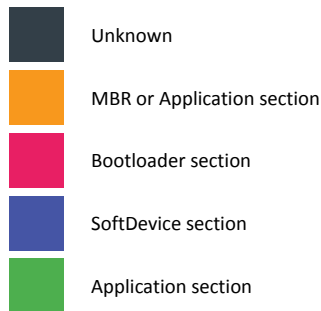


Figure 2: Memory layout section colors

Device

When you select a device, you have the following actions available in the Device section:

- **Erase all** clears the written memory on the device.
- **Read** reads and displays the written memory in the **Device Memory Layout**.
 - You can tick the **Auto read memory** field to automatically read the memory layout of the device and display it in the **Device Memory Layout**.
 - In the **Device Memory Layout**, you can read the name, address range, and size of a memory section by hovering the mouse cursor over one of the memory sections. This option is possible only after loading a memory layout.

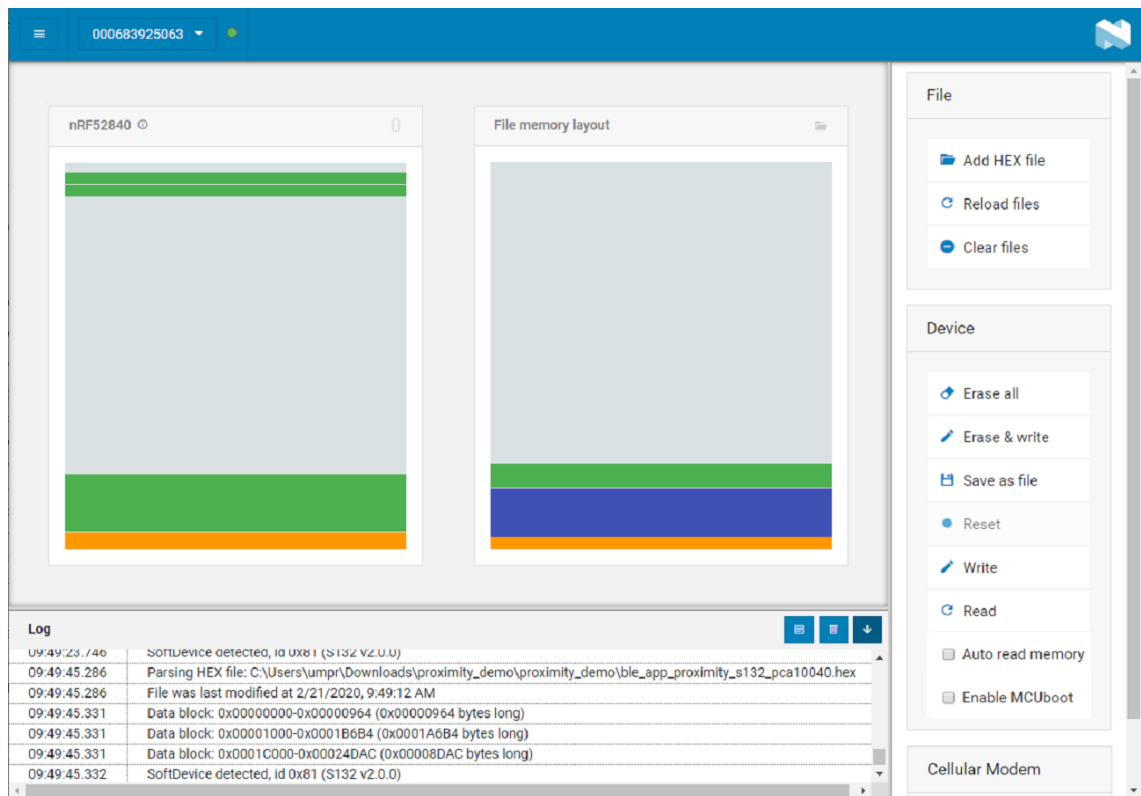


Figure 3: Memory section details

- Additionally, after you read the memory, **Save as file** allows you to save the memory as a HEX file.
- **Erase & write** clears the written memory and programs the files added to the **File Memory Layout**.
- **Reset** resets the device.
- **Write** programs the files added to the **File Memory Layout**.

File

In the File section, you can add files to the **File Memory Layout** graphic, reload, and remove them.

When adding files with the **Add HEX file** button, you can select the files either from the drop-down list of previous files or by browsing to the file destination.

Cellular Modem

You can use the Programmer app to update the nRF9160 modem firmware on all kits with the nRF9160 SiP. To do so, click **Update modem** and select the zip file that contains the new modem firmware.

Log

Each time you open the Programmer app, a new session log file is created in the Log folder at `<user folder>/AppData/Roaming/nrfconnect/pc-nrfconnect-programmer/logs`. The **Log** window allows you to view the most important log events that are saved to these log files. The events are tagged with a timestamp.

This window contains the following buttons in its top right corner:

- **Open log file** opens the detailed log file, which is useful for troubleshooting.
- **Clear log** erases all the information in the **Log** window. The contents of the log file are not affected.
- **Scroll automatically** toggles automatic scrolling of the **Log** window as new lines appear.

4 Programming a Development Kit or the nRF51 Dongle

In nRF Connect Programmer, you can program nRF91, nRF52, and nRF51 development kits, nRF51 Dongle, or a custom board with a supported chip that allows for communication with J-Link.

To program the nRF52840 Dongle, see [Programming the nRF52840 Dongle](#) on page 10. To program the nRF9160 DK, see [Programming the nRF9160 DK](#) on page 11. To program any other development kit, the nRF51 dongle, or a custom board, see the following procedure.

1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Connect a development kit to the computer with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.
3. Click **Select device** and select the device from the drop-down list.
The button text changes to the SEGGER ID of the selected device, and the **Device Memory Layout** section indicates that the device is connected.
4. If you have not ticked the **Auto read memory** option under the **Device** menu and wish to visually see the memory layout before you program, click **Read** in the menu. If you have ticked it, the memory layout will update automatically.
5. Click **Add HEX file** on the right pane (named as **File**) to add the files you want to program, by using one of the following options:
 - Select the files you used recently.
 - Select the files by browsing to their file destination.
6. If there are no recently used files, click **Browse** from the drop-down list that appears as a result of the previous step.
7. Select the firmware image file (with the extension `.hex`) from the file browser that opens up.
8. Click **Erase & write** under **Device** pane to program the device.

5 Programming the nRF52840 Dongle

Programming the nRF52840 Dongle in nRF Connect Programmer requires a different approach than programming the nRF51 Dongle.

To program the nRF52840 Dongle:

1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Insert the nRF52840 Dongle into a USB port on the computer.
3. Put the dongle into bootloader mode by pressing the **RESET** button.

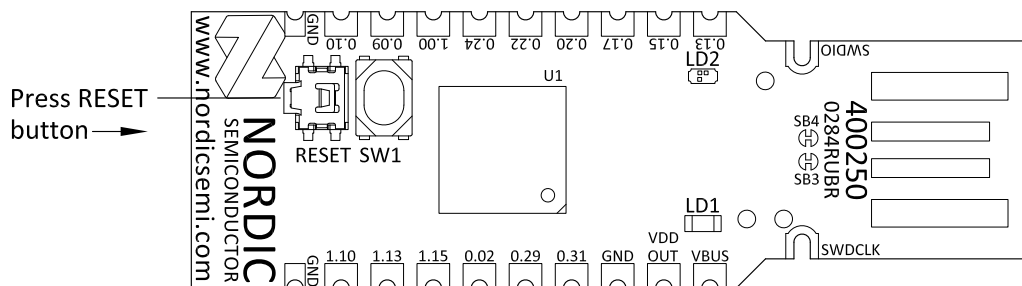


Figure 4: nRF52840 Dongle overview

Note:

- This step is not needed if the currently running application uses the DFU trigger library.
- If this is the first time the dongle is connected, a driver needed for the nRF52840 USB DFU feature is also installed as part of this step.

The status light (**LD2**) will start pulsing red, which indicates that the dongle is powered up and in bootloader mode. After a few seconds, the computer recognizes the dongle as a USB composite device.

4. In the navigation bar in the Programmer app, click **Select device** and select the serial number of the dongle from the drop-down list.
5. Click **Add HEX file** on the right pane (named as **File**) to add the files you want to program, by using one of the following options:
 - Select the files you used recently.
 - Select the files by browsing to their file destination.
6. If there are no recently used files, click **Browse** from the drop-down list that appears as a result of the previous step.
7. Select the firmware image file (with the extension `.hex`) from the file browser that opens up.
8. Click **Write** to program the firmware onto the dongle.

When the writing process completes, the device resets and – unless the application uses the DFU Trigger Library – the dongle will no longer show up in the Programmer app, as it is no longer in the bootloader mode.

6 Programming the nRF9160 DK

You can use nRF Connect Programmer to program the modem and to program applications onto nRF9160 DK.

You can program applications either on the nRF9160 System in Package (SiP) or on the nRF52840 System on Chip (SoC) of nRF9160 DK. You can select the target to be programmed by using the **PROG/DEBUG (SW5)** switch on the nRF9160 DK.

6.1 Programming applications on nRF9160 DK

You can program applications on the nRF9160 DK after obtaining the corresponding firmware images.

See [nRF9160 DK Downloads](#) for obtaining the firmware image.

To program applications on the nRF9160 DK, complete the steps in this section.

1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Connect the nRF9160 DK to the computer with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.
3. Click **Select device** and select the device from the drop-down list.
You can identify the nRF9160 DK by the fact that it has three COM ports.
The button text changes to the SEGGER ID of the selected device, and the **Device Memory Layout** section indicates that the device is connected.
4. If you have not ticked the **Auto read memory** option under the **Device** menu and wish to visually see the memory layout before you program, click **Read** in the menu. If you have ticked it, the memory layout will update automatically.
5. Set the **PROG/DEBUG (SW5)** switch on the nRF9160 DK to **nRF91** or **nRF52** depending on whether you want to program the nRF9160 SiP or the nRF52840 SoC.
6. Click **Add HEX file** on the right pane (named as **File**) to add the files you want to program, by using one of the following options:
 - Select the files you used recently.
 - Select the files by browsing to their file destination.
7. If there are no recently used files, click **Browse** from the drop-down list that appears as a result of the previous step.
8. Select the firmware image file (with the extension `.hex`) from the file browser that opens up.
9. Click **Erase & write** under **Device** pane to program the device.

6.2 Programming the nRF9160 DK cellular modem

The nRF9160 DK contains a multimode modem that supports LTE-M and NB-IoT. You can use nRF Connect Programmer to program the multimode modem of the nRF9160 DK.

Before you start, download the latest [nRF9160 modem firmware](#).

To program the nRF9160 modem, complete the steps in this section.

1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Connect the nRF9160 DK to the computer with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.


3. Click **Select device** and select the device from the drop-down list.

You can identify the nRF9160 DK by the fact that it has three COM ports.

The button text changes to the SEGGER ID of the selected device, and the **Device Memory Layout** section indicates that the device is connected.

4. Click **Update modem** under the **Cellular Modem** pane on the right and choose the zip file with the latest modem release.

The **Modem DFU** dialog box appears as shown in the following figure.

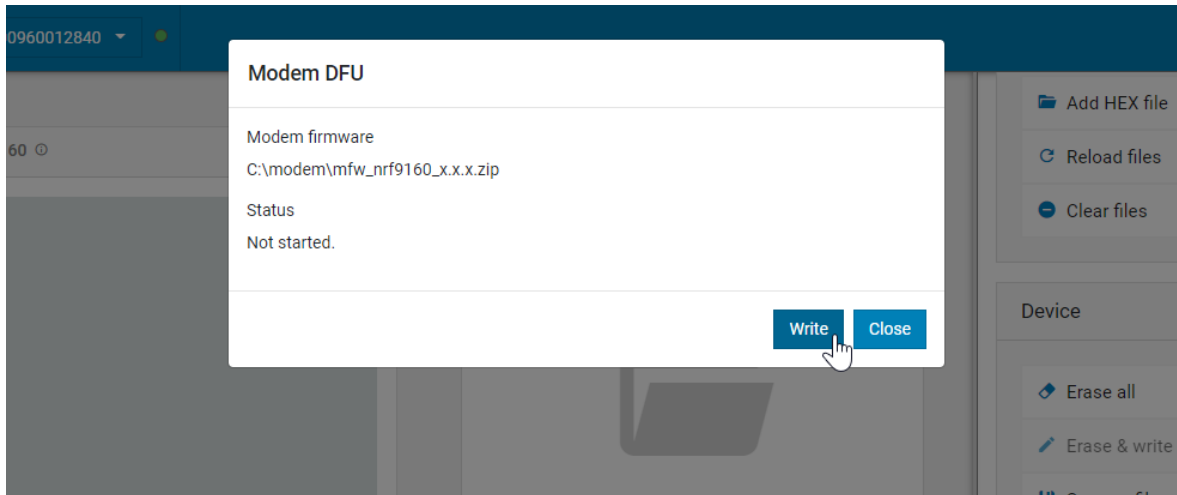

5. Click **Write** in the **Modem DFU** dialog box to update the firmware.

Do not unplug or turn off the device during this process.

Note: If you have issues updating modem firmware, then click **Erase all** before trying to update the modem again. In this case, the contents of the flash memory are deleted and the applications must be reprogrammed.

When the update is complete, you see a success message.

If you want to verify that the update was successful, check the version of the modem firmware by running the AT command **AT+CGMR** (for example, in LTE Link Monitor).

7 Programming Nordic Thingy:91

You can use nRF Connect Programmer to program the modem and to program applications onto Nordic Thingy:91™.

You can program applications either on the nRF9160 System in Package (SiP) or on the nRF52840 System on Chip (SoC) of Nordic Thingy:91. You can select the target to be programmed by using the switch and the buttons in Nordic Thingy:91.

7.1 Programming applications on Nordic Thingy:91

You can program applications on Nordic Thingy:91 after obtaining the corresponding firmware images.

See [Thingy:91 firmware images](#) for information on obtaining the firmware image.

You can program the applications in the following ways:

- Using USB (MCUboot)
- Using an external debug probe


7.1.1 Programming applications through USB (MCUboot)

You can program either the nRF9160 System in Package (SiP) or the nRF52840 System on Chip (SoC) of Nordic Thingy:91 through USB by putting the device into serial recovery mode.

The component to be programmed is determined by pushing the **SW3** or **SW4** button while powering on the device.


To program a Nordic Thingy:91 through USB (MCUboot) and the built-in serial recovery mode, complete the steps in this section.

1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Connect Nordic Thingy:91 to the PC with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.
3. Put Nordic Thingy:91 into application serial recovery mode by pushing the **SW3** or **SW4** button while powering on depending on whether you want to program the nRF9160 SiP or the nRF52840 SoC.
4. Click **Select device** and select the device from the drop-down list as shown in the following figure.

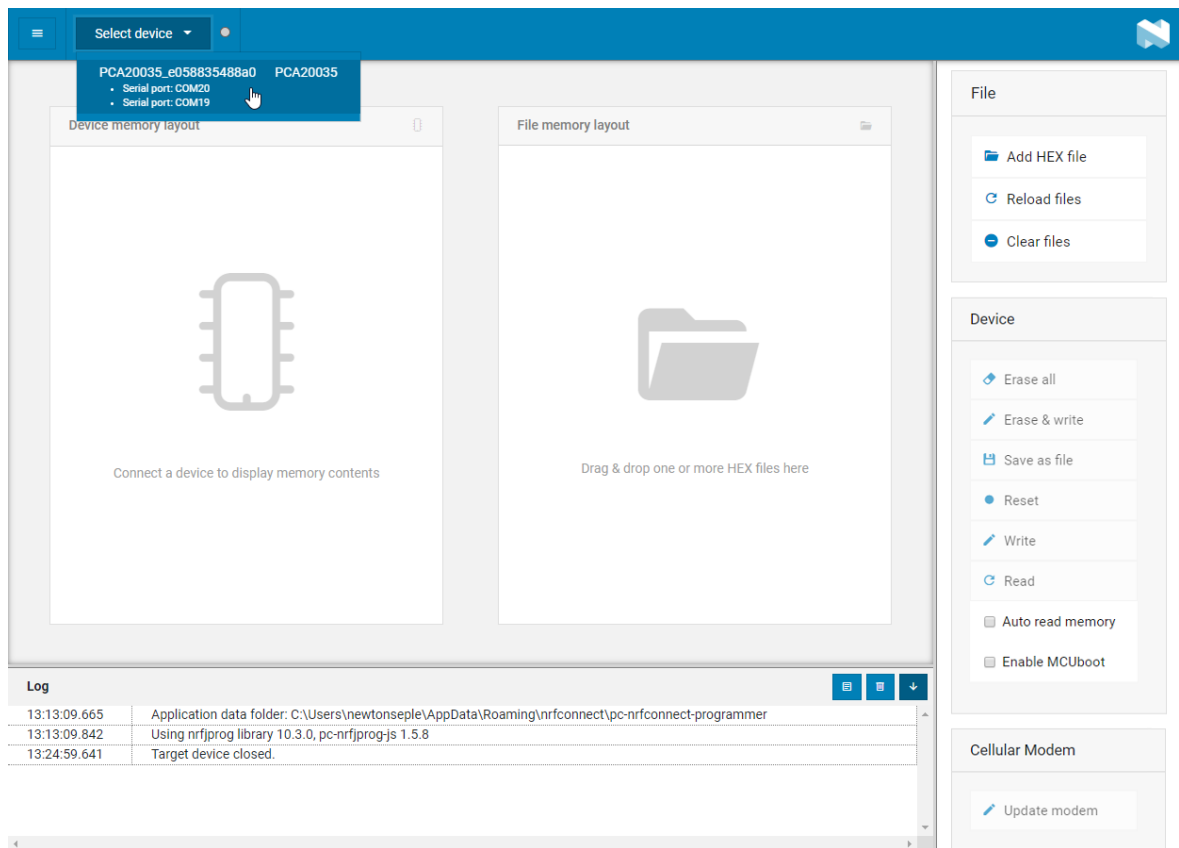


You can identify Nordic Thingy:91 by the fact that it has two COM ports.

5. Click **Add HEX file** on the right pane (named as **File**) to add the files you want to program, by using one of the following options:
 - Select the files you used recently.
 - Select the files by browsing to their file destination.

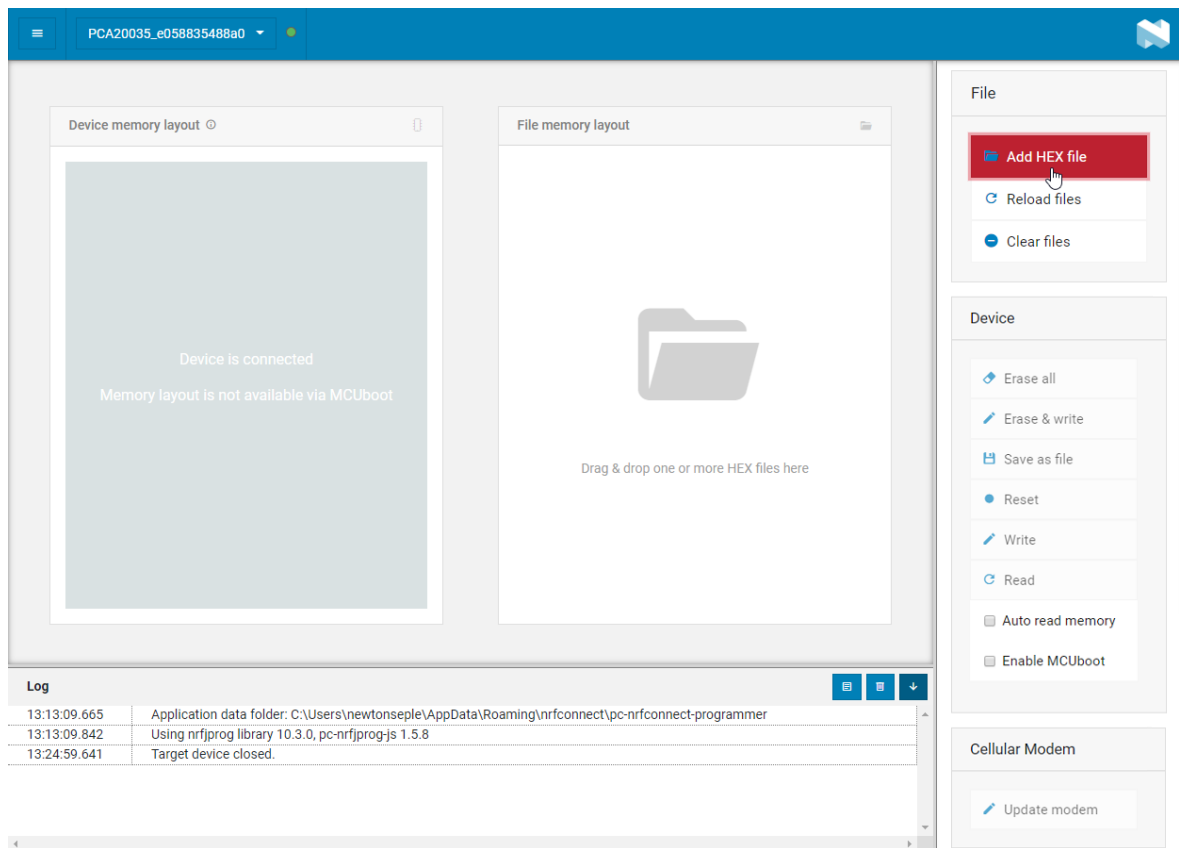


- If there are no recently used files, click **Browse** from the drop-down list that appears as a result of the previous step as shown in the following figure.

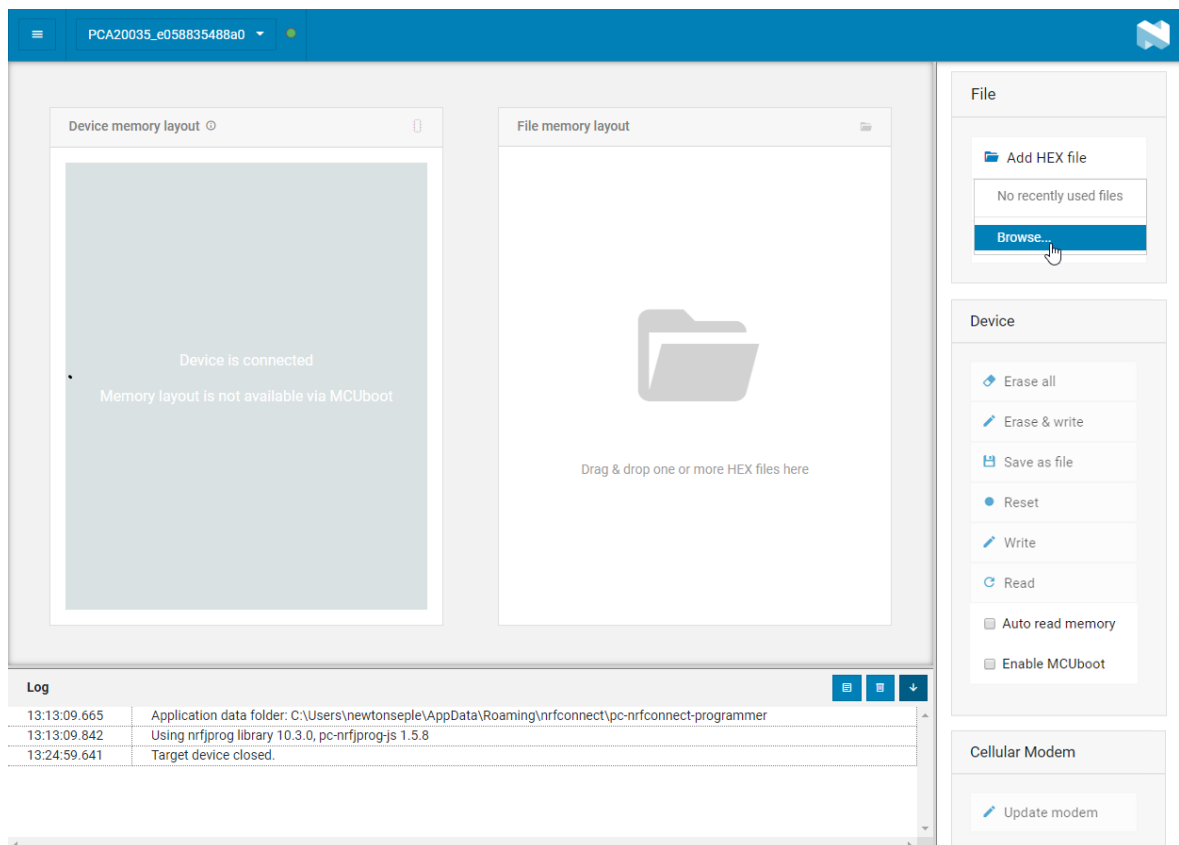


- Select the MCUboot compatible firmware image file (with the extension `.hex`) from the file browser that opens up.

Note: A normal firmware image HEX file cannot be used when programming applications through USB, since the MCUboot bootloader is used. The HEX file needs to contain the application at the appropriate memory offset for use with MCUboot.

- Click **Write** on the **Device** pane in the right as shown in the following figure.

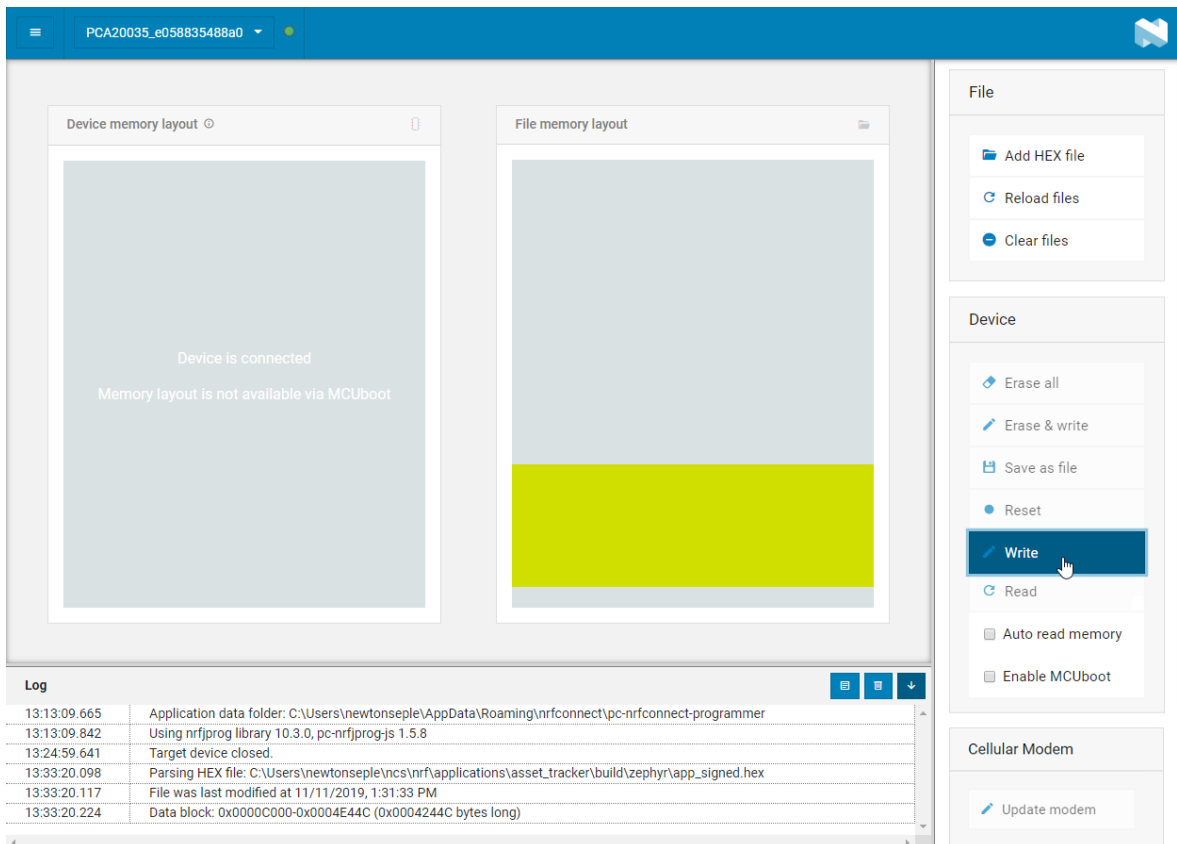

The **MCUboot DFU** dialog box appears as shown in the following figure.

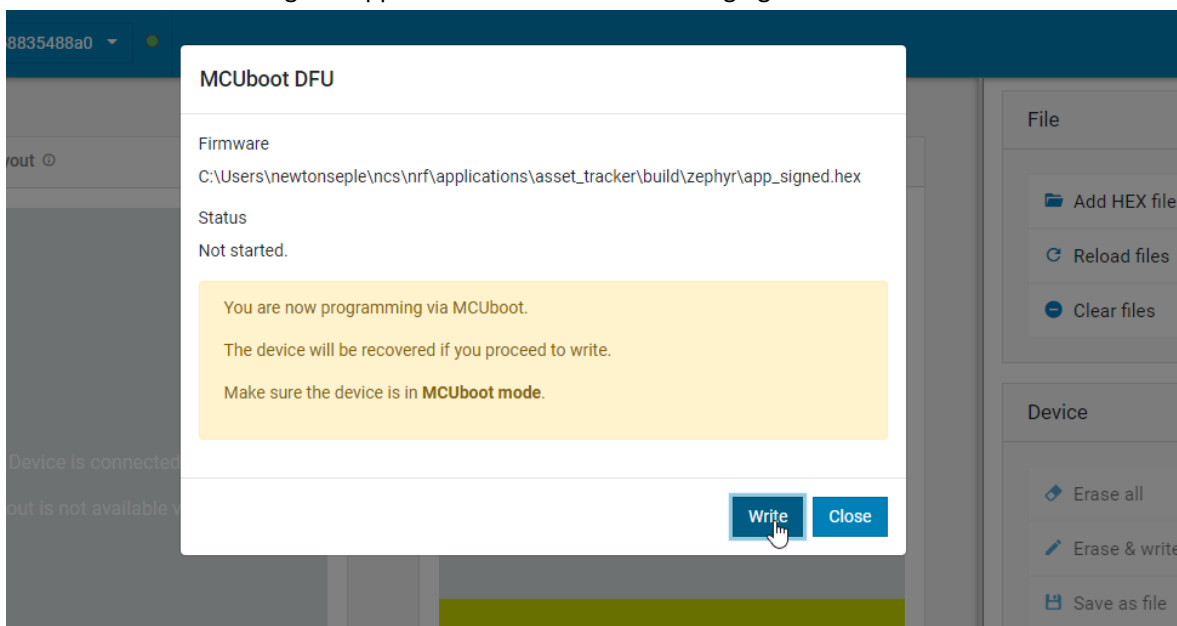

- Click **Write** in the **MCUboot DFU** dialog box to program the device.

7.1.2 Programming applications through an external debug probe

You can program either the nRF9160 System in Package (SiP) or the nRF52840 System on Chip (SoC) of Nordic Thingy:91 by using an external debug probe.

The component to be programmed is determined by the setting of the **SWD** selection switch (**SW2**) of Nordic Thingy:91 to **nRF91** or **nRF52**.

For programming the applications, you must use an external debug probe such as nRF9160 DK or J-Link device supporting Arm[®] Cortex[®]-M33. To program a Nordic Thingy:91 using an external debug probe, complete the steps in this section.

1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Connect Nordic Thingy:91 to the debug out port on a 10-pin external debug probe, for example, nRF9160 DK, using a 10-pin JTAG cable as shown in the following figure.

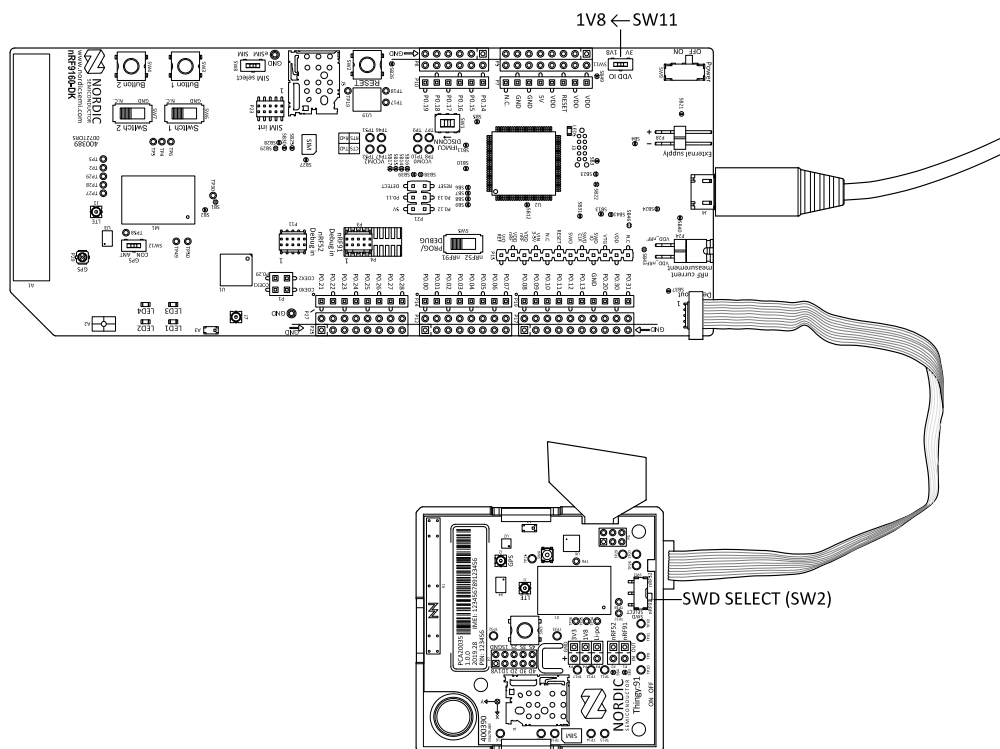


Figure 5: Connecting Nordic Thingy:91 to the external debug probe

Note: If using nRF9160 DK as the debug probe, make sure that **VDD_IO (SW11)** is set to 1.8 V on the nRF9160 DK.

3. Make sure that Nordic Thingy:91 and the external debug probe are powered on.
4. Connect the external debug probe to the PC with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.
5. Click **Select device** and select the appropriate debug probe entry from the drop-down list.
If you are using nRF9160 DK as the external debug probe, you can identify the device by the fact that it has three COM ports.
The button text changes to the SEGGER ID of the selected device, and the **Device Memory Layout** section indicates that the device is connected.
6. Set the **SWD** selection switch (**SW2**) on Nordic Thingy:91 to **nRF91** or **nRF52** depending on whether you want to program the nRF9160 SiP or the nRF52840 SoC. See [SWD Select](#) for more information on the switch.
7. Click **Add HEX file** on the right pane (named as **File**) to add the files you want to program, by using one of the following options:

- Select the files you used recently.
 - Select the files by browsing to their file destination.
8. If there are no recently used files, click **Browse** from the drop-down list that appears as a result of the previous step.
 9. Select the firmware image file (with the extension `.hex`) from the file browser that opens up.
 10. Click **Erase & write** under **Device** pane to program the device.

7.2 Programming the Nordic Thingy:91 modem

Nordic Thingy:91 contains a multimode modem that supports LTE-M and NB-IoT.

You can use nRF Connect Programmer to program the multimode modem of Nordic Thingy:91. You can program the modem in the following ways:

- Using USB (MCUboot)
- Using an external debug probe


7.2.1 Programming the modem through USB (MCUboot)

You can program the modem of Nordic Thingy:91 by putting the device into serial recovery mode.

Before you start, download the latest [Nordic Thingy:91 modem firmware](#).

To program the Nordic Thingy:91 modem through USB (MCUboot) and the built-in serial recovery mode, complete the steps in this section.


1. Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
2. Connect Nordic Thingy:91 to the PC with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.
3. Put Nordic Thingy:91 into application serial recovery mode by pushing the **SW3** button while powering on to update the nRF9160 modem.
4. Click **Select device** and select the device from the drop-down list as shown in the following figure.

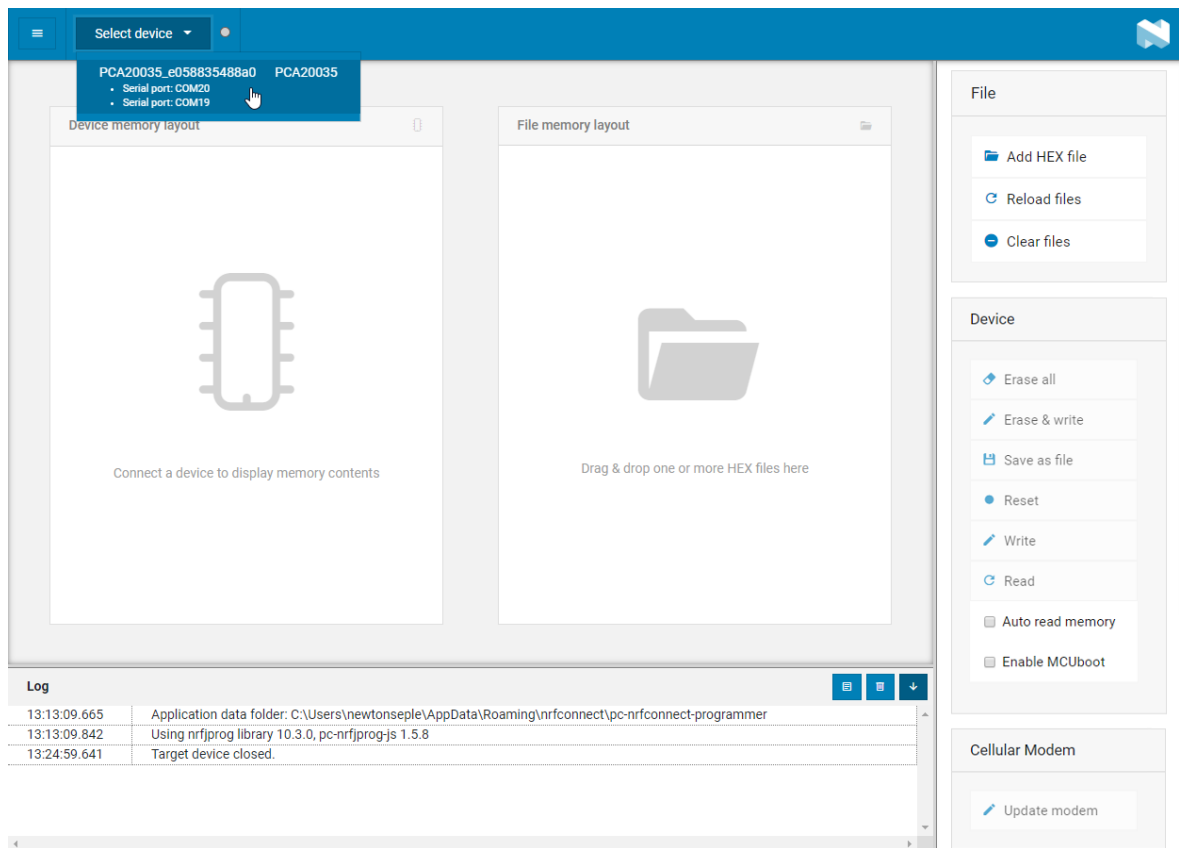

You can identify Nordic Thingy:91 by the fact that it has two COM ports.

5. Make sure that you have ticked **Enable MCUboot** in the **Device** pane on the right.
6. Click **Update Modem** in the **Cellular Modem** pane on the right and choose the zip file with the latest modem release.

The **Modem DFU via MCUboot** dialog box appears as shown in the following figure.

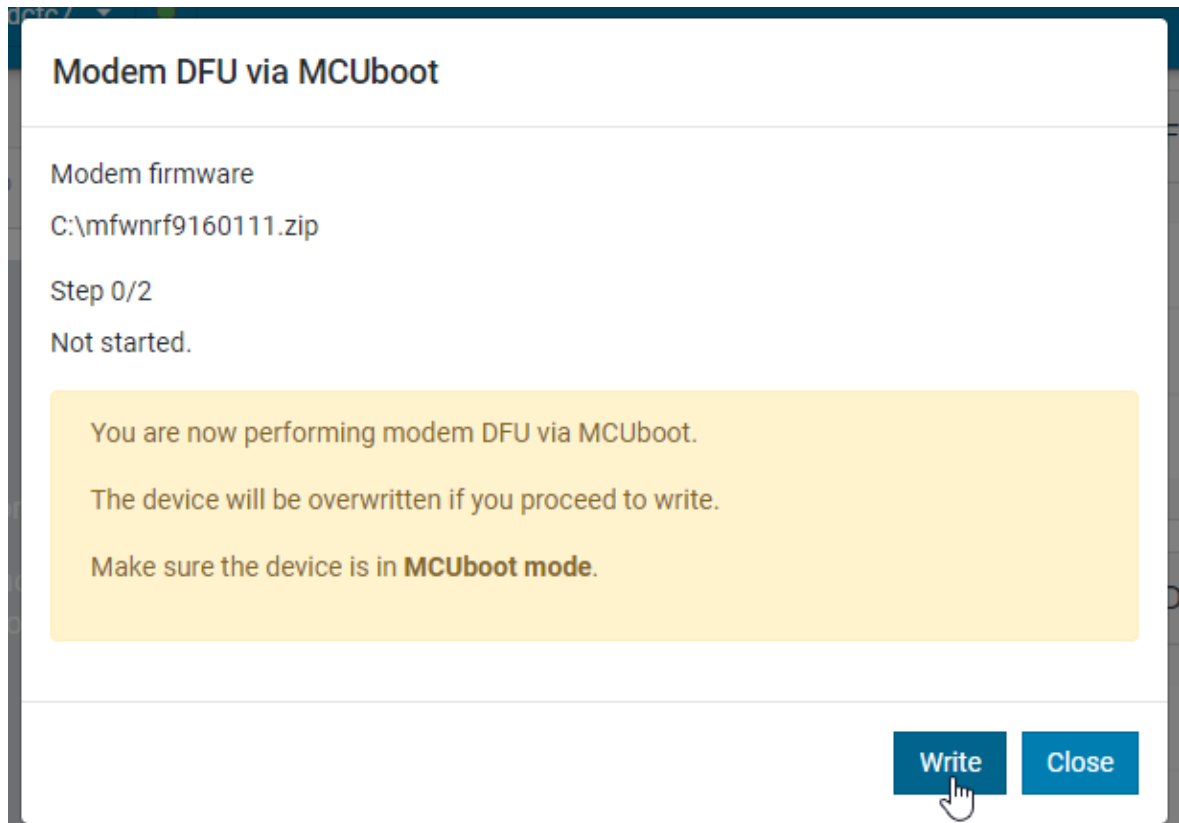

- Click **Write** in the **Modem DFU via MCUboot** dialog box to update the firmware.

Do not unplug or turn off the device during this process.

Note: The contents of the flash memory are deleted and the applications must be reprogrammed.

If you want to verify that the update was successful, check the version of the modem firmware by running the AT command **AT+CGMR** (for example, in LTE Link Monitor).

7.2.2 Programming the modem through an external debug probe

You can program the modem of Nordic Thingy:91 by using an external debug probe.

Before you start, download the latest [Nordic Thingy:91 modem firmware](#).

For programming the modem, you must use an external debug probe such as nRF9160 DK or J-Link device supporting Arm Cortex-M33. To program the Nordic Thingy:91 modem using an external debug probe, complete the steps in this section.

- Open nRF Connect for Desktop and launch [nRF Connect Programmer](#).
- Connect Nordic Thingy:91 to the debug out port on a 10-pin external debug probe, for example, nRF9160 DK, using a 10-pin JTAG cable as shown in the following figure.

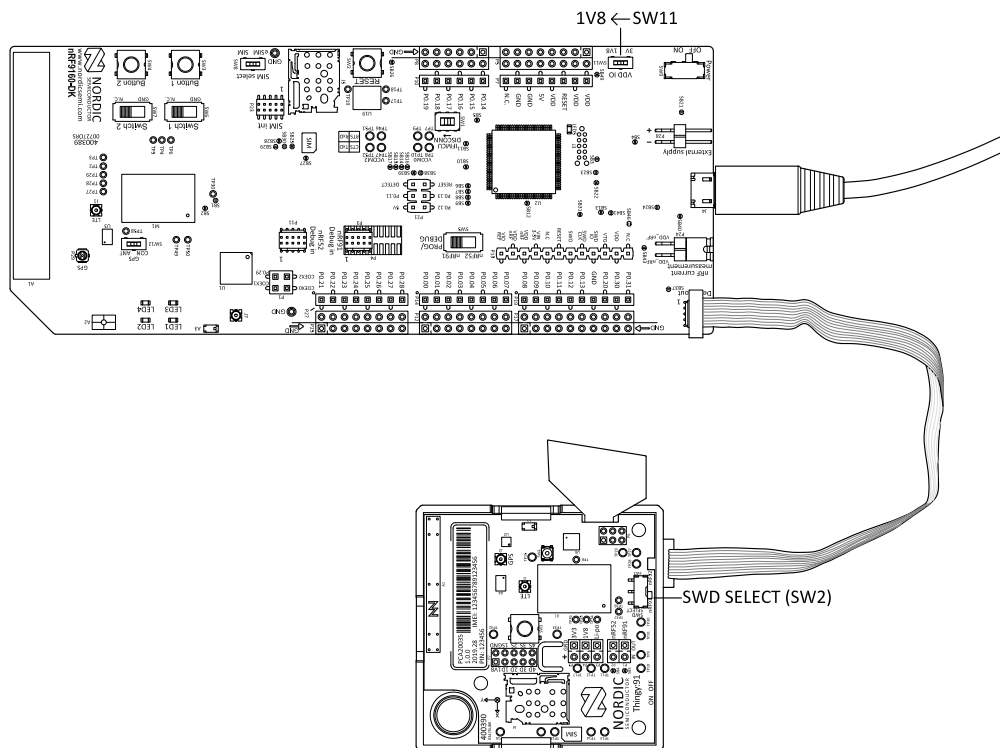


Figure 6: Connecting Nordic Thingy:91 to the external debug probe


Note: If using nRF9160 DK as the debug probe, make sure that **VDD_IO (SW11)** is set to 1.8 V on the nRF9160 DK.

- Make sure that Nordic Thingy:91 and the external debug probe are powered on.
- Connect the external debug probe to the PC with a USB cable.
In the navigation bar, **No devices available** changes to **Select device**.
- Click **Select device** and select the appropriate debug probe entry from the drop-down list.
If you are using nRF9160 DK as the external debug probe, you can identify the device by the fact that it has three COM ports.

The button text changes to the SEGGER ID of the selected device, and the **Device Memory Layout** section indicates that the device is connected.

6. Click **Update Modem** in the **Cellular Modem** pane on the right and choose the zip file with the latest modem release.

The **Modem DFU** dialog box appears as shown in the following figure.

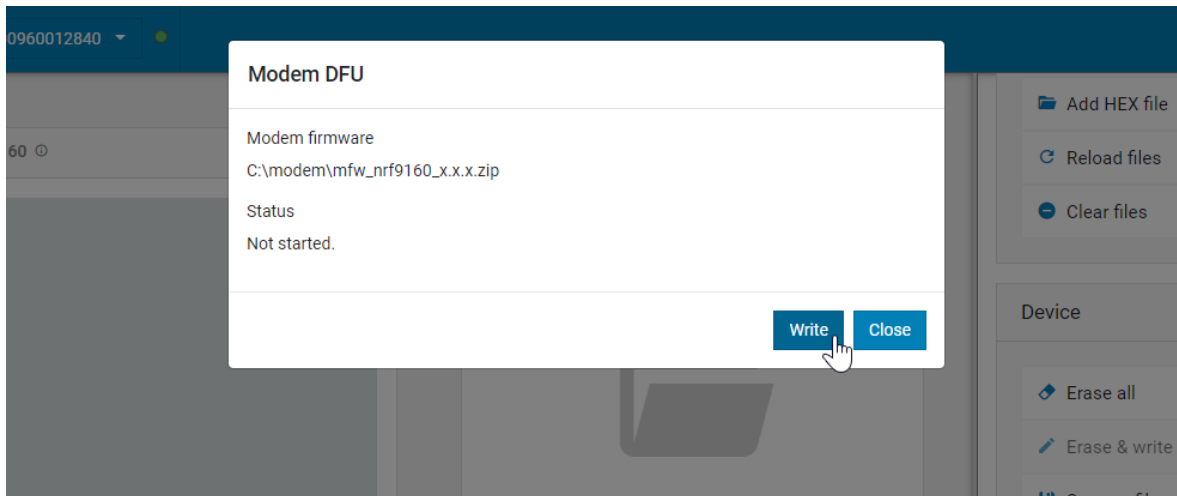

7. Click **Write** in the **Modem DFU** dialog box to update the firmware.

Do not unplug or turn off the device during this process.

Note: If you have issues updating modem firmware, then click **Erase all** before trying to update the modem again. In this case, the contents of the flash memory are deleted and the applications must be reprogrammed.

When the update is complete, you see a success message.

If you want to verify that the update was successful, check the version of the modem firmware by running the AT command **AT+CGMR** (for example, in LTE Link Monitor).

8 Troubleshooting

For troubleshooting, nRF Connect Programmer allows you to access a more detailed log file.

To open this file, click the **Open log file** button in the log window.

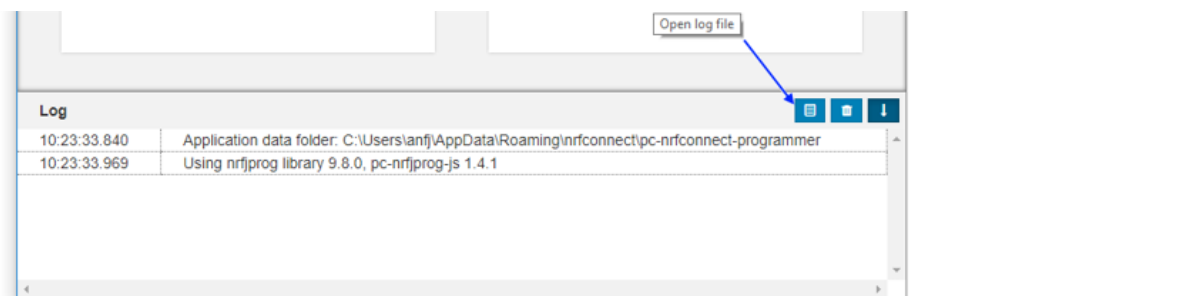


Figure 7: Where to open the detailed log file

The Programmer app shares several of the troubleshooting issues and suggested solutions with the nRF Connect *Bluetooth*[®] Low Energy app. Refer to the troubleshooting section in the [nRF Connect Bluetooth Low Energy](#) user guide for the list of issues.

Flashing a device

If you are unable to flash a device with the **Write** button, verify that:

- You are trying to program a supported device.
- There are no issues with the HEX file, and the addresses mentioned within the file are correct.

Legal notices

By using this documentation you agree to our terms and conditions of use. Nordic Semiconductor may change these terms and conditions at any time without notice.

Liability disclaimer

Nordic Semiconductor ASA reserves the right to make changes without further notice to the product to improve reliability, function, or design. Nordic Semiconductor ASA does not assume any liability arising out of the application or use of any product or circuits described herein.

Nordic Semiconductor ASA does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. If there are any discrepancies, ambiguities or conflicts in Nordic Semiconductor's documentation, the Product Specification prevails.

Nordic Semiconductor ASA reserves the right to make corrections, enhancements, and other changes to this document without notice.

Life support applications

Nordic Semiconductor products are not designed for use in life support appliances, devices, or systems where malfunction of these products can reasonably be expected to result in personal injury.

Nordic Semiconductor ASA customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Nordic Semiconductor ASA for any damages resulting from such improper use or sale.

RoHS and REACH statement

Complete hazardous substance reports, material composition reports and latest version of Nordic's REACH statement can be found on our website www.nordicsemi.com.

Trademarks

All trademarks, service marks, trade names, product names, and logos appearing in this documentation are the property of their respective owners.

Copyright notice

© 2020 Nordic Semiconductor ASA. All rights are reserved. Reproduction in whole or in part is prohibited without the prior written permission of the copyright holder.

**COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV GL
= ISO 9001 =**