

# *SERVICE MANUAL*

**B7130**

*notebook*





**Notebook Computer**

**B7130**

**Service Manual**

### Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0  
October 2010

### Trademarks

**Intel** and **Intel Core** are trademarks of Intel Corporation.

**Windows**<sup>®</sup> is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

## About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the **B7130** series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS



## IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 4.74A (90W) minimum AC/DC Adapter.

## CAUTION

**This Computer's Optical Device is a Laser Class 1 Product**

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


## Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.




2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

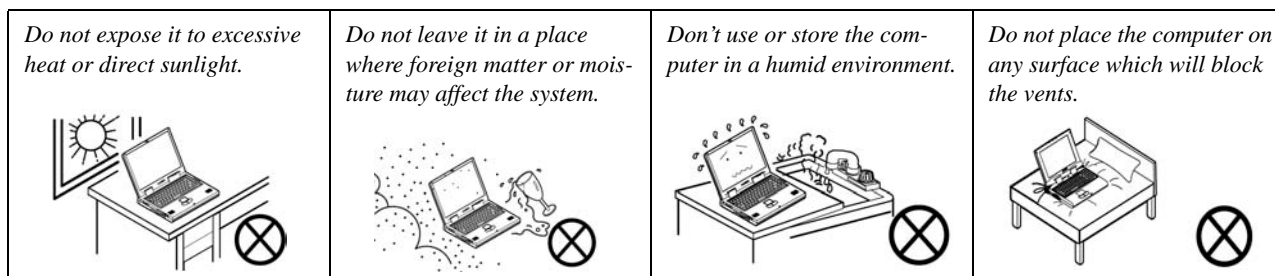

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

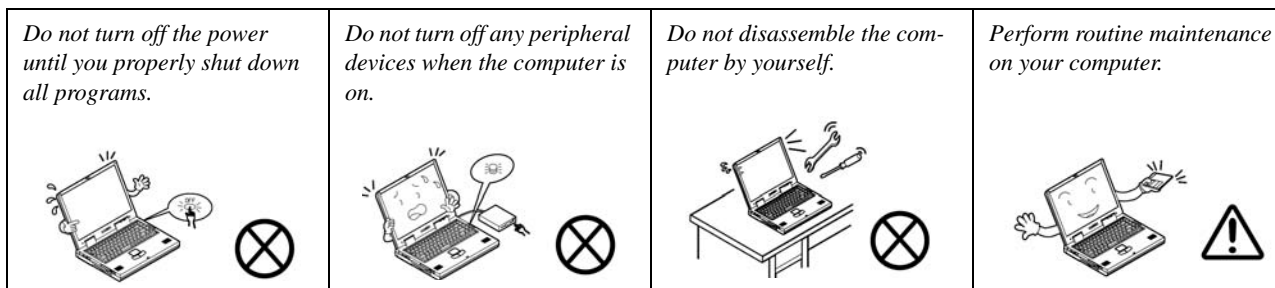


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

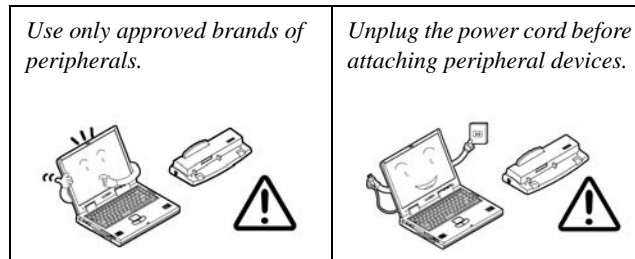

## Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

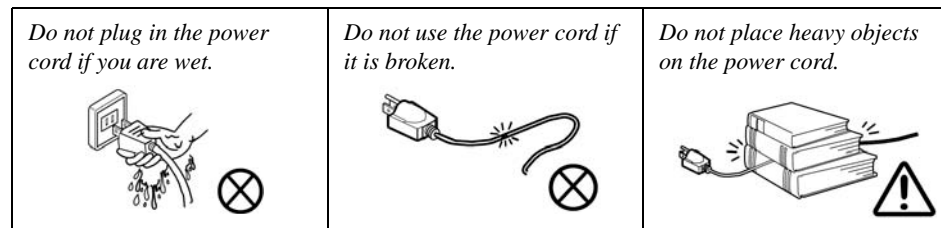

### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.



## Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

## Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




### Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

### Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

### Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

## Related Documents


You may also need to consult the following manual for additional information:

### User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

## System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 135 degrees); use the other hand (as illustrated in <Hyperlink B n I>Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

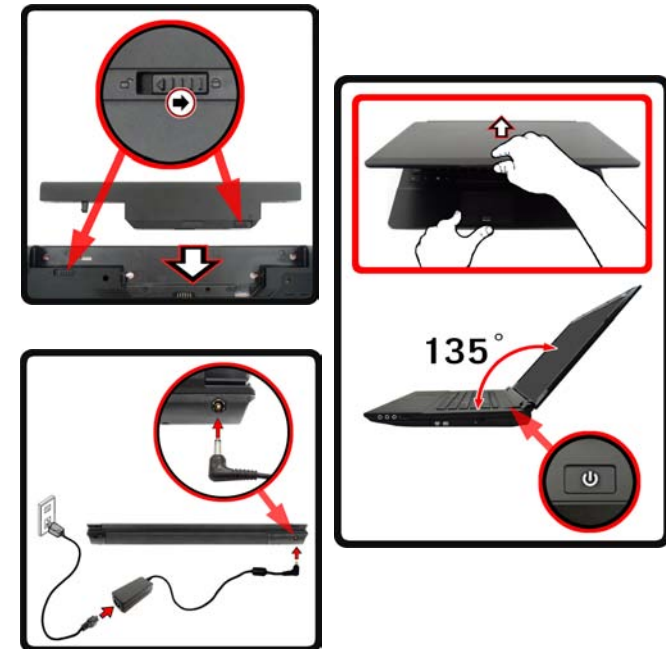

*Figure 1*  
Opening the Lid/LCD/Computer with AC/DC Adapter  
Plugged-In

## Contents

<b>Introduction .....</b>	<b>1-1</b>	HDD .....	A-5
Overview .....	1-1	LCD .....	A-6
Specifications .....	1-2	SATA DVD Super-Multi .....	A-7
External Locator - Top View with LCD Panel Open .....	1-4	SATA Blu-Ray Combo .....	A-8
External Locator - Front & Right Side Views .....	1-5	<b>Schematic Diagrams.....</b>	<b>B-1</b>
External Locator - Left Side & Rear View .....	1-6	System Block Diagram .....	B-2
External Locator - Bottom View .....	1-7	Clock Generator .....	B-3
Mainboard Overview - Top (Key Parts) .....	1-8	CPU 1/7 (DMI, PEG, FDI) .....	B-4
Mainboard Overview - Bottom (Key Parts) .....	1-9	CPU 2/7 (CLK, MISC, JTAG) .....	B-5
Mainboard Overview - Top (Connectors) .....	1-10	CPU 3/7 (DDR3) .....	B-6
Mainboard Overview - Bottom (Connectors) .....	1-11	CPU 4/7 (Power) .....	B-7
<b>Disassembly .....</b>	<b>2-1</b>	CPU 5/7 (Graphics Power) .....	B-8
Overview .....	2-1	CPU 6/7 (GND) .....	B-9
Maintenance Tools .....	2-2	CPU 7/7 (RESERVED) .....	B-10
Connections .....	2-2	DDR3 SO-DIMM_0 .....	B-11
Maintenance Precautions .....	2-3	DDR3 SO-DIMM_1 .....	B-12
Disassembly Steps .....	2-4	Panel, Inverter, CRT .....	B-13
Removing the Battery .....	2-5	VGA PCI-E Interface .....	B-14
Removing the Hard Disk Drive .....	2-6	VGA Frame Buffer Interface .....	B-15
Removing the System Memory (RAM) .....	2-8	VGA Frame Buffer A .....	B-16
Removing the Optical (CD/DVD) Device .....	2-10	VGA Frame Buffer C .....	B-17
Removing and Installing the Processor .....	2-11	VGA I/O .....	B-18
Removing the Wireless LAN Module .....	2-14	VGA NVVDD Cecoupling .....	B-19
Removing the Bluetooth Module .....	2-15	IBEXPEAK- M 1/9 .....	B-20
Removing the Keyboard .....	2-16	IBEXPEAK - M 2/9 .....	B-21
<b>Part Lists .....</b>	<b>A-1</b>	IBEXPEAK - M 3/9 .....	B-22
Part List Illustration Location .....	A-2	IBEXPEAK - M 4/9 .....	B-23
Top .....	A-3	IBEXPEAK - M 5/9 .....	B-24
Bottom .....	A-4	IBEXPEAK - M 6/9 .....	B-25
		IBEXPEAK - M 7/9 .....	B-26

## Preface

---

IBEXPEAK - M 8/9 .....	B-27
IBEXPEAK - M 9/9 .....	B-28
New Card, Mini PCIE .....	B-29
3G, CCD, TPM .....	B-30
USB, Fan, TP, FP, Multi-Conn .....	B-31
USB 3.0 .....	B-32
JMC 251 Card Reader .....	B-33
SATA ODD, LED, Hotkey, LID SW .....	B-34
RJ45, Modem .....	B-35
Audio Codec (VIA1812) .....	B-36
KBC-ITE IT8518 .....	B-37
5VS, 3.3VS, 1.5VS, VIN1 .....	B-38
VDD3, VDD5 .....	B-39
Power 1.8V, PEX_VDD .....	B-40
Power 1.5V/0.75V .....	B-41
Power 1.1VS_VTT .....	B-42
Power VGFX_Core .....	B-43
V-Core .....	B-44
Power VGA NVVDD .....	B-45
AC_IN, Charger .....	B-46
HDMI .....	B-47
Audio Board .....	B-48
B7110 Second HDD Board .....	B-49
B7110 Click Board .....	B-50
B7110 Power Switch Board .....	B-51
B7130 LED & VGA SW Board .....	B-52
B7110 K/B Switch Board .....	B-53
Sequence .....	B-54

## Updating the FLASH ROM BIOS..... C-1

To update the FLASH ROM BIOS you must: C-1

Download the BIOS .....	C-1
-------------------------	-----


Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive .....	C-1
Set the computer to boot from the external drive .....	C-1
Use the flash tools to update the BIOS .....	C-2
Restart the computer (booting from the HDD) .....	C-2

# Chapter 1: Introduction

## Overview

This manual covers the information you need to service or upgrade the **B7130** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows Vista/ Window 7*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **B7130** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

## Introduction

# Specifications



### Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



### CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

### Processor Options

**Intel® Core™ i7 Processor**  
**i7-640M (2.80GHz), i7-620M (2.66GHz)**  
 4MB L3 Cache & 1066MHz FSB

**Intel® Core™ i5 Processor**  
**i5-580M (2.66GHz), i5-560M (2.66GHz),**  
**i5-540M (2.53GHz), i5-520M (2.4GHz),**  
**i5-460M (2.53GHz), i5-450M (2.4GHz),**  
**i5-430M (2.26GHz)**  
 3MB L3 Cache & 1066MHz FSB

**Intel® Core™ i3 Processor**  
**i3-380M (2.53GHz), i3-370M (2.40GHz),**  
**i3-350M (2.27GHz)**  
 3MB L3 Cache & 1066MHz FSB

### Core Logic

Intel® HM55 Chipset

### BIOS

One 32Mb SPI Flash ROM  
 Phoenix™ BIOS

### LCD

17.3" (43.94cm) HD+/ FHD LCD

### Video Adapter

**Intel® GMA HD and NVIDIA® GeForce GT 425M**  
**Supports NVIDIA® Optimus Technology**

**Intel Integrated GPU (Intel® GMA HD):**  
 Shared Memory Architecture (DVMT) up to **1.7GB**  
 Microsoft DirectX®10 Compatible

**NVIDIA Discrete GPU (NVIDIA® GeForce GT 425M):**  
**1GB** GDDR3 Video RAM  
 Microsoft DirectX®11 Compatible

### Memory

Two 204 Pin SO-DIMM Sockets Supporting **DDR3 1333MHz** Memory  
 Memory Expandable up to **8GB**

### Security

BIOS Password  
 Security (Kensington® Type) Lock Slot

### Audio

High Definition Audio Compliant Interface  
 2 \* Built-In Speakers  
 Built-In Microphone

### Storage

**(Factory Option)** One Changeable 12.7mm(h) Optical Device Type Drive (Super Multi Drive Module or Blu-Ray Combo Drive Module)  
 One Changeable 2.5" 9.5 mm (h) **SATA** (Serial) HDD

### Keyboard

Full-size "WinKey" keyboard (with numeric keypad)

### Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

### Card Reader

Embedded Multi-in-1 Card Reader  
 MMC (MultiMedia Card) / RS MMC  
 SD (Secure Digital) / Mini SD / SDHC/ SDXC Compatible  
 MS (Memory Stick) / MS Pro / MS Duo



## Communication

Built-In Gigabit Ethernet LAN

**(Factory Option)** 1.3M/ 2.0M Pixel USB PC Camera Module

**(Factory Option)** Bluetooth 2.1 + EDR Module

**(Factory Option)** Combo WLAN (**802.11b/g/n**) and Bluetooth 3.0 Module

**(Factory Option)** Intel® WiFi Link 6200 (**802.11a/g/n**) Wireless LAN Half Mini-Card Module

**(Factory Option)** Intel® WiFi Link 6300 (**802.11a/g/n**) Wireless LAN Half Mini-Card Module

**(Factory Option)** Intel® WiFi Link 1000 (**802.11b/g/n**) Wireless LAN Half Mini-Card Module

**(Factory Option)** Third-Party **802.11b/g/n** Wireless LAN Half Mini-Card Module

## Interface

**Three** USB 2.0 Ports and **One** USB 3.0 Port Or **Four** USB 2.0 Ports\*

**\*Note:** it depends on your purchase configuration

One eSATA Port

One HDMI-Out Port

One Headphone-Out Jack

One Microphone-In Jack

One S/PDIF Out Jack

One RJ-45 LAN Jack

One External Monitor Port

One DC-in Jack

## Mini Card Slots

Slot 1 for **WLAN** Module

## Environmental Spec

### Temperature

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

### Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

## Power

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19V, 4.74A (**90W**)

6 Cell Smart Lithium-Ion Battery Pack, 48.84WH

**(Factory Option)** 6 Cell Smart Lithium-Ion Battery Pack, 62.16WH

## Dimensions & Weight

413mm (w) \* 277.5mm (d) \* 25.1 - 38.9mm (h)

3.1kg with ODD & 48.84WH Battery

## Introduction

*Figure 1*  
Top View

1. Built-In PC Camera (optional)
2. LCD
3. Power Button
4. GPU Button
5. LED Indicators
6. Hot Key Buttons
7. Keyboard
8. Built-In Microphone
9. Touchpad & Buttons

## External Locator - Top View with LCD Panel Open



## External Locator - Front & Right Side Views

FRONT VIEW



RIGHT SIDE VIEW



*Figure 2*  
**Front View**

1. LED Indicators

*Figure 3*  
**Right Side View**

1. Headphone-Out Jack
2. Microphone-In Jack
3. S/PDIF-Out Jack
4. USB 2.0 Port
5. Optical Device Drive Bay
6. Emergency Eject Hole


## Introduction

### External Locator - Left Side & Rear View

*Figure 4*  
**Left Side View**

1. External Monitor Port
2. RJ-45 LAN Jack
3. HDMI-Out Port
4. 2 \* USB 2.0 Ports
5. Vent
6. eSATA Port
7. USB 3.0 Port or USB 2.0 Port  
(Note: It depends on your purchase configuration)
8. Multi-in-1 Card Reader

LEFT SIDE VIEW

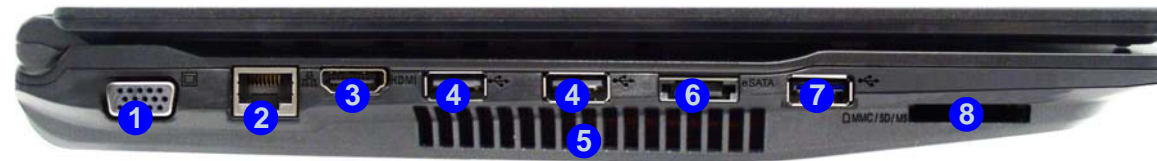


*Figure 5*  
**Rear View**

1. Security Lock Slot
2. Battery
3. DC-In Jack

REAR VIEW



## External Locator - Bottom View

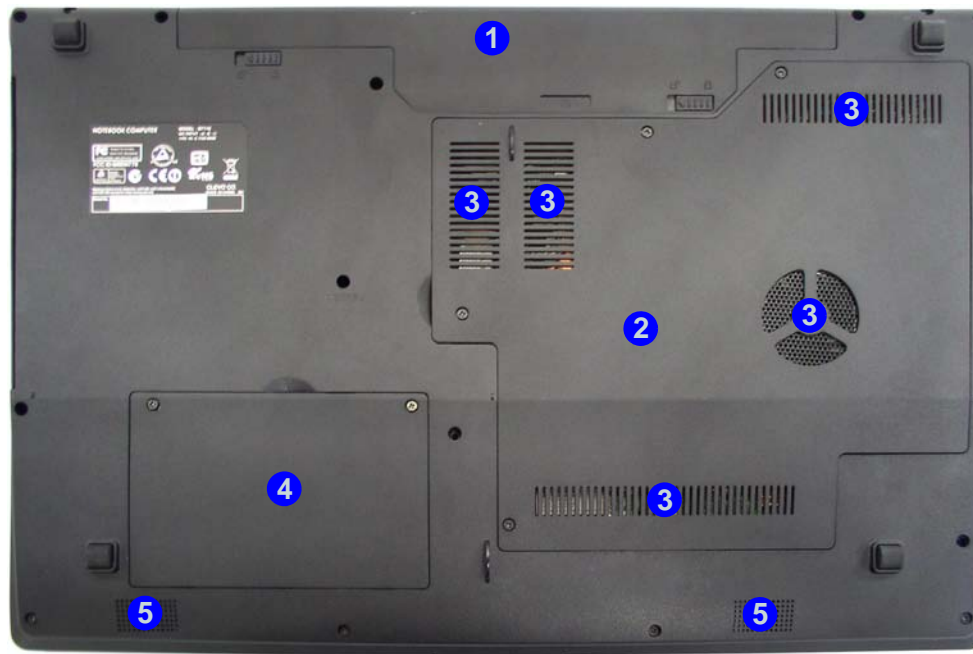

*Figure 6*  
**Bottom View**

1. Battery
2. Component Bay Cover
3. Vent
4. Hard Disk Bay Cover
5. Speakers

  
**Overheating**

To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.




## Introduction

*Figure 7*  
**Mainboard Top  
Key Parts**

1. JMC251
2. KBC-ITE IT8502E
3. Clock Generator
4. Azalia Codec

## Mainboard Overview - Top (Key Parts)

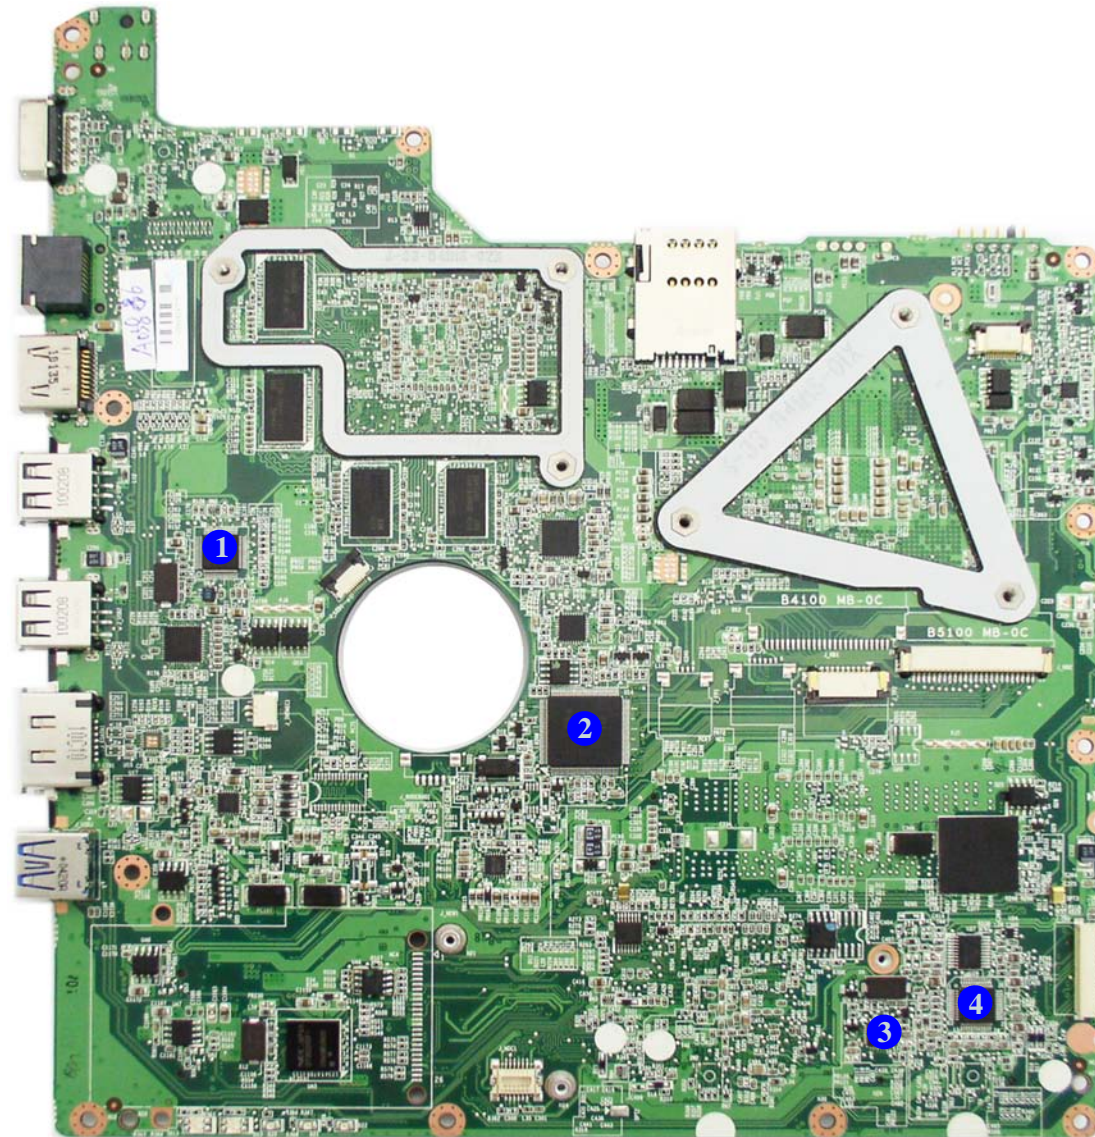


### Version Note

The mainboard in this chapter is based upon this version. If your mainboard is a later version, please check with the Service Center.



## Mainboard Overview - Bottom (Key Parts)

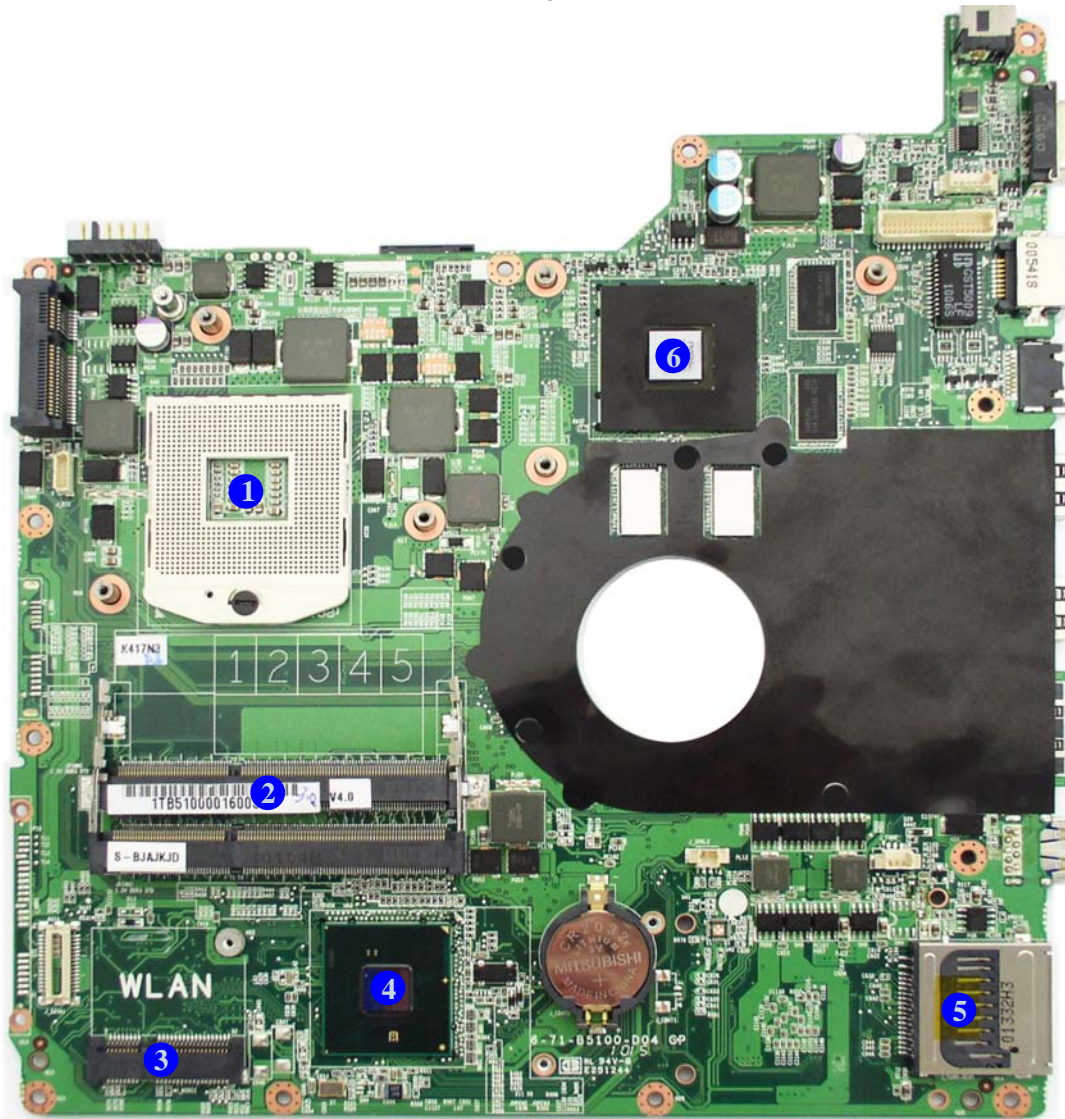

*Figure 8*  
**Mainboard Bottom  
Key Parts**


1. CPU Socket (no CPU installed)
2. Memory Slots  
DDR3 SO-DIMM
3. Mini-Card  
Connector (WLAN  
Module)
4. Platform Controller  
Hub
5. 3-in-1 Card  
Reader
6. VGA

## Introduction

*Figure 9*  
**Mainboard Top  
Connectors**


1. External Monitor Port
2. RJ-45 LAN Jack
3. HDMI-Out Port
4. USB Ports
5. eSATA Port
6. Microphone Cable Connector
7. MDC Connector
8. Audio Board Connector
9. Fingerprint and TouchPad Cable Connector
10. Keyboard Cable Connector
11. Switch Board Cable Connector

## Mainboard Overview - Top (Connectors)

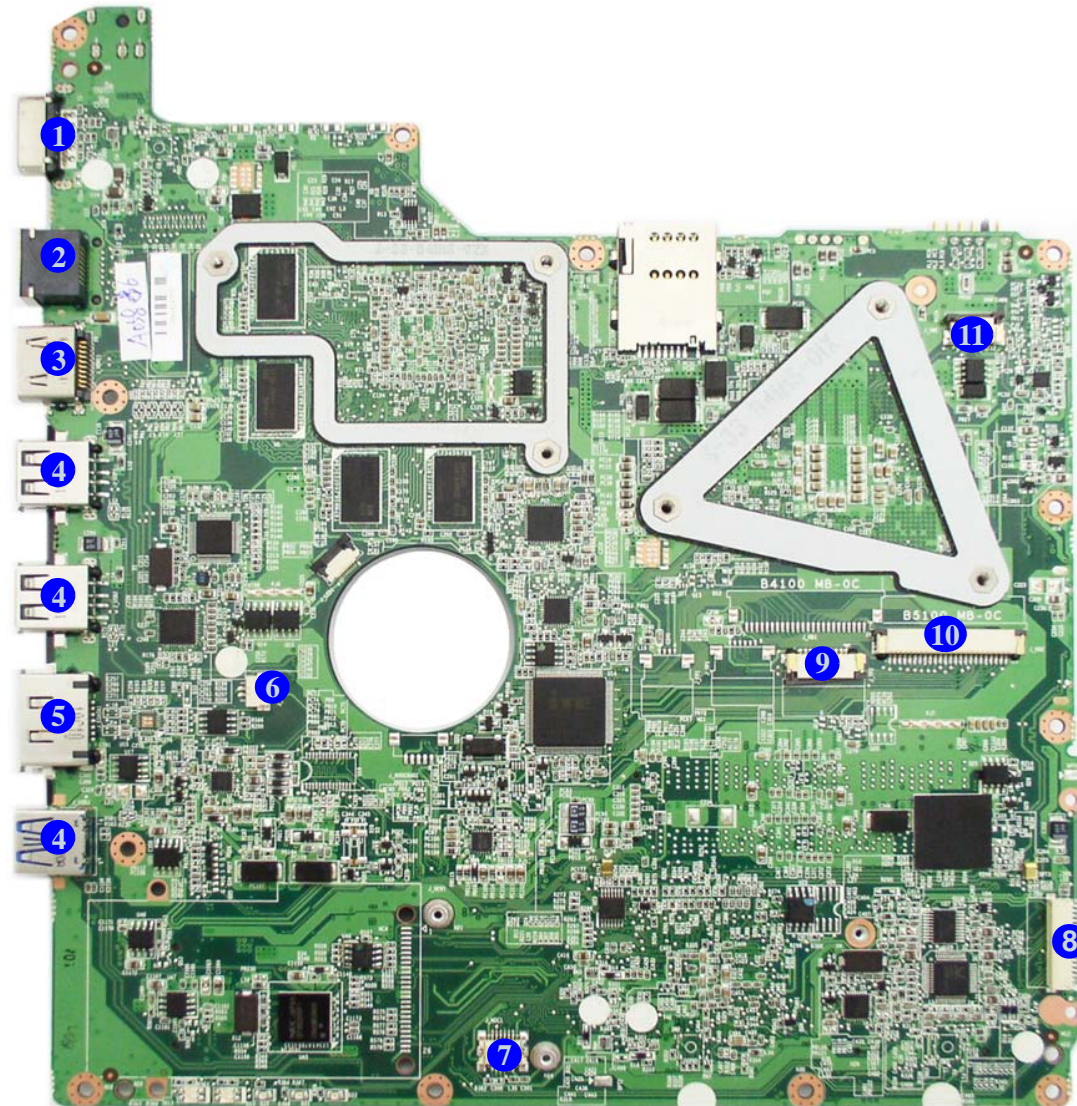



## Mainboard Overview - Bottom (Connectors)

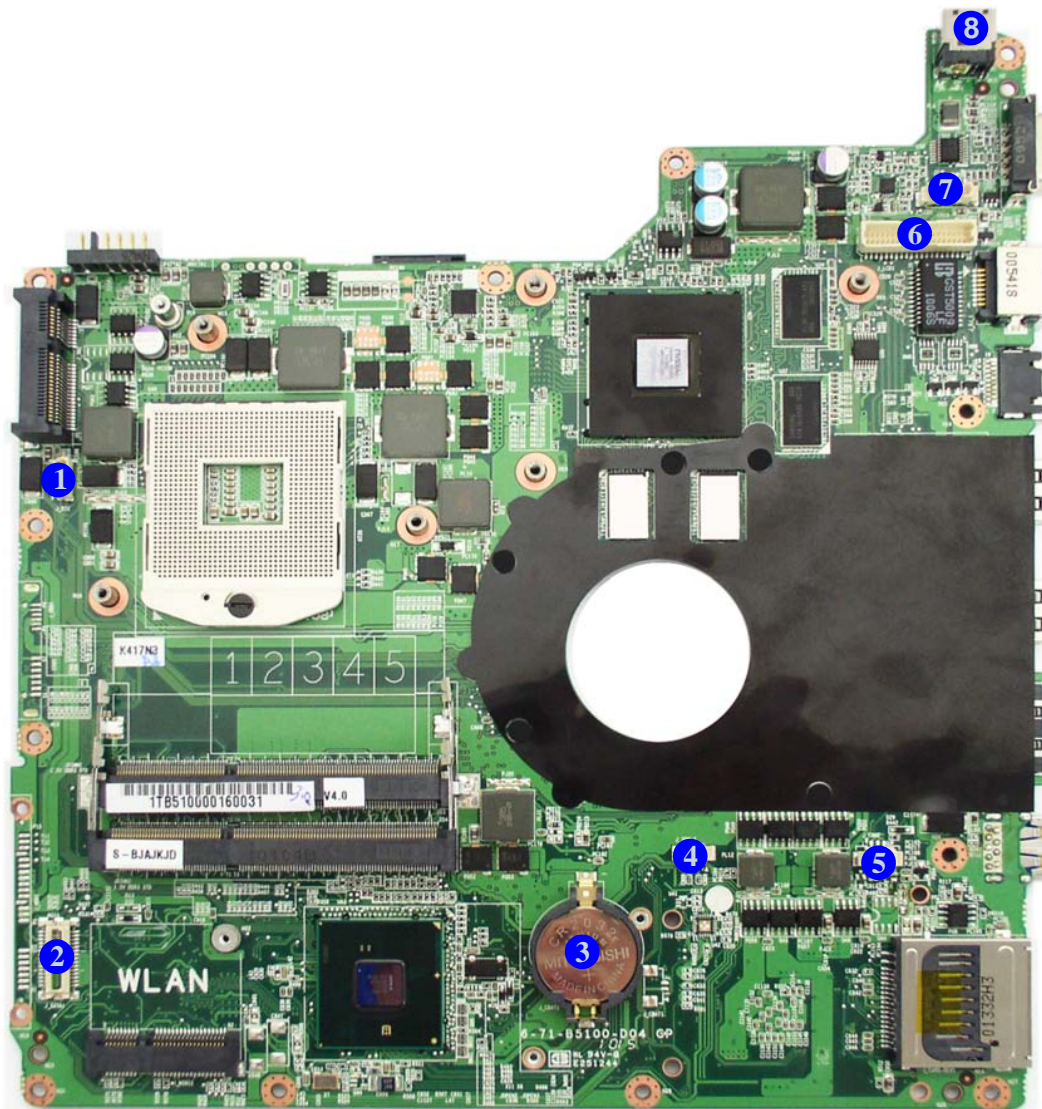

*Figure 10*  
**Mainboard Bottom  
Connectors**

1. Bluetooth Cable Connector
2. HDD & ODD Connector
3. CMOS Battery Connector
4. Speaker Cable Connector
5. CPU Fan Cable Connector
6. LCD Cable Connector
7. CCD Cable Connector
8. DC-In Jack




# Chapter 2: Disassembly

## Overview

This chapter provides step-by-step instructions for disassembling the **B7130** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

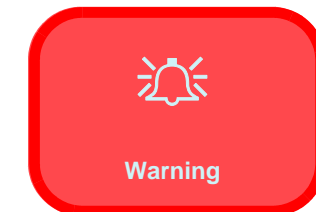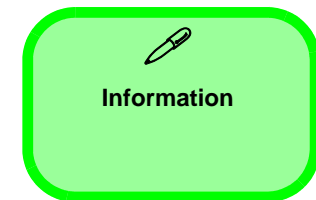

## Disassembly

---

**NOTE:** All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

### Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

### Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.



## Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
  - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
  - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

## Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

### Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

#### To remove the Battery:

1. Remove the battery [page 2 - 5](#)

#### To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)

#### To remove the System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 8](#)

#### To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the Optical device [page 2 - 10](#)

#### To remove and install a Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the processor [page 2 - 11](#)
3. Install the processor [page 2 - 13](#)

#### To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the wireless LAN [page 2 - 14](#)

#### To remove the Bluetooth Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the Bluetooth [page 2 - 15](#)

#### To remove the Keyboard:



1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 16](#)

## Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery **3** in the direction of the arrow **4** (*Figure 1b*).

*Figure 1*  
**Battery Removal**

- a. Slide the latch and hold in place.
- b. Slide the battery in the direction of the arrow.

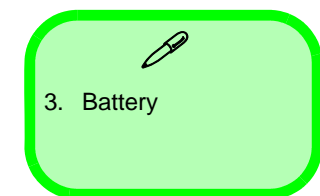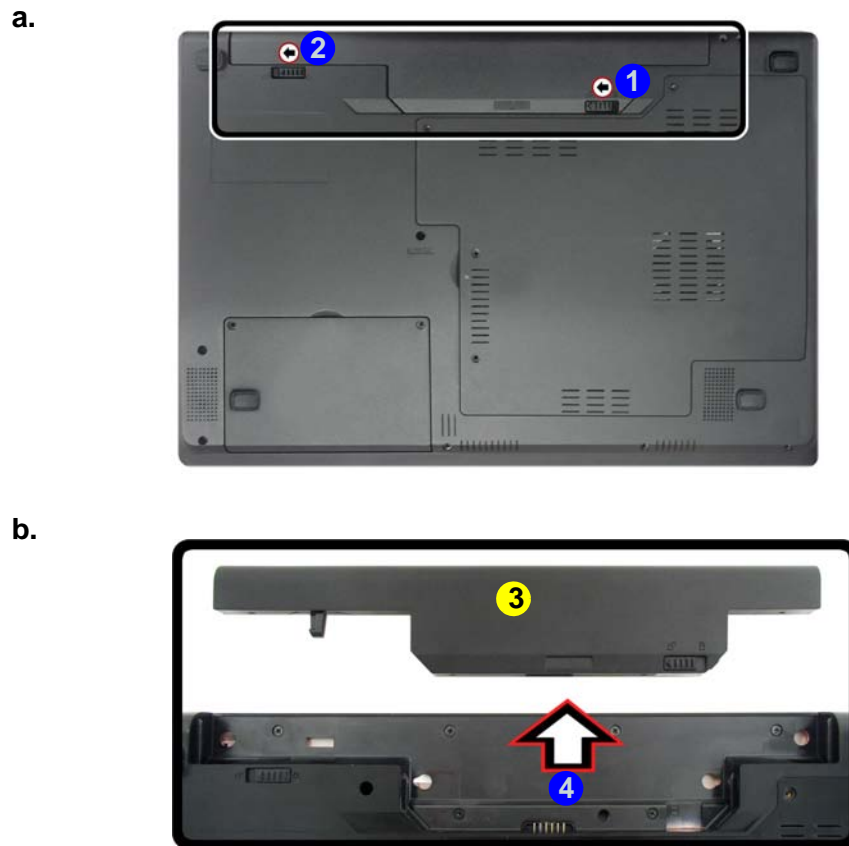

# Removing the Hard Disk Drive

*Figure 2*  
**HDD Assembly  
Removal**


The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

- a. Locate the HDD bay cover and remove the screws.

## Hard Disk Upgrade Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws **1** & **2** ([Figure 2a](#)).

a.

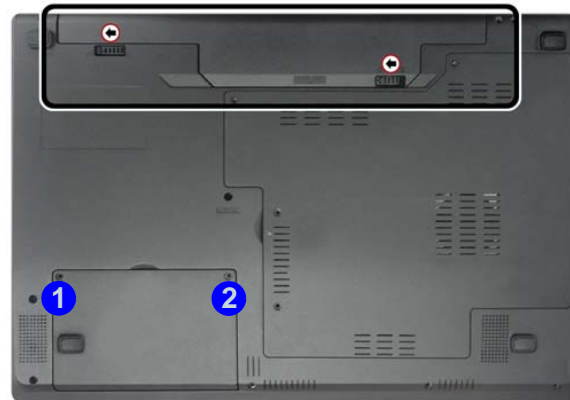


### HDD System Warning

New HDD's are blank. Before you begin make sure:


You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

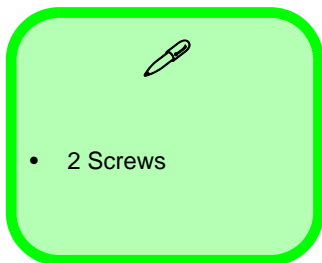

3. Remove the hard disk bay cover **3** (*Figure 3b*).
4. Grip the mylar cover and slide the hard disk in the direction of arrow **4** (*Figure 3c*).
5. Lift the hard disk **5** out of the bay **6** (*Figure 3d*).
6. Remove the screws **7** - **10** and the mylar cover **11** from the hard disk (*Figure 3e*).
7. Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).

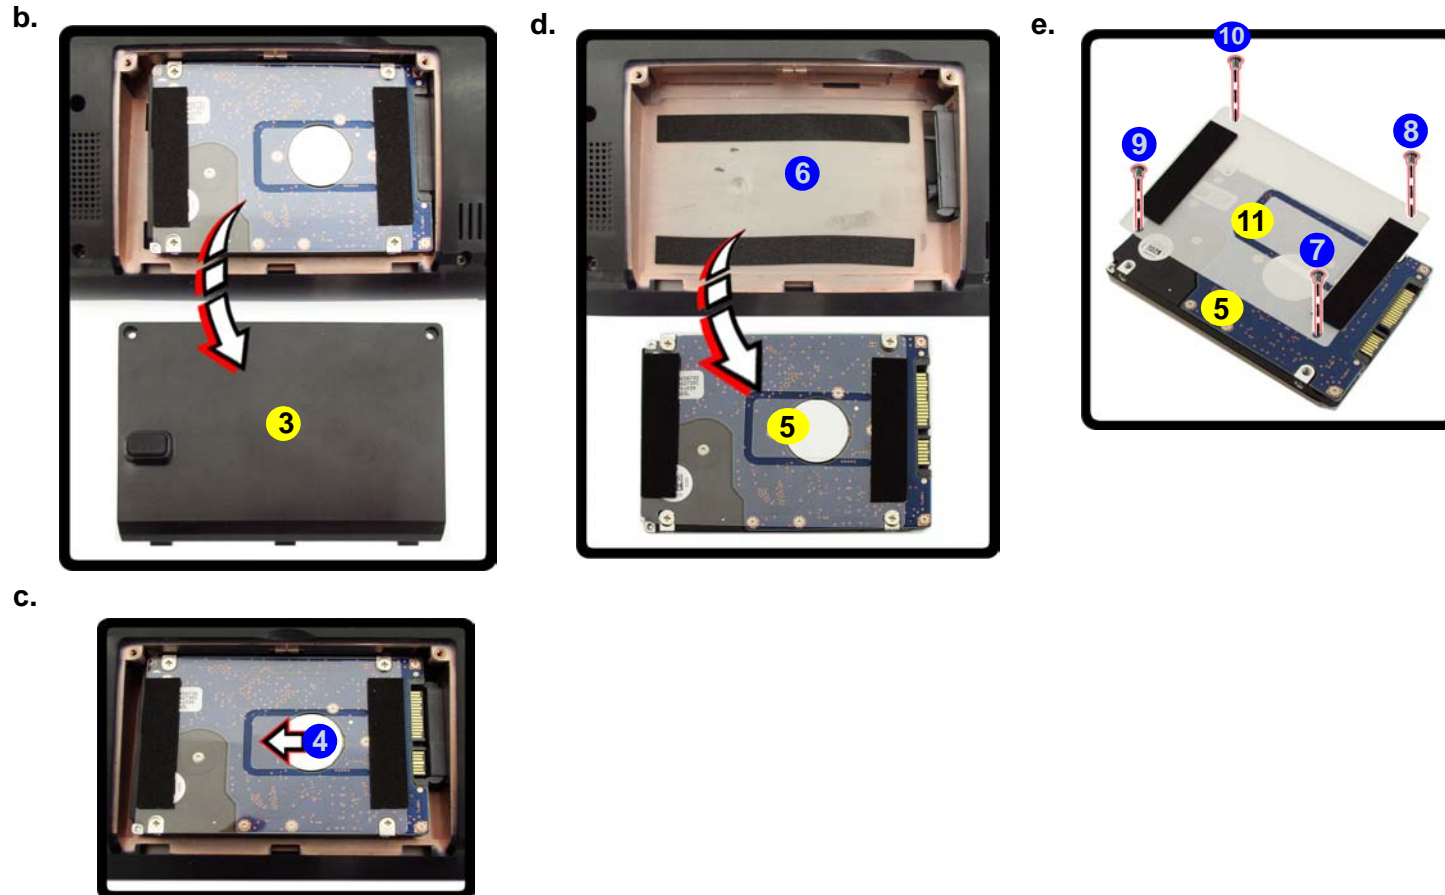

*Figure 3*  
**HDD Assembly  
Removal (cont'd.)**

- b. Remove the HDD bay cover.
- c. Grip the mylar cover and slide the HDD in the direction of the arrow.
- d. Lift the HDD assembly out of the bay.
- e. Remove the screws and mylar cover.

3. HDD Bay Cover  
5. HDD  
11. Mylar Cover

- 4 Screws

## Disassembly

*Figure 4*  
**RAM Module Removal**

- Remove the screws.
- Disconnect the fan cable and remove the bay cover.


## Removing the System Memory (RAM)

The computer has two memory sockets for 204 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR3 1333MHz. The main memory can be expanded up to 8GB. The SO-DIMM modules supported are 1024MB, and 2048MB and **DDRIII** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.


### Memory Upgrade Process

- Turn **off** the computer, remove the battery ([page 2 - 5](#)).
- Locate the component bay cover **1**, and remove screws **2 - 5** ([Figure 4a](#)).
- Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
- Carefully disconnect the fan cable **6**, and remove the cover **1** ([Figure 4b](#)).

a.

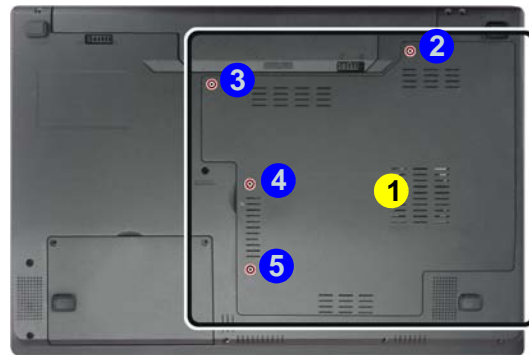

b.

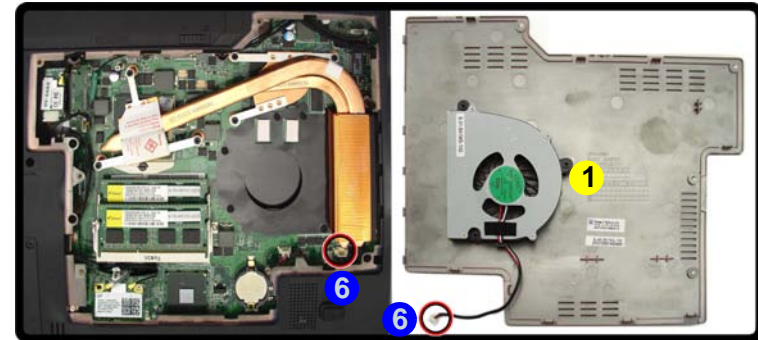

#### Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



1. Component Bay Cover

- 4 Screws




- Gently pull the two release latches (7 - 8) on the sides of the memory socket in the direction indicated by the arrows (*Figure 5c*).

c.



d.

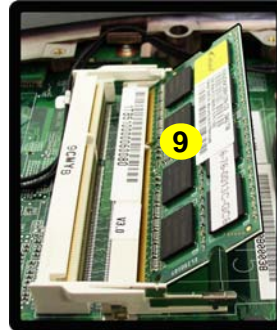

e.



- The RAM module 9 will pop-up (*Figure 5d*), and you can then remove it.
- Pull the latches to release the second module if necessary (*Figure 5c*).
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
- Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
- Replace the bay cover and screws (**make sure you reconnect the fan cable before screwing down the bay cover**).
- Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

*Figure 5*  
**RAM Module Removal (cont'd.)**

- Pull the release latches.
- Remove the module.



### Single Memory Module Installation

If your computer has a single memory module, then insert the module into the **Channel 0 (J\_DIMM\_1)** socket. In this case, this is the lower memory socket (the socket closest to the mainboard) as shown in *Figure 5e*.



9. RAM Module

## Disassembly

*Figure 6*  
**Optical Device  
Removal**

- a. Remove the screw.
- b. Push the optical device out off the computer at point 3.


## Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and hard disk ([page 2 - 6](#)).
2. Remove the screw at point ① ([Figure 6a](#)), and use a screwdriver to carefully push out the optical device ② at point ③ ([Figure 6b](#)).
3. Insert the new device and carefully slide it into the computer (the device only fits one way. **DO NOT FORCE IT**; The screw holes should line up).
4. Restart the computer to allow it to automatically detect the new device.

a.



b.

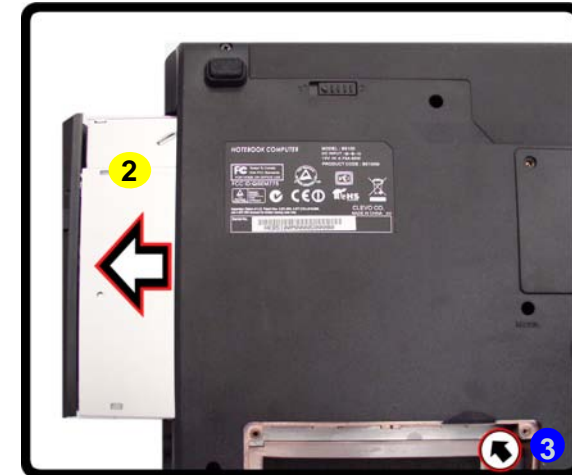

2. Optical Device

- 1 Screw

# Removing and Installing the Processor

## Processor Removal Procedure

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 8](#)).
2. The CPU heat sink will be visible at point **A** ([Figure 7a](#)) on the mainboard.
3. Remove screws **6**, **5**, **4**, **3**, **2**, **1** ([Figure 7b](#)), the reverse order indicated on the label.
4. Carefully lift up the heat sink **B** ([Figure 7c](#)) off the computer.


*Figure 7*  
**Processor Removal**

- a. Remove the cover and locate the heat sink.
- b. Remove the screws in the order indicated.
- c. Remove the heat sink.


a.




c.

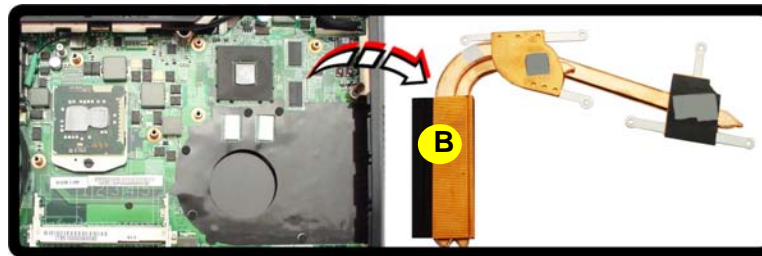

b.

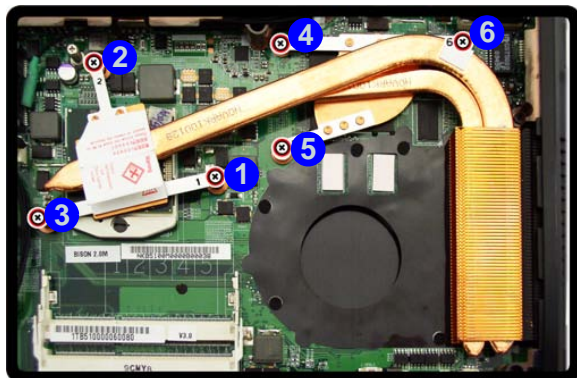




B. Heat Sink

- 6 Screws


## Disassembly

### Figure 8 Processor Removal (cont'd)


- d. Turn the release latch to unlock the CPU.  
e. Lift the CPU out of the socket.

5. Turn the release latch **C** towards the unlock symbol , to release the CPU (*Figure 8d*).
6. Carefully (it may be hot) lift the CPU **D** up out of the socket (*Figure 8e*).
7. See [page 2 - 13](#) for information on inserting a new CPU.
8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

d.

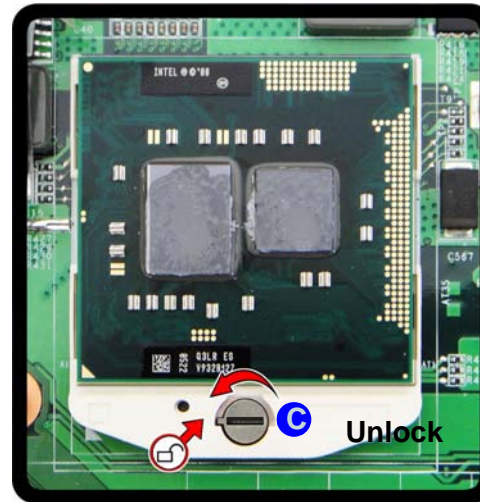

e.

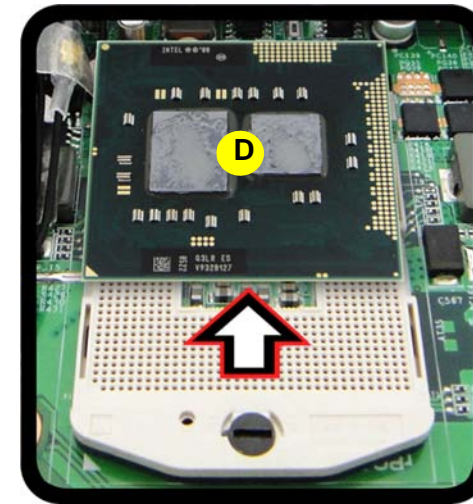

D. CPU




Caution

The heat sink, and CPU area in general, contains parts which are subjected to high temperatures. Allow the area time to cool before removing these parts.








### Processor Installation Procedure

1. Insert the CPU **A** (*Figure 9a*), pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (*Figure 9b*).
2. **Remove the stickers** **C** (*Figure 9c*) from the heat sink.
3. Insert the heat sink **D** as indicated in (*Figure 9c*).
4. Replace and tighten the screws **1** - **6** (*Figure 9d*) in the order indicated on the label.
5. Replace the component bay cover and screws (*page 2 - 8*).

*Figure 9*  
**Processor Installation**

- a. Insert the CPU.
- b. Turn the release latch towards the lock symbol.
- c. Remove the stickers from the heat sink and insert the heat sink.
- d. Replace and tighten the screws in the order indicated on the label.

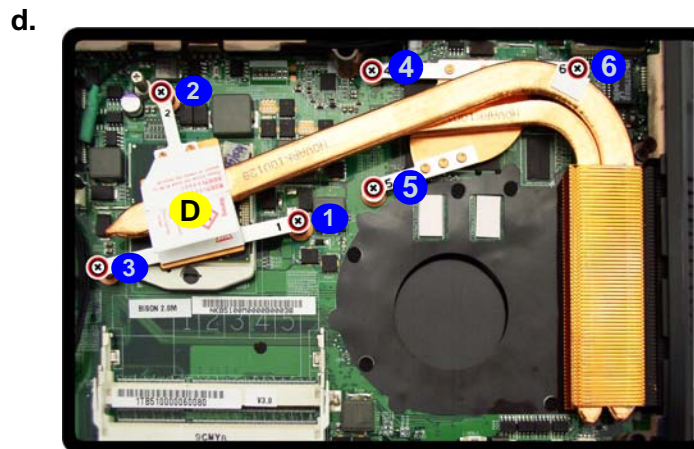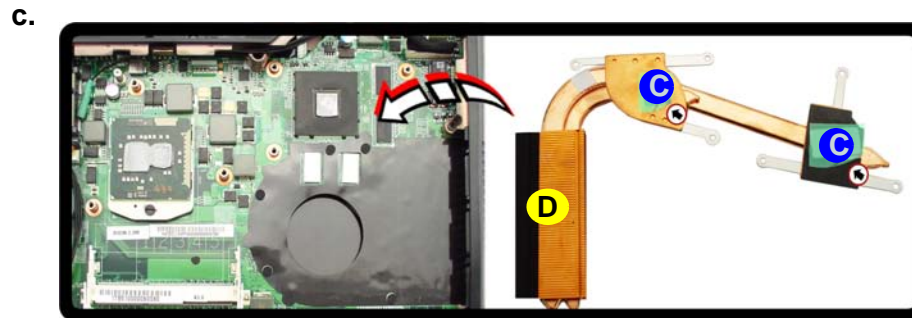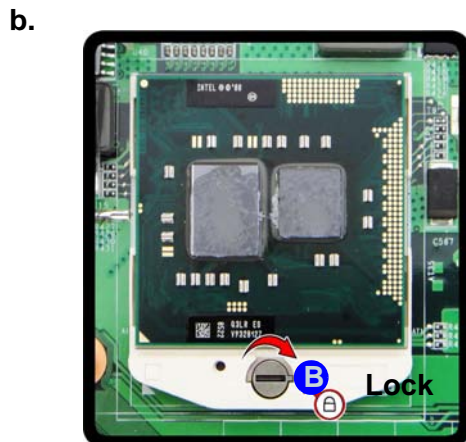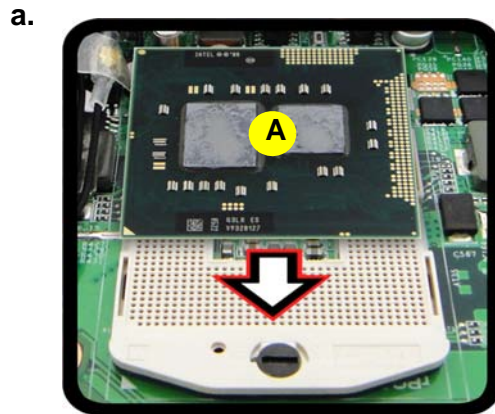



A. CPU  
D. Heat Sink


- 6 Screws

## Disassembly

*Figure 10*  
**Wireless LAN  
Module Removal**

- The WLAN module will be visible at point 1.
- Disconnect the cables **2** - **3**, then remove screw **4** from the module socket (*Figure 10b*).
- The WLAN module will pop up.
- Lift the WLAN module out.

Note: Make sure you reconnect the antenna cable to “1” + “2” socket (*Figure b*).

 5. WLAN Module.

- 1 Screw

## Removing the Wireless LAN Module

- Turn **off** the computer, remove the battery (*page 2 - 5*) and the component bay cover (*page 2 - 8*).
- The Wireless LAN module will be visible at point **1** (*Figure 10a*) on the mainboard.
- Carefully disconnect cables **2** - **3**, then remove screw **4** from the module socket (*Figure 10b*).
- The Wireless LAN module **5** (*Figure 10c*) will pop-up.
- Lift the Wireless LAN module (*Figure 10d*) up and off the computer.


a.




c.



d.

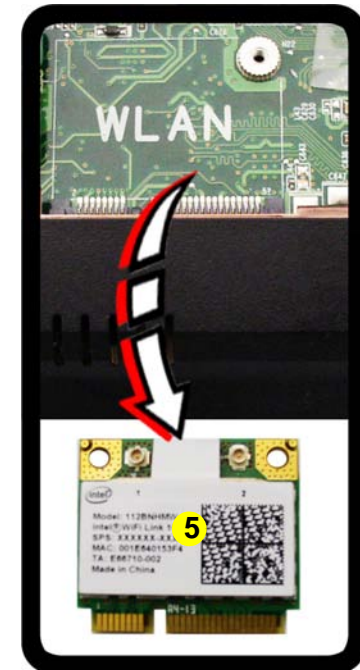

b.

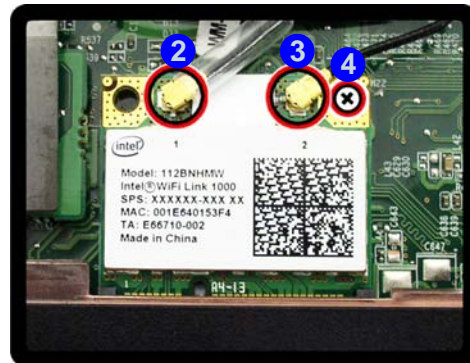



## Removing the Bluetooth Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 8](#)).
1. Locate the Bluetooth module at point **1** ([Figure 11a](#)).
2. Remove screw **2** and carefully disconnect the Bluetooth module from the connector **3** and the cable **4** ([Figure 11b](#)).
3. Lift the Bluetooth module **5** ([Figure 11c](#)) up and off the computer.

*Figure 11*  
**Bluetooth Module Removal**

- a. Locate the Bluetooth module at point 1.
- b. Remove the screw and carefully disconnect the connector and the cable.
- c. Lift the Bluetooth module up off the socket.

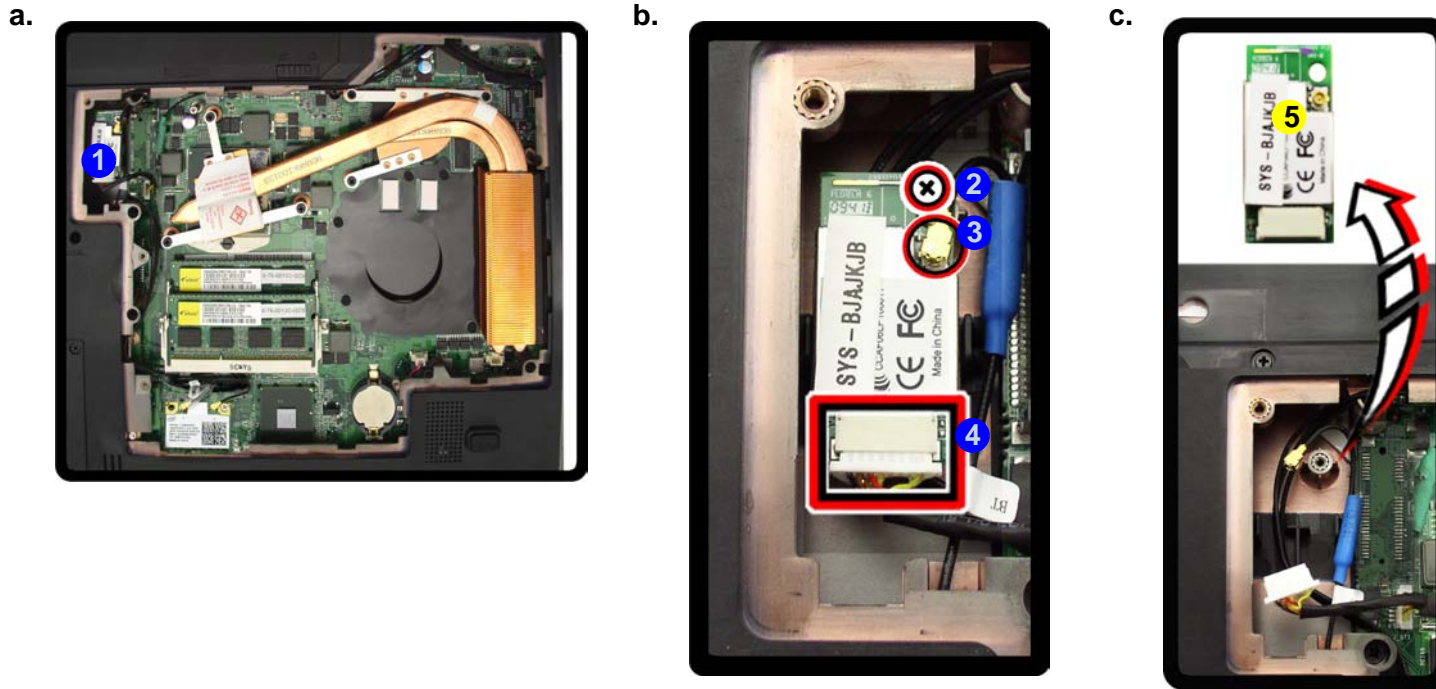



5. Bluetooth Module

- 1 Screw



## Disassembly




Figure 12

### Keyboard Removal

- Remove the screws and use a screwdriver to carefully push out the top cover module at point 3.
- Remove the top cover module.
- Remove the screws.
- Lift the keyboard up and disconnect the cable from the locking collar.
- Remove the keyboard.

## Removing the Keyboard

- Turn **off** the computer and remove the battery ([page 2 - 5](#)).
- Remove the screws 1 - 2 and use a screwdriver to carefully push out the top cover module at point 3 ([Figure 12a](#)).
- Remove the top cover module 4 ([Figure 12b](#)) and the screws 5 - 9 ([Figure 12c](#)).
- Carefully lift the keyboard 10 up, being careful not to bend the keyboard ribbon cable ([Figure 12d](#)).
- Disconnect the keyboard ribbon cable 11 from the locking collar socket 12 ([Figure 12d](#)).
- Carefully lift up the keyboard 10 ([Figure 12e](#)) off the computer.

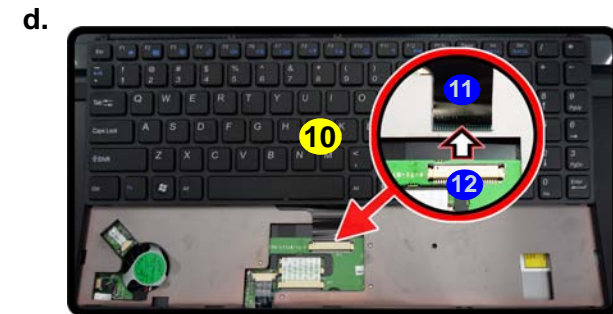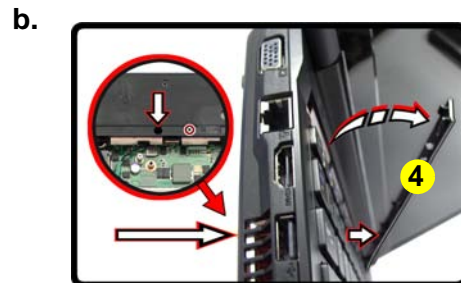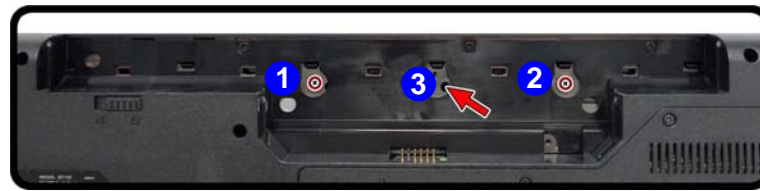

4. Top cover module  
10. Keyboard

- 7 Screws

# Appendix A:Part Lists

This appendix breaks down the *B7130* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

**Note:** This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

**Note:** Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

**Note:** Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

## Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

*Table A - 1*  
Part List Illustration  
Location

Part	B7130
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
HDD	<i>page A - 5</i>
LCD	<i>page A - 6</i>
SATA DVD Super-Multi	<i>page A - 7</i>
SATA Blu-Ray Combo	<i>page A - 8</i>

Top

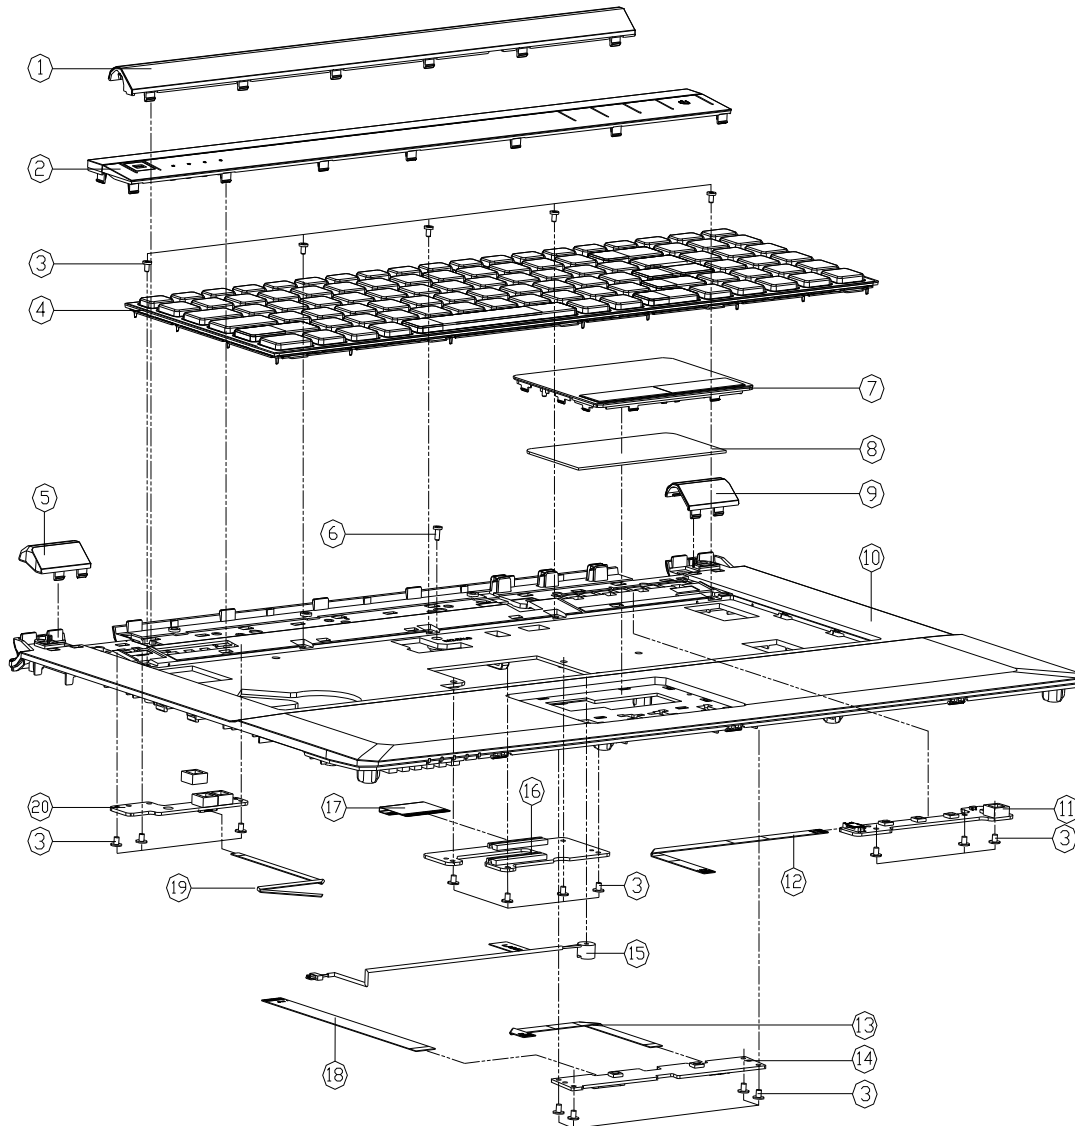



Figure A - 1  
Top

ITEM	PART NAME	PART NO	REMARK
1	HINGE COVER SABC CM6140 701DE B7110	6-42-B7112-032	
2	CENTER COVER MODULE B7110	6-42-B7112-201	FDR B7110
2	CENTER COVER MODULE B7130	6-42-B7132-100	FDR B7130
2	CENTER COVER MODULE E7130	6-42-E7132-100	FDR E7130
3	SCREW M2.5*6L K BZ ICT NY	6-35-B1120-3RE	
4	K/B USA CHROME FRAME (US) MODULE B7110	6-79-B711000K-010	
5	HINGE COVER L SABC CM6140 701DE B7110	6-42-B7112-022	
6	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
7	TP COVER MODULE B7110	6-42-B7112-102	
8	TOUCH PAD SIMPLICS TM-H146-103 MULTI-GESTURE C480	6-49-C4802-010	
9	HINGE COVER R SABC CM6140 701DE B7110	6-42-B7112-012	
10	TOP CASE MODULE B7110	6-39-B7112-012	
11	POWER SWITCH BOARD V2.0 B7110	6-77-B711S-D02	
12	FFC POWER BOARD (PITCH=05,0PINL=151S) B7110	6-43-B7110-032	
13	FFC CLICK TO T/P (PITCH=1.6PINL=109) B7110	6-43-B7112-022	
14	CLICK BOARD V2.0 B7110	6-77-B7112-D02	
15	MC 5550505-FL-0 W/2X 22K VCNL (REV) 1.4MM V2.0	6-23-EM55G-011	
16	KEYBOARD SWITCH BOARD V1.0 B7110	6-77-B7117-D01	
17	FFC CLICK TO K/B BOARD (PITCH=2.0PINL=345) B7110	6-43-B7110-022	
18	FFC CLICK TO M/B (PITCH=1.0PINL=116) B7110	6-43-B7110-012	
19	FFC VGA BOARD (PITCH=05,8PINL=154) B7110	6-43-B7112-011	FDR B7110
19	FFC VGA BOARD (PITCH=05,10PINL=154) B7130	6-43-B7132-011	FDR B7130/E7130
20	LED & VGA SWITCH BOARD V2.0 B7110	6-77-B7114-D02	FDR B7110
20	LED & VGA SWITCH BOARD V1.0 B7130	6-77-B7134-D01	FDR B7130
20	LED & VGA SWITCH BOARD V1.0 E7130	6-77-B7134-D01-A	FDR E7130

A.Part Lists

# Bottom

Figure A - 2  
Bottom

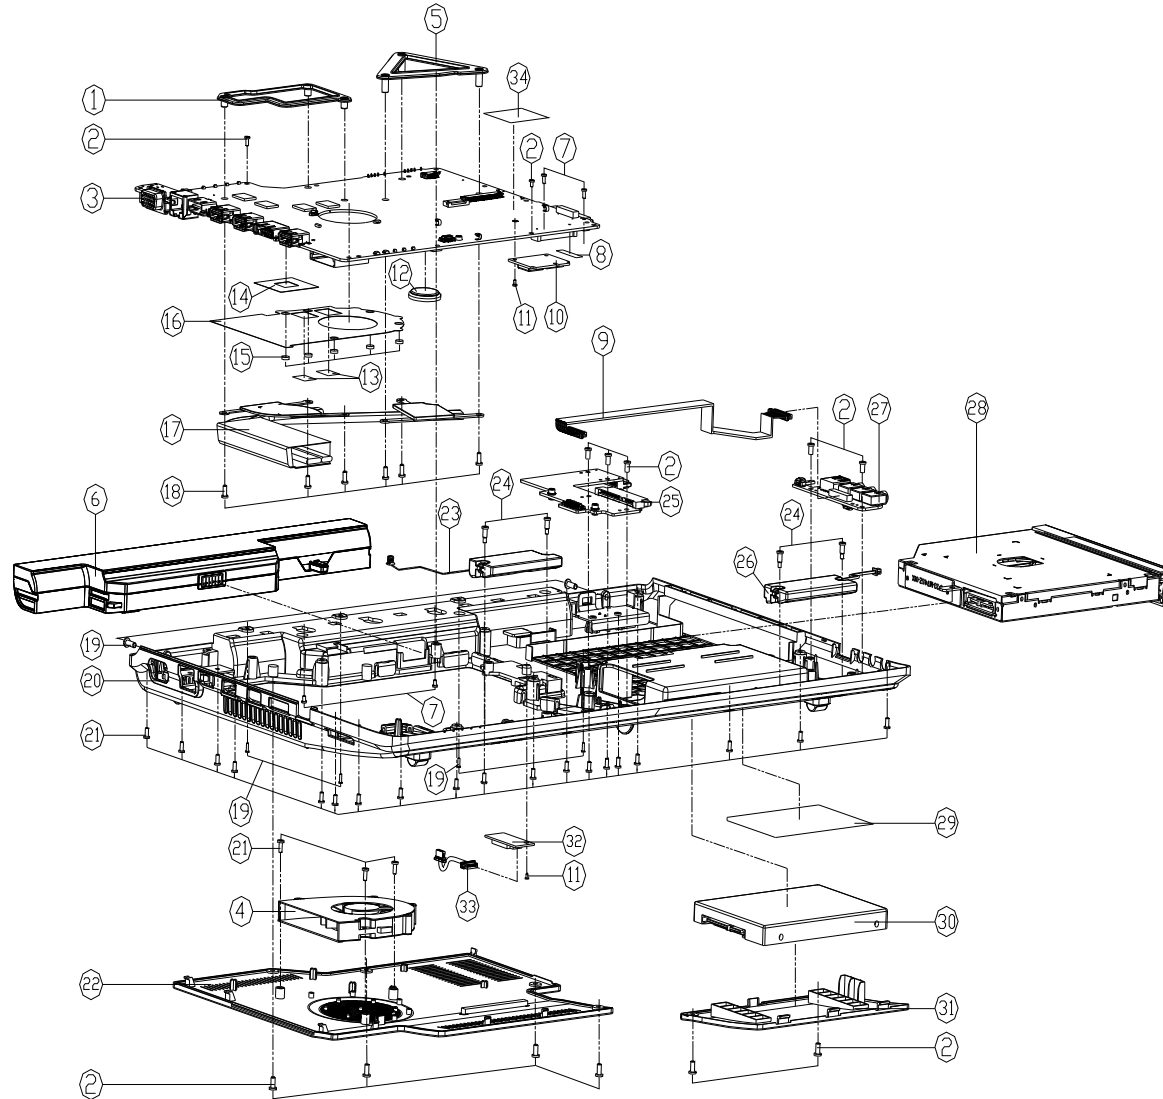

ITEM	PART NAME	PART NO	REMARK
1	VGA SUPPORTER SECC B4100MCANCEL RIB	6-33-B41MS-022	
2	SCREW M2.5x4L KI BK/D ICT NY	6-35-B4125-4RA	
3	MAIN BOARD V4.0A (W/USB 3.0) B7110	6-77-B7110-D04A	
3	MAIN BOARD V4.0A (W/D USB 3.0) B7110	6-77-B7110-D04A-1	
3	MAIN BOARD V2.0V/D USB 3.0 (6-PI-KEY-NO) B710	6-77-B7130-D02	
3	MAIN BOARD V2.0V/D USB 3.0 (6-PI-KEY-NO) B710	6-77-B7130-D02-1	
4	FAN MODULE B4100MP DESIGN CHANGE	6-31-B41MS-104	
5	CPU SUPPORTER SECC B4100M	6-33-B41MS-011	
6	MP S11 (11.5x11.5x1.5) 22P 30V0V 9000V T (CAN)	6-87-C480S-4P42	(OPT ION)
6	MP S11 (11.5x11.5x1.5) 22P 30V0V 9000V T (CAN)	6-87-E412S-4D7	(OPT ION)
7	SCREW M2x4L KI BZ ICT NY	6-35-B6120-4RA	
8	W/MAX MYLAR 31.8x6.6x0.2T B7110	6-40-B7112-040	
9	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-43-B7110-041	
10	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-88-M77C2-4220	(OPT ION)
10	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-88-M77C2-4210	(OPT ION)
10	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-88-W76C2-8702	(OPT ION)
10	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-88-W76C2-7001	(OPT ION)
10	W/MPT COMB CASTLEK RFL(BR)CBF-0195	6-88-C555F-5300	(OPT ION)
10	W/MPT COMB ADREXAVE AN-0182H(BR)218	6-88-C555F-7001	(OPT ION)
11	W/KEY SCREW M2x4L KI NI ICT GY-PATCH	6-35-B1120-3RE	
12	BATTERY 3V 210MA CR2032 (MITSUBISHI)	6-23-62015-607	
13	THERMAL PAD FOR W/D V4.0 (1.5x1.5x0.2) B4100	6-48-B41MS-011	
14	VGA CHIP MYLAR 31.8x6.6x0.2T B7110	6-40-M860S-090	
15	LCD FRONT COVER RUBBER SILICON (D-45MM)	6-47-W76S1-030	
16	MYLAR FOR FAN THERMAL MYLAR-153A 492 B710	6-40-B711S-010	
17	HEAT SINK B4100M (CVT MODIFY)	6-31-B41MN-013	
18	SCREW M2.5x5L KI BK/Z ICT NY	6-35-B6125-5RA	
19	SCREW M2x8L KI BK/Z ICT NY	6-35-B6120-8R0	
20	BOTTOM CASE MODULE ( MP ) FOR B7110	6-39-B7113-012	
21	SCREW M2.5x6L K BZ ICT NY	6-35-B2125-6RA	
22	CPU COVER MODULE ( MP ) FOR B7110	6-42-B7113-102	
23	SPRINGERABLE TSM 15W 81 (16-16.16-1) 1 B710	6-23-5B711-011	
24	(MP) SCREW FOR SPEAKER M2 D700T	6-35-Z0220-000	
25	ODD BRIDGE BOARD V2.0 B7110	6-77-B711N-D02	
26	SPRINGERABLE TSM 15W 81 (16-16.16-1) 1 B710	6-23-5B711-021	
27	PHONE JACK & USB BOARD V1.0 B7110	6-77-B711A-D01	
28	SATA DVD SUPER MULTI ASSY (OPT ION)	6-79-B711000-000	
28	SATA BLU-RAY COMB ASSY (OPT ION)	6-79-B711000W-010	
28	W/D ODD ASSY (OPT ION)	6-79-B711000Z-000	
29	PRODUCT LABEL B7110	6-45-B7110003-010	
29	PRODUCT LABEL FOR B7130	6-45-B7130003-010	
30	W/D HDD ASSY B7110	6-79-B711000J-010	
30	W/HDD ASSY B7110	6-79-B711000J-020	
31	HDD COVER ( MP ) FOR B7110	6-42-B711J-010	
32	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-88-M731S-3901	
32	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-88-M77C5-5300	
33	W/CABLE FOR W/D (1.5x1.5x1.5) 22P 30V0V 9000V T (CAN)	6-43-M745B-010	
34	W/D ODD MYLAR 20x20x0.15 (1.5x1.5x0.15) 22P 30V0V 9000V T (CAN)	6-40-C450S-030	

HDD


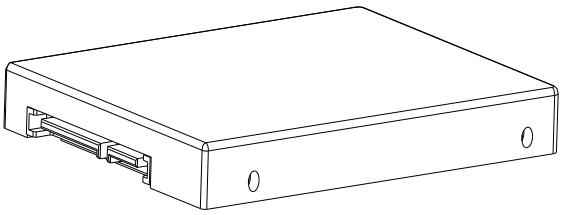


Figure A - 3  
HDD


ITEM	PART NAME	PART NO	REMARK
1	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	
2	HDD MYLAR (PET+CR) C4500	6-40-C450J-010	

A.Part Lists

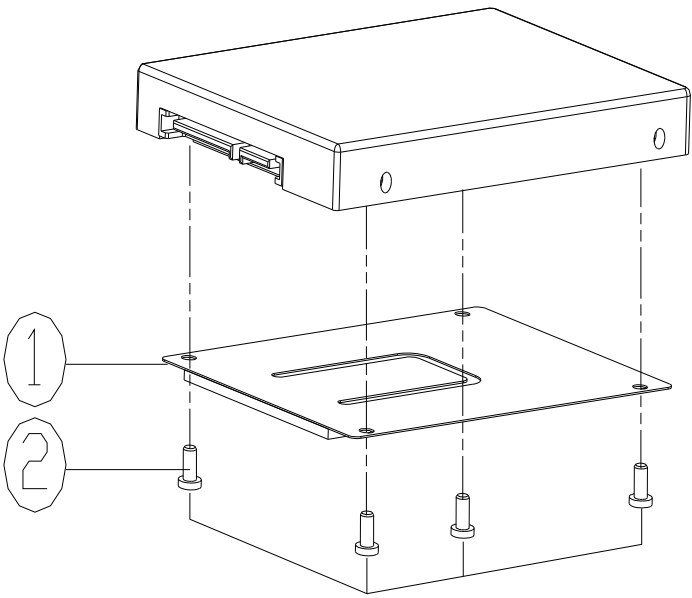

# LCD

Figure A - 4  
LCD

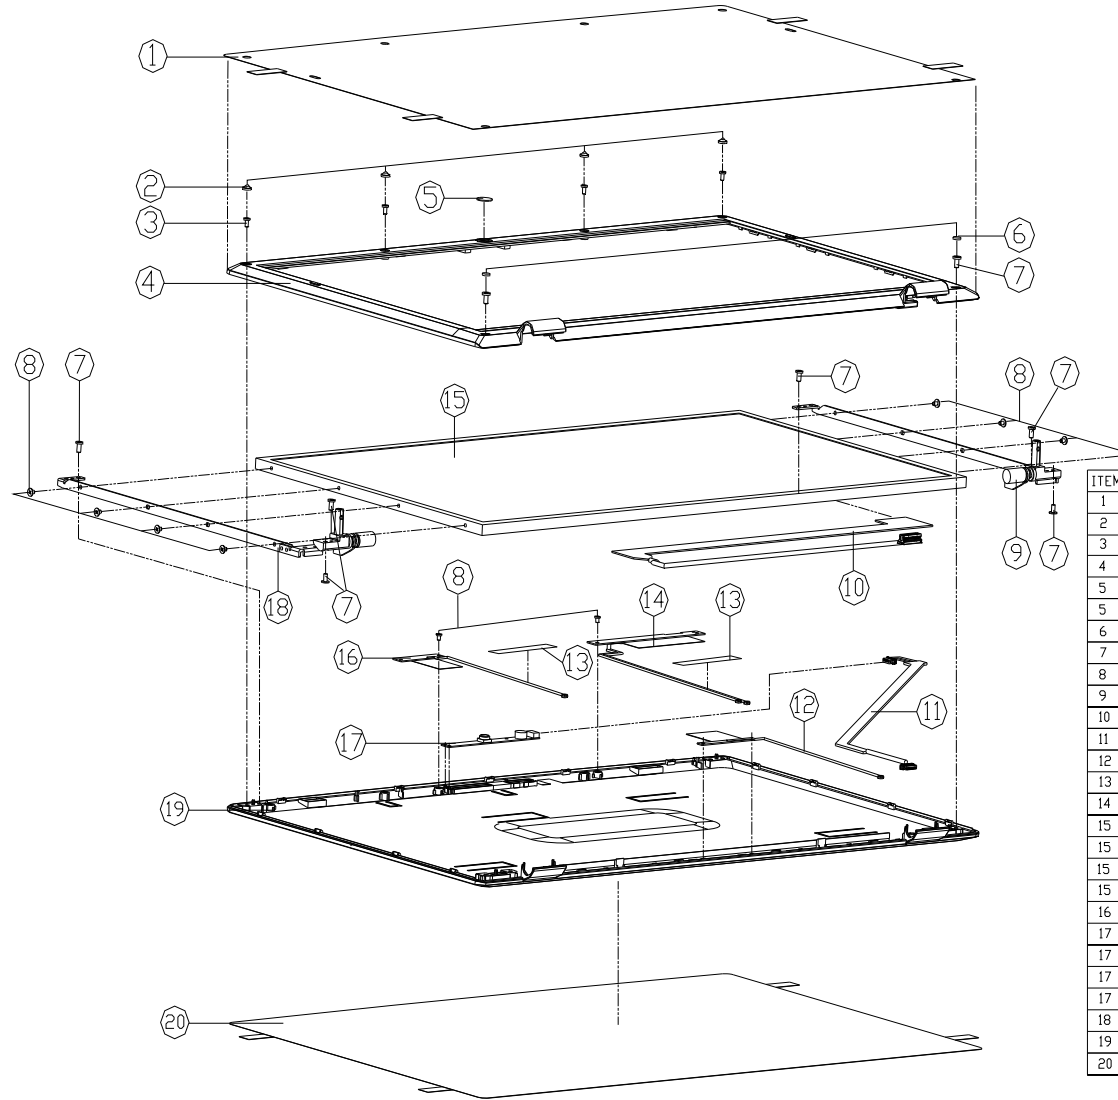

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT CASE PROTECT MYLAR PET B7110	6-40-B7118-012	
2	FRONT COVER RUBBER SILICON 60 B7110	6-47-B7111-032	
3	SCREW M2.5*L K1CT-08 D=4.0 BK/Z ICT NY	6-35-B6120-5R0	
4	LCD FRONT COVER MODULE B7110	6-39-B7111-012	
5	CCD-RING PC(PVT) B7110	6-42-B7111-011	OPTION
5	W/D CCD LENS PC B7110	6-42-B7111-020	OPTION
6	FRONT RUBBER (0.5*1-115) SILICON 60(PVT) B7110	6-47-B7111-021	
7	SCREW M2.5*L K1 BK/Z ICT NY-	6-35-B6125-5RA	
8	SCREW M2.5*L K1 BK/Z ICT NY- G1Y-PATCH	6-35-B1120-3RE	
9	HINGE R (SECC+SK7) (PVT) B7110	6-33-B7111-011	
10	WIRE CABLE FOR CCD L: 140MM W: 3MM (4L) B7110	6-43-B7111-011	
11	WIRE CABLE FOR CCD L: 140MM W: 3MM (4L) B7110	6-43-B7111-011	
12	MYLAR BLUE TYPIC BY PER 40MM 24L: 30MM STRONGER BLUE M3	6-23-7B710-042	
13	TAPE MYLAR (B) MYLAR M550J	6-40-M55J2-020	
14	MYLAR BLUE TYPIC BY PER 40MM 24L: 30MM STRONGER BLUE M3	6-23-7B710-022	
15	LCD 17.3" FHD WANGSHIAR K00730V1-A GLARE TYPE LED 50MM	6-50-NB258-N00	OPTION
15	LCD 17.3" HD LG LP17301T-FLA GLARE TYPE LED 50MM	6-50-NA160-L00	OPTION
15	LCD 17.3" HD CHAMEI M7306-LR2 GLARE TYPE LED 50MM	6-50-NA158-D00	OPTION
15	LCD 17.3" HD SAMSUNG LTN173K101-101 LED 50MM	6-50-NA158-M01	OPTION
16	MYLAR MYLAR TYPIC BY PER 40MM 24L: 30MM STRONGER BLUE M3	6-23-7B710-031	
17	UV-CAMERA CHECKING FIX CNP985200920L 1.3M DV365 M7410	6-88-M74TC-5102	OPTION
17	UV-CAMERA BISSON FIX CNP985200920L 1.3M DV365 M7410	6-88-M810C-4911	OPTION
17	UV-CAMERA BISSON FIX CNP985200920L 1.3M DV365 M7410	6-88-W76SC-4900	OPTION
17	UV-CAMERA CHECKING FIX CNP985 300K DV1675 M1100	6-88-M110C-5100	OPTION
18	HINGE L (SECC+SK7) B7110	6-33-B7111-021	
19	LCD BACK COVER MODULE B7110	6-39-B7111-022	
20	LCD BACK CASE PROTECT MYLAR PET B7110	6-40-B7111-012	

## SATA DVD Super-Multi




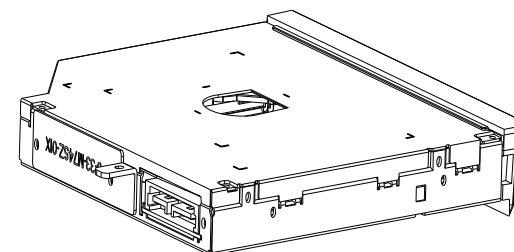


Figure A - 5  
SATA DVD Super-  
Multi

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2X3L KI NI ICT GY-PATCH	6-35-B1120-3RE	
2	CD ROM BRACKET SECC M740S	6-33-M74SZ-012	
3	SATA DVD SUPER MULTI 5 VP IN 22MM SLIDING FOR DVD-A VIDEO HARDWARE SUPPORT USE	6-85-A078X-T09	FDR TSST
3	SATA DVD SUPER MULTI 5 VP IN 22MM SLIDING FOR DVD-A VIDEO HARDWARE SUPPORT HLDS	6-85-A078X-506	FDR HLDS
4	DVD BEZEL MODULE ( MP ) FDR B7110	6-42-B711V-102	
5	SUPER MULTI ODD BEZEL LABEL (SIZE CHANGE)	6-45-W8600-011	

## SATA Blu-Ray Combo

Figure A - 6  
SATA Blu-Ray  
Combo

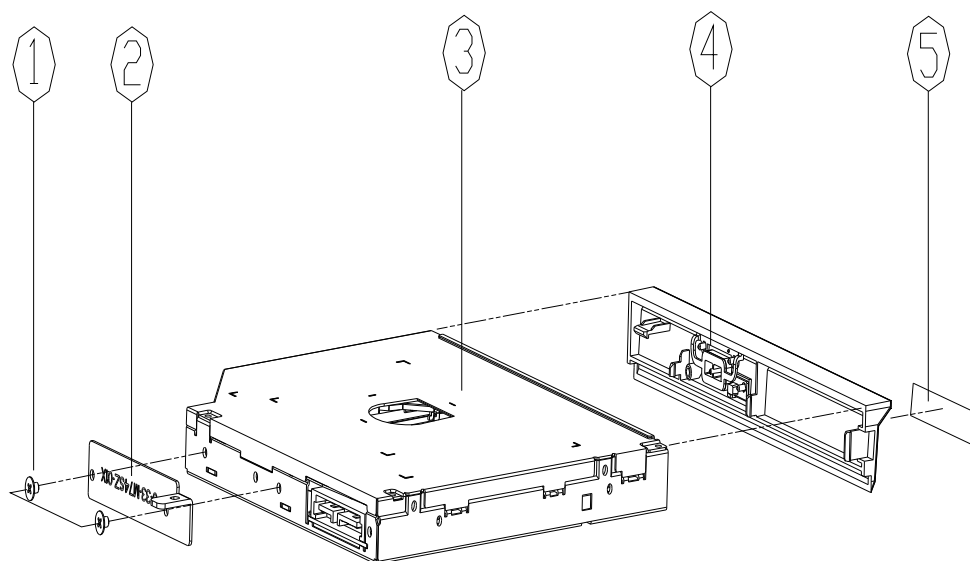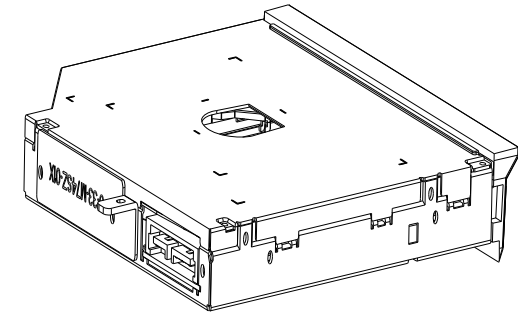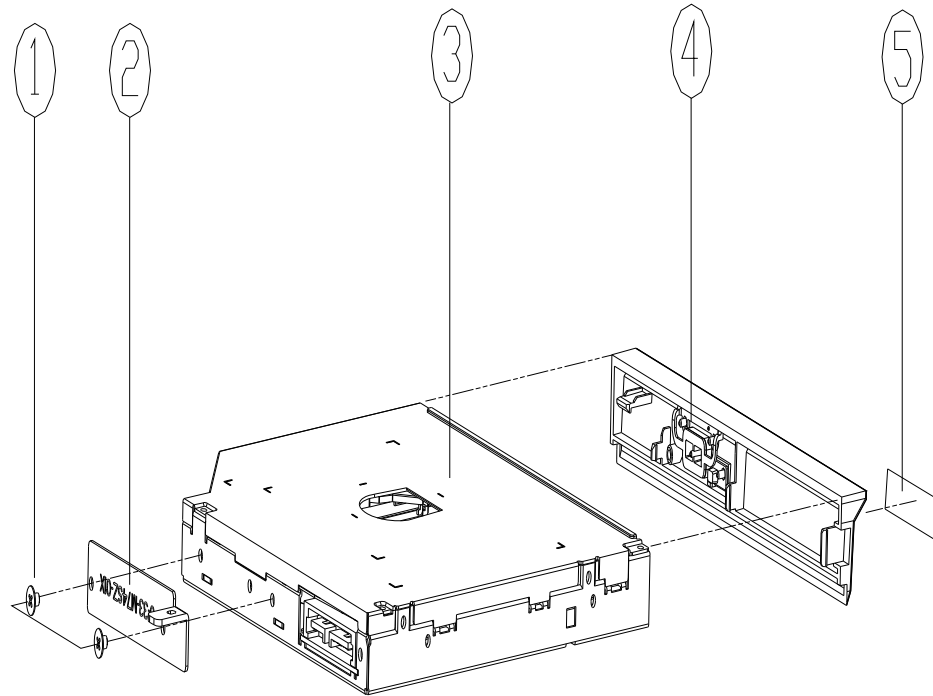

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2x3L KI NI ICT GY-PATCH	6-35-B1120-3RE	
2	CD ROM BRACKET SECC M740S	6-33-M74SZ-012	
3	SATA BLU-RAY COMBO 5.25" SL 12MM CD/DVD ROM VDR FOR VDRDS / SUPPDR HDLS	6-85-B076X-P10	FOR HLDS
4	DVD BEZEL MODULE ( MP ) FOR B7110	6-42-B711V-102	
5	BLU-RAY ODD BEZEL LABEL (SIZE CHANGE) W860CU	6-45-W860W-011	

# Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the **B7130** notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>IBEXPEAK- M 1/9 - Page B - 20</i>	<i>5VS, 3.3VS, 1.5VS, VIN1 - Page B - 38</i>
<i>Clock Generator - Page B - 3</i>	<i>IBEXPEAK - M 2/9 - Page B - 21</i>	<i>VDD3, VDD5 - Page B - 39</i>
<i>CPU 1/7 (DMI, PEG, FDI) - Page B - 4</i>	<i>IBEXPEAK - M 3/9 - Page B - 22</i>	<i>Power 1.8V, PEX_VDD - Page B - 40</i>
<i>CPU 2/7 (CLK, MISC, JTAG) - Page B - 5</i>	<i>IBEXPEAK - M 4/9 - Page B - 23</i>	<i>Power 1.5V/0.75V - Page B - 41</i>
<i>CPU 3/7 (DDR3) - Page B - 6</i>	<i>IBEXPEAK - M 5/9 - Page B - 24</i>	<i>Power 1.1VS_VTT - Page B - 42</i>
<i>CPU 4/7 (Power) - Page B - 7</i>	<i>IBEXPEAK - M 6/9 - Page B - 25</i>	<i>Power VGFX_Core - Page B - 43</i>
<i>CPU 5/7 (Graphics Power) - Page B - 8</i>	<i>IBEXPEAK - M 7/9 - Page B - 26</i>	<i>V-Core - Page B - 44</i>
<i>CPU 6/7 (GND) - Page B - 9</i>	<i>IBEXPEAK - M 8/9 - Page B - 27</i>	<i>Power VGA NVVDD - Page B - 45</i>
<i>CPU 7/7 (RESERVED) - Page B - 10</i>	<i>IBEXPEAK - M 9/9 - Page B - 28</i>	<i>AC_IN, Charger - Page B - 46</i>
<i>DDR3 SO-DIMM_0 - Page B - 11</i>	<i>New Card, Mini PCIE - Page B - 29</i>	<i>HDMI - Page B - 47</i>
<i>DDR3 SO-DIMM_1 - Page B - 12</i>	<i>3G, CCD, TPM - Page B - 30</i>	<i>Audio Board - Page B - 48</i>
<i>Panel, Inverter, CRT - Page B - 13</i>	<i>USB, Fan, TP, FP, Multi-Conn - Page B - 31</i>	<i>B7110 Second HDD Board - Page B - 49</i>
<i>VGA PCI-E Interface - Page B - 14</i>	<i>USB 3.0 - Page B - 32</i>	<i>B7110 Click Board - Page B - 50</i>
<i>VGA Frame Buffer Interface - Page B - 15</i>	<i>JMC 251 Card Reader - Page B - 33</i>	<i>B7110 Power Switch Board - Page B - 51</i>
<i>VGA Frame Buffer A - Page B - 16</i>	<i>SATA ODD, LED, Hotkey, LID SW - Page B - 34</i>	<i>B7130 LED &amp; VGA SW Board - Page B - 52</i>
<i>VGA Frame Buffer C - Page B - 17</i>	<i>RJ45, Modem - Page B - 35</i>	<i>B7110 K/B Switch Board - Page B - 53</i>
<i>VGA I/O - Page B - 18</i>	<i>Audio Codec (VIA1812) - Page B - 36</i>	<i>Sequence - Page B - 54</i>
<i>VGA NVVDD Cecoupling - Page B - 19</i>	<i>KBC-ITE IT8518 - Page B - 37</i>	

*Table B - 1*  
**SCHEMATIC  
DIAGRAMS**




### Version Note

The schematic diagrams in this chapter are based upon version 6-7P-B7137-001. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).


# System Block Diagram

Sheet 1 of 53  
System Block  
Diagram

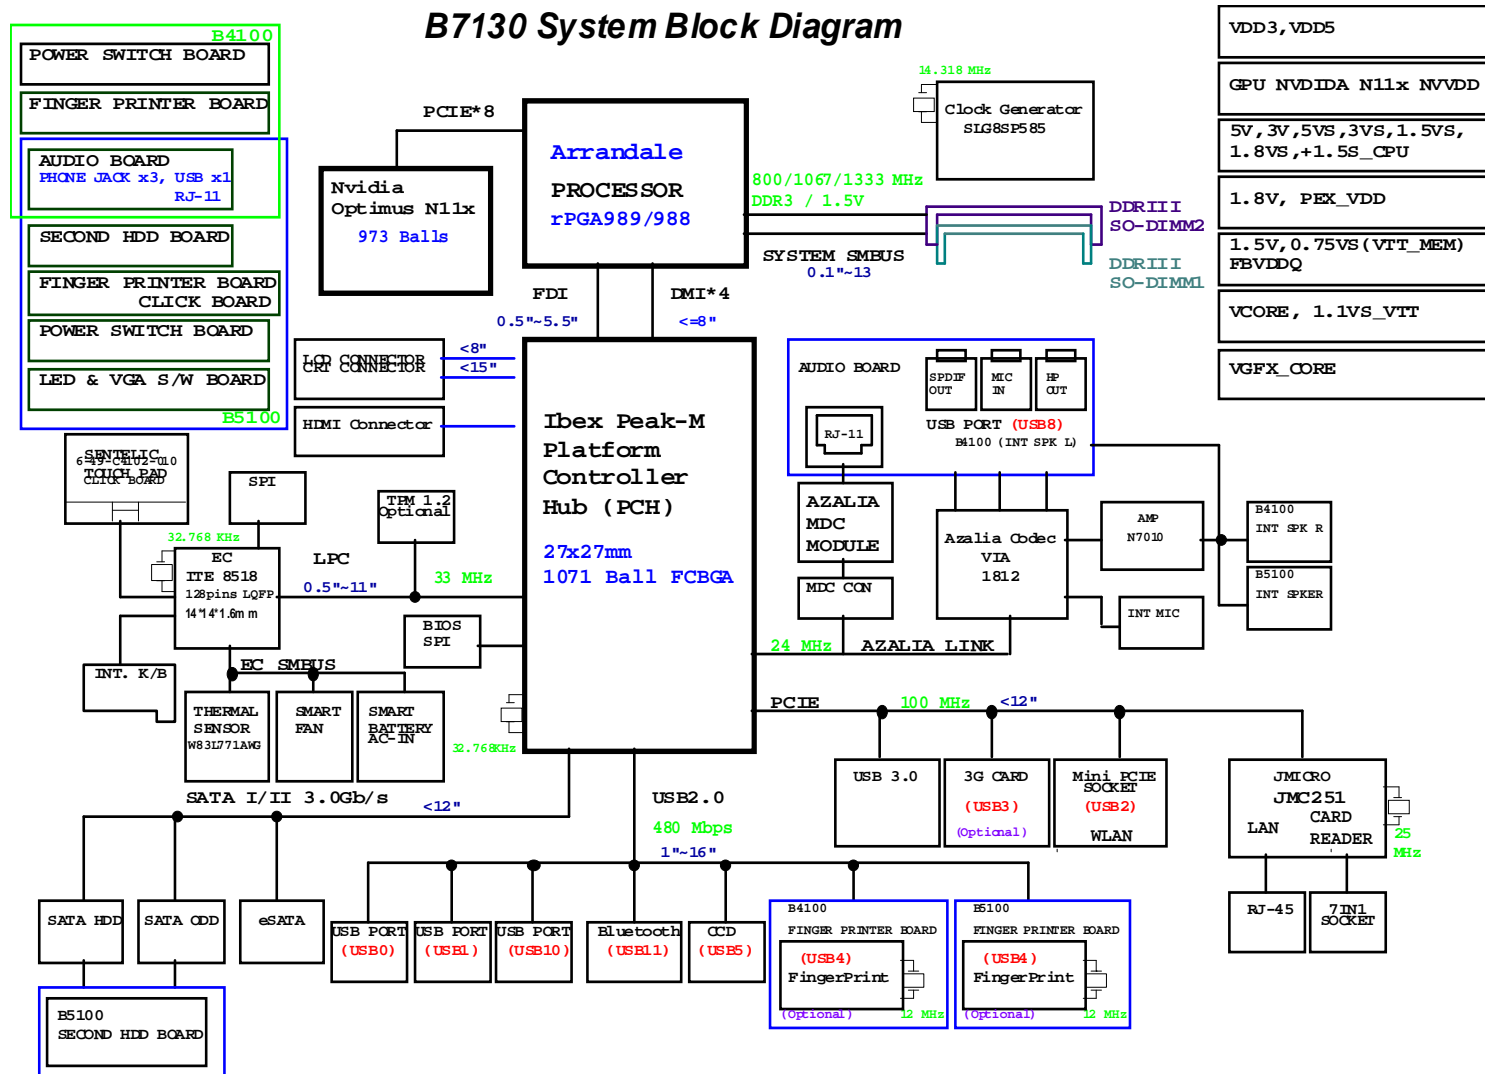


# Clock Generator


## CLOCK GENERATOR

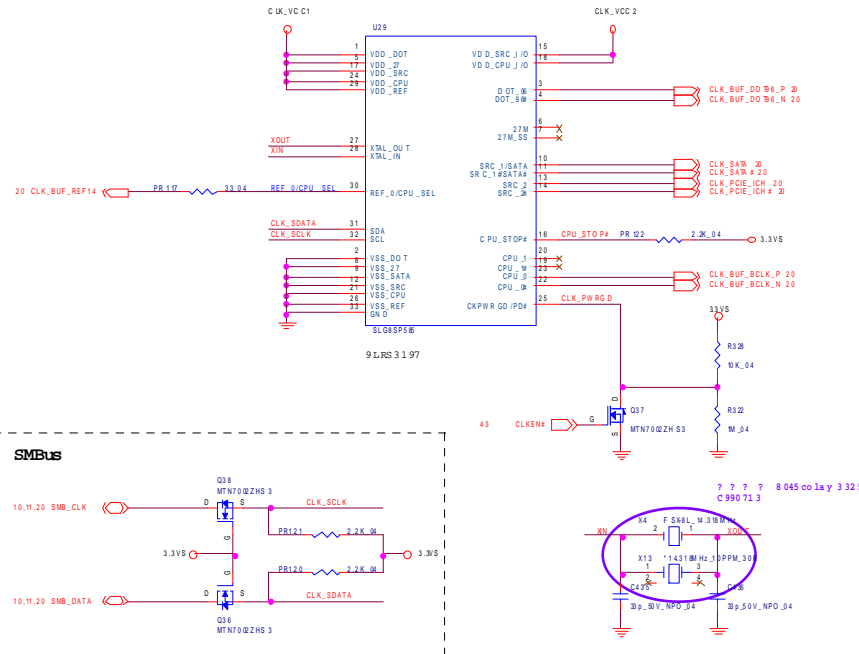

### SMBus

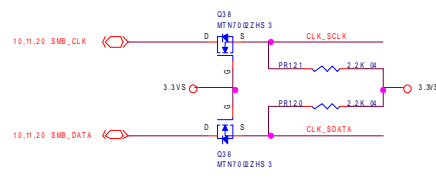


### CPU\_SEL\_During CK\_PWRGD Latch Pin1




FIN_30	CPU_0	CPU_1
0 (default)	133MHz	133MHz
1 (0.7V-1.5V)	100MHz	100MHz

## CLKGEN POWER



0.1uF near the every power pin



0.1uF near the every power pin

### EMI




3.3VS 10,11,12,13,19,20,21,22,23,24,25,26,28,29,30,31,32,33,35,36,37,42,43,46  
1.1VS\_VT 4,6,7,19,20,21,24,25,26,33,41,42,46

Sheet 2 of 53  
Clock Generator





# CPU 2/7 (CLK, MISC, JTAG)

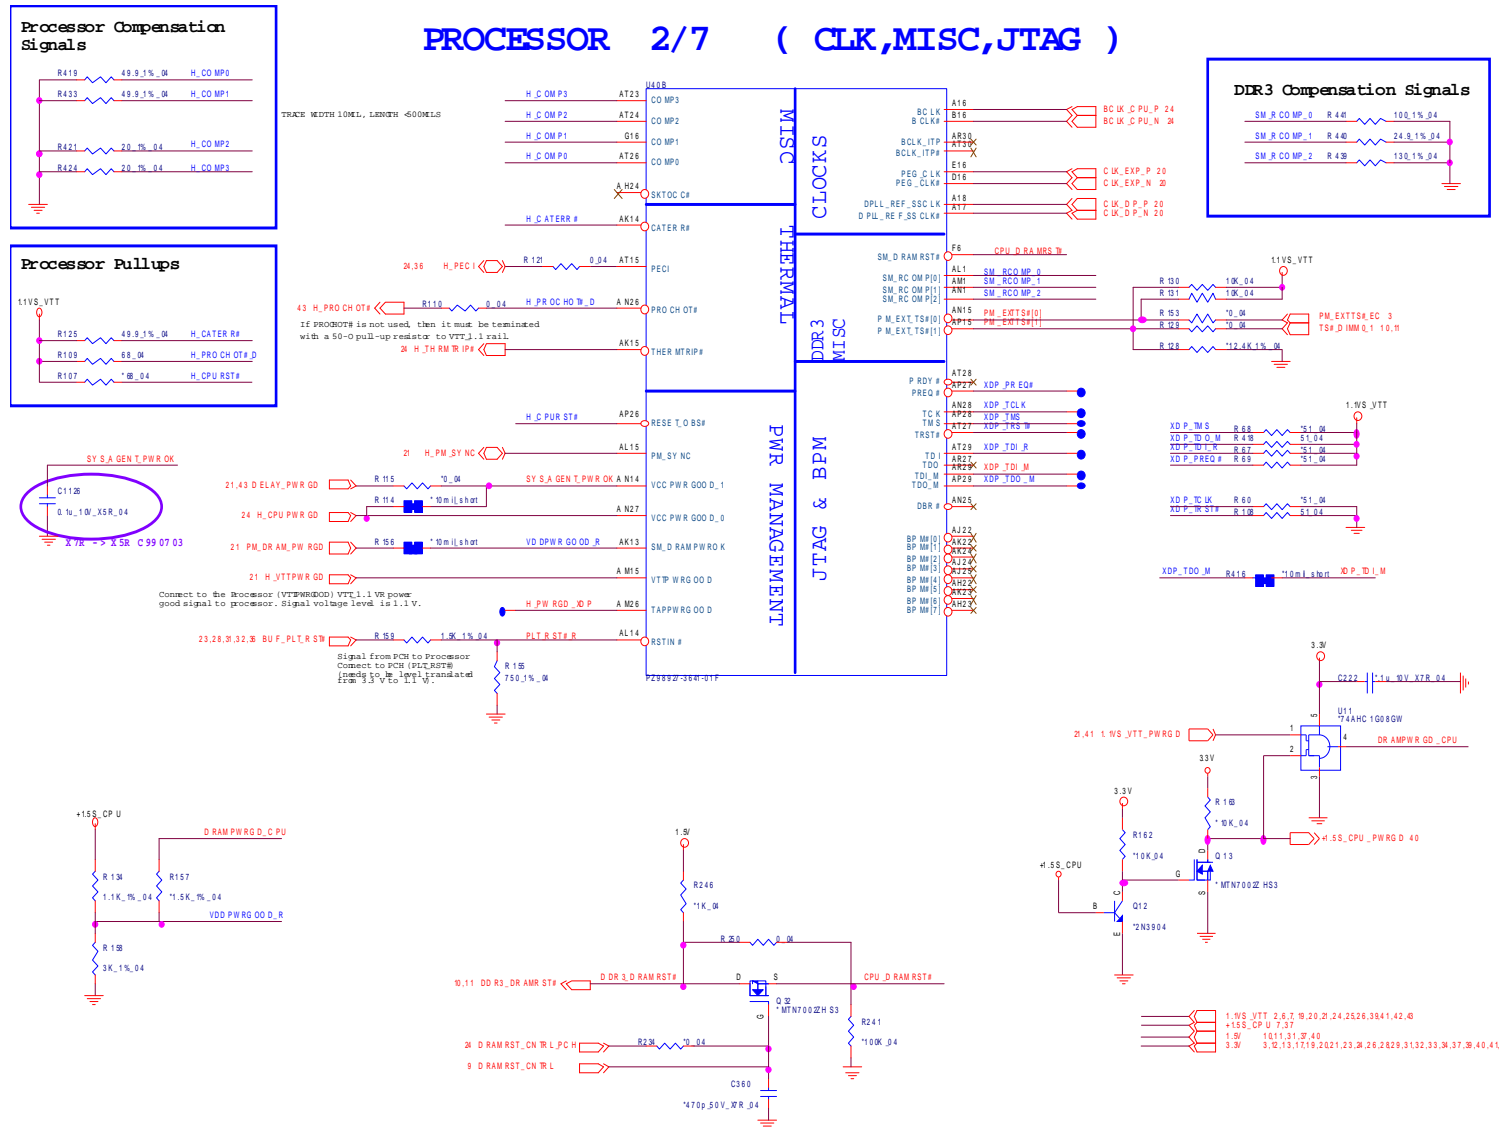


Sheet 4 of 53  
CPU 2/7  
(CLK, MISC, JTAG)

B. Schematic Diagrams



# CPU 4/7 (Power)

## PROCESSOR 4/7 ( POWER )

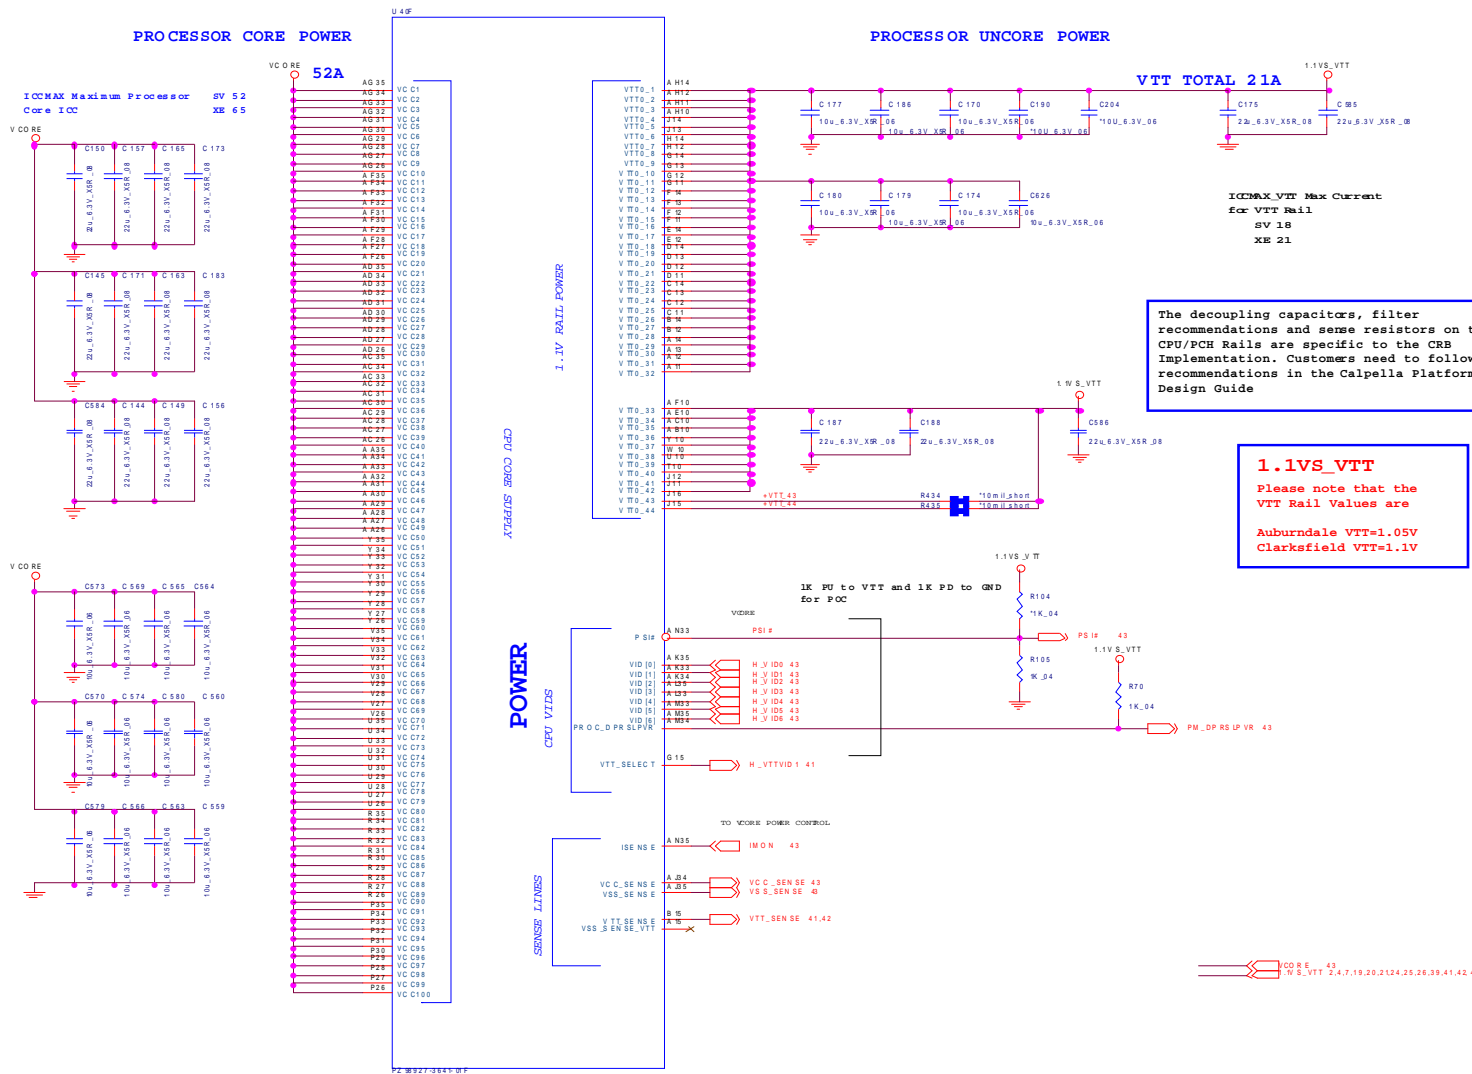

Sheet 6 of 53  
CPU 4/7  
(Power)


B.Schematic Diagrams

# CPU 5/7 (Graphics Power)

## PROCESSOR 5/7 ( GRAPHICS POWER )


Sheet 7 of 53  
CPU 5/7  
(Graphics Power)

Please note that the VTT Rail Values are  
Auburndale VTT=1.05V  
Clarksfield VTT=1.1V

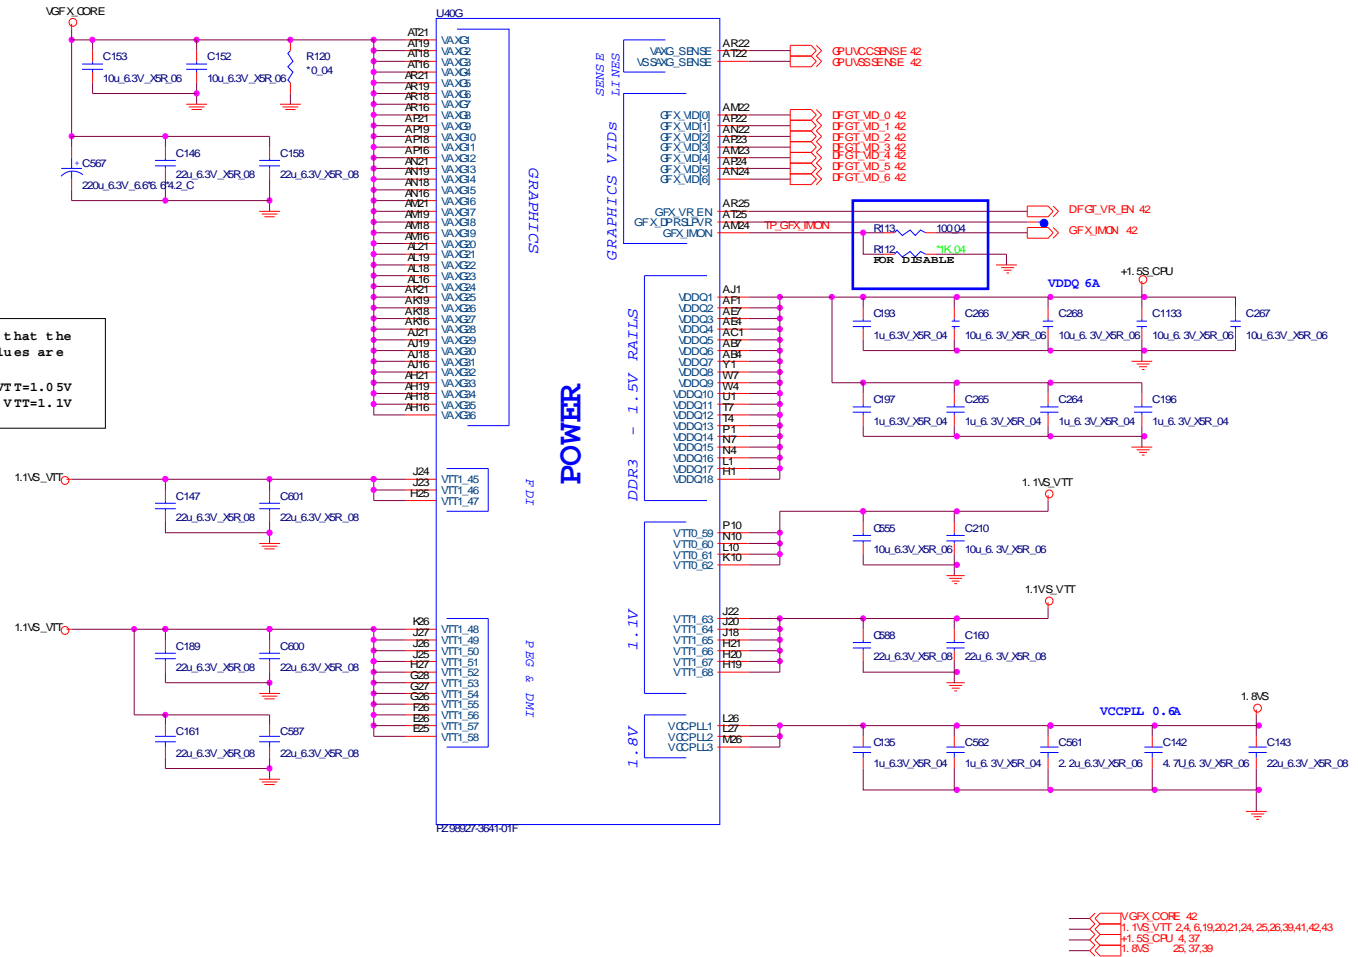

# CPU 6/7 (GND)

## PROCESSOR 6/7 ( GND )

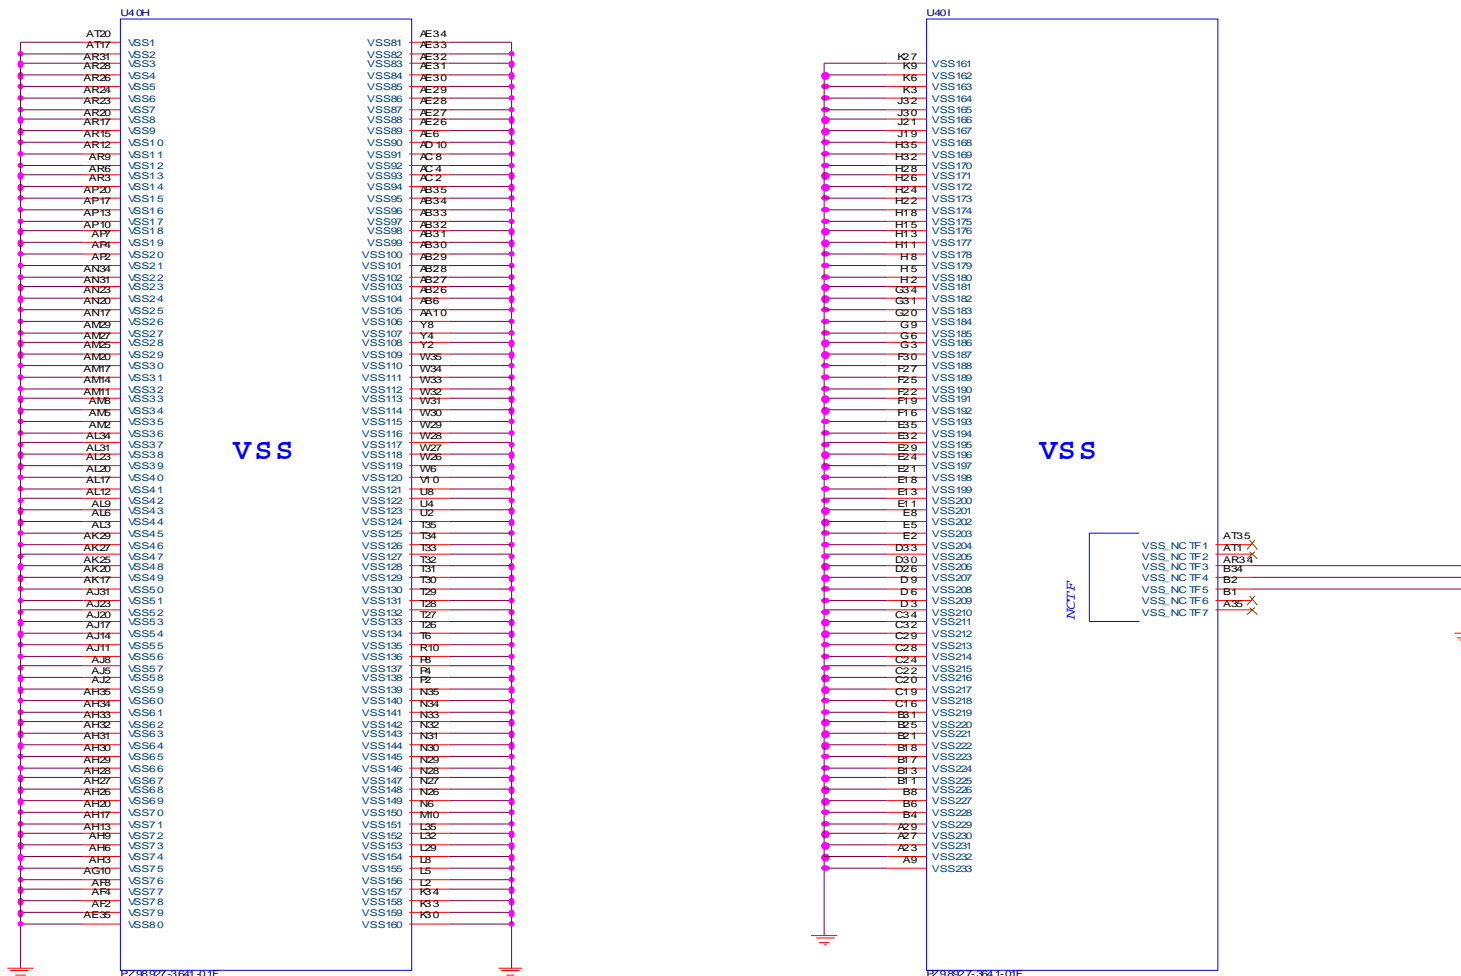

Sheet 8 of 53  
CPU 6/7 (GND)

B. Schematic Diagrams




# CPU 7/7 (RESERVED)


## PROCESSOR 7/7 ( RESERVED )

Sheet 9 of 53  
CPU 7/7  
(RESERVED)


PCI-Express Configuration Select	
CFG0	1 : Single BFG 0 : Bifurcation enable




CFG3 - PCI-Express Static Lane Reversal	
CFG3	1 : Normal Operation 0 : Lane Numbers Reversed 15 -> 0, 14 -> 1, ...



CFG4 - Display Port Presence	
CFG4	1 : Disabled; No physical Display Port attached to Embedded Display Port 0 : Enabled; An external Display Port device is connected to the Embedded Display Port



CFG7  
Clarksfield (only for early samples pre-ES1) - Connect to GND with 3.01K Ohm/5% resistor

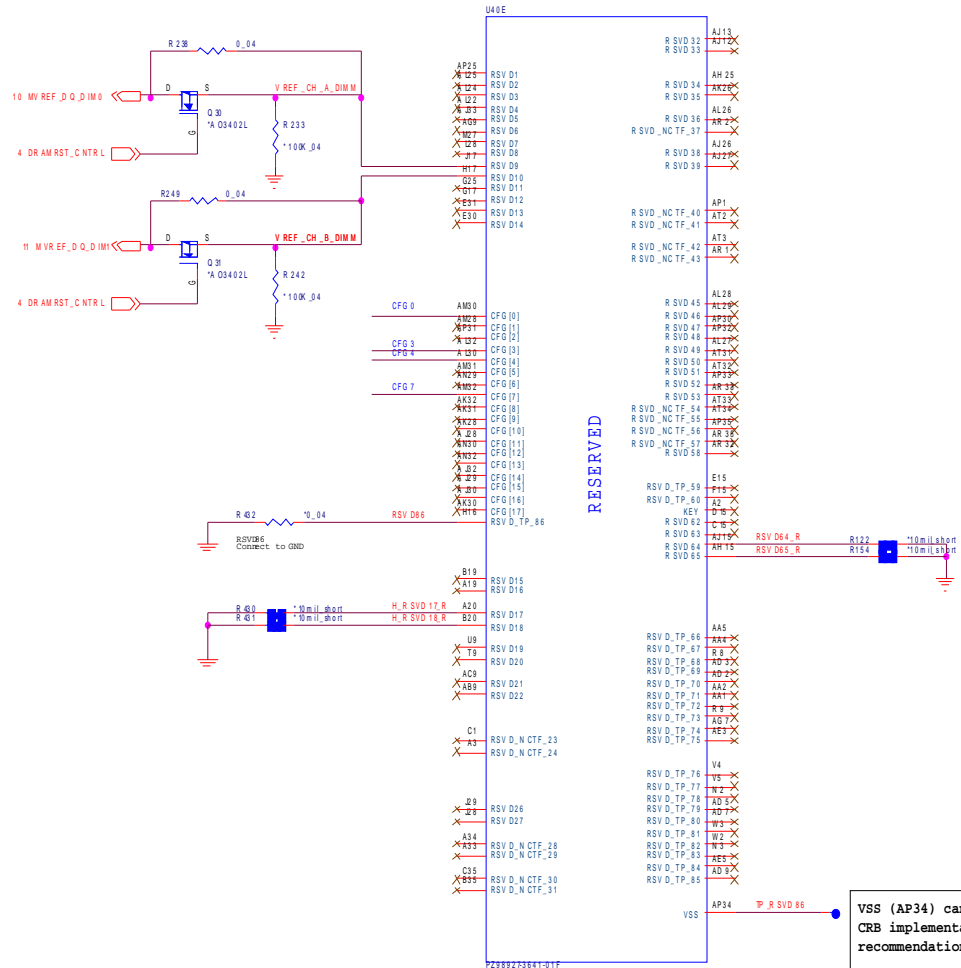

















# VGA Frame Buffer C

## Frame Buffer Partition C

- 14 RBC\_CMD10 (RBC\_CMD10)
- 14 FBC\_D16 (FBC\_D16)
- 4 FBC\_CMD17 (FBC\_CMD17)
- 4 FBC\_D15 (FBC\_D15)
- 4 FBC\_D15 (FBC\_D15)
- 4 FBC\_D15 (FBC\_D15)


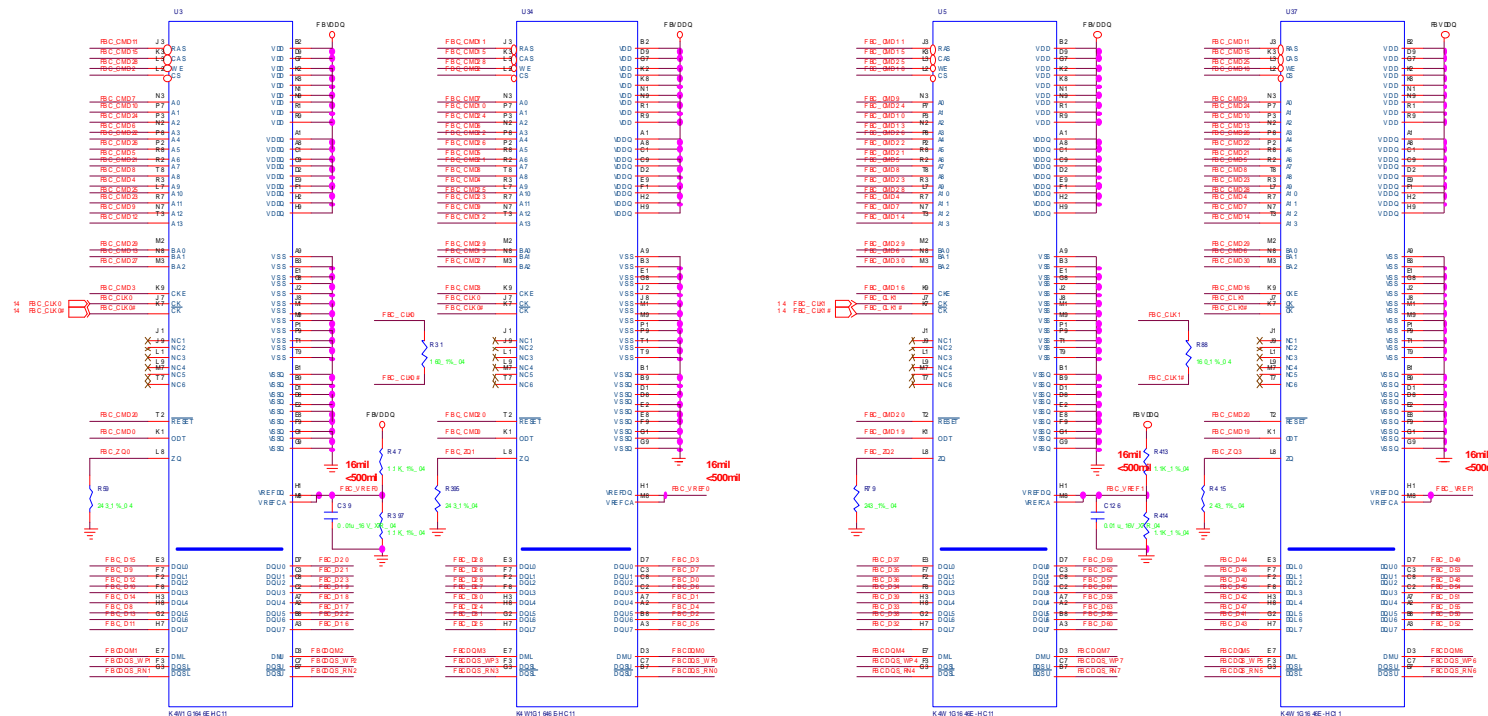



Sheet 16 of 53  
VGA Frame Buffer C

B.Schematic Diagrams



# VGA NVVDD Cecoupling

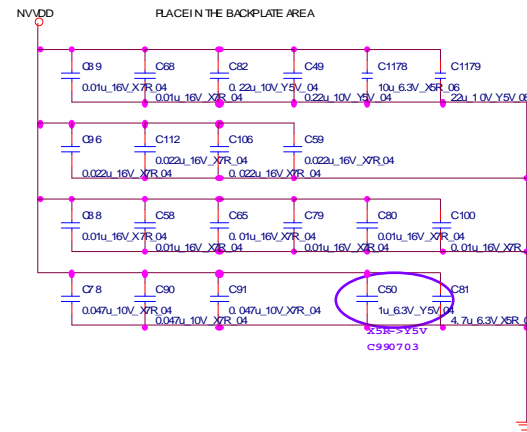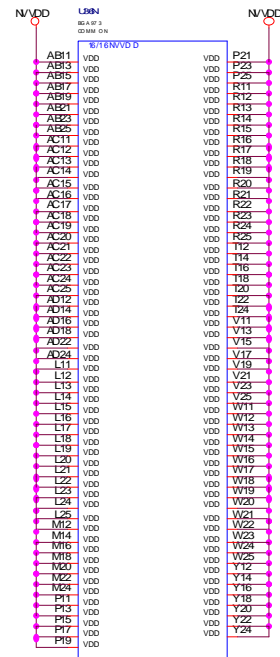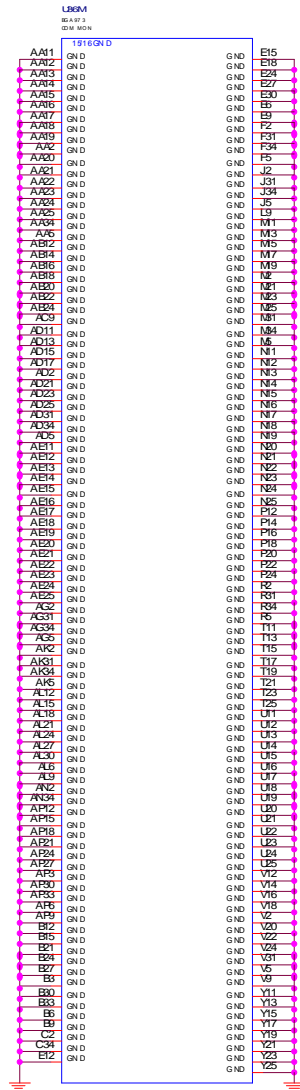

44 NVVDD


Sheet 18 of 53  
VGA NVVDD  
Cecoupling

B. Schematic Diagrams

# IBEXPEAK- M 1/9

## IBEXPEAK - M (HDA, JTAG, SATA)

Sheet 19 of 53  
IBEXPEAK - M 1/9

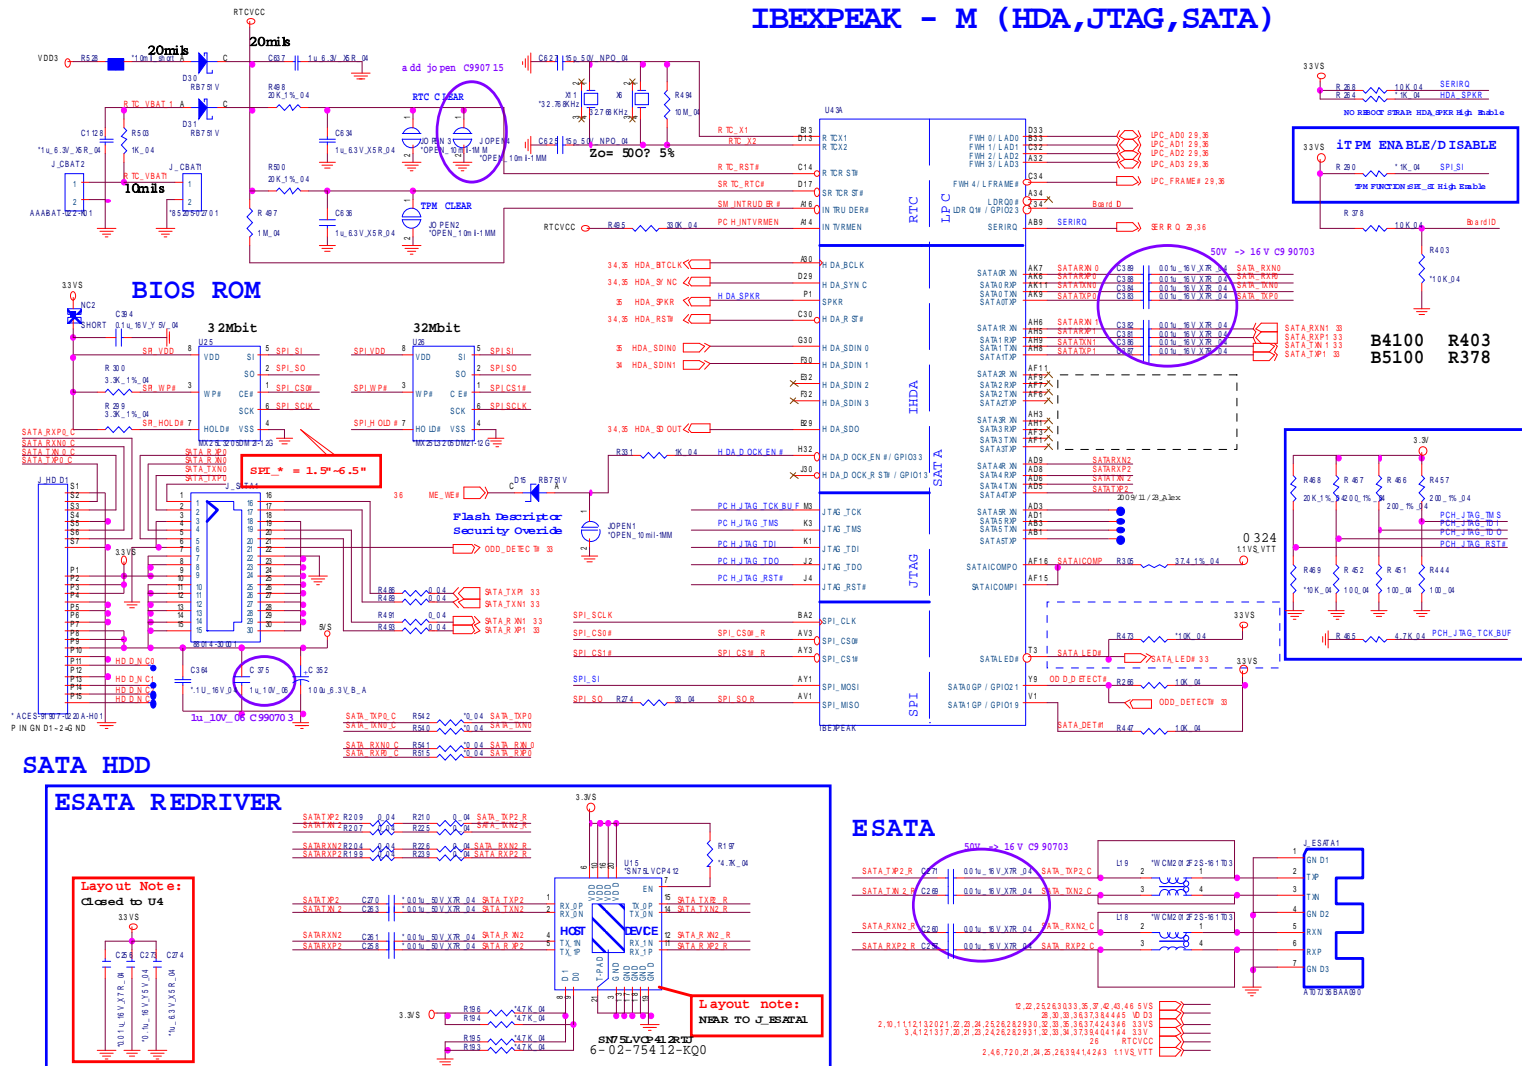








# IBEXPEAK - M 4/9

## IBEXPEAK - M (LVDS,DDI)

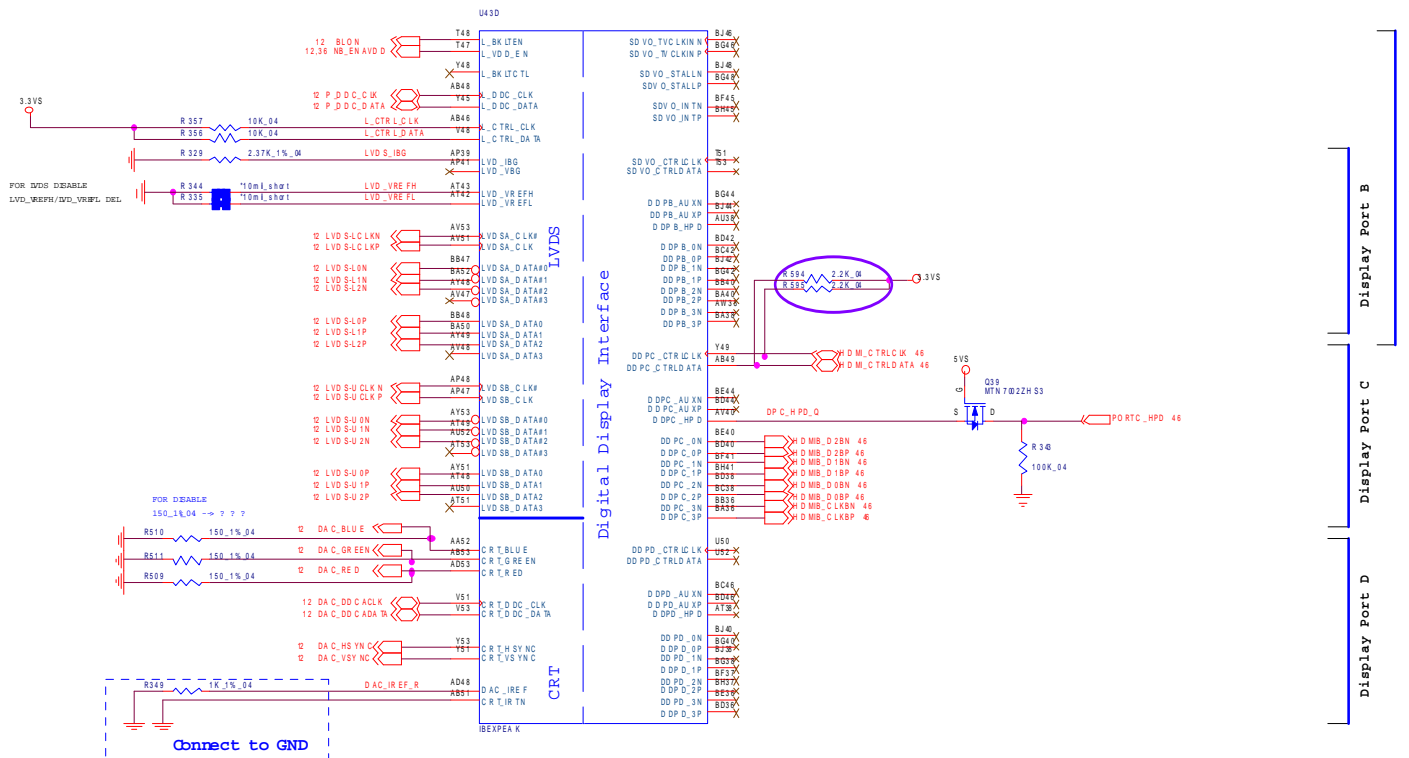




Sheet 22 of 53  
IBEXPEAK - M 4/9

B.Schematic Diagrams


1,2,9,25,26,30,31,35,37,42,43,46  
 2,70,11,12,13,18,20,21,23,24,28,29,29,30,32,33,35,36,37,42,43,46

# IBEXPEAK - M 5/9



Sheet 23 of 53  
IBEXPEAK - M 5/9

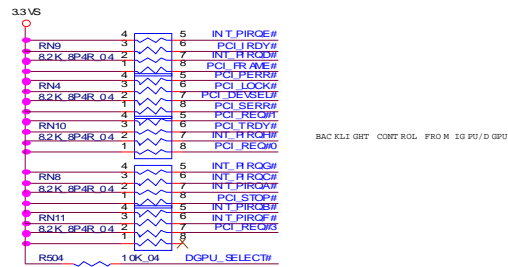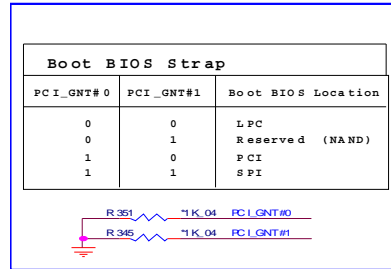

PIN PLT\_RST# to Buffer

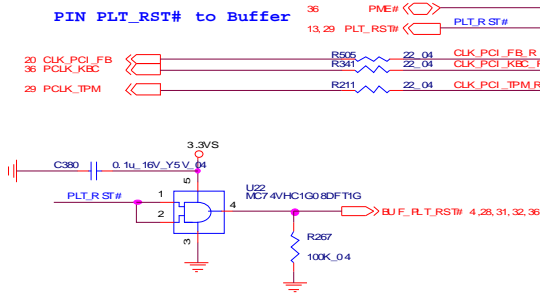


## IBEXPEAK - M (PCI,USB,NVRAM)

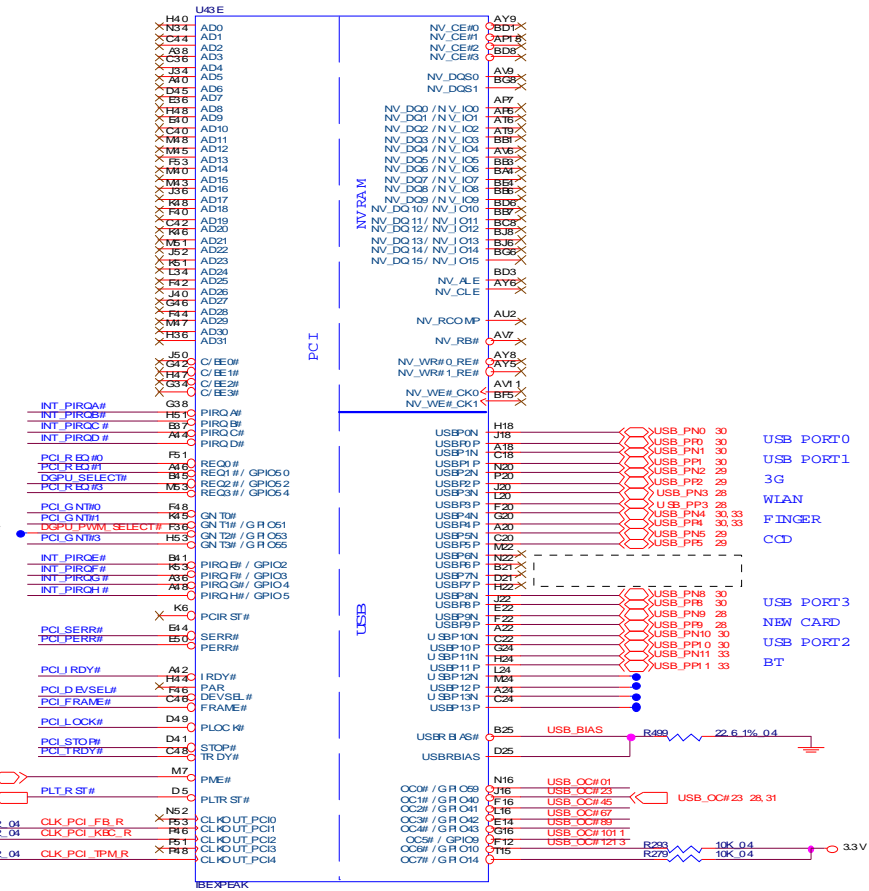

210,11,12,13,19,20,21,22,24,25,26,28,29,30,32,33,35,36,37,42,43,46 3.3V S  
3,4,12,13,17,19,20,21,24,25,26,28,29,31,32,33,34,37,39,40,41,44 3.3V

# IBEXPEAK - M 6/9

## IBEXPEAK - M (GPIO,VSS\_NCTF,RSVD)

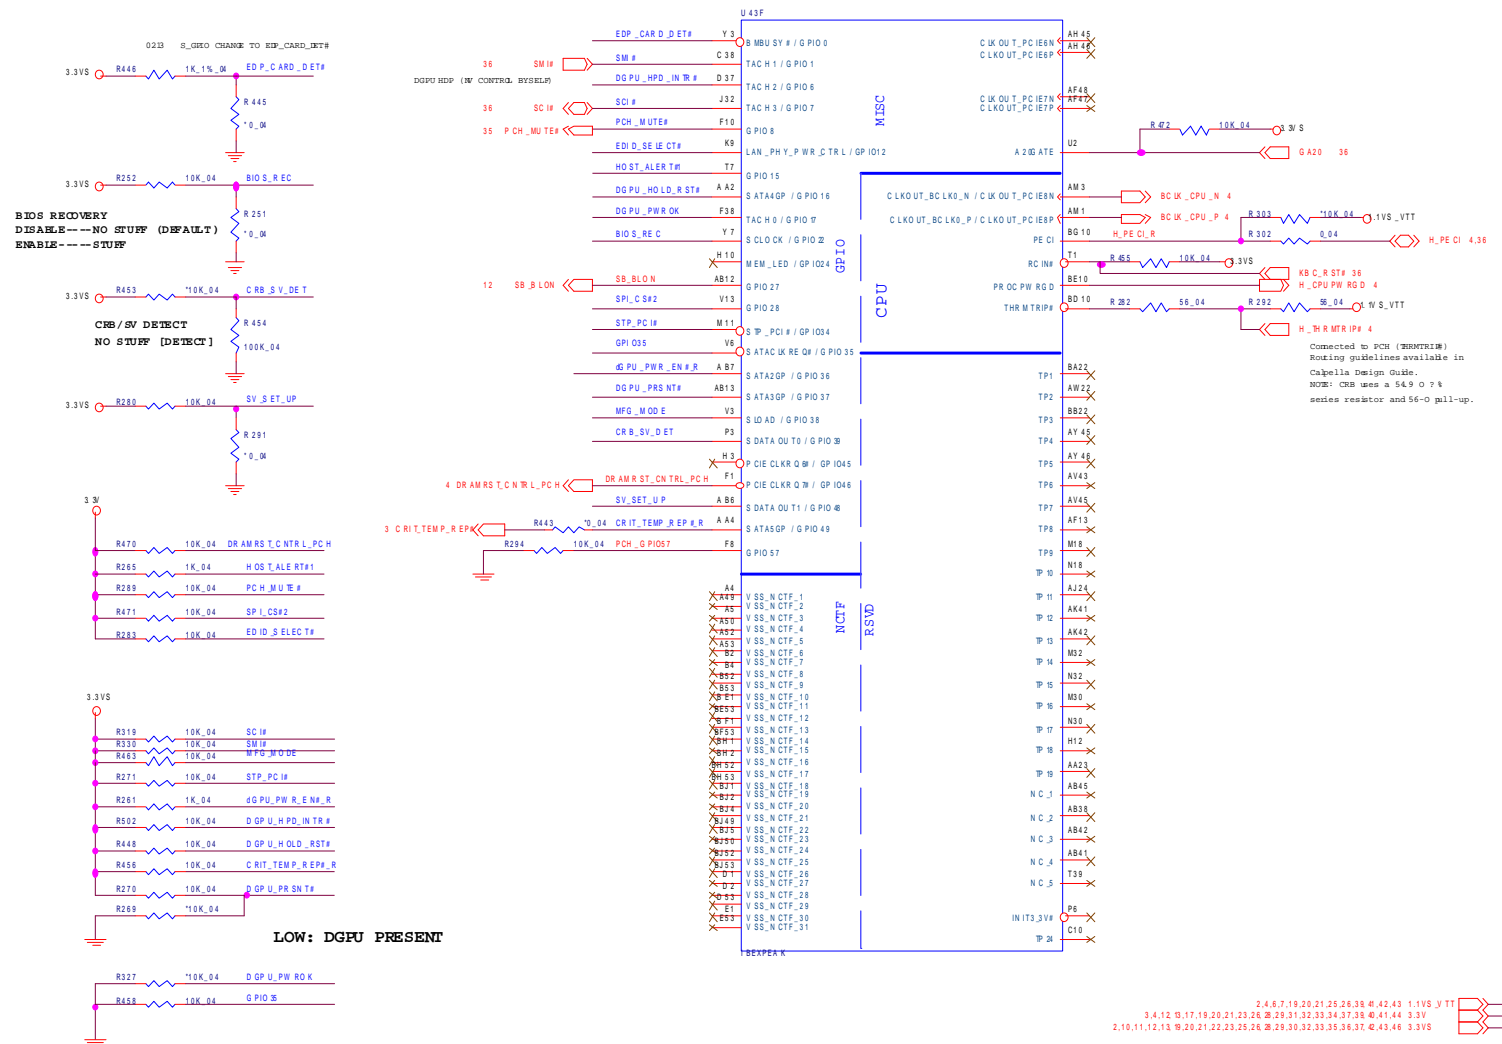

Sheet 24 of 53  
IBEXPEAK - M 6/9







# IBEXPEAK - M 9/9

## IBEXPEAK - M (GND)


B.Schematic Diagrams

Sheet 27 of 53  
IBEXPEAK - M 9/9

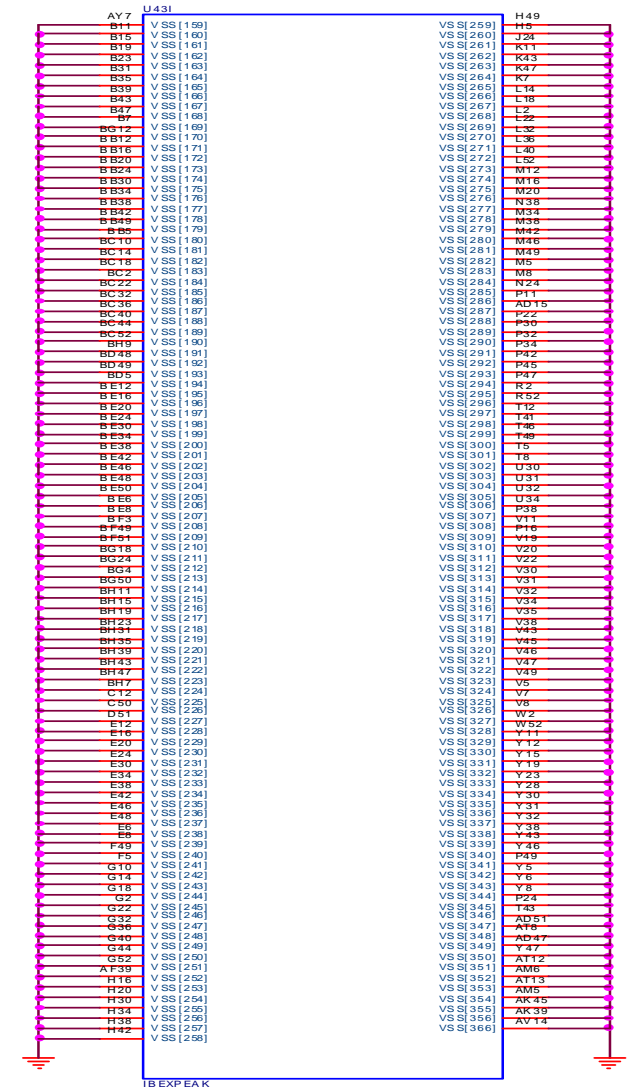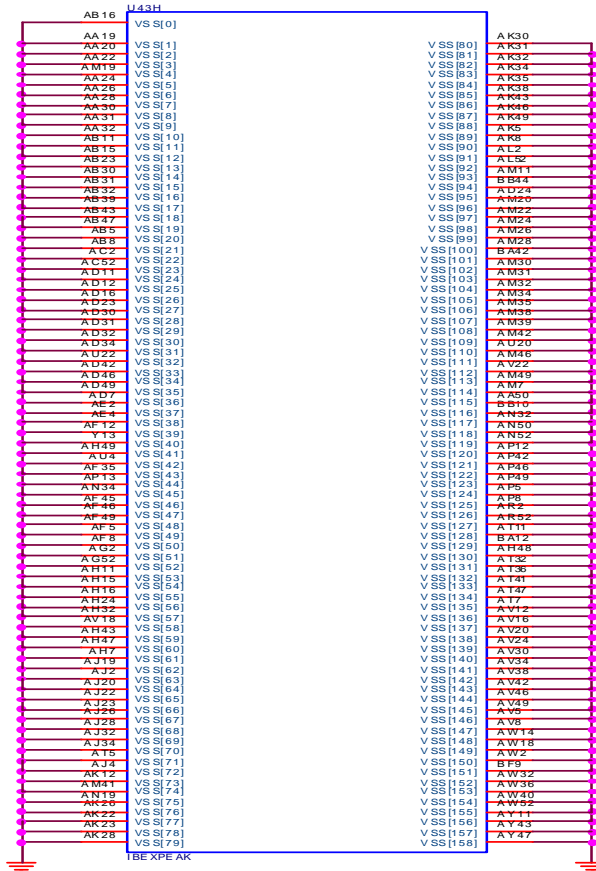


# New Card, Mini PCIE

## NEW CARD

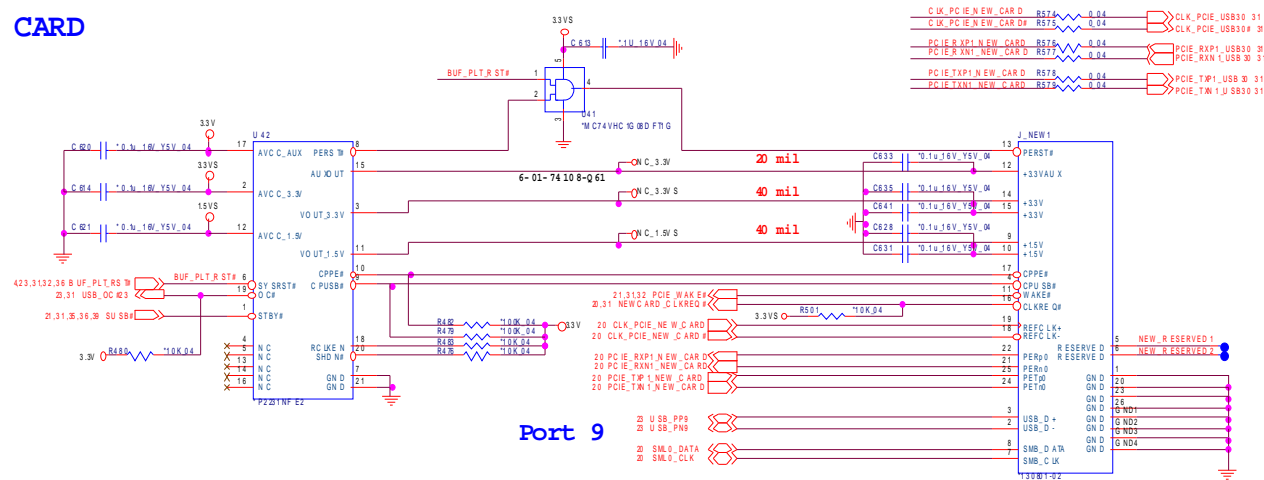

Sheet 28 of 53  
New Card, Mini PCIE

## MINI CARD

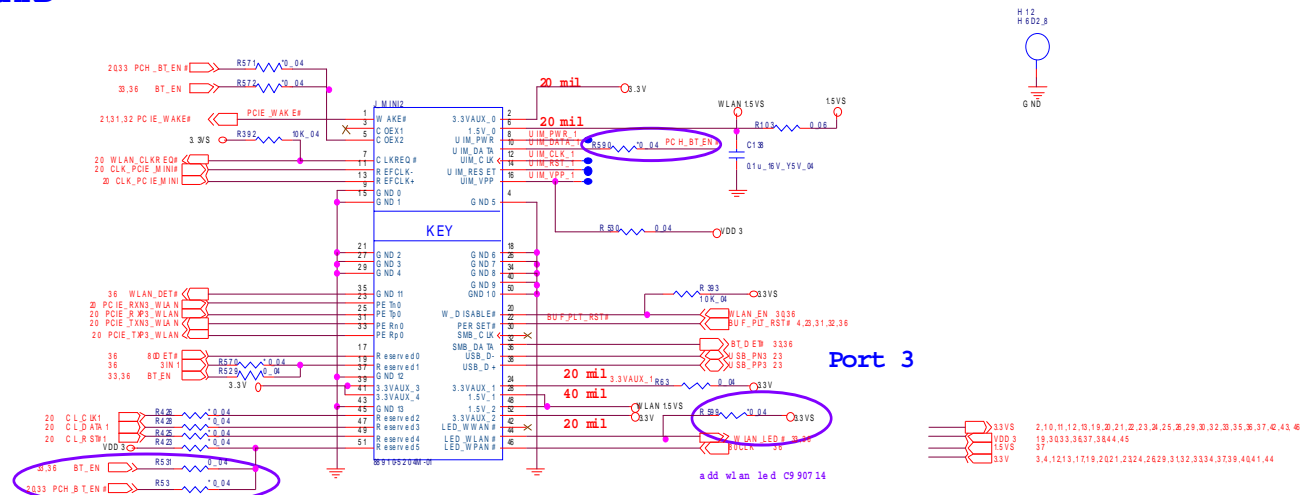


B. Schematic Diagrams




# 3G, CCD, TPM

3G

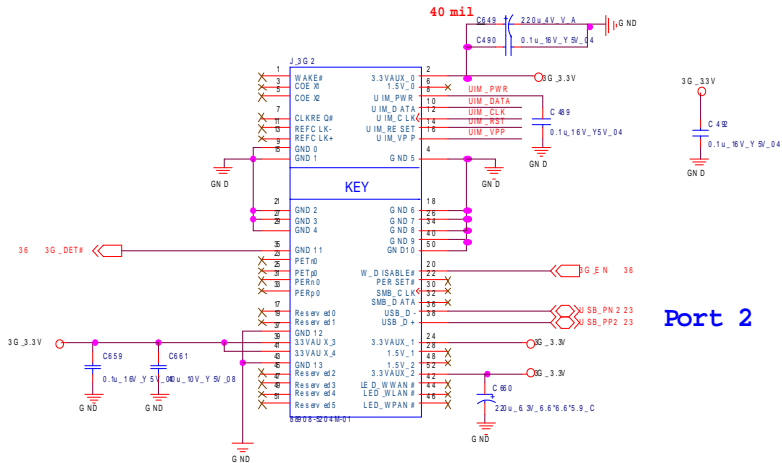


Port 2

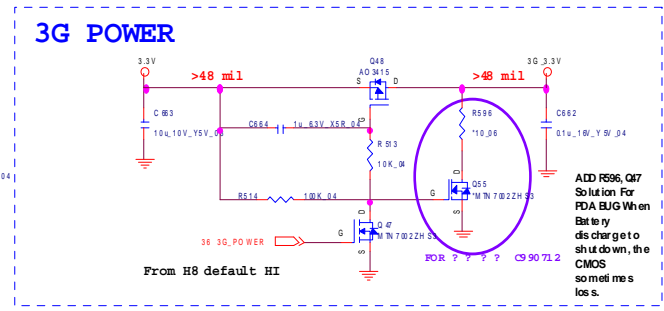

Sheet 29 of 53  
3G, CCD, TPM


TPM 1.2

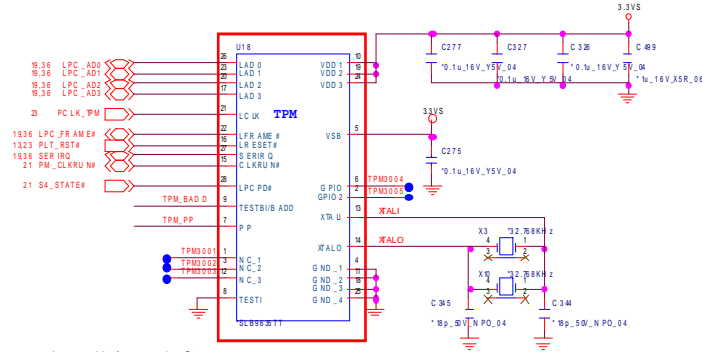


Asserted before entering S3  
LPC reset timing  
LPC PD# inactive to LRST# inactive 32-96us

TPM_PP	H: ACCESS LOW: NORMAL (Internal I/O)
TPM_PP	H: 4E/4FH
TPM_BADD	LOW: 2E/2FH

SIM CONN

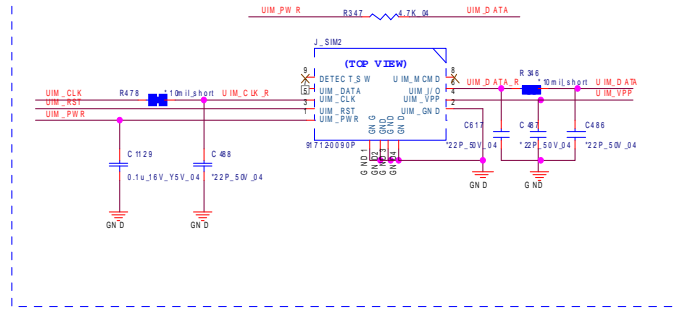

CCD

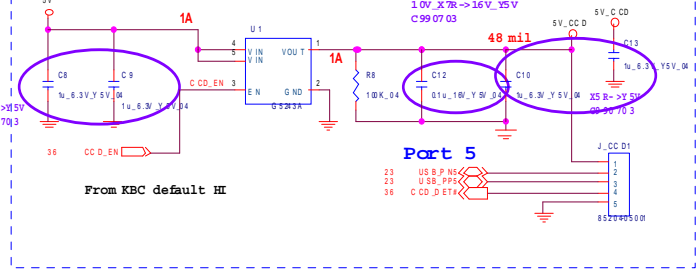


From KBC default HI


- 5V 2630,31,35,37,38,40,41,44
- 3.3V 3,4,12,13,17,19,20,21,23,24,26,28,30,32,33,34,37,38,40,41,44
- 1.8V 2,9,11,12,15,16,20,21,22,23,24,26,28,30,32,33,35,36,37,42,43,44

B.Schematic Diagrams


# USB, Fan, TP, FP, Multi-Conn

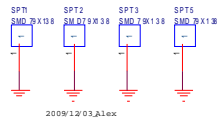


## CPU FAN CONTROL

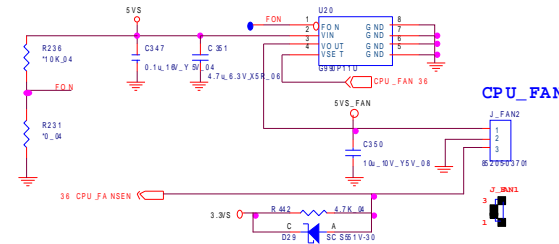


## USB PORT

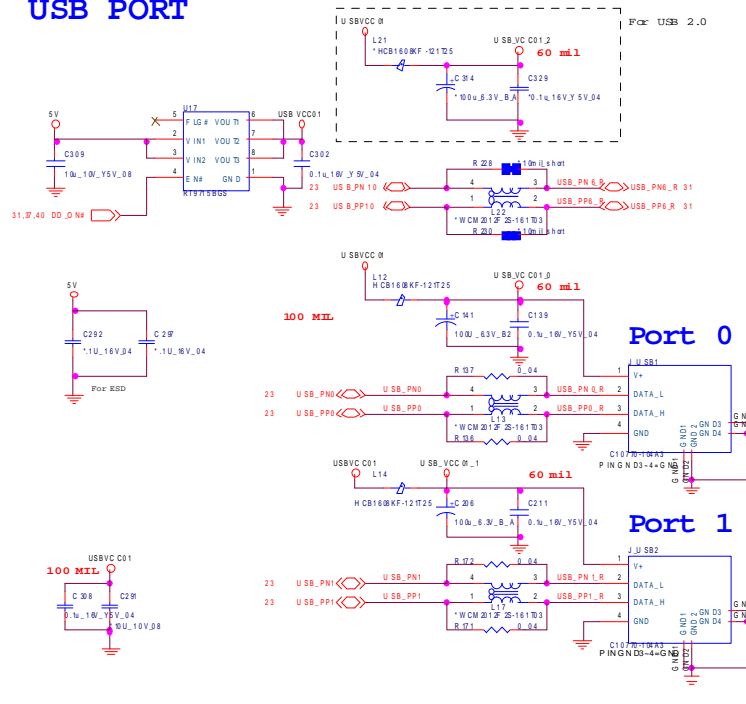


## FP CONN

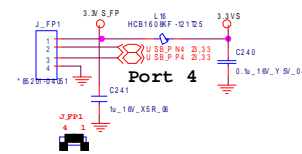

## FOR PHONE JACK BOARD

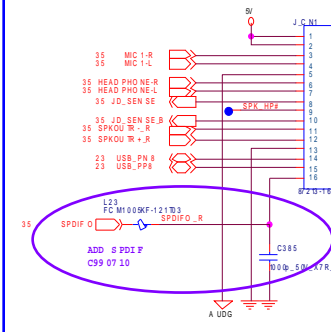

## FOR POWER SWITCH BOARD

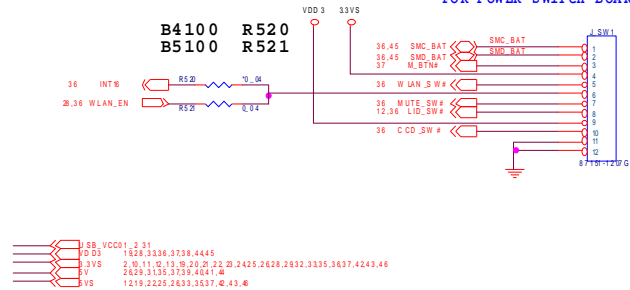


Sheet 30 of 53  
USB, Fan, TP, FP,  
Multi-Conn

B.Schematic Diagrams


# USB 3.0

Sheet 31 of 53  
USB 3.0

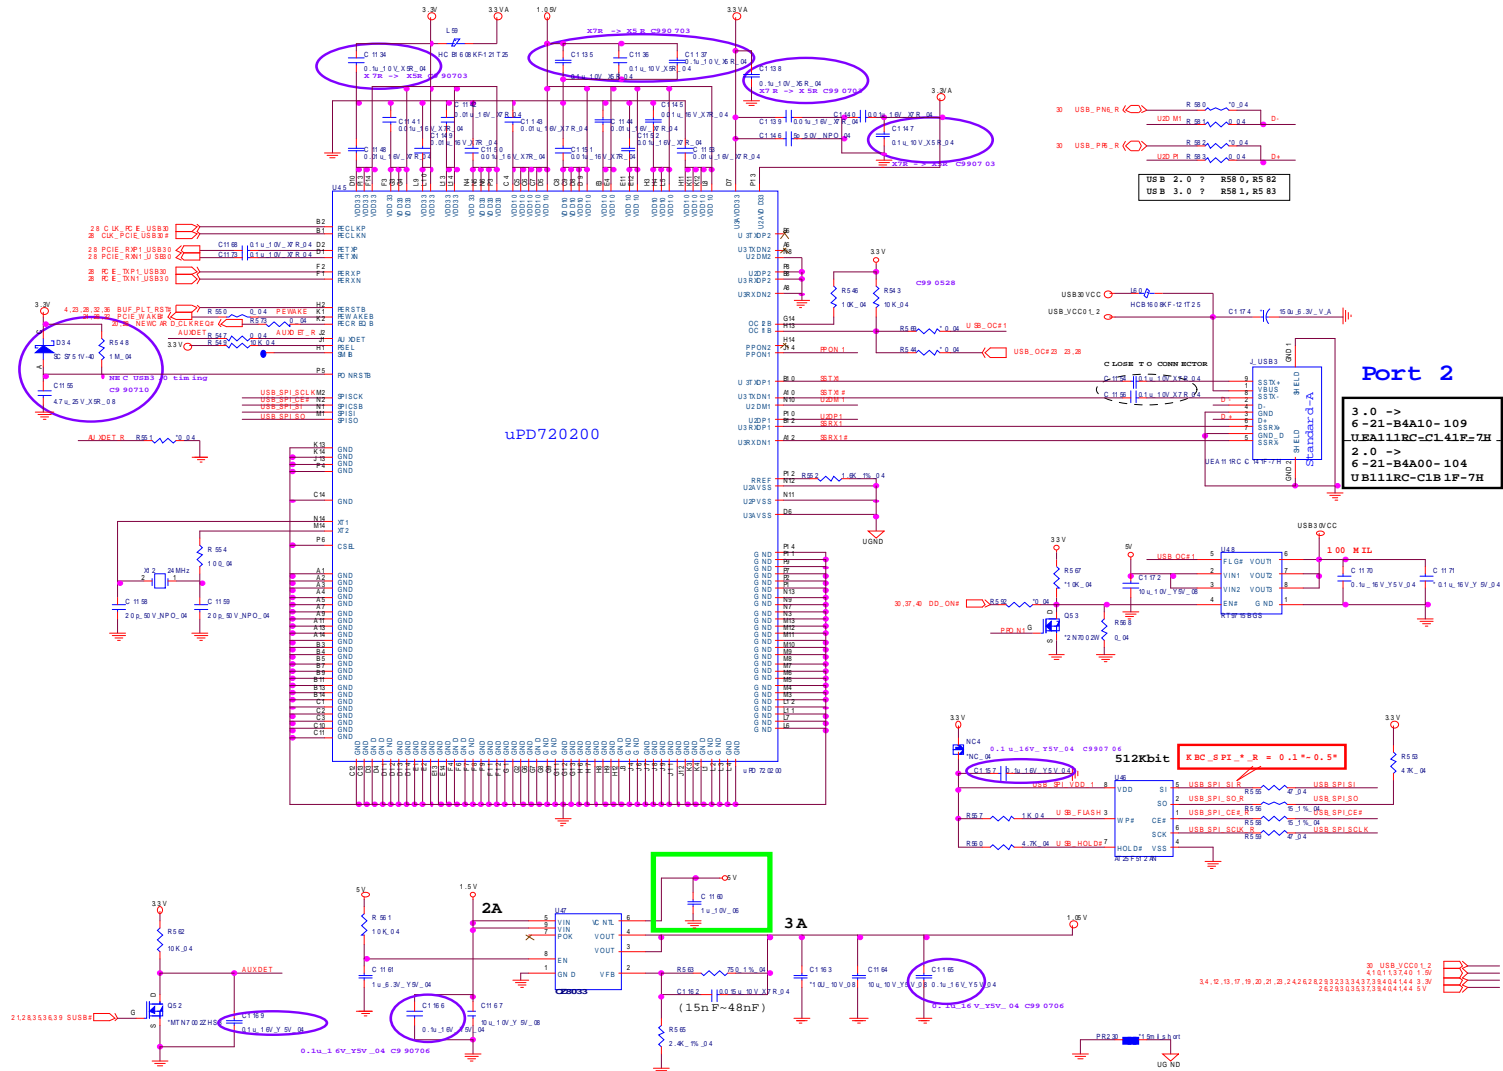



# SATA ODD, LED, Hotkey, LID SW

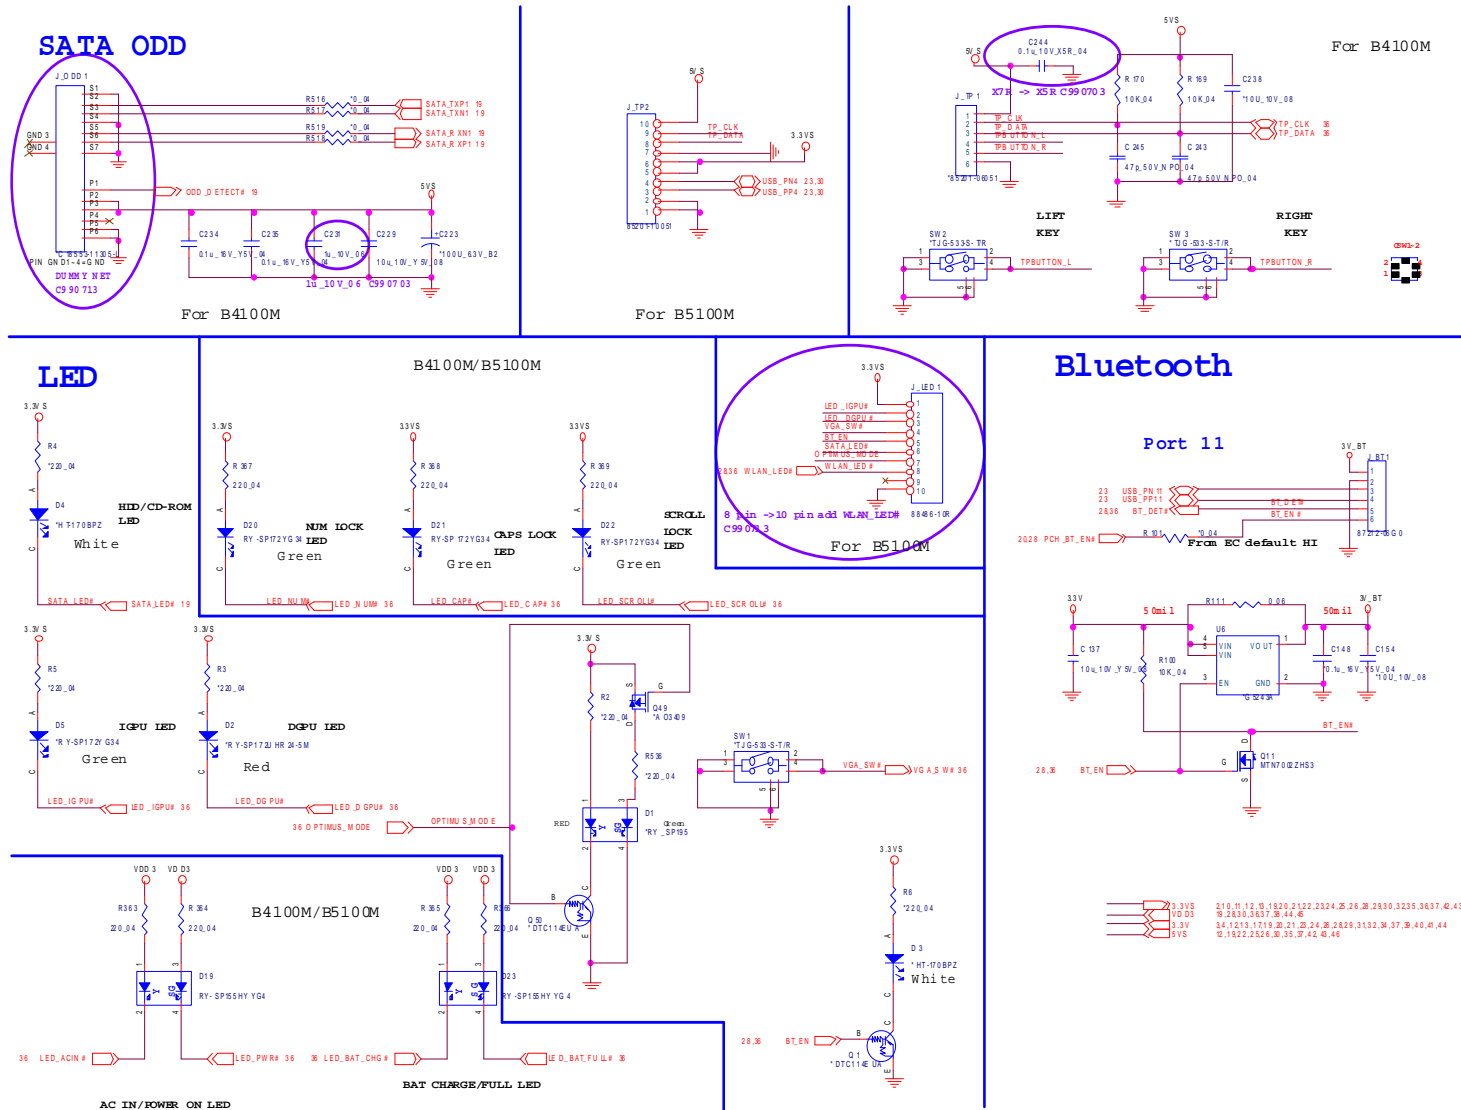

Sheet 33 of 53  
SATA ODD, LED,  
Hotkey, LID SW


B.Schematic Diagrams







# KBC-ITE IT8518

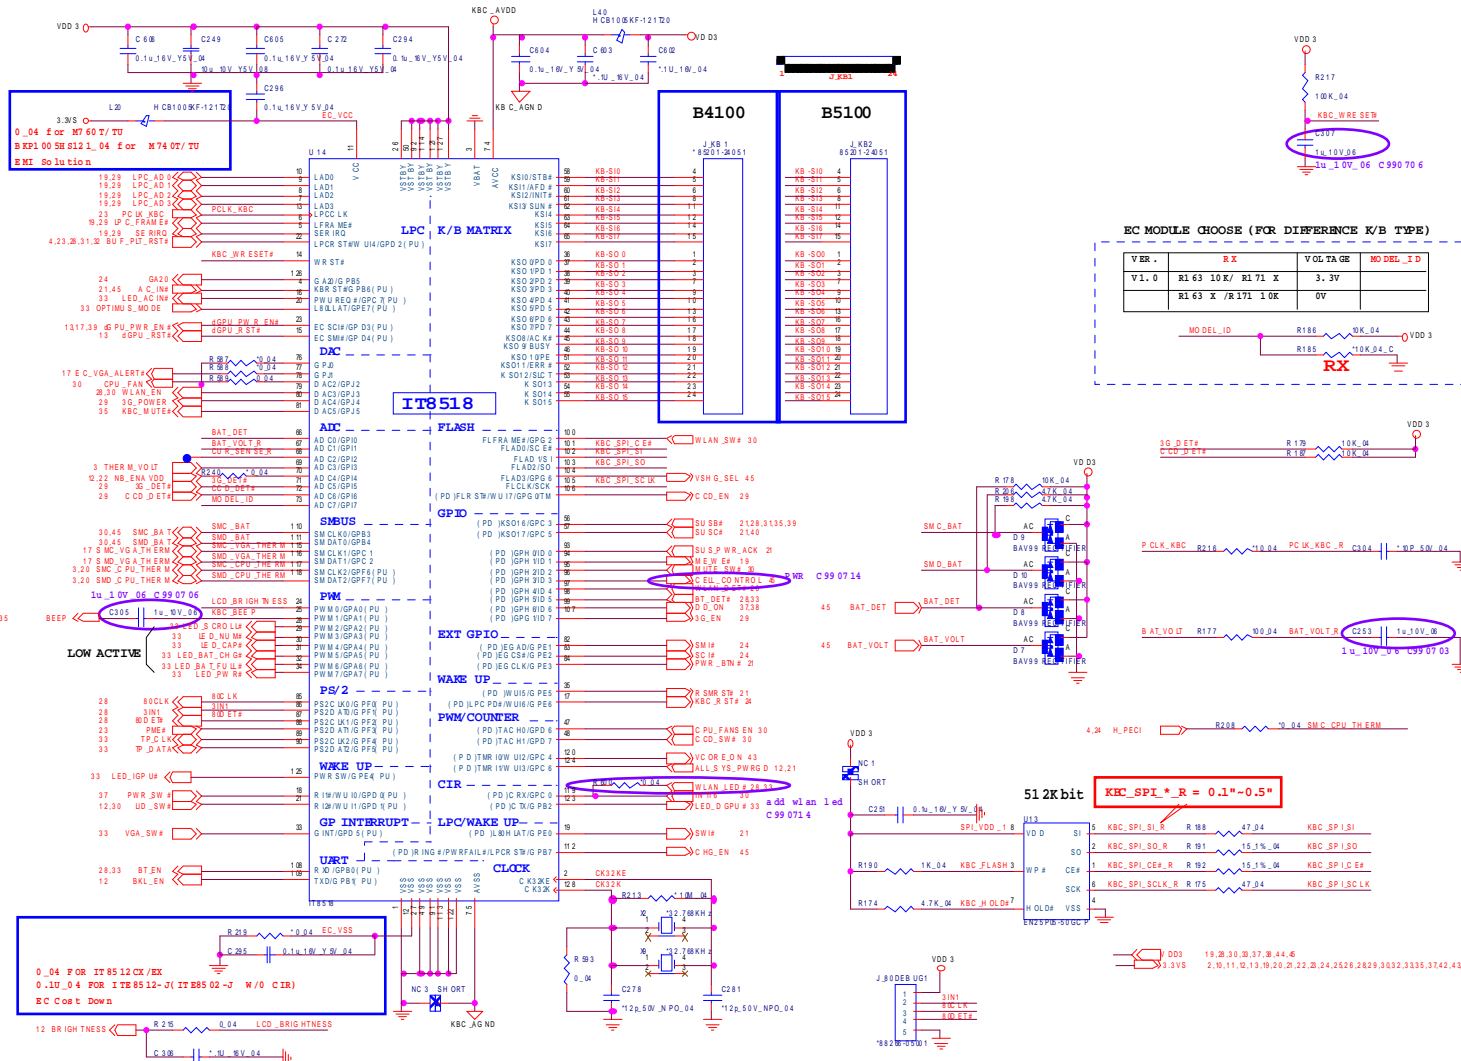


Sheet 36 of 53  
KBC-ITE IT8518

B.Schematic Diagrams

# Schematic Diagrams


## 5VS, 3.3VS, 1.5VS, VIN1

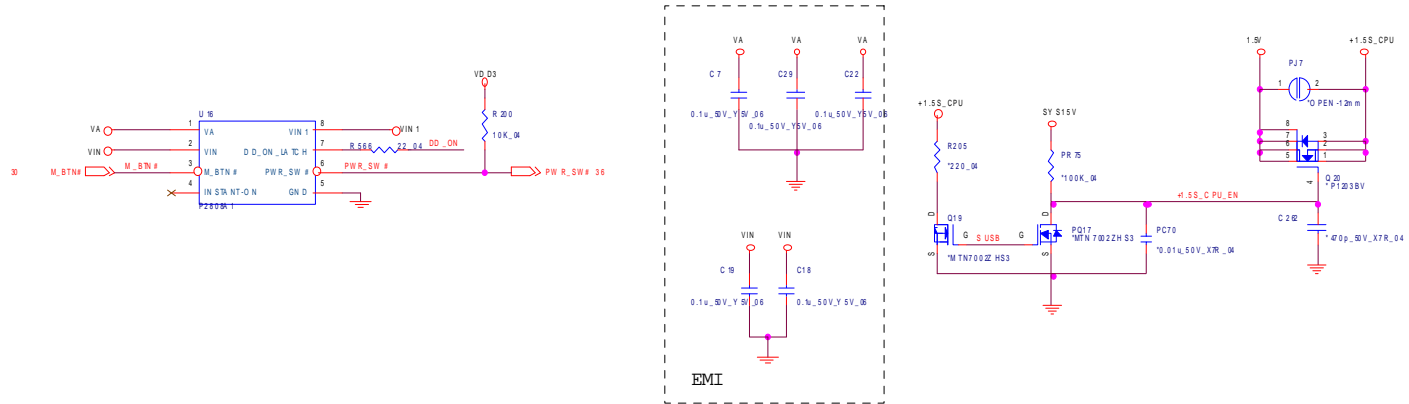


B.Schematic Diagrams

Sheet 37 of 53  
5VS, 3.3VS, 1.5VS,  
VIN1


5V

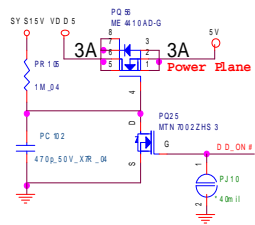


5VS

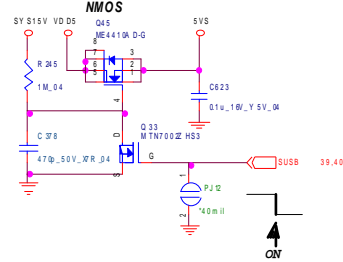


1.8VS

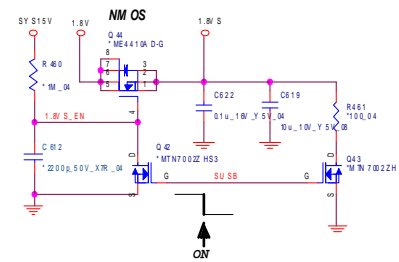



1.5VS

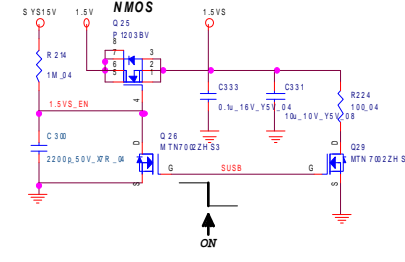

3.3V

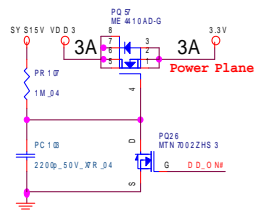


3.3VS

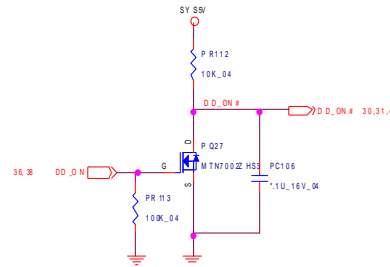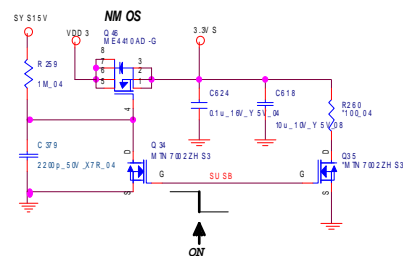

VIN1	38
VIN	1238,40,41,42,43,44,45
V0	46
SY515V	3839,40
SY5V5	3839
VDD3	39
5V	2629,30,31,35,39,40,41,44
VDD3	1219,22,25,26,30,35,42,43,46
3.3V	3,4,10,11,12,13,19,20,21,23,24,28,29,38,32,33,34,39,40,41,44
3.3VS	2,10,11,12,13,19,20,21,22,23,24,25,26,28,29,30,32,33,35,36,42,43,46
1.5V	47
1.5VS	4,10,11,31,40
1.5V	28
1.5V	39
1.5VS	7,25,39

# VDD3, VDD5

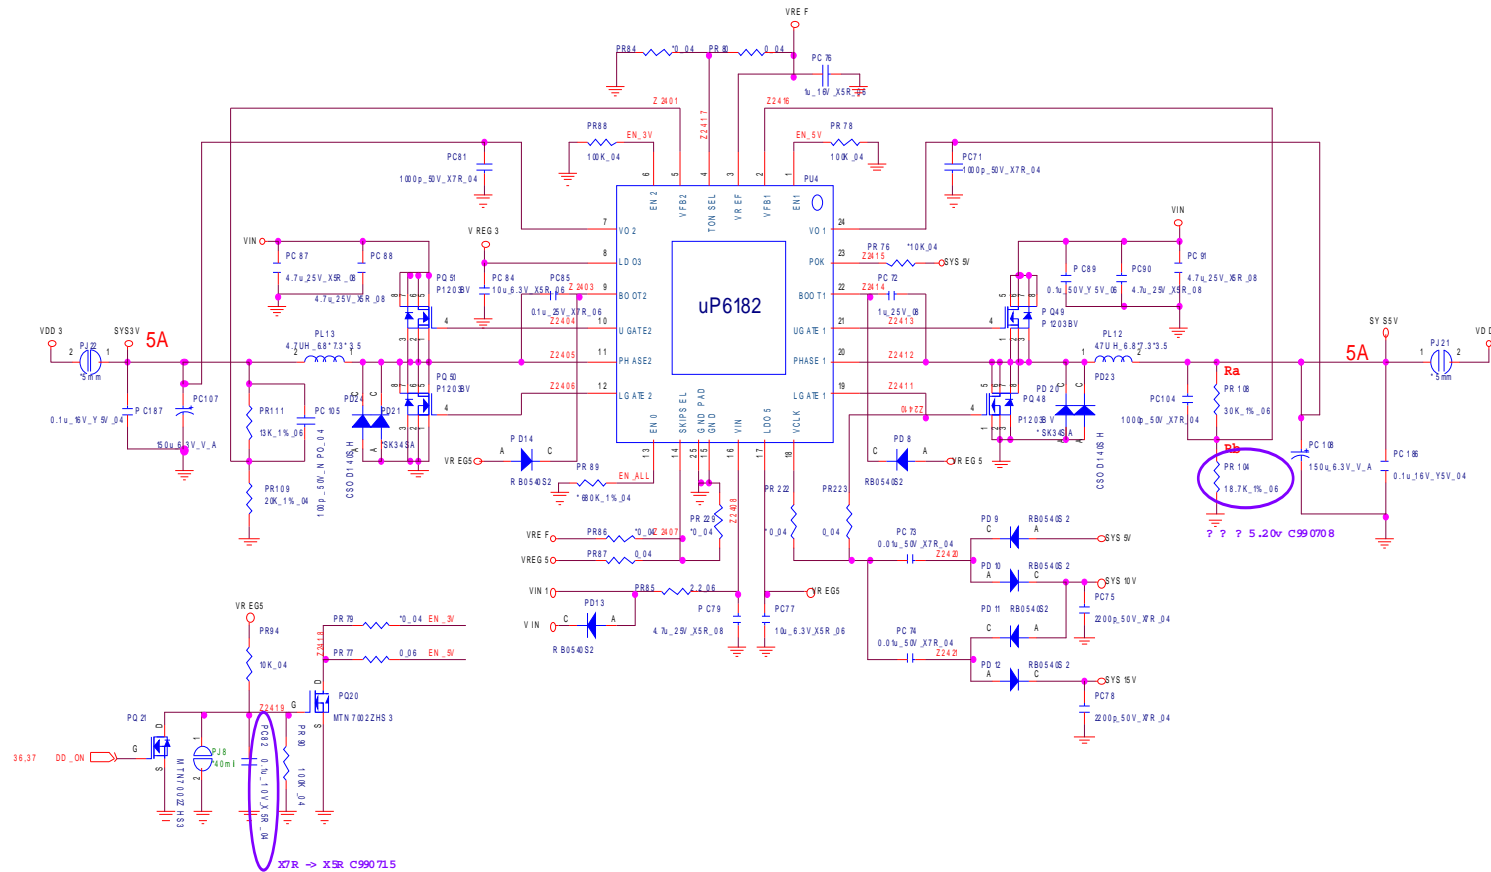

Sheet 38 of 53  
VDD3, VDD5

VIN	0.37.40.41.42.43.44.45
SY515V	37.38.40
VIN1	37
VDD5	37
VDD3	36.28.30.33.36.37.44.45
SY55V	37.39













# Power VGA NVVDD


## NVIDIA N11P-GE1

	0.95V	0.90V	0.85V	0.80V
GPIO5_NVVID_VID0	0	1	0	1
GPIO6_NVVID_VID1	0	0	1	1

## NVIDIA N11M-OP1

	1.03V	0.95V	0.85V	0.80V
GPIO5_NVVID_VID0	0	1	0	1
GPIO6_NVVID_VID1	0	0	1	1


	PR131	PR132	PR139	PR142	PR143	PR144
B4100	1K_1%	75K_1%	6.8K_1%	20K_1%	100K_1%	10K_1%
B5100	10K_1%	20K_1%	2K_1%	4.99K_1%	30K_1%	10K_1%
N11P-GE1						

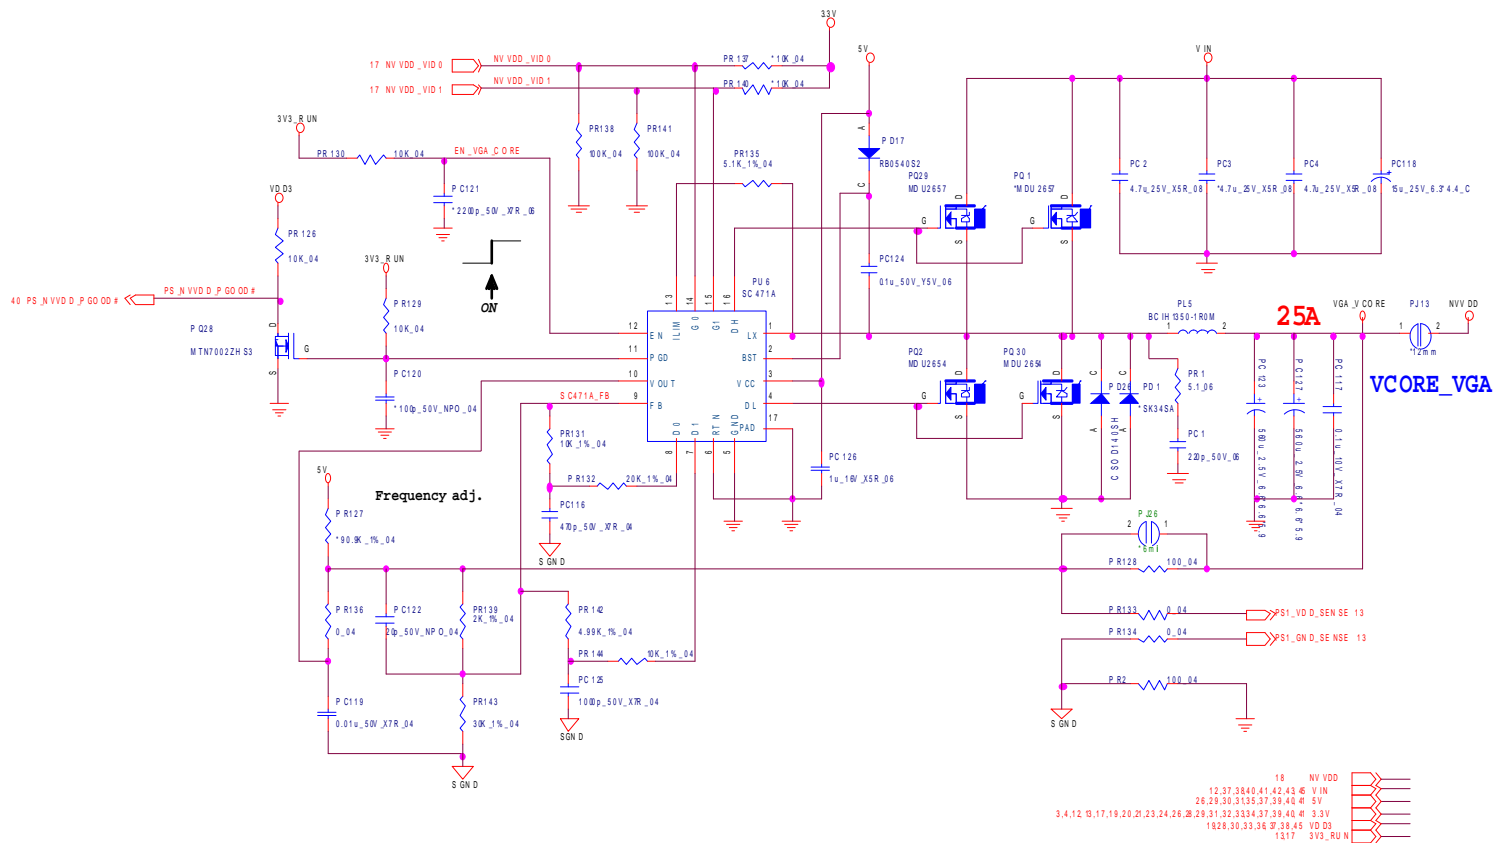

Sheet 44 of 53  
Power VGA NVVDD

B. Schematic Diagrams

# AC\_IN, Charger

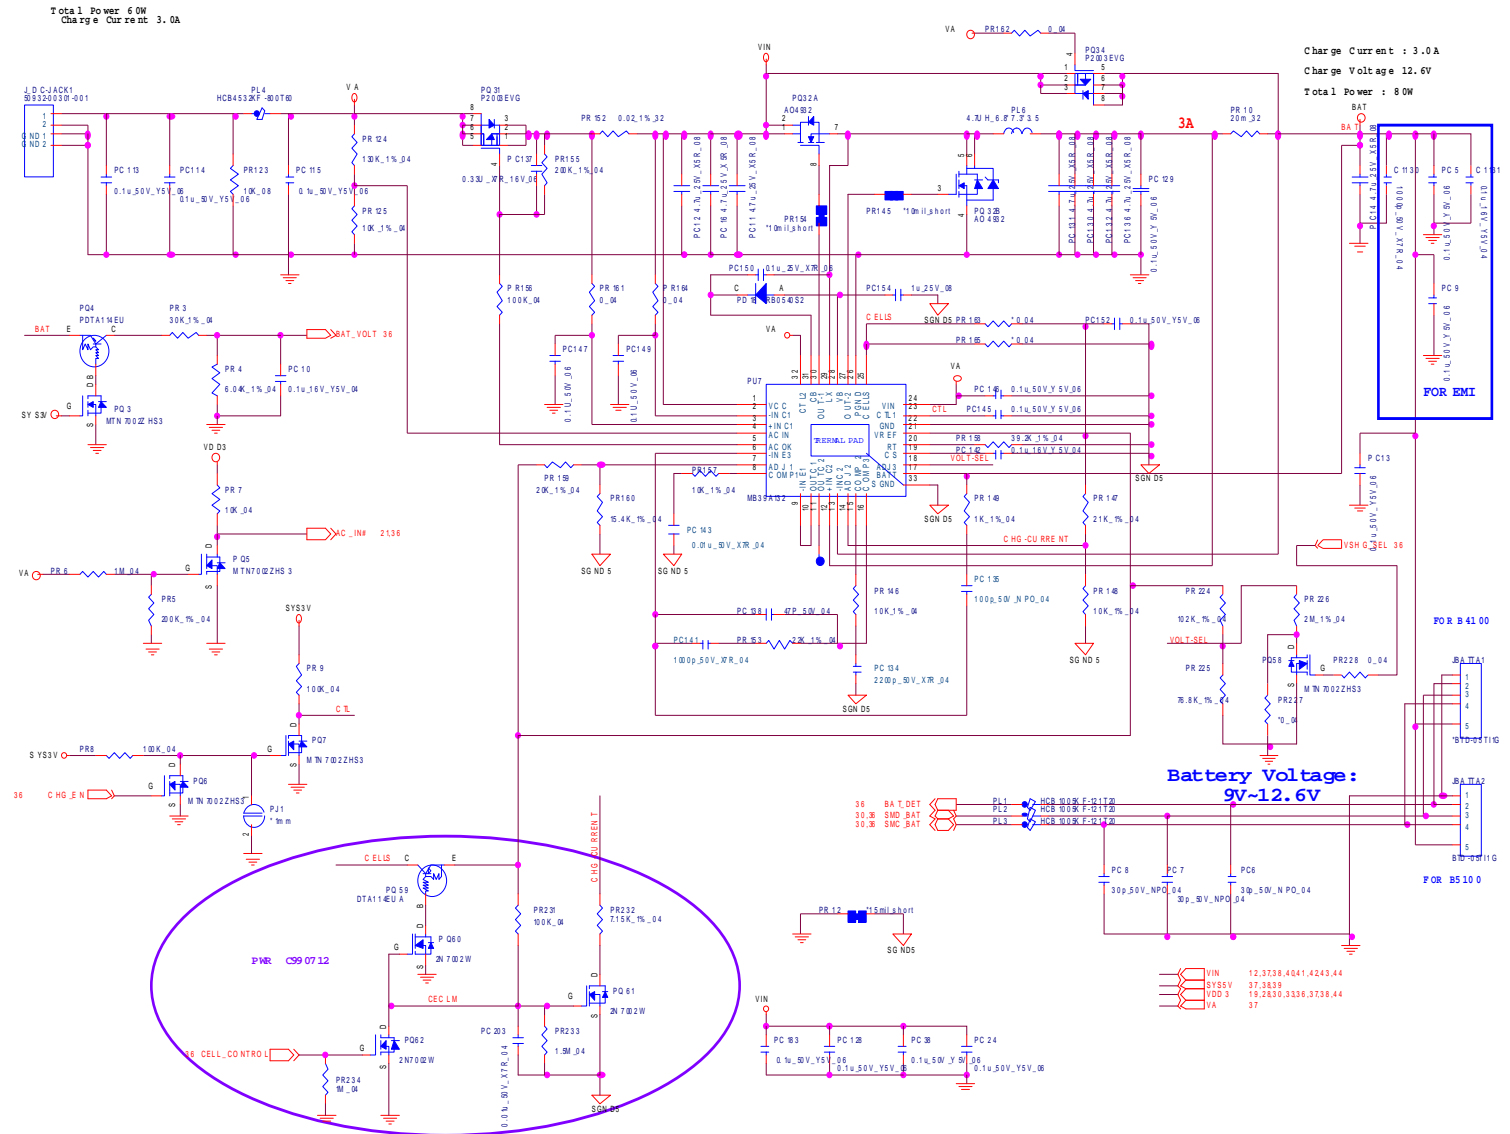


Sheet 45 of 53  
AC\_IN, Charger




# Audio Board

Sheet 47 of 53  
Audio Board

## USB PORT



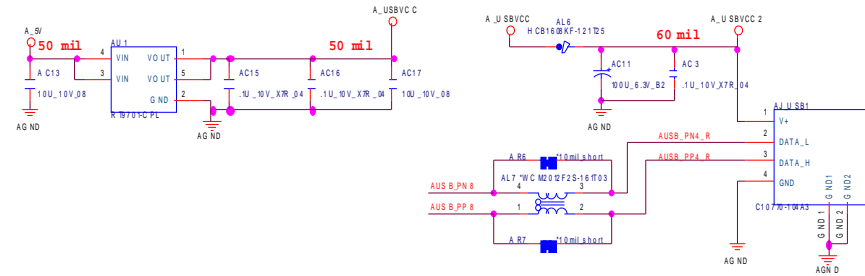


## AUDIO JACK


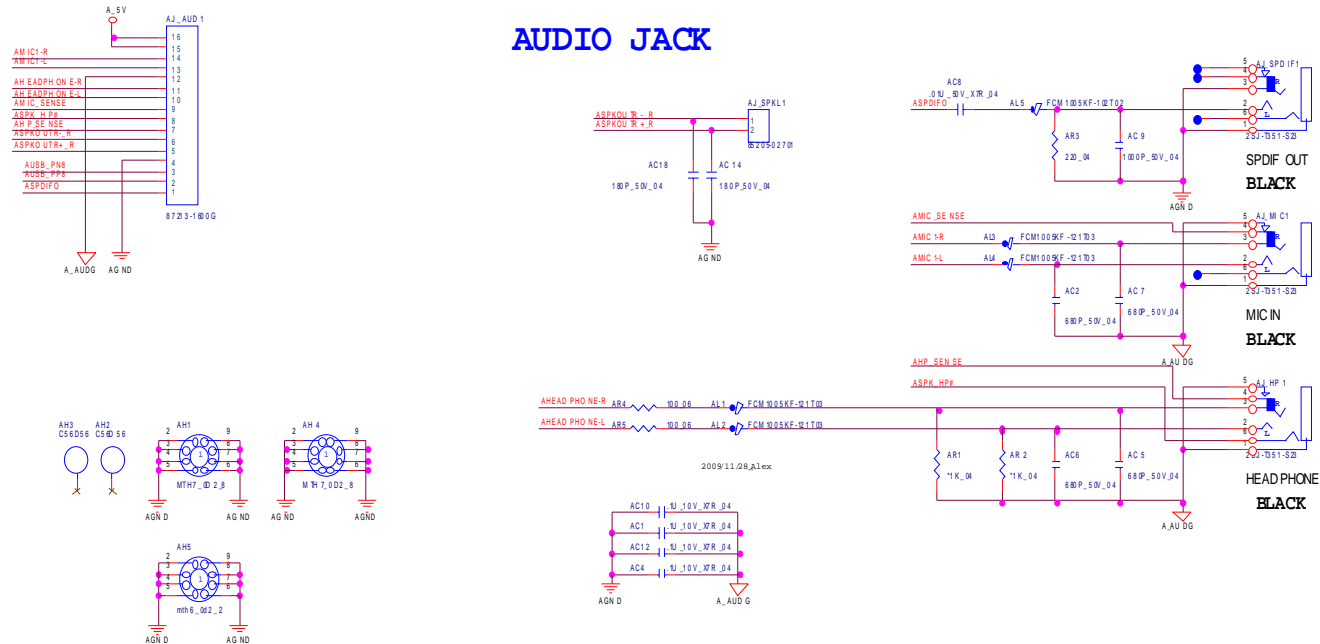




# B7110 Second HDD Board

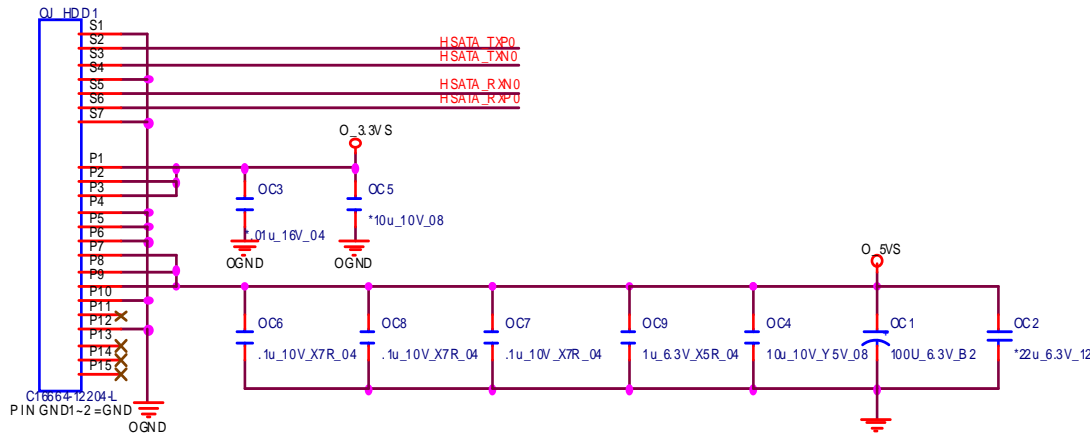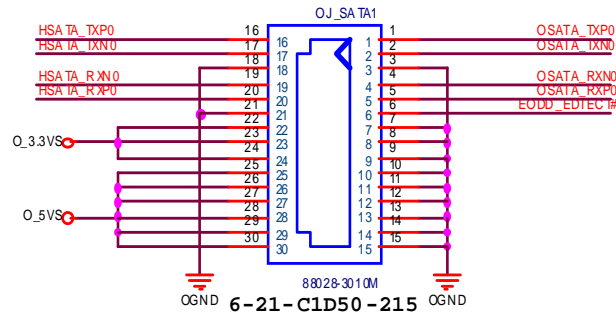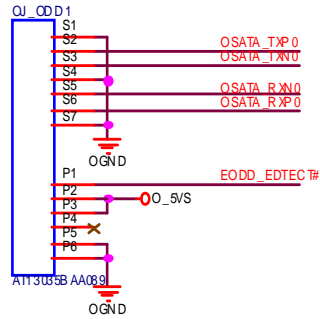

6-21-C2700-122

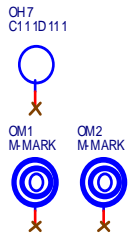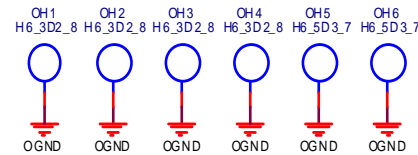


Sheet 48 of 53  
B7110 Second HDD Board

B.Schematic Diagrams




# Schematic Diagrams

## B7110 Click Board






Sheet 49 of 53  
B7110 Click Board

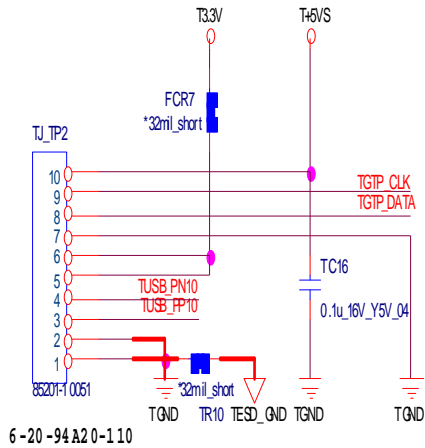




It is strongly recommended that the TESD\_GND has a dedicated connection to the system chassis or cable shield.

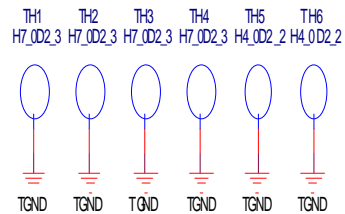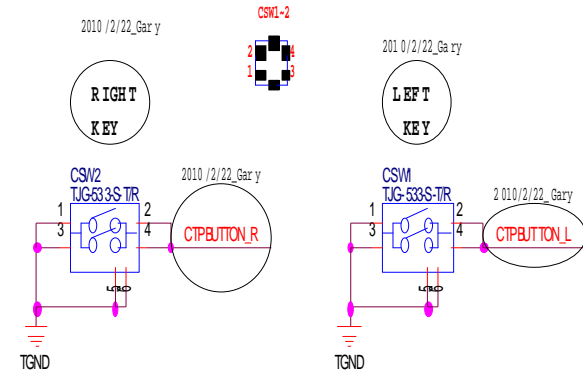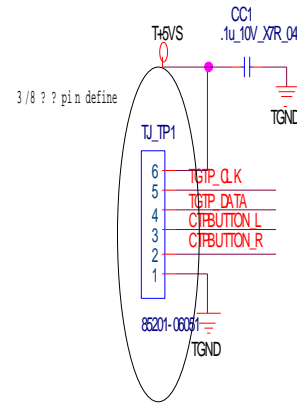

# B7110 Power Switch Board

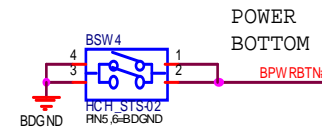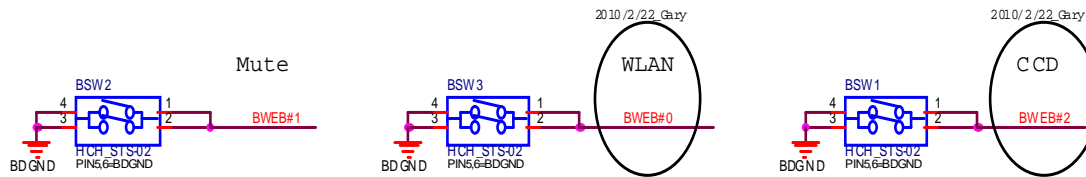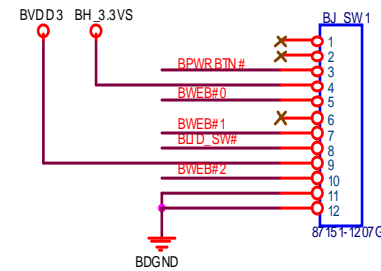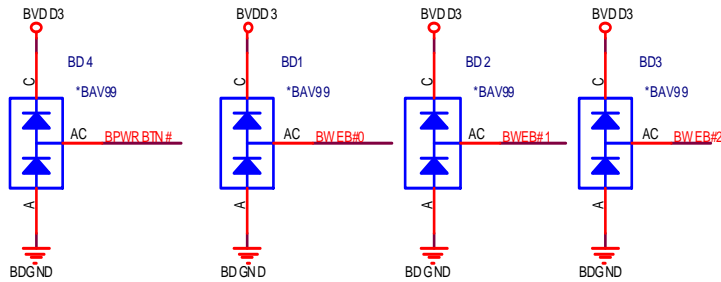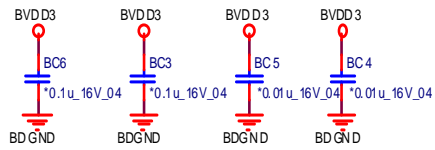


## LID SWITCH IC

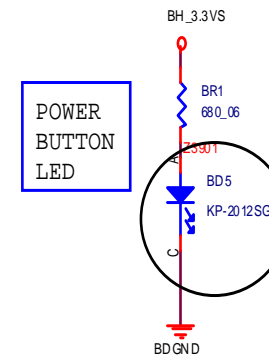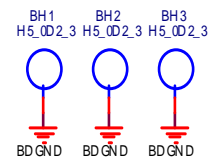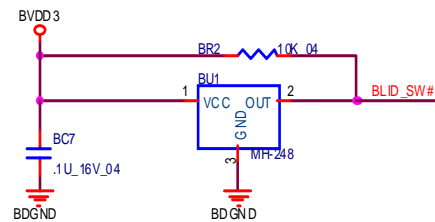



Sheet 50 of 53  
B7110 Power  
Switch Board

# B7130 LED & VGA SW Board

Sheet 51 of 53  
B7130 LED & VGA  
SW Board

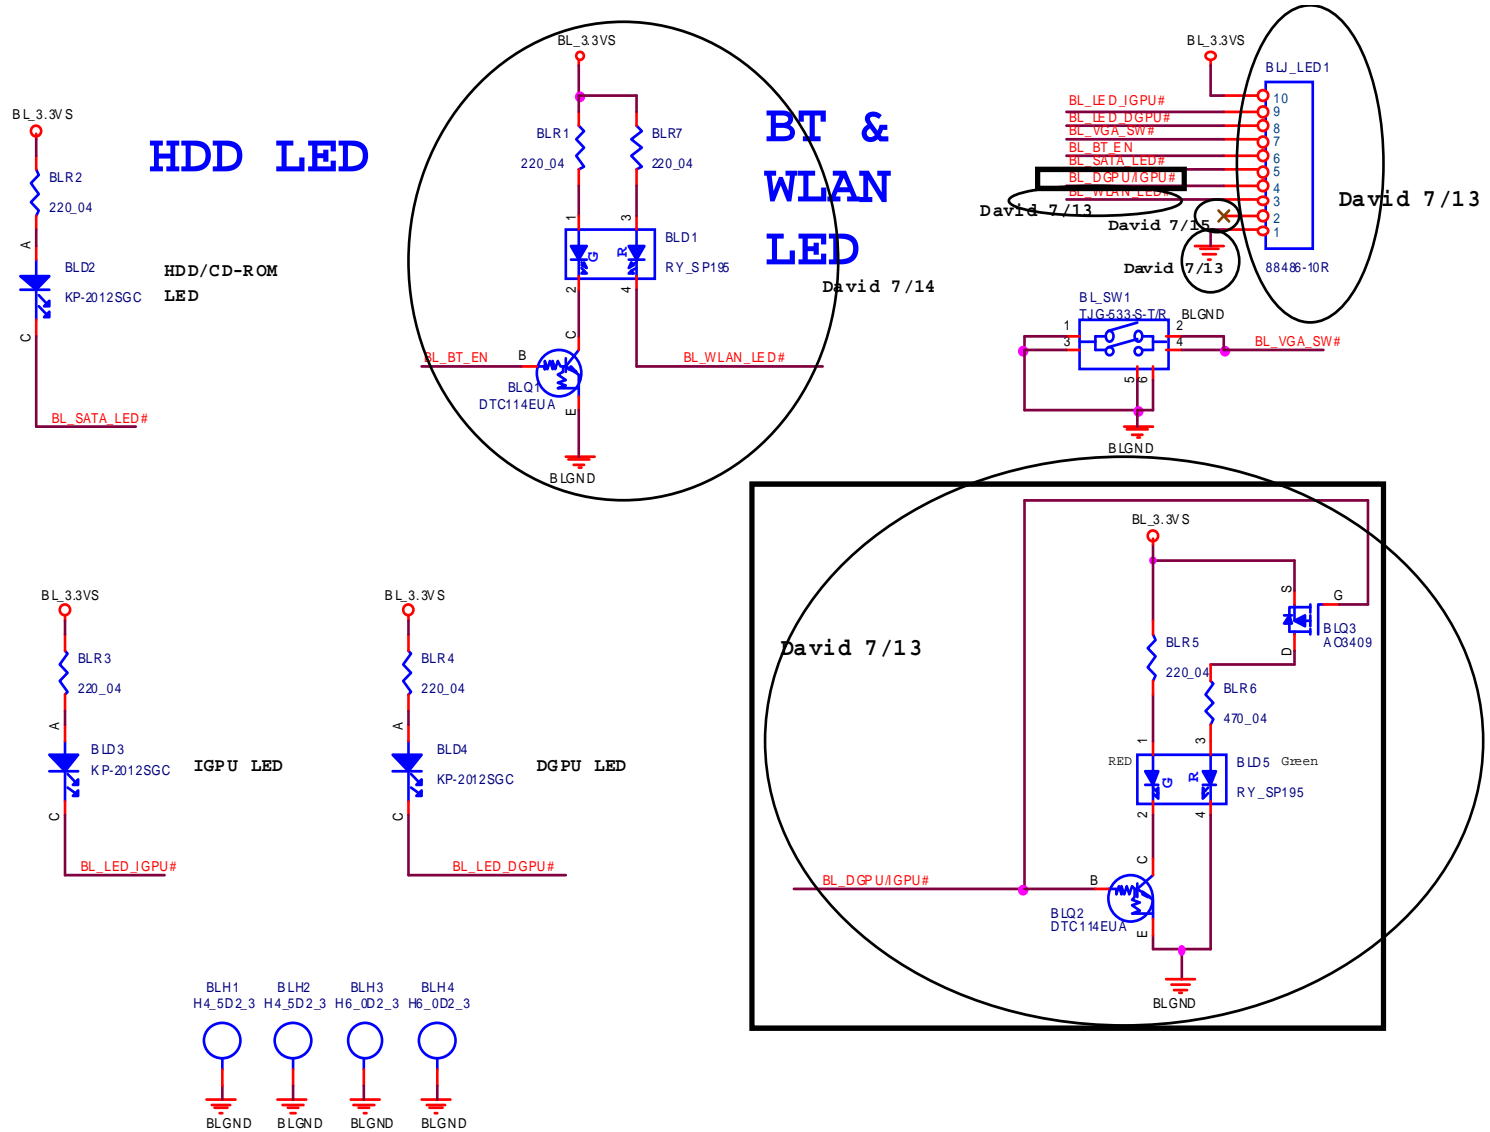


# B7110 K/B Switch Board

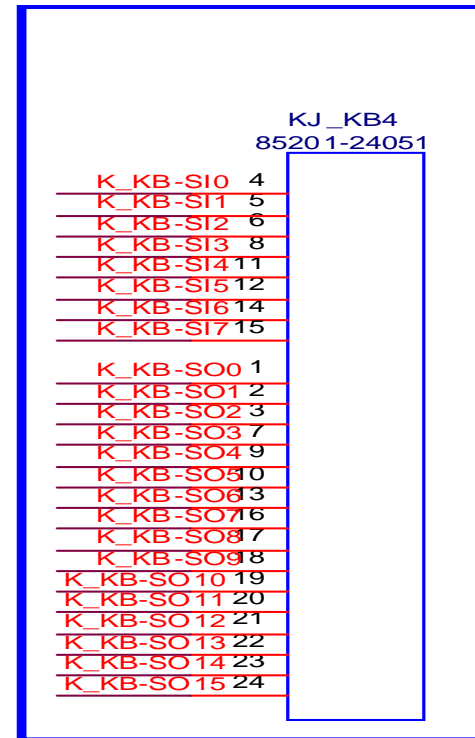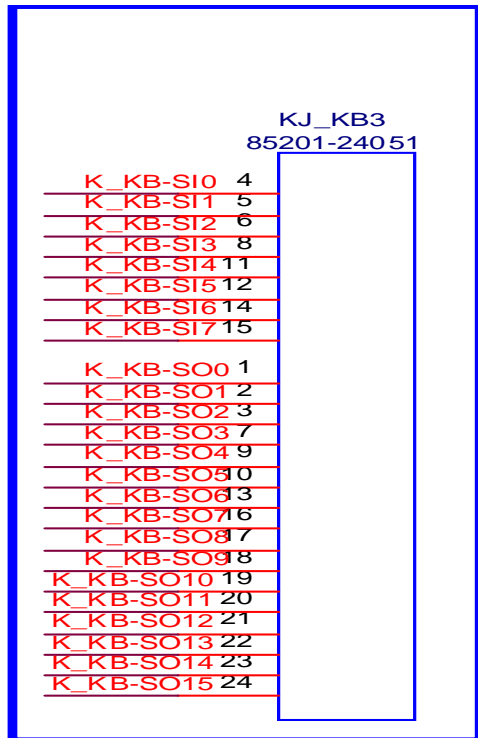


Sheet 52 of 53  
B7110 K/B Switch Board

B. Schematic Diagrams

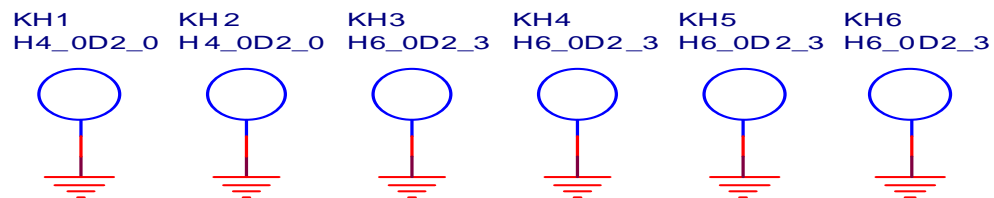

# Sequence

B 4 1 0 0 D 0 1 P O W E R S E Q U E N C E

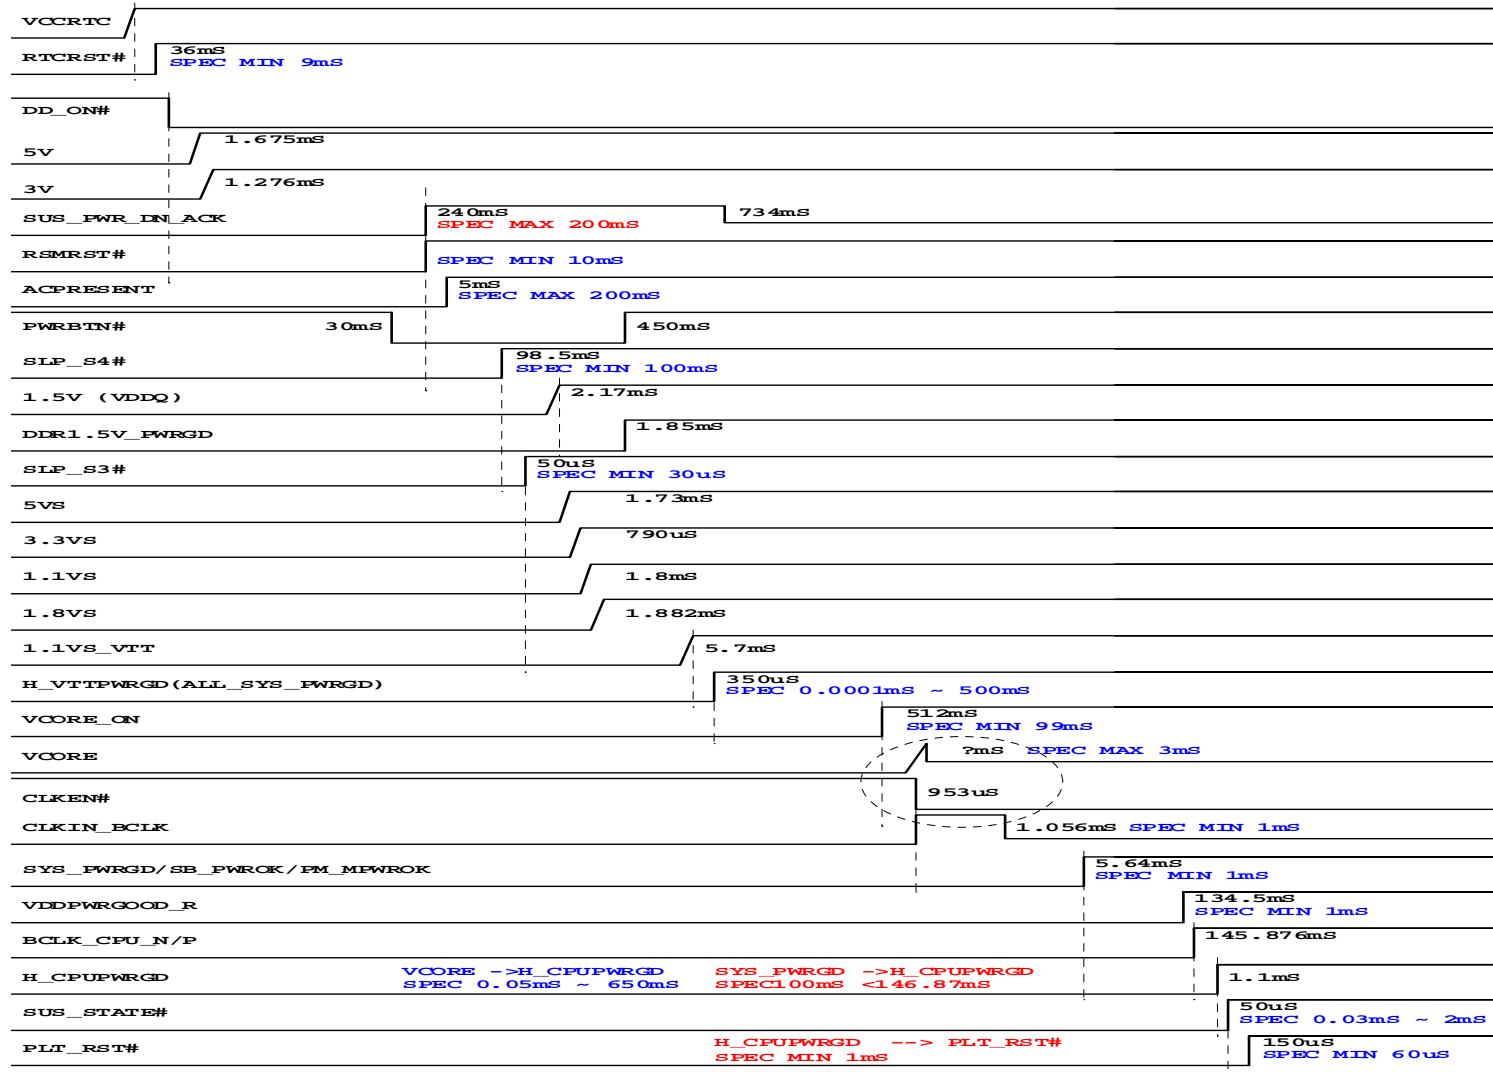

Sheet 53 of 53  
Sequence

# Appendix C: Updating the FLASH ROM BIOS

## To update the FLASH ROM BIOS you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

## Download the BIOS

1. Go to [www.clevo.com.tw](http://www.clevo.com.tw) and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

## Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

## Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F10** to save any changes you have made and exit the BIOS to restart the computer.



### BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

**You should only download BIOS versions that are V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).



## BIOS Update

---

### Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: DISK C:\> (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

**C:\> Flash.bat**

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

### Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F9**) and select “**Yes**” to confirm the selection.
5. Press **F10** to save any changes you have made and exit the BIOS to restart the computer.

### Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.