

ADVANCED Panel System – Advanced Control Module Installation Manual



LIMITED WARRANTY / AGREEMENT

Advanced Flight Systems Inc. ("AFS") warrants its aircraft monitoring system instrument and system components to be free from defects in materials and workmanship for a period of one year commencing on the date of the first flight of the instrument or one year after the invoice date, whichever comes first. AFS will repair or replace any instrument or system components under the terms of this Warranty provided the item is returned to AFS prepaid.

This Warranty shall not apply to any unit or component that has been repaired or altered by any person other than AFS, or that has been subjected to misuse, abuse, accident, incorrect wiring, or improper or unprofessional installation by any person. THIS WARRANTY DOES NOT COVER ANY REIMBURSEMENT FOR ANYONE'S TIME FOR INSTALLATION, REMOVAL, ASSEMBLY OR REPAIR. AFS reserves the right to determine the reason or cause for warranty repair.

1. This Warranty does not extend to any engine, machine, aircraft, boat, vehicle or any other device to which the AFS monitoring system may be connected, attached, or used with in any way.
2. THE REMEDIES AVAILABLE TO THE PURCHASER ARE LIMITED TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE OF THE PRODUCT, AT THE SOLE DISCRETION OF AFS. CONSEQUENTIAL DAMAGES, SUCH AS DAMAGE TO THE ENGINE OR AIRCRAFT, ARE NOT COVERED, AND ARE EXCLUDED. DAMAGES FOR PHYSICAL INJURY TO PERSON OR PROPERTY ARE NOT COVERED, AND ARE EXCLUDED.
3. AFS is not liable for expenses incurred by the customer or installer due to AFS updates, modifications, improvements, upgrades, changes, notices or alterations to the product.
4. The pilot must understand the operation of this product before flying the aircraft. Do not allow anyone to operate the aircraft that does not understand the operation of the monitoring system. Keep the operating manual in the aircraft at all times.
5. AFS is not responsible for shipping charges or damages incurred during shipment.
6. No one is authorized to assume any other or additional liability for AFS in connection with the sale of AFS products.
7. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS WARRANTY, YOU MAY RETURN THE PRODUCT FOR A FULL REFUND. IF YOU DO NOT AGREE TO ACCEPT THE TERMS OF THIS WARRANTY, DO NOT INSTALL THE PRODUCT.
8. This warranty is made only to the original purchaser and is not transferable. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OR OBLIGATIONS, EXPRESS OR IMPLIED, ORAL OR WRITTEN. AFS EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER AGREES THAT IN NO EVENT SHALL AFS BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING DAMAGES TO THE ENGINE OR AIRCRAFT, LOST PROFITS, LOSS OF USE, OR OTHER ECONOMIC LOSS. EXCEPT AS EXPRESSLY PROVIDED HEREIN, AFS DISCLAIMS ALL OTHER LIABILITY TO THE PURCHASER OR ANY OTHER PERSON IN CONNECTION WITH THE USE OR PERFORMANCE OF AFS' PRODUCTS, INCLUDING BUT NOT LIMITED TO STRICT PRODUCTS LIABILITY IN TORT.

IMPORTANT PRE-INSTALLATION NOTICE

Before installing the monitoring system, READ THE LIMITED WARRANTY / AGREEMENT. There is information in the Limited Warranty / Agreement that may alter your decision to install this product. IF YOU DO NOT ACCEPT THE TERMS OF THE LIMITED WARRANTY / AGREEMENT DO NOT INSTALL THE PRODUCT. The product may be returned for a refund if you do not accept the terms of the Limited Warranty / Agreement.

Before starting the installation, make sure that your planned installation will not interfere with the operation of any controls. The installer should use current aircraft standards and practices to install this product. Refer to AC 43.13-2A, *Acceptable Methods, Techniques, and Practices - Aircraft Alterations* and AC 43.13-1B, *Acceptable Methods, Techniques, and Practices--Aircraft Inspection and Repair*.

Table of Contents

Overview	8
ACM Features	8
ACM Panel Switch Operation	9
ACM-ECB Electronic Circuit Breaker Operation	10
AF-5000 Electrical Circuit Breaker Page	11
Dynon Skyview Electrical Page	13
In Flight Emergencies	14
Tripped Circuit Breaker	14
Electrical Smoke	14
Failed Switch	14
ACM Aircraft Wiring Overview	15
ACM Panel Switch Wiring & Logic	16
ACM Power Diagram & Logic	17
Getting Started	18
ACM-ECB Specifications	20
ACM Mounting	20
Component Weights	20
ACM-ECB Configuration Switch Settings	21
DSUB Pin Crimper Tools	25
Quick Panel Post Installation Check	26
AF-5000 EFIS Software Configuration (Must be done before first engine start and flight)	27
Skyview HDX EFIS Software Configuration (Must be done before first engine start and flight)	28
ACM-EFIS RS-232 Serial Port Mapping AF-5000	37
ACM-EFIS RS-232 Serial Port Mapping Skyview	38
IFR Panel ACM Fuse Sizes	40
VFR Panel Fuse Sizes	41
AF-5000 Panel Configuration Checklist	42
IFD-540/440 Configuration	53
GTN-650 Configuration	55
Instrument Panel System Tests	56
RADIO and Audio Panel Tests	56
Trim Servo Tests	56
Panel Dimming	56
Aircraft Lights	57

Auto Pilot Tests	57
ELT Tests	57
D6 EFIS Tests	57
Pitot Tube Tests.....	57
+12V Power Plug	57
Remote Component Mounting _____	59
RV-7 Slider Panel	59
57840 Aircraft Front Harness _____	61
57850 AIRCRAFT REAR HARNESS _____	62
AVEO Engineering ZIP TIP Wiring _____	63
EFIS Inputs _____	64
SV-GPS-250 GPS / SV-GPS-2020 / AFS P/N: 73102 GPS Wiring _____	65
ADAHRS SV-ADAHRS 200/201 Wiring _____	66
Advanced SV Network Wiring	67
71320 SV-EMS-220 Wiring _____	68
53914 SV EMS Engine Sensor Harness Diagram.....	69
53847 SV EMS EGT-CHT Harness Diagram	70
ACM FUSE Power Chart _____	71
ACM-ECB Electronic Circuit Breakers _____	72
57475 AP Servo Harness _____	73
57860 Control Stick Harness _____	74
57870 Trim and Flap Servo Harness _____	75
57302 D10 Backup Harness with CO and TCW Battery _____	76
Aircraft Antennas _____	77
FLARM TRX-1500 Interface _____	79
RV-14 Panel Install _____	81
RV-14 Remote Component Mounting.....	81
Avidyne IFD-540 Tray Mounting	81
RV-14 EMS-220 Module Install	81
RV-14 SV-ADSB-470/472 ADS-B Module Install	81
Advanced Control Module (ACM).....	85
RV-14 ADAHRS Mounting and Wiring	86
RV-14 Aircraft Front Wiring (P/N: 57842).....	87
57842 RV-14 Front Harness	88
RV-14 Airframe Harnesses (P/N: 57852)	89

57843 RV-14 Canopy Harness.....	91
57851 RV-14 Aircraft Rear / Trim Harness 57476 RV-14 Servo Harness	92
RV-14 Pitch Servo Wiring	94
57880 RV-14 ADAHRS Fuselage Harness	95
RV-14 Roll Servo Wiring	96
RV-14 Heated Pitot Tube.....	97
RV-14 Optional TruTrak Autopilot Wiring	98
RV-14 Van’s Tailcone Left Wiring.....	100
RV-14 AFS P/N: 57481 Rear Servo Harness.....	101
RV-14 EMS Harness Install (P/N: 53914)	102
RV-14 SV-Network Wiring (P/N: 57853).....	103
RV-14 Control Stick Wiring (P/N: 57860).....	104
RV-14 Input Wiring and Configuration (AF-5000)	105
RV-14 Antenna Locations	108
<i>Glasair Sportsman Panel Install</i>	109
<i>Sportsman V Speeds</i>	109
Sportsman Remote Component Mounting	109
Avidyne IFD-540 Tray Mounting	109
P/N: 57281 Sportsman Switch Wiring with Fuel Transfer Relays.....	110
P/N: 57849 Sportsman Rear Harness	111
<i>RV-10 Aerosport Panel Install</i>	112
RV-10 Component Mounting.....	113
RV-10 SV-NET Wiring	114
RV-10 Antenna Locations	115
<i>ACM Flap Control – AF-5000</i>	116
<i>SV Autopilot Setup</i>	117
<i>System Wiring Table</i>	118
<i>Harness Schematics</i>	120
P/N: 53403 PMAG Wiring.....	121
P/N: 57100 AF-5000 to ACM Harness.....	122
P/N: 57200 Skyview to ACM Harness.....	123
P/N: 57260 ACM AF-5000 TCW Backup Battery Harness.....	124
P/N: 57265 ACM Skyview Backup Battery Harness P/N: 57500 ACM to SV-XPDR, SV-GPS, SV-ADSB Harness	125
P/N: 57535 GTN650 to ACM Harness	127
P/N: 57651 PDA-360 Audio Panel Harness	128

P/N: 57540 IFD-440/540 GPS Navigator Harness	129
P/N: 57700 SV-COM to ACM Harness	131
P/N: 57726 GTR-200 to ACM Harness	133
P/N: 57305 Back AF-5600, G5, CO, Ethernet Harness	134
<i>B & C Alternators</i> _____	135
<i>Upgrading from an ACM-FUSE to ACM-ECB – AF-5000</i> _____	136
<i>Changing a SV-COM Radio</i> _____	137
<i>AF-5000 EFIS Messages</i> _____	138
<i>Registration Information</i> _____	144

MANUAL REVISION HISTORY

REVISION	DATE	DESCRIPTION
1.0	12/31/2014	Original Release
2.0	4/9/2015	Updates
2.4	11/5/2015	IFD540 Configuration, Crimpers
2.5	12/23/2015	Updates
2.7	10/11/2016	SV EMS
3.0	12/16/2016	RV-14 Data, ACM Torque
4.0	9/1/2017	ACM-ECB
4.4	1/2/2018	Updated RV-14 Canopy and Harness Drawings
4.5	2/21/2018	Updated test procedure and CHT setup
4.6	2/23/2018	Updated IFR/VFR Testing
4.7	3/8/2018	Added Serial Port to plug chart
4.8	3/12/2018	Updated Install Checklist and Flap Testing
5.0	3/23/2018	Updated for ACM-ECB
5.1	4/6/2018	Added ACM-ECB Switch Settings
5.2	7/3/2018	Added Harness Drawing Section
5.3	2/1/2018	Added Panel Switch Operation Section
6.0	2/8/2018	Added ACM-ECB and Switch Operation, Harness Drawings
6.1	2/18/2018	Updated RV-14 schematics, Added Sportsman Drawings , RV-10 drawings

Overview


The Advanced Quick Panel system is based on our Advanced Control Module “ACM”. The ACM is available in two different versions, fused or electronic circuit breaker. The fused version uses lighted ATO style fuses for circuit protection. The electronic circuit breaker “ECB” version has internal circuit current monitoring and will shut off a circuit if the current is too high. With the ACM-ECB you can monitor the current of each circuit and reset any tripped circuits from the EFIS. The ACM is the main power distribution center for the aircrafts electrical system. The avionics, headsets, aircraft lights, autopilot servos, trim servos, flap motor, control sticks and panel switches all get connected to the ACM. Using the ACM with its plug and play features vastly simplifies an aircraft’s wiring and troubleshooting. The ACM also makes future upgrades extremely easy. Want to add an IFR Navigator in the future? No problem, just plug it into the ACM NAV-COM and GPS NAVIGATOR plugs. The complicated and time consuming (Audio Panel, GPS RS-232 data, NAV ARINC data and GPS ARINC) wiring is already done.



The ACM must never be used to power anything critical to Engine operation, including: Electronic Ignition, Electronic Fuel Injection or high pressure main electric fuel pumps.



ACM module with Electronic Circuit Breakers

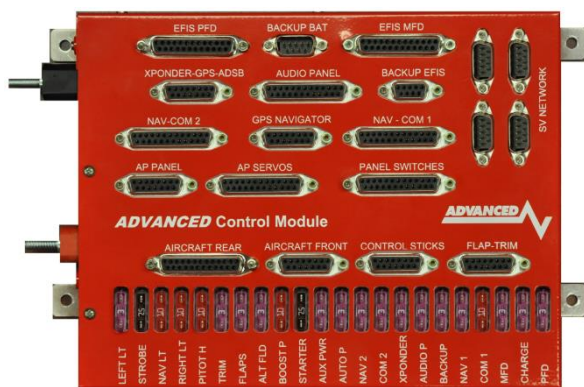

ACM module with Fuses

ACM Features

- **27 dedicated channels of circuit protection including:** PFD, MFD, BACKUP EFIS, TRANSPONDER-ADSB, COM 1, NAV 1, COM 2, NAV 2, GPS NAVIGATOR, AUDIO PANEL, CABIN LIGHTS, DEFROST, ALTERNATOR, AUX POWER, STARTER, BOOST PUMP, PITOT HEAT, LEFT LANDING LIGHT, RIGHT LANDING LIGHT, NAV LIGHTS, STROBE LIGHTS, TRIM MOTORS, AP SERVOS, FLAP MOTOR.

ACM-ECB ONLY: BACKUP ALTERNATOR, TAXI LIGHTS, SPARE POWER CIRCUIT, CABIN LIGHT SWITCH


- **Built in SV-ARINC module**
- **Multi Step Flap Positioning System**
- **Wig-Wag Lighting Circuit (airspeed controlled)**
- **Panel Dimmer**
- **Trim Controller (must have SV-AP-PANEL)**
- **SV Network Hub (4 Port + AP Servos)**
- **Panel Switch Interface with support for switch lights**
- **Control Stick Interface**

ACM Panel Switch Operation

The ACM can be used with either our standard switch modules using a 25 pin ribbon cable or custom switches wired to the ACM **PANEL SWITCHES** DSUB-25 pin connector. The operation of the panel switches should be the same for either a Skyview or AF-5000 equipped panel.



CAUTION: Do not fly the aircraft until you review and completely understand the proper use of each panel switch.

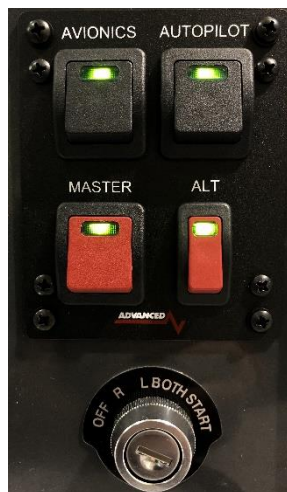

- MASTER** Turns on the Aircraft Master relay providing power to the ACM Main Power Input Red Post, this will turn on the EFIS PFD. This switch does not connect to an ACM Input.
- ALT** Signal to ACM to turn on the Alternator Field Power. **You should never turn ON the ALT switch with the MASTER switch OFF**
- AVIONICS** Signal to ACM to turn on the Avionics Bus in the ACM (EFIS MFD, Com1, Com2, Nav1, Nav2, Transponder, ADSB, Audio Panel)
- AUTOPILOT** Signal to ACM to turn on the Autopilot Servo power. **This switch must be ON before the Master Switch is turned on.** We recommend that this switch be left in the ON position and only turned off if you need to turn OFF power to the Autopilot Servos.
- BOOST PUMP** Signal to ACM to turn on the Electric Boost Pump
- STROBE / NAV** Signal to ACM to turn on the STROBE and NAV Lights
Signal to ACM to turn on the NAV Lights only, No Strobe. This is normally used when flying in the clouds.
- LAND LT / PULSE** Signal to ACM to turn on the Left and Right Landing Lights
Signal to ACM to alternate the Left and Right Landing Lights “wig-wag mode” when above the configured airspeed. The pulse airspeed is set in the **SET > CAL > 21. Electrical Configuration** menu.
- PITOT** Signal to ACM to turn on the Pitot Heat
- DEFROST** Signal to ACM to turn on the Defrost fans
- FLAPS** Optional panel switch to run the flaps up and down. Many installations will only have a flap switch on the control stick.


ACM-ECB Electronic Circuit Breaker Operation

The ACM-ECB is a solid-state system that replaces traditional buss bars, thermal circuit breakers, fuses and mechanical relays. The electronic circuit breaker is a solid-state circuit that monitors and reports the current for each circuit to an attached EFIS. If the current in the circuit exceeds the trip setting the ACM-ECB will turn off the circuit and report it on the EFIS screen. The tripped ECB can then be reset from the EFIS > ELECTRICAL menu. The current tripped state is preserved over a Master Relay power cycle for all channels other than the PFD EFIS circuit. All the circuits can be monitored from the EFIS Electrical page giving you far more information than a traditional circuit breaker or fuse.



CAUTION: Do not fly the aircraft until you review and completely understand the proper use of the EFIS Electrical Circuit Breaker Page.

Operating Range of ACM Electronic Circuit Breakers

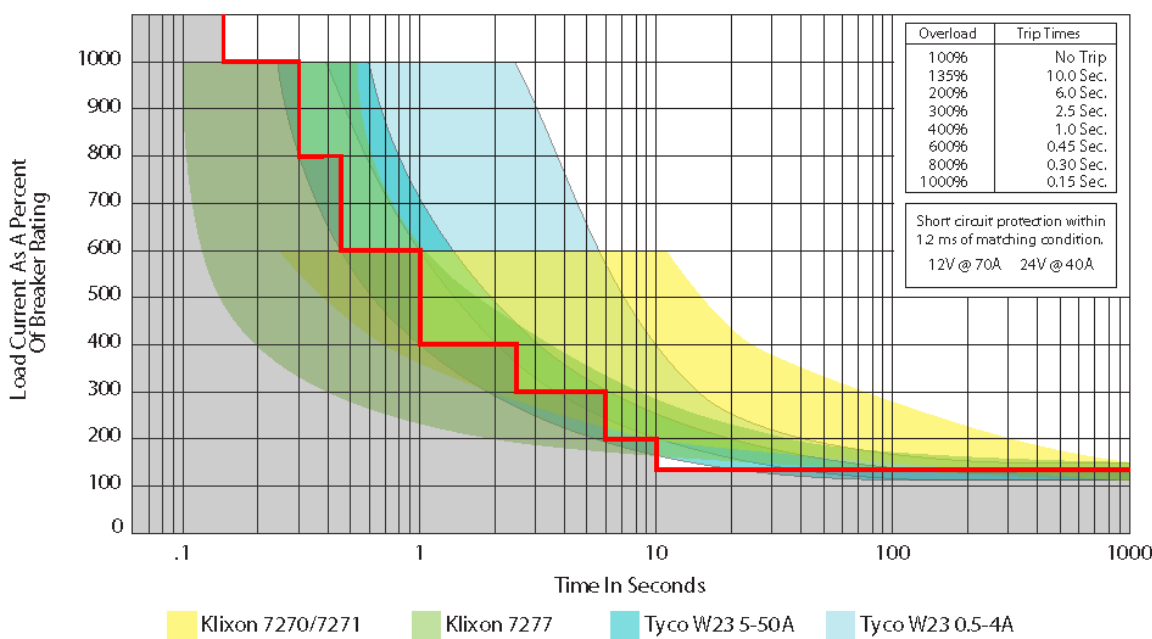

The red line indicates the trip level of the ACM-ECB Channel

AF-5000 Electrical Circuit Breaker Page

You access the Circuit Breaker electrical page by pressing the [CHECK] button followed by the [ELEC] button.



Total ACM-ECB Current AMPS being used

ACM-ECB Input Voltage

ACM-ECB Status

Landing Light Mode

A **Green Bar** indicates the circuit is turned ON. The current Circuit Amperage being used is displayed to the right of the circuit name.

A **Red Bar** indicates the circuit is Tripped and turned OFF.

The bottom of the page displays the circuit information for the highlighted circuit:

- **Circuit Name**
- **Rating in AMPS**
- **Controlling Switch**
- **Status**

Highlighted Circuit Control Buttons

[**SET**] Lets you change the circuit breaker size

[**ON**] Turn ON the Circuit, Ignores the switch position

[**OFF**] Trip the Circuit, must be RESET before you can turn it back ON

[**RESET**] Reset the Circuit Breaker



The FLAPS circuit also has buttons that enable you to move the flaps UP and DOWN independent of the control stick or panel FLAP switch. You should verify proper flap direction from this page before programming the flap positions. If the flaps are backwards you can reverse the polarity from the EFIS CAL Flap Menu. ***If the panel or stick flap control buttons are backwards you will need to swap the button wiring.***

[DOWN] Move Flaps down

[UP] Move Flaps up



Dynon Skyview Electrical Page

Total ACM-ECB Current AMPs being used

ACM-ECB Input Voltage

A **Green Bar** indicates the circuit is turned ON. The current Circuit Amperage being used is displayed to the right of the circuit name.



A **Yellow Bar** indicates the circuit is Tripped and turned OFF.

To Reset the Tripped circuit, use the right knob cursor to select and then press the knob.





In Flight Emergencies

Tripped Circuit Breaker

Advanced Flight Systems does not recommend RESET-ing a circuit breaker in flight. If a circuit breaker trips you should trouble shoot the overcurrent problem after landing.


Electrical Smoke

Turn **OFF** the **ALT** and **Master** switches (**Red Switches**), Turn OFF all the remaining panel switches. The PFD and MFD EFIS along with the attached Dynon GPS should continue to operate from the backup battery. When the electrical smoke stops you can if necessary, turn **ON** the **MASTER** Switch followed by individual critical circuits from the EFIS Electrical Page. ***If you detect smoke after turning on a circuit, you should immediately turn it back OFF***


Failed Switch

On an AF-5000 you can turn on individual circuits from the EFIS Electrical Page, Skyview does not have this capability

ACM Aircraft Wiring Overview

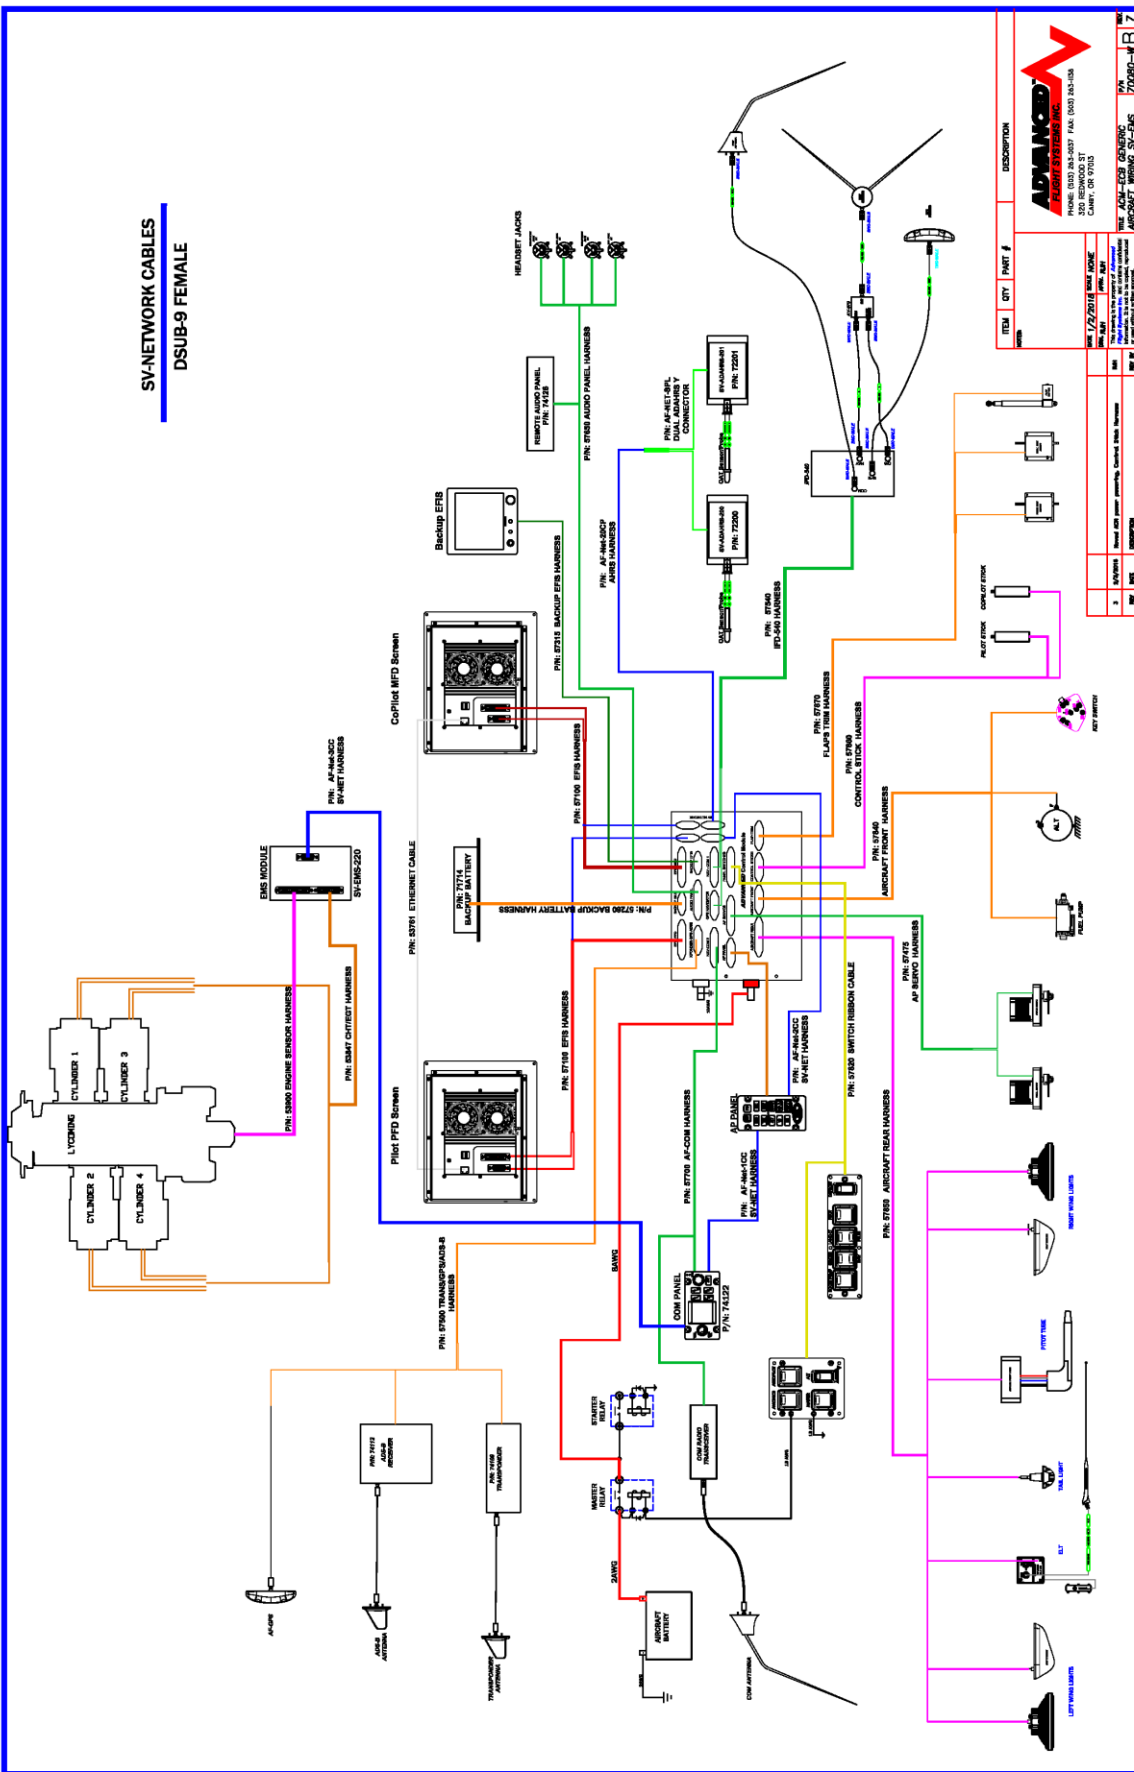


ACM Panel Switch Wiring & Logic

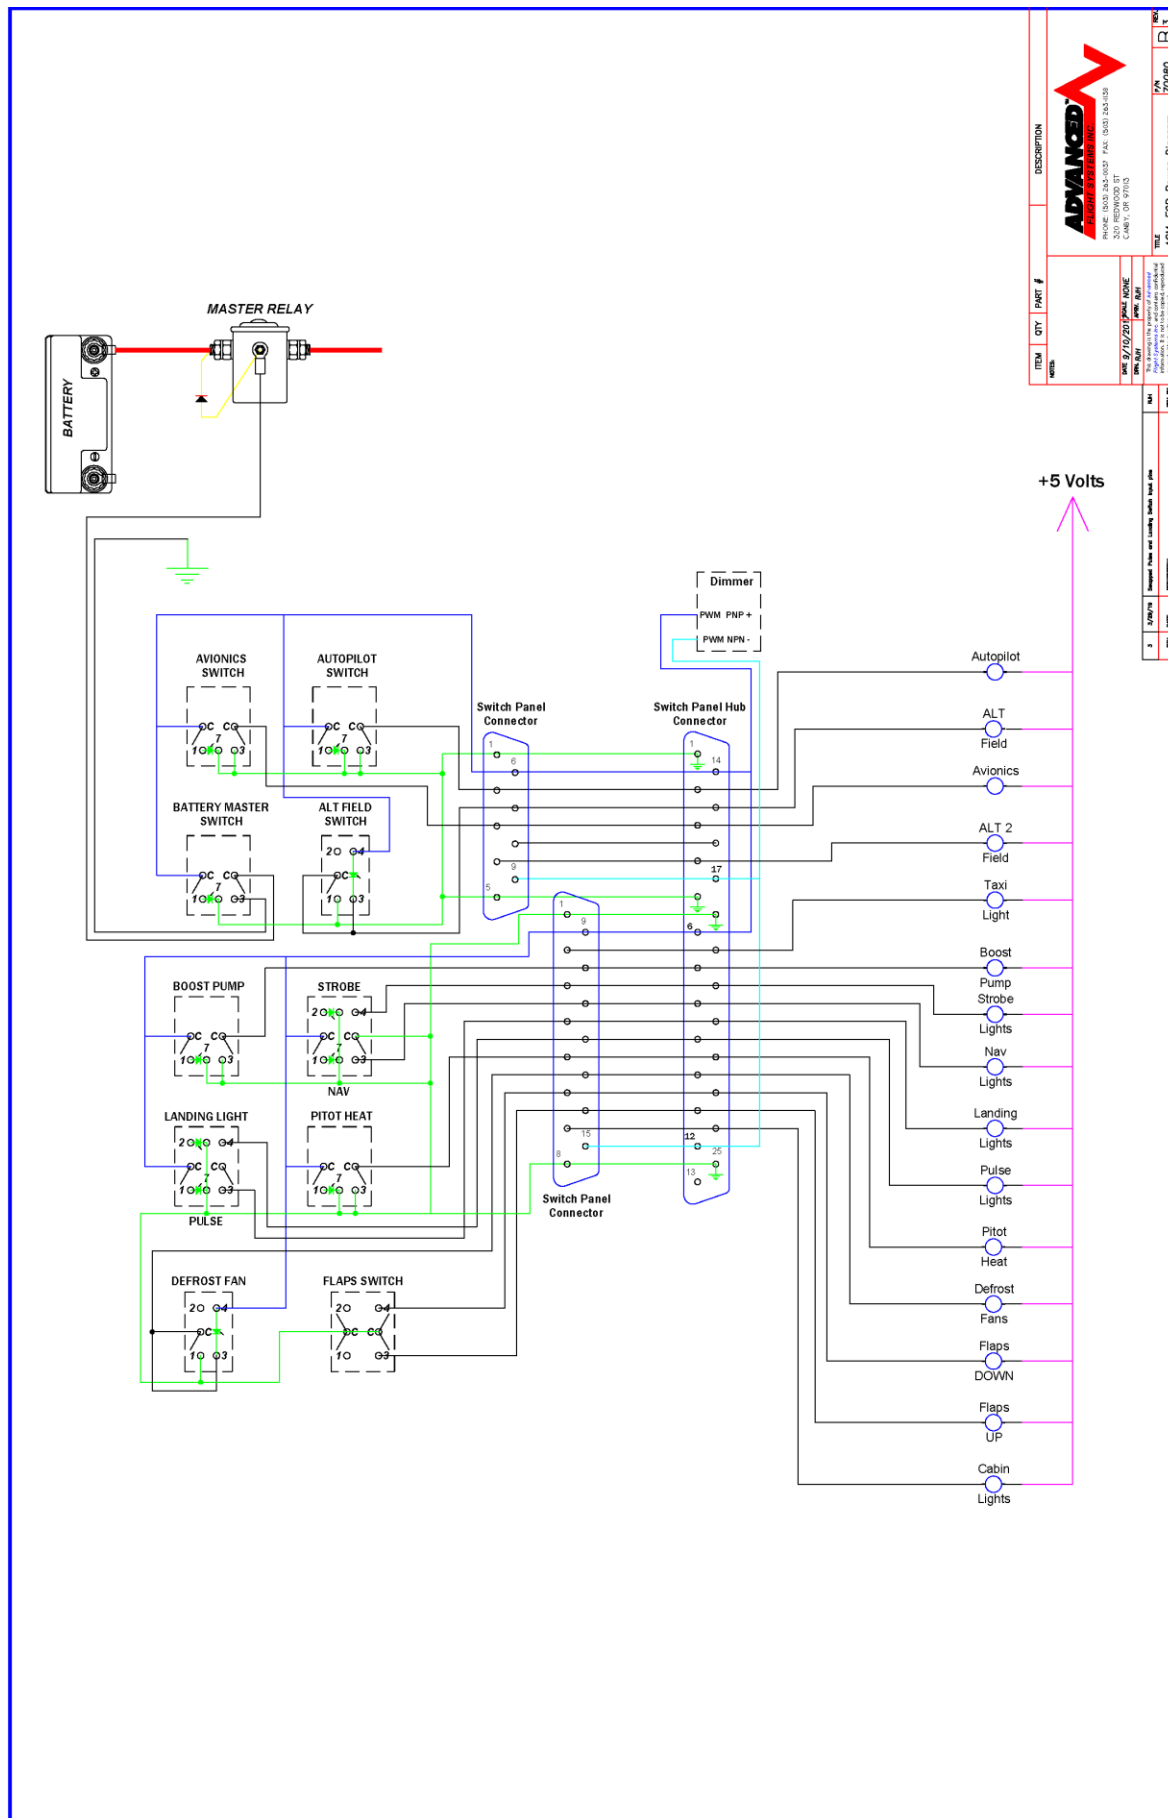

ITEM	QTY	PART #	DESCRIPTION
<p>ADVANCED FLIGHT SYSTEMS PHONE: (800) 746-9637 FAX: (503) 262-1339 320 REDWOOD ST CAMAS, OR 97103</p>			
<p>DATE: 8/12/2017 DRAWN: JAC REV: 001</p>			
<p>This document is the property of Advanced Flight Systems. It is to be used only for the project and aircraft for which it was prepared. It is not to be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Advanced Flight Systems.</p>			
<p>REV #1</p>			<p>REV #1</p>
<p>REV #2</p>			<p>REV #2</p>
<p>REV #3</p>			<p>REV #3</p>
<p>REV #4</p>			<p>REV #4</p>
<p>REV #5</p>			<p>REV #5</p>
<p>REV #6</p>			<p>REV #6</p>
<p>REV #7</p>			<p>REV #7</p>
<p>REV #8</p>			<p>REV #8</p>
<p>REV #9</p>			<p>REV #9</p>
<p>REV #10</p>			<p>REV #10</p>
<p>REV #11</p>			<p>REV #11</p>
<p>REV #12</p>			<p>REV #12</p>
<p>REV #13</p>			<p>REV #13</p>
<p>REV #14</p>			<p>REV #14</p>
<p>REV #15</p>			<p>REV #15</p>
<p>REV #16</p>			<p>REV #16</p>
<p>REV #17</p>			<p>REV #17</p>
<p>REV #18</p>			<p>REV #18</p>
<p>REV #19</p>			<p>REV #19</p>
<p>REV #20</p>			<p>REV #20</p>
<p>REV #21</p>			<p>REV #21</p>
<p>REV #22</p>			<p>REV #22</p>
<p>REV #23</p>			<p>REV #23</p>
<p>REV #24</p>			<p>REV #24</p>
<p>REV #25</p>			<p>REV #25</p>
<p>REV #26</p>			<p>REV #26</p>
<p>REV #27</p>			<p>REV #27</p>
<p>REV #28</p>			<p>REV #28</p>
<p>REV #29</p>			<p>REV #29</p>
<p>REV #30</p>			<p>REV #30</p>
<p>REV #31</p>			<p>REV #31</p>
<p>REV #32</p>			<p>REV #32</p>
<p>REV #33</p>			<p>REV #33</p>
<p>REV #34</p>			<p>REV #34</p>
<p>REV #35</p>			<p>REV #35</p>
<p>REV #36</p>			<p>REV #36</p>
<p>REV #37</p>			<p>REV #37</p>
<p>REV #38</p>			<p>REV #38</p>
<p>REV #39</p>			<p>REV #39</p>
<p>REV #40</p>			<p>REV #40</p>
<p>REV #41</p>			<p>REV #41</p>
<p>REV #42</p>			<p>REV #42</p>
<p>REV #43</p>			<p>REV #43</p>
<p>REV #44</p>			<p>REV #44</p>
<p>REV #45</p>			<p>REV #45</p>
<p>REV #46</p>			<p>REV #46</p>
<p>REV #47</p>			<p>REV #47</p>
<p>REV #48</p>			<p>REV #48</p>
<p>REV #49</p>			<p>REV #49</p>
<p>REV #50</p>			<p>REV #50</p>
<p>REV #51</p>			<p>REV #51</p>
<p>REV #52</p>			<p>REV #52</p>
<p>REV #53</p>			<p>REV #53</p>
<p>REV #54</p>			<p>REV #54</p>
<p>REV #55</p>			<p>REV #55</p>
<p>REV #56</p>			<p>REV #56</p>
<p>REV #57</p>			<p>REV #57</p>
<p>REV #58</p>			<p>REV #58</p>
<p>REV #59</p>			<p>REV #59</p>
<p>REV #60</p>			<p>REV #60</p>
<p>REV #61</p>			<p>REV #61</p>
<p>REV #62</p>			<p>REV #62</p>
<p>REV #63</p>			<p>REV #63</p>
<p>REV #64</p>			<p>REV #64</p>
<p>REV #65</p>			<p>REV #65</p>
<p>REV #66</p>			<p>REV #66</p>
<p>REV #67</p>			<p>REV #67</p>
<p>REV #68</p>			<p>REV #68</p>
<p>REV #69</p>			<p>REV #69</p>
<p>REV #70</p>			<p>REV #70</p>
<p>REV #71</p>			<p>REV #71</p>
<p>REV #72</p>			<p>REV #72</p>
<p>REV #73</p>			<p>REV #73</p>
<p>REV #74</p>			<p>REV #74</p>
<p>REV #75</p>			<p>REV #75</p>
<p>REV #76</p>			<p>REV #76</p>
<p>REV #77</p>			<p>REV #77</p>
<p>REV #78</p>			<p>REV #78</p>
<p>REV #79</p>			<p>REV #79</p>
<p>REV #80</p>			<p>REV #80</p>
<p>REV #81</p>			<p>REV #81</p>
<p>REV #82</p>			<p>REV #82</p>
<p>REV #83</p>			<p>REV #83</p>
<p>REV #84</p>			<p>REV #84</p>
<p>REV #85</p>			<p>REV #85</p>
<p>REV #86</p>			<p>REV #86</p>
<p>REV #87</p>			<p>REV #87</p>
<p>REV #88</p>			<p>REV #88</p>
<p>REV #89</p>			<p>REV #89</p>
<p>REV #90</p>			<p>REV #90</p>
<p>REV #91</p>			<p>REV #91</p>
<p>REV #92</p>			<p>REV #92</p>
<p>REV #93</p>			<p>REV #93</p>
<p>REV #94</p>			<p>REV #94</p>
<p>REV #95</p>			<p>REV #95</p>
<p>REV #96</p>			<p>REV #96</p>
<p>REV #97</p>			<p>REV #97</p>
<p>REV #98</p>			<p>REV #98</p>
<p>REV #99</p>			<p>REV #99</p>
<p>REV #100</p>			<p>REV #100</p>

ACM Power Diagram & Logic

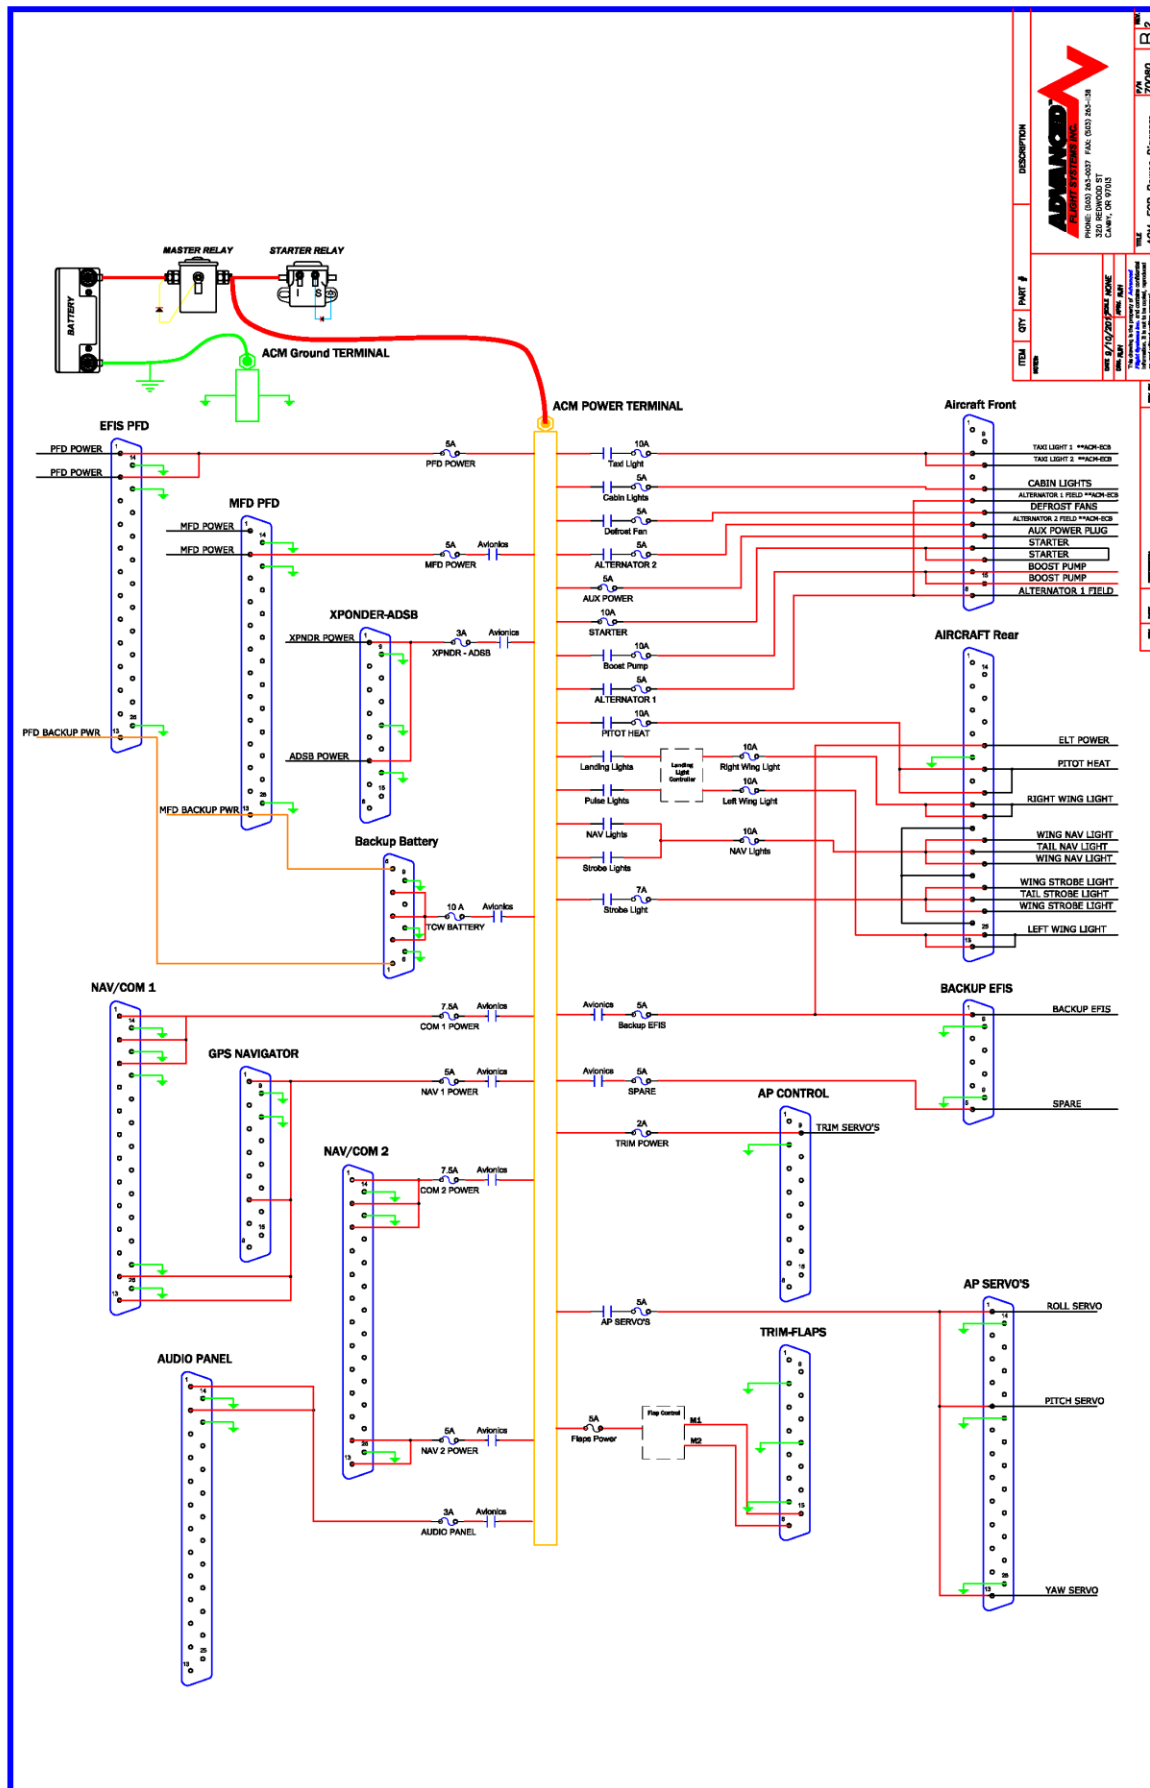

DESCRIPTION: ACM-ECB Power Diagram

DATE: 7/2008

REV: 1

REV: 2/12/2011

REV: 3/2013

REV: 4/2013

REV: 5/2013

REV: 6/2013

REV: 7/2013

REV: 8/2013

REV: 9/2013

REV: 10/2013

REV: 11/2013

REV: 12/2013

REV: 13/2013

REV: 14/2013

REV: 15/2013

REV: 16/2013

REV: 17/2013

REV: 18/2013

REV: 19/2013

REV: 20/2013

REV: 21/2013

REV: 22/2013

REV: 23/2013

REV: 24/2013

REV: 25/2013

REV: 26/2013

REV: 27/2013

REV: 28/2013

REV: 29/2013

REV: 30/2013

REV: 31/2013

REV: 32/2013

REV: 33/2013

REV: 34/2013

REV: 35/2013

REV: 36/2013

REV: 37/2013

REV: 38/2013

REV: 39/2013

REV: 40/2013

REV: 41/2013

REV: 42/2013

REV: 43/2013

REV: 44/2013

REV: 45/2013

REV: 46/2013

REV: 47/2013

REV: 48/2013

REV: 49/2013

REV: 50/2013

REV: 51/2013

REV: 52/2013

REV: 53/2013

REV: 54/2013

REV: 55/2013

REV: 56/2013

REV: 57/2013

REV: 58/2013

REV: 59/2013

REV: 60/2013

REV: 61/2013

REV: 62/2013

REV: 63/2013

REV: 64/2013

REV: 65/2013

REV: 66/2013

REV: 67/2013

REV: 68/2013

REV: 69/2013

REV: 70/2013

REV: 71/2013

REV: 72/2013

REV: 73/2013

REV: 74/2013

REV: 75/2013

REV: 76/2013

REV: 77/2013

REV: 78/2013

REV: 79/2013

REV: 80/2013

REV: 81/2013

REV: 82/2013

REV: 83/2013

REV: 84/2013

REV: 85/2013

REV: 86/2013

REV: 87/2013

REV: 88/2013

REV: 89/2013

REV: 90/2013

REV: 91/2013

REV: 92/2013

REV: 93/2013

REV: 94/2013

REV: 95/2013

REV: 96/2013

REV: 97/2013

REV: 98/2013

REV: 99/2013

REV: 100/2013

Getting Started

The following is a general recommendation on the steps required to install the Advanced Quick Panel:


- Disconnect the Aircraft Battery
- Remove the old panel from the aircraft (if upgrading). Label each wire as you disconnect them from the old panel switches and components.
- Mark all remote component locations and drill mounting holes using the information from the Remote Component Mounting section of this manual or supplied layout drawings.
- Cut any required clearance holes in the sub-panel.
- Remove EFIS screens from the new Panel for sub panel access. You will need to press the release buttons on the side of the USB data connector to get the cable to release
- Test fit new panel and trim panel ribs for clearance if required.
- Configure the ACM-ECB Jumpers on the back of the unit
- Mount the ACM Module.
- Connect the #8 main power wire from the battery master relay to the red power lug on the ACM. The main power wire should have a ¼" (0.250") ring terminal with a molded plastic cover. Torque to 30 in-lbs
- Connect the #10 airframe ground wire from the airframe ground to the black power lug on the ACM. The ACM main ground wire should have a #10 ring terminal with a molded plastic cover. Torque to 24 in-lbs
- Connect your existing aircraft Landing Lights, Nav Lights, Strobe Lights, Pitot Heat, and ELT to the supplied P/N: 57850 Aircraft Rear Harness ACM connector. You must limit the power on each D-Sub pin to less than 5 amps by using multiple pins at the connector. The recommended procedure is to use 20ga wire for each pin and then use a Solder Sleeve to connect the multiple wires to the larger gage wire going to the device.



SOLDER SLEEVE 1/4", Outside diameter: .050" - .200"

EDMO #: L-C-3
MFR #: STS L-C-3

Termination jackets consist of a heat-shrinkable, transparent, polyvinylidene fluoride jacket with an inner, pre-fluxed, solder preform and two thermoplastic sealing inserts. When heat is applied, the solder melts and flows to provide a superior connection between the ground lead and the shield. At the same time, the two thermoplastic sealing inserts melt and the outer sleeve shrinks to provide an environmentally protected termination. This L-C series of solder jackets does not have a ground lead.

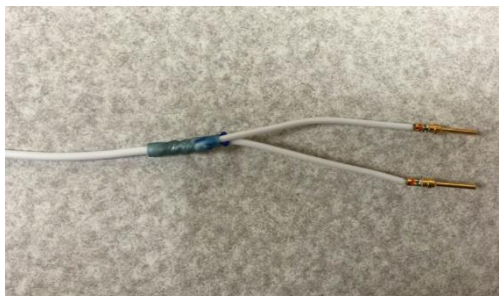


- Connect your existing aircraft Fuel Pump, Alternator, and Starter Switch to the supplied P/N: 57840 Aircraft Front Harness ACM connector.
- Connect your existing aircraft Control Stick switches to the supplied P/N: 57860 Aircraft Control Stick ACM connector.
- Connect your existing aircraft flap and trim motor wiring to the supplied P/N: 57870 Flap and Trim motor ACM connector.
- Mount the SV-200 and SV-201 ADAHRS units in the aircraft using the instructions from the AF-5000 manual.
- Mount the OAT sensor to the bottom of the wing. Wire the OAT sensor to the ADAHRS
- Plump Pitot, Static and AOA to the mounted ADAHRS
- Wire the ADAHRS to the spare SV Network DSUB-9 connector on the ACM module
- Wire the Autopilot servos to the ACM AP Servo connector
- Mount the remote components to the sub panel.
- Mount the AF-GPS module and connect to the ACM harness
- Connect aircraft Antennas to the remote radios (Transponder, Com, ADS-B in, ...)
- Install the Engine Sensors
- Connect the Engine Sensors to the EMS and CHT/EGT Harness. The Engine Harnesses should route to the Left PFD EFIS display in the panel. BE sure to leave service loop of cable to make installing the EFIS PFD easier.
- Mount the Panel using the supplied mounting screws.
- Connect the aircraft Master relay to the screw terminals on the back of the Master Switch PCB board.
- Verify that you have protection diodes installed in your master and starter relay.
- Wire Aircraft Magneto P-Leads to the Key Switch.
- Carefully connect and route all the supplied panel harnesses to the ACM module.
- Double check that all ACM harnesses are connected to the correct DSUB connector.
- Install the EFIS PFD connecting the EFIS Main Connector, EFIS AUX connector, Ethernet, and USB data port wire.
- Install the EFIS MFD and connectors
- Connect the Aircraft Battery, verify that it is charged
- Turn on the Autopilot Panel Power Switch (should always be on before EFIS power up)
- Turn on the Panel Master Switch and verify that the EFIS PFD powers up
- Turn on the Panel Avionics Switch and verify that the EFIS MFD and Radios power up.

ACM-ECB Specifications

The ACM should be mounted on the sub panel behind the instrument panel. The Fused and Electronic Circuit Breaker versions are the same size and mounting. The ACM module should be mounted to the sub panel using four 10-32 screws and nut plates.

ACM Mounting

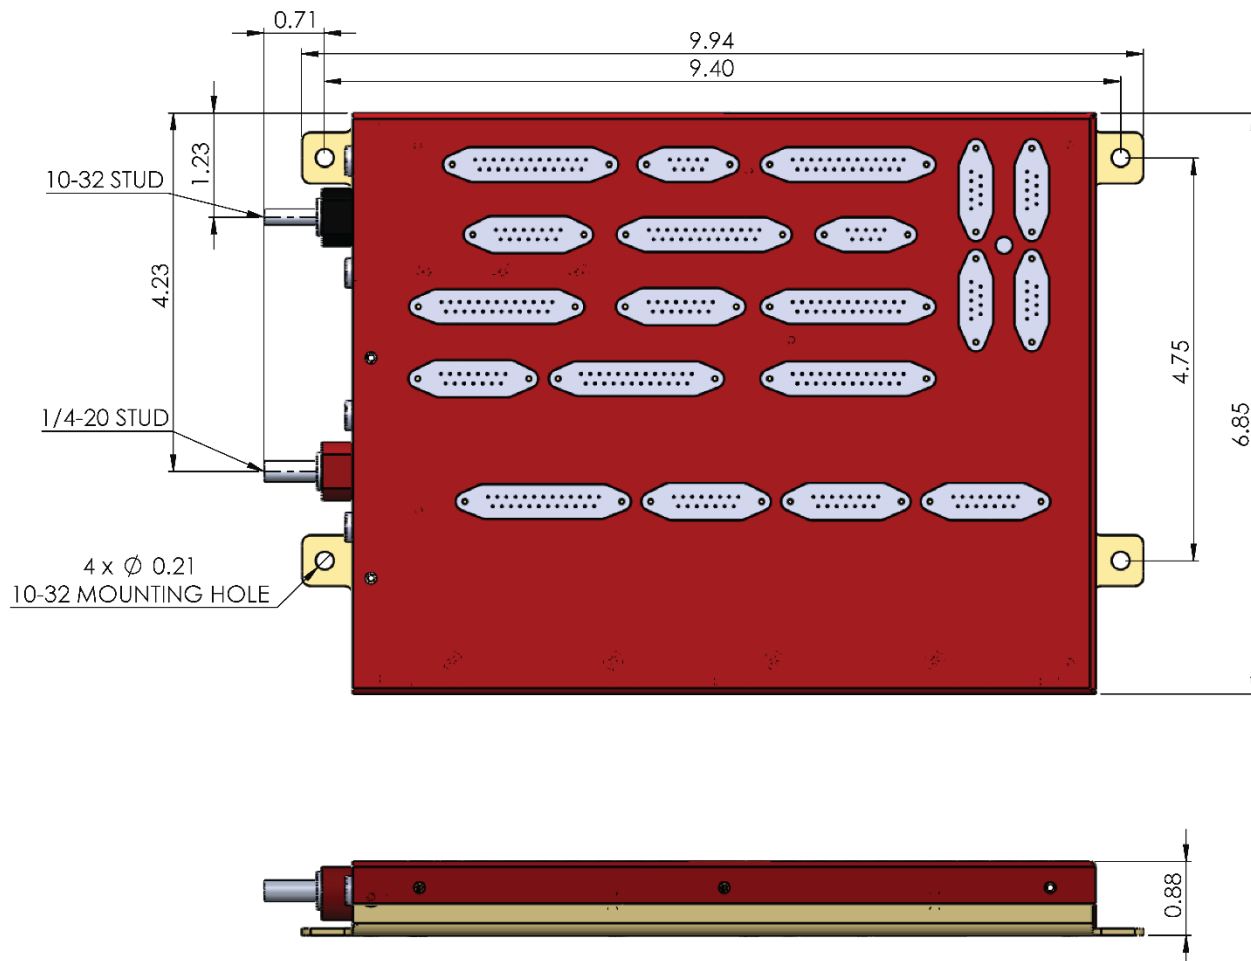

Do not over-torque the power terminal nuts, they are soft copper and will break if over-torqued.

Red Main Power Terminal Nut Torque: 30 in-lbs

Black Main Ground Terminal Nut Torque: 24 in-lbs


Component Weights

ACM-ECB Module	2 Lbs	3 oz
Master Switch Module		5 oz
Lower Switch Module		7 oz


ACM-ECB Configuration Switch Settings

The Electronic Circuit Breaker version of the ACM has configuration switches on the back of the unit must be set for proper RS-232 serial port operation. The switch settings control how the EFIS PFD and MFD serial ports are routed to the attached devices. On a dual (PFD/MFD) EFIS screen AF-5000 system you will have a total of 10 serial ports to control attached devices. On a Skyview system both the PFD and MFD serial ports must be tied together so you end up with only 5 serial ports.

AF-5000 Settings

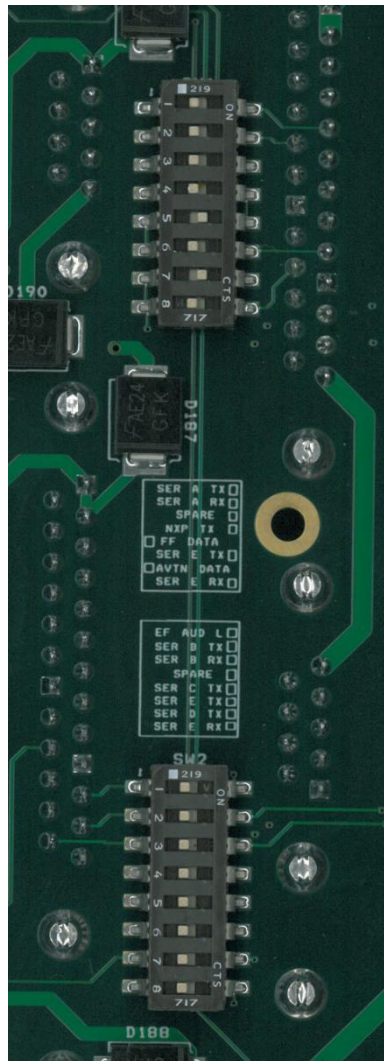

Skyview Settings

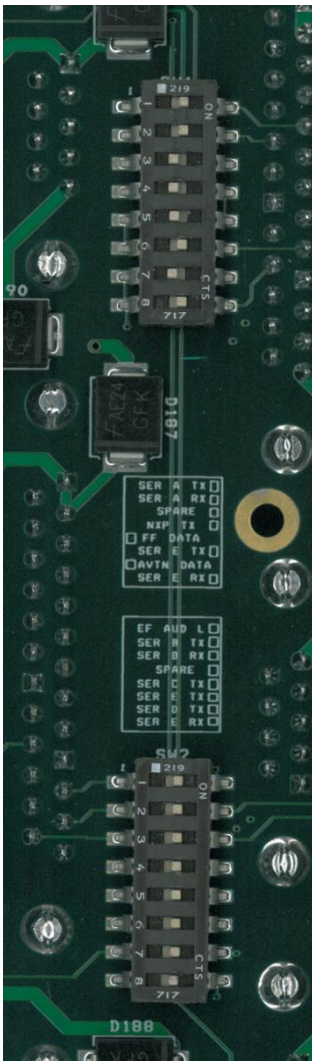

Dual EFIS AF-5000 Settings

SW1 >> CLOSED (ON) Grey is Switch Position

ACM RX<	PFD 0 TX	MFD 0 TX	>BACKUP EFIS RX
ACM TX>	PFD 0 RX	MFD 0 RX	<BACKUP EFIS TX
	Spare	spare	
NOT SUPPORTED	ARINC SP2 TX	GPS NAV RX	>GPS Nav Fuel Flow
PFD FUEL FLOW>	PFD 4 TX	GPS NAV RX	>GPS Nav Fuel Flow
	PFD 4 TX	MFD 4 TX	>DYNON GPS RX
PFD AVTN data<	PFD 4 RX	GPS NAV TX	<GPS Nav AVTN DATA
	PFD 4 RX	MFD 4 RX	<Dynon GPS TX

SW2 >> CLOSED (ON) Grey is Switch Position

EFIS AUDIO L			AUDIO PANEL
ACM TX>	PFD 1 TX	MFD 1 TX	>ELT/COM2 TUNE RX
	PFD 1 RX	MFD 1 RX	< COM2 TUNE TX
	SPARE	SPARE	
XPNDR RX<	PFD 2 TX	MFD 2 TX	>CO DETECT RX
XPNDR TX>	PFD 2 RX	MFD 2 RX	<CO DETECT TX
IFD RADIO TUNE RX	PFD 3 TX	MFD 3 TX	>ADSB RX
IFD RADIO TUNE TX	PFD 3 RX	MFD 3 RX	<ADSB TX

Single EFIS AF-5000 Settings

SW1 >> CLOSED (ON) Grey is Switch Position

ACM RX<	PFD 0 TX	MFD 0 TX	>BACKUP EFIS RX
ACM TX>	PFD 0 RX	MFD 0 RX	<BACKUP EFIS TX
	Spare	spare	
NOT SUPPORTED	ARINC SP2 TX	GPS NAV RX	>GPS Nav Fuel Flow
PFD FUEL FLOW>	PFD 4 TX	GPS NAV RX	>GPS Nav Fuel Flow
	PFD 4 TX	MFD 4 TX	>DYNON GPS RX
PFD AVTN data<	PFD 4 RX	GPS NAV TX	<GPS Nav AVTN DATA
	PFD 4 RX	MFD 4 RX	<Dynon GPS TX

SW2 >> CLOSED (ON)

EFIS AUDIO L			AUDIO PANEL
AUDIO P TX>	PFD 1 TX	MFD 1 TX	>ELT/COM2 TUNE RX
AUDIO P RX<	PFD 1 RX	MFD 1 RX	< COM2 TUNE TX
	SPARE	SPARE	
XPNDR RX<	PFD 2 TX	MFD 2 TX	>CO DETECT RX
XPNDR TX>	PFD 2 RX	MFD 2 RX	<CO DETECT TX
IFD RADIO TUNE RX	PFD 3 TX	MFD 3 TX	>ADSB RX
IFD RADIO TUNE TX	PFD 3 RX	MFD 3 RX	<ADSB TX

SKYVIEW EFIS Settings

SW1 >> CLOSED (ON) Grey is Switch Position

ACM RX<	PFD 0 TX	MFD 0 TX	>BACKUP EFIS RX
ACM TX>	PFD 0 RX	MFD 0 RX	<BACKUP EFIS TX
	Spare	spare	
NOT SUPPORTED	ARINC SP2 TX	GPS NAV RX	>GPS Nav Fuel Flow
PFD FUEL FLOW>	PFD 4 TX	GPS NAV RX	>GPS Nav Fuel Flow
	PFD 4 TX	MFD 4 TX	>DYNON GPS RX
PFD AVTN data<	PFD 4 RX	GPS NAV TX	<GPS Nav AVTN DATA
	PFD 4 RX	MFD 4 RX	<Dynon GPS TX

SW2 >> CLOSED

EFIS AUDIO L			AUDIO PANEL
AUDIO P TX>	PFD 1 TX	MFD 1 TX	>ELT/COM2 TUNE RX
AUDIO P RX<	PFD 1 RX	MFD 1 RX	< COM2 TUNE TX
	SPARE	SPARE	
XPNDR RX<	PFD 2 TX	MFD 2 TX	>CO DETECT RX
XPNDR TX>	PFD 2 RX	MFD 2 RX	<CO DETECT TX
IFD RADIO TUNE RX	PFD 3 TX	MFD 3 TX	>ADSB RX
IFD RADIO TUNE TX	PFD 3 RX	MFD 3 RX	<ADSB TX

DSUB Pin Crimper Tools

Daniels Mil Spec Crimper AFM8

Part Number: M22520/2-01



AFM8 Positioner for Standard D-Sub Connectors

DMC Part Number: K13-1



Less expensive crimpers are available from a number of sources.
Crimper, D-Sub, Closed Barrel Contacts, 4-Way Indent AWG 26-20





CAUTION: Do not fly the aircraft until the following check list has been completed.

Never Power the system with an automotive battery charger and the aircraft battery disconnected.

Before Power is applied for the First Time

- Verify ACM-ECB Configuration Switch Settings
- Aircraft ground is properly connected to the ACM Module **BLACK** Terminal Verify relay protection diodes are installed on all large aircraft relays (Master, Starter, Avionics...etc)
- Pitot/Static and AOA plumbing is secured to the correct ports on the ADAHRS
- All Component Harnesses have been properly connected to the correct ports on the ACM module.

Applying Power for the First Time

- The **BLACK** Autopilot switch controls power to the autopilot servos. The Autopilot switch should be ON before powering up the EFIS screens.
- The **RED** Master Switch controls power to the Pilot PFD EFIS screen.
- The **BLACK** Avionics switch controls power to the MFD EFIS and all radios

AF-5000 EFIS Software Configuration (Must be done before first engine start and flight)

- Enter the EFIS instrument calibration menu by pressing the [SET] button followed by holding the [CAL] button on both EFIS screens.
- Scan for Network devices using the 2. SV-NETWORK Menu from the PFD EFIS.
- Press the PFD Update Button in the SV-Network Menu if any devices indicate they need updating.
- Verify that both EFIS screens are getting ADAHRS and Engine Data.
- Calibrate Trim Positions
- Configure and Test the Flaps



- Verify that the flaps run in the correct direction using the Flaps Up and Down Buttons on the CHECK > ELECTRICAL Page. If they are backwards swap the motor leads or use the Reverse Polarity setting in the CAL > FLAPS menu
- Verify that the flaps run in the correct direction using the panel mounted flap switch or Stick Grip buttons. **If they are backwards you MUST Swap the wires to the flap switch or buttons.**
- Verify that the Flap position value changes in the CAL > Flaps menu when you move the flaps.
- Program the Flap positions in the CAL > Flaps menu
- Verify that the flaps stop at the correct locations.

- Calibrate Autopilot servos
- Test Autopilot servos
- Verify that the Engine parameters are correct on both EFIS screens. Configure the engine sensor types and range markings for your engine. (CHT – J type, EGT K-type, Oil Pressure, Fuel Pressure,)
- Verify that all transponder settings are correct in both EFIS screens, including aircraft N Number
- Calibrate and verify the Fuel Tank sensors.
- Get a Pitot/Static and Transponder Test before the first flight.

Skyview HDX EFIS Software Configuration (Must be done before first engine start and flight)

- **Verify that your HDX screens are running software version 15.4 or newer, update if needed.**
- Enter the EFIS instrument calibration menu by holding down the right two buttons on the PFD
- Enter Aircraft Information: Tail Number, Total Fuel Capacity, ...



- Scan for Network devices by pressing the DETECT button in SKYVIEW NETWORK SETUP



- Configure ACM SETUP



- Configure ACM-ECB Circuit Breaker Sizes in 1/10 amp for each circuit




- Configure SV-EMS from the EMS Setup page to match your engine sensors.



- Configure Engine Information



- Configure SV-EMS Sensor Input Mapping to match your engine sensor wiring

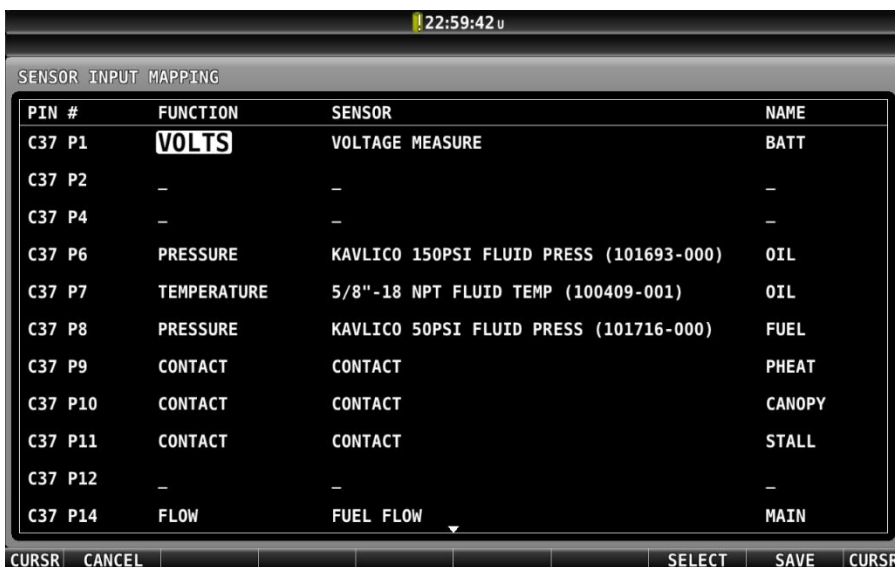

*The Flaps, Aileron and Elevator Trim do not use the SV-EMS inputs



23:00:02 u

SENSOR INPUT MAPPING

PIN #	FUNCTION	SENSOR	NAME
C37 P33/35	RPM	RPM	RPM R
C37 P36/37	-	-	-
C25 P2/14	-	-	-
C25 P3/15	-	-	-
C25 P4/16	-	-	-
C25 P5/17	-	-	-
C25 P6/18	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 4
C25 P7/19	TEMPERATURE	K-TYPE THERMOCOUPLE (EGT)	EGT 4
C25 P8/20	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 3
C25 P9/21	TEMPERATURE	K-TYPE THERMOCOUPLE (EGT)	EGT 3
C25 P10/22	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 2

CURSR CANCEL SELECT SAVE CURSR

- Configure SV-EMS C25 Pins for CHT and EGT Probes

23:00:10 u

SENSOR INPUT MAPPING

PIN #	FUNCTION	SENSOR	NAME
C25 P3/15	-	-	-
C25 P4/16	-	-	-
C25 P5/17	-	-	-
C25 P6/18	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 4
C25 P7/19	TEMPERATURE	K-TYPE THERMOCOUPLE (EGT)	EGT 4
C25 P8/20	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 3
C25 P9/21	TEMPERATURE	K-TYPE THERMOCOUPLE (EGT)	EGT 3
C25 P10/22	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 2
C25 P11/23	TEMPERATURE	K-TYPE THERMOCOUPLE (EGT)	EGT 2
C25 P12/24	TEMPERATURE	J-TYPE THERMOCOUPLE (CHT)	CHT 1
C25 P13/25	TEMPERATURE	K-TYPE THERMOCOUPLE (EGT)	EGT 1

CURSR CANCEL SELECT SAVE CURSR

- Configure Skyview SENSOR SETUP for each engine gauge

17:17:08 u

SENSOR SETUP	MAP PRESSURE CONFIGURATION (INHG)
BATT VOLTS	ALARM OFF
OIL PRESSURE	MAXIMUM GRAPHICAL DISPLAY 40.0 INHG
OIL TEMPERATURE	MINIMUM GRAPHICAL DISPLAY 0.0 INHG
FUEL PRESSURE	SHOW SENSOR UNITS YES
PHEAT CONTACT	RANGE 1
MAIN FLOW	ENABLE YES
LEFT LEVEL	COLOR GREEN
RIGHT LEVEL	TOP 36.0 INHG
AMPS AMPS	BOTTOM 0.0 INHG
MAP PRESSURE	RANGE 2
RPM RPM	ENABLE YES

CURSR BACK EXIT CURSR

- Configure Skyview Serial Ports

Serial Port 1 : Advanced CTRL Module



Serial Port 2 : NMEA 9600 OUT for ELT Data



Serial Port 3 : SV-XPNDR-261




Serial Port 4 : SV-ADSB-472




Serial Port 5 : SV-GPS-250 or SV-GPS-2020



- Calibrate Trim Positions

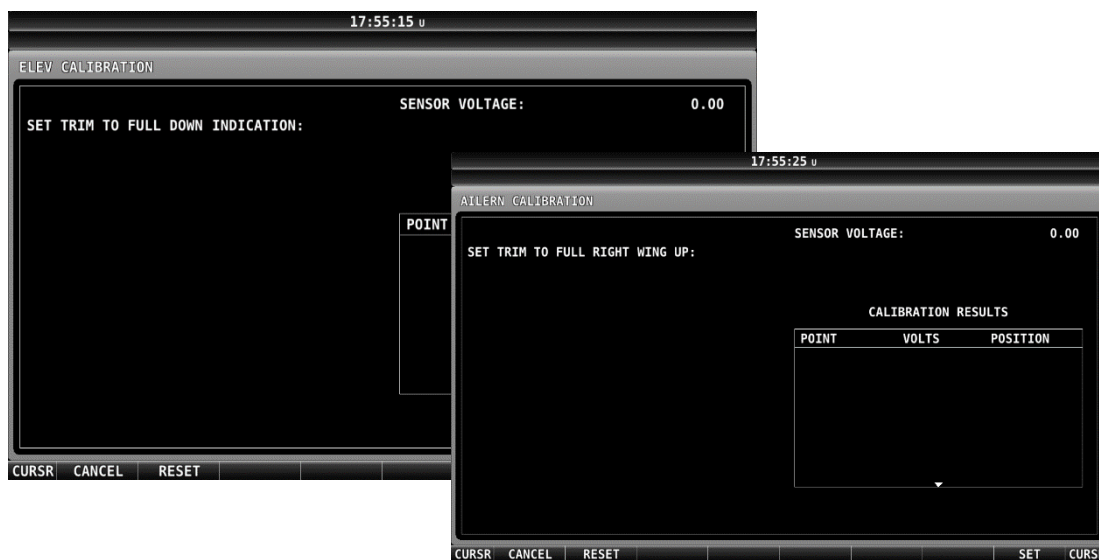

- Configure and Test the Flaps

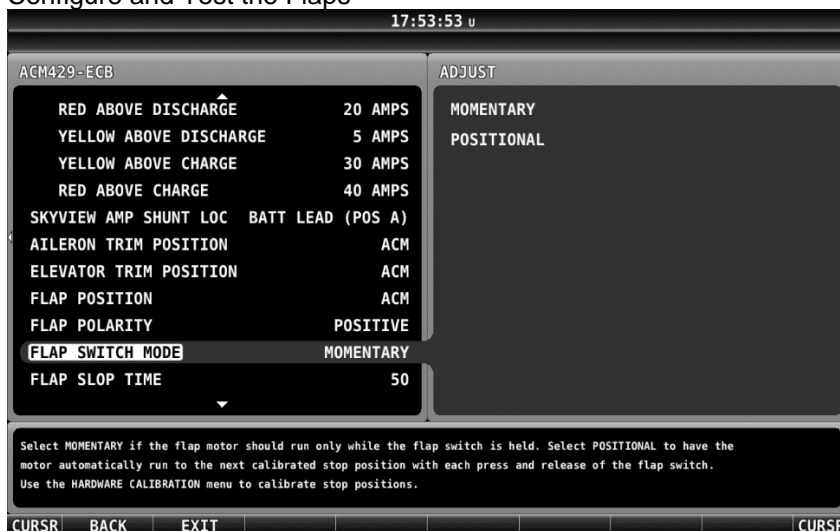


- Verify that the flaps run in the correct direction using the Flaps Up and Down Buttons on the ELECTRICAL Page. If they are backwards swap the motor leads or use the Reverse Polarity setting in setup menu.




- Verify that the flaps run in the correct direction using the panel mounted flap switch or Stick Grip buttons. **If they are backwards you MUST Swap the wires to the flap switch or buttons.**
- Verify that the Flap position value changes in the Setup > Flaps menu when you move the flaps.

d. Program the Flap positions in the Configuration Menu

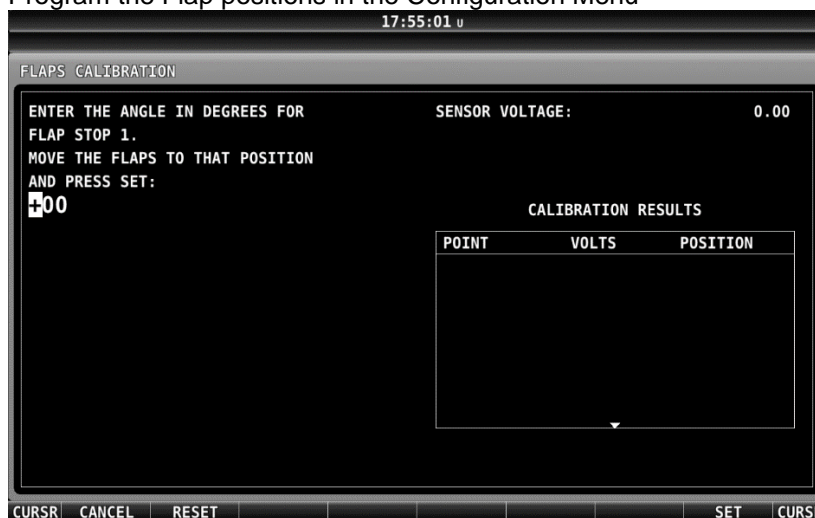

e. Verify that the flaps stop at the correct locations.

- Calibrate Autopilot servos
- Test Autopilot servos
- Calibrate and verify the Fuel Tank sensors.

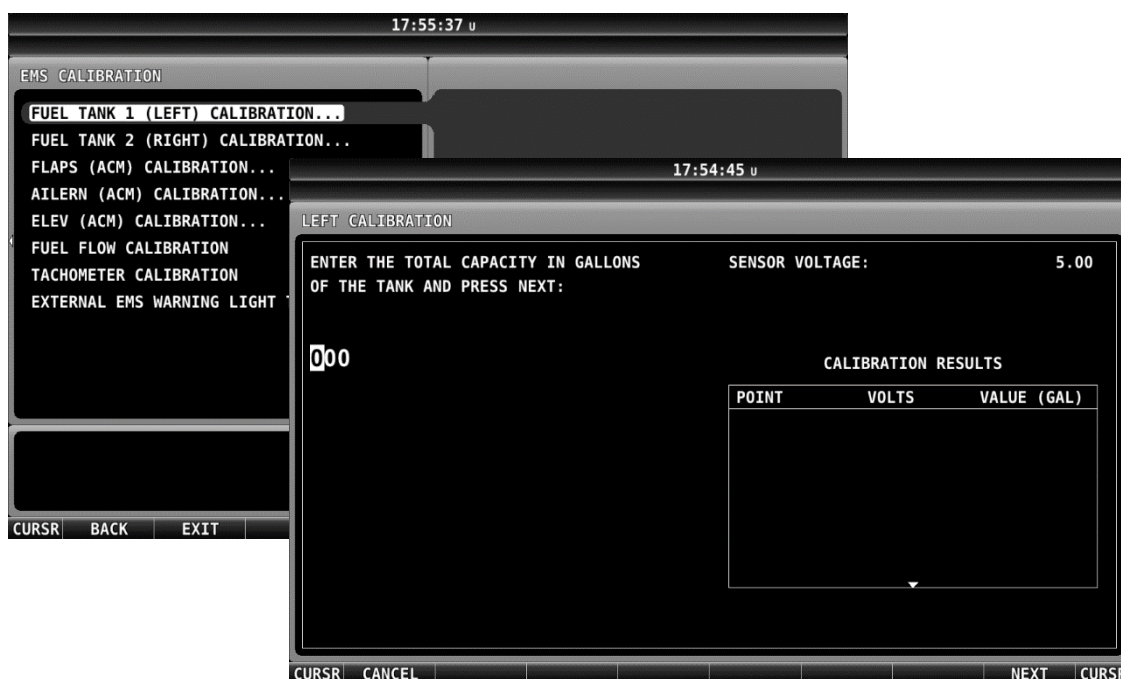

- Verify that both EFIS screens are getting ADAHRS and Engine Data
- Get a Pitot/Static and Transponder Test before the first flight.

First Engine Start

- With relay protection diodes installed, your EFIS screens can be turned on before the engine is started.
- After the engine has started, verify oil pressure and temperature. If none is indicated **SHUT DOWN**, the engine. Verify all wiring and consult your local A&P, the engine manufacturer, and/or AFS technical support.
- Verify all engine indications are correct per your **engine manufacturers** manual.


Before First Flight

- Verify you have the latest system software and mapping data (if applicable) - Visit the Dynon/AFS Website for latest software and map data
- Weight & Balance page updated with **your** aircrafts data
- Checklist pages updated with information from your **aircraft manufacturer**
- Magnetometer ADAHRS Alignment completed
- Pitot/Static check completed from an authorized FAA Repair Station.
- **Verify that both aircraft ignition system are properly wired and functioning**
- **Verify that Aircraft fuel system (Flow Meter, Pressure Transducer) is properly plumbed and not leaking.**
- **Perform a minimum fuel flow test and verify each tanks unusable fuel quantity.**




Verify that the RPM, Oil Pressure, Fuel Pressure, Fuel Flow, Manifold Pressure, Oil Temperature, CHT and EGT temperatures are correct and reasonable during a high-power run-up. *Never take-off with high temperatures or abnormal readings.*

ACM-EFIS RS-232 Serial Port Mapping AF-5000

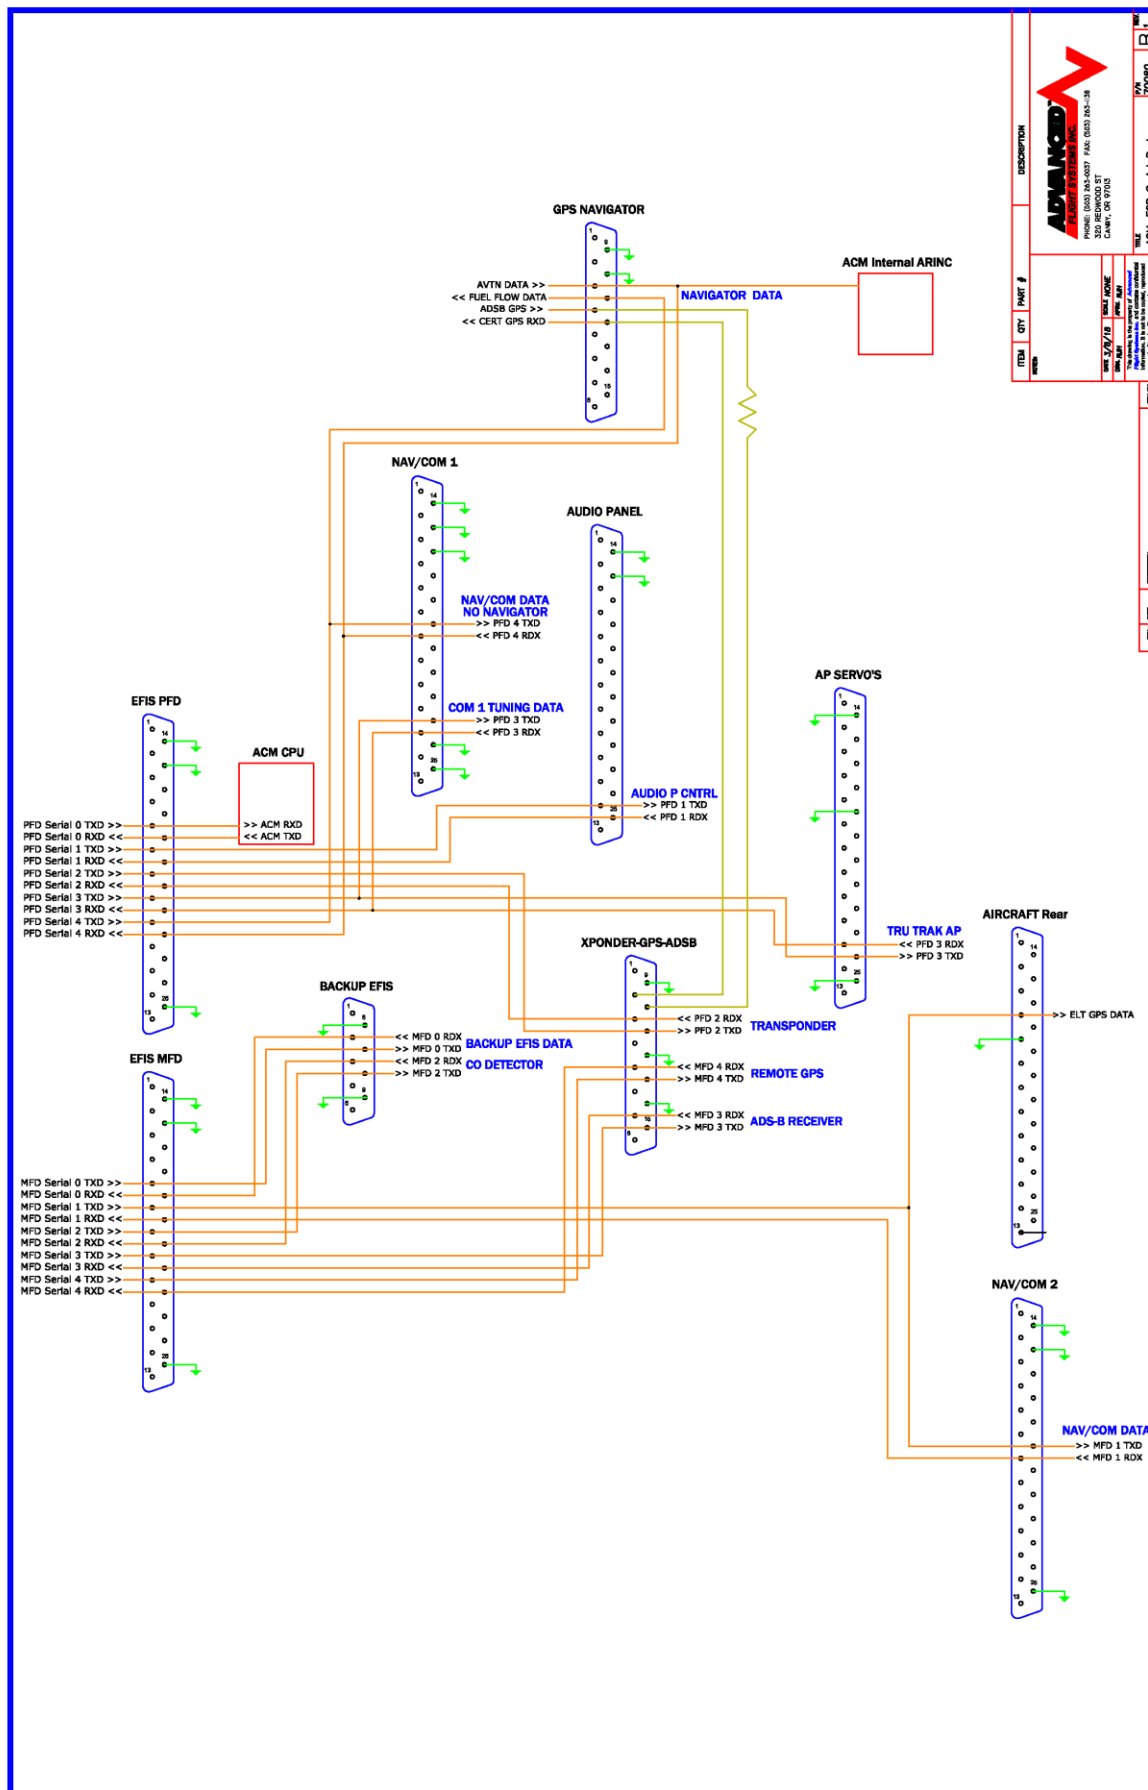

ACM-EFIS RS-232 Serial Port Mapping Skyview

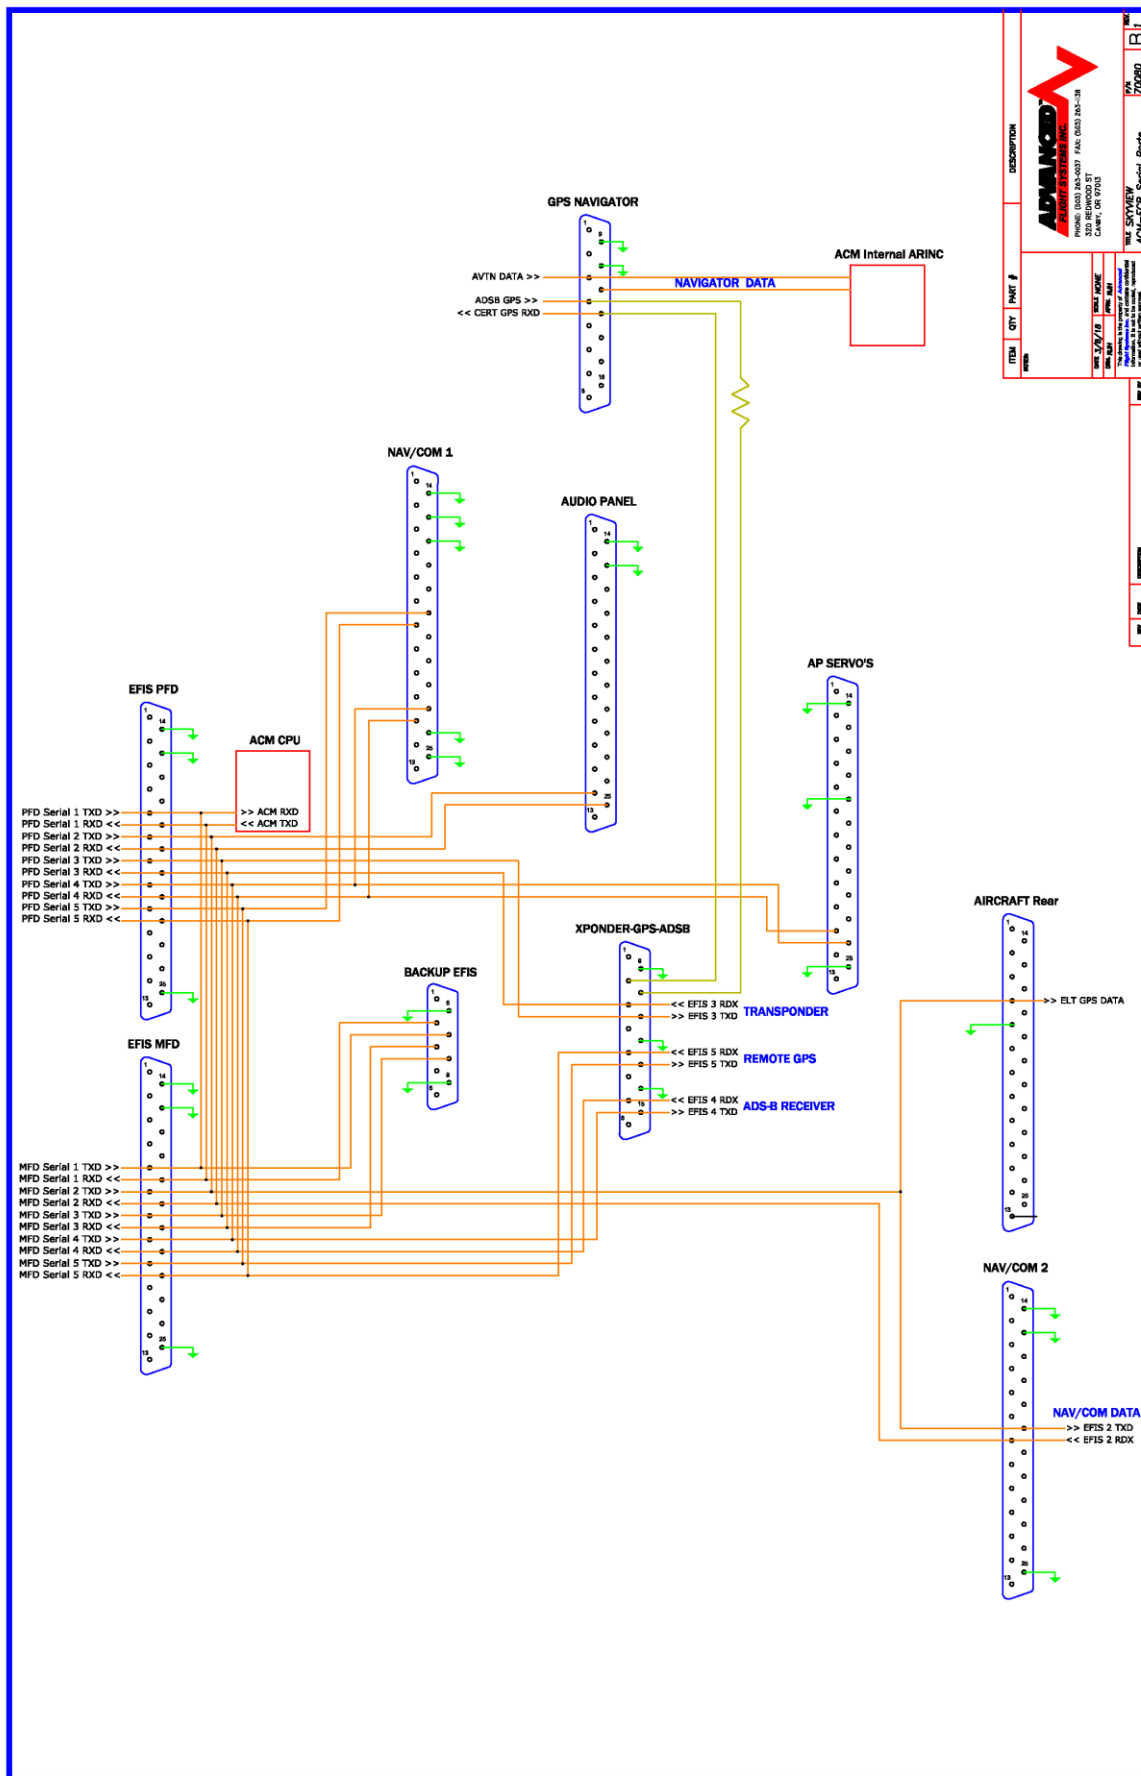

ITEM	QTY	PART #	DESCRIPTION
			ADVANCED FLIGHT SYSTEMS INC.
			PHONE: (800) 746-6077 FAX: (435) 245-7138
			320 REDWOOD ST
			CANYON, UT 84115
			THE SKYVIEW
			ACM-EFIS Serial Ports
			PN 70060
			REV B

Advanced IFR with IFD540

Serial Port	EFIS PFD	NOTES	EFIS MFD	NOTES
0	ACM-ECB		NMEA/AVTN	Backup EFIS
1	PDA360 Audio Panel		ACK ELT/SL30	
2	74109 AFS XPNDR		*CO	CO Detect Option
3	GTR/GNC-2xx	IFD Tuning	SV-ADSB-47X	
4	AVTN/RNAV		SV-GPS-250/2020	

Advanced RV-10 3 Screen IFD540

Serial Port	EFIS PFD	NOTES	EFIS MFD	NOTES
0	ACM-ECB		IFD-ADSB	Send ADSB to IFD
1	PDA360 Audio Panel		ACK ELT/SL30	
2	74109 AFS XPNDR		*CO	CO Detector
3	GTR/GNC-2xx	IFD Tuning	SV-ADSB-47X	AFS-ADSB
4	AVTN/RNAV		SV-GPS-250	

Skyview Serial Ports

Serial Port	EFIS PFD	NOTES	EFIS MFD	NOTES
1	ACM-ECB		ACM-ECB	
2	NMEA 9600		NMEA 9600	ELT Signal
3	TRANSPONDER		TRANSPONDER	
4	ADS-B		ADS-B	
5	SV-GPS-250 *GPS-220		SV-GPS-250 *GPS-2020	

Advanced IFR with GTN-650

Serial Port	EFIS PFD	NOTES	EFIS MFD	NOTES
0	ACM-ECB		NMEA 9600	D6 GPS Signal
1	PDA360 Audio Panel		ELT/SL30	
2	74109 AFS XPNDR		*CO	CO Detect Option
3	NONE		74112 AFS-ADSB	
4	AVTN/FADC1		SV-GPS-250 *GPS-2020	

IFR Panel ACM Fuse Sizes

LABEL	SIZE	DESCRIPTION
LEFT LT	10	Left Landing Light
STROBE	7.5	Strobe Lights
NAV LT	10	Nav Lights
RIGHT LT	10	Right Landing Light
PITOT H	10	Pitot Heat
TRIM	2	Trim Motors
FLAPS	5	Flap Motor
ALT FLD	5	Alternator Field Power
BOOST P	10	Boost Pump
STARTER	7.5	Starter contactor
AUX PWR	5	Auxiliary power plug (ACM-FUSE: Cabin Light, Fans, Aux Plug)
AUTO P	5	Autopilot Servos
NAV 2		Nav 2 Radio
COM 2	5	Com 2 Radio
XPONDER	3	Transponder and ADS-B Power
AUDIO P	3	Remote Audio Panel Power
BACKUP	3-5	Dynon D6 EFIS, ELT, CO Detector (5 AMP for AF-5000/HDX)
NAV 1	7.5	Navigator NAV Power
COM 1	10	Navigator Com Power
MFD	5	Copilot EFIS Screen
CHARGE	10	TCW Battery, Charge and Pass through power
PFD	5	Pilot EFIS Screen

VFR Panel Fuse Sizes

LABEL	SIZE	DESCRIPTION
LEFT LT	10	Left Landing Light
STROBE	7.5	Strobe Lights
NAV LT	10	Nav Lights
RIGHT LT	10	Right Landing Light
PITOT H	10	Pitot Heat
TRIM	2	Trim Motors
FLAPS	5	Flap Motor
ALT FLD	5	Alternator Field Power
BOOST P	10	Boost Pump
STARTER	7.5	Starter contactor
AUX PWR	5	Auxiliary power plug (ACM-FUSE: Cabin Light, Fans, Aux Plug)
AUTO P	5	Autopilot Servos
NAV 2	3	Nav 2 Radio
COM 2	5	Com 2 Radio
XPONDER	3	Transponder and ADS-B Power
AUDIO P	2	Intercom
BACKUP	3	Backup EFIS
NAV 1	3	Nav 1 Radio
COM 1	5	Com 1 Radio
MFD	5	Copilot EFIS Screen
CHARGE	10	TCW Battery, Charge and Pass through power
PFD	5	Pilot EFIS Screen

AF-5000 Panel Configuration Checklist

(Completed by AFS before panel shipment)

N Number: _____ Customer: _____

Aircraft: _____ Tank Size: _____ INJ or Carb: _____

Verify Fuse or Circuit Breaker Sizes

1. Verify ELT Panel Battery (green sticker with date)
2. Configure EFIS ADMIN Settings

DUAL EFIS SCREEN IFR Panel Settings

PFD

ADS-B data sent to IFD

Section	Item	Value
File and Data Storage	1. Transfer Files	
	2. Data Logging Interval (sec)	1 sec
Serial Port Functions	3. Port 0	AF-ACM
	4. Port 1	PDA360EX
	5. Port 2	AF-XPNDR-261
	6. Port 3	ADS-B GDL90 OUT
	7. Port 4	AVTN/ARNAV
Navigation Source Selection	8. GPS/NAV 1	AF-ACM-ECB (SN:180)
	9. GPS/NAV 2	Remote GPS
	10. GPS/NAV 3	NONE
Module Configuration	11. ENGINE	HW:AF-SV, NET:OFF
	12. AIRDATA	HW:AF-SV, NET:OFF
	13. AOA	HW:AF-SV, NET:OFF
	14. AHRS	HW:AF-SV, NET:OFF
Admin Settings	WxWorx Configuration	
	15. Connection Type	OFFLINE
	Display Assignments	
	16. This Display	PFD (175)
	17. Remote Source	MFD #1 (176)
	Menu & Keyboard Settings	
	18. Vertical Buttons	RIGHT
	19. Menu Background	COLOR
	20. Display Font	AFS Standard
	21. Keyboard Layout	ALPHA
	22. Map Zoom From PFD	OFF
	Administrative Settings	
	23. System Maintenance	
24. Diagnostics		
25. Set Tach and Hobbs Time		
26. Upgrade System		
27. Administrator Mode	DISABLED	

MFD

Section	Item	Value
File and Data Storage	1. Transfer Files	
	2. Data Logging Interval (sec)	1 sec
Serial Port Functions	3. Port 0	DISABLED
	4. Port 1	ACK ELT
	5. Port 2	DISABLED
	6. Port 3	AF-ADSB-47x
	7. Port 4	AF-GPS-250
Navigation Source Selection	8. GPS/NAV 1	AF-ACM-ECB (SN:180)
	9. GPS/NAV 2	Serial Port #4
	10. GPS/NAV 3	NONE
Module Configuration	11. ENGINE	HW:AF-SV, NET:OFF
	12. AIRDATA	HW:AF-SV, NET:OFF
	13. AOA	HW:AF-SV, NET:OFF
	14. AHRS	HW:AF-SV, NET:OFF
Admin Settings	WxWorx Configuration	
	15. Connection Type	OFFLINE
	Display Assignments	
	16. This Display	MFD #1 (176)
	17. Remote Source	PFD (175)
	Menu & Keyboard Settings	
	18. Vertical Buttons	RIGHT
	19. Menu Background	COLOR
	20. Display Font	AFS Standard
	21. Keyboard Layout	ALPHA
	22. Map Zoom From PFD	ON
	Administrative Settings	
	23. System Maintenance	
24. Diagnostics		
25. Set Tach and Hobbs Time		
26. Upgrade System		
27. Administrator Mode	DISABLED	

SINGLE EFIS SCREEN IFR Panel Settings

PFD

Instrument Calibration
Admin Settings
BACK

File and Data Storage

1. Transfer Files

2. Data Logging Interval (sec) 1 sec

Serial Port Functions

3. Port 0 AF-ACM

4. Port 1 PDA360EX

5. Port 2 AF-XPNDR-261

6. Port 3 AF-ADSB-47x

7. Port 4 AF-GPS-250

Navigation Source Selection

8. GPS/NAV 1 AF-ACM-ECB (SN:176)

9. GPS/NAV 2 Serial Port #4

10. GPS/NAV 3 NONE

Module Configuration

11. ENGINE HW:AF-SV, NET:OFF

12. AIRDATA HW:AF-SV, NET:OFF

13. AOA HW:AF-SV, NET:OFF

14. AHRS HW:AF-SV, NET:OFF

WxWorx Configuration

15. Connection Type OFFLINE

Display Assignments

16. This Display PFD (175)

17. Remote Source MFD #1 (176)

Menu & Keyboard Settings

18. Vertical Buttons RIGHT

19. Menu Background COLOR

20. Display Font AFS Standard

21. Keyboard Layout ALPHA

22. Map Zoom From PFD OFF

Administrative Settings

23. System Maintenance

24. Diagnostics

25. Set Tach and Hobbs Time

26. Upgrade System

27. Administrator Mode ENABLED

PREV
NEXT
SEL
MORE->

DUAL SCREEN VFR Settings

PFD

MFD

Serial Ports Functions

Serial Port Functions		Serial Port Functions	
3. Port 0	AF-ACM	3. Port 0	DISABLED
4. Port 1	DISABLED	4. Port 1	ACK ELT
5. Port 2	AF-XPNDR-261	5. Port 2	DISABLED
6. Port 3	DISABLED	6. Port 3	AF-ADSB-47x
7. Port 4	DISABLED	7. Port 4	AF-GPS-2020


Navigation Source Selection

Navigation Source Selection		Navigation Source Selection	
8. GPS/NAV 1	Remote GPS	8. GPS/NAV 1	Serial Port #4
9. GPS/NAV 2	NONE	9. GPS/NAV 2	NONE
10. GPS/NAV 3	NONE	10. GPS/NAV 3	NONE

- SV Network Configuration. Press **SCAN** and verify that all attached SV-Network devices are detected. Press **UPDT** to load the current software in all devices. Channel A and B should be green for all devices.




- Configure Aircraft Info

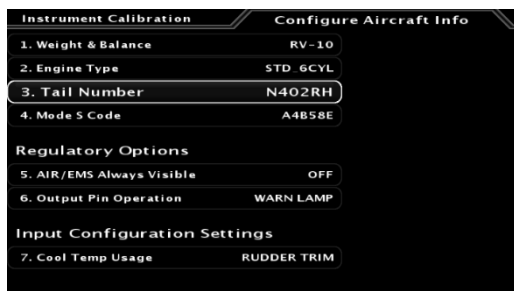

- Verify that the Wi-Fi module is installed in MFD and configure Wi-Fi Settings on MFD Screen. Set the NETWORK ESSID to the aircraft N Number.



- Configure PFD EFIS Inputs if RV-14 (Canopy, Pitot Heat, Stall Warning Tab)

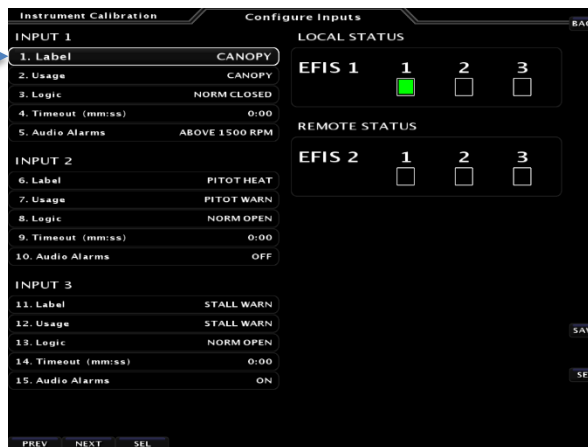

- Configure Test Audio to 75 and verify that EFIS audio warnings are playing in headset.

- Configure Autopilot Settings

- Configure Yaw Damper settings if present.

- Verify Altitude Settings

- Configure Airspeed Settings for aircraft

- Configure AoA Settings for aircraft


Radios & Transponder Settings

17. Configure Audio Panel Settings on PFD and MFD to PDA360



18. Configure Transponder Settings on PFD and MFD

- Tail Number
- Length
- Width
- Max Cruise
- ALT/GND Switch
- ADS-B In Type
- GPS Input Type

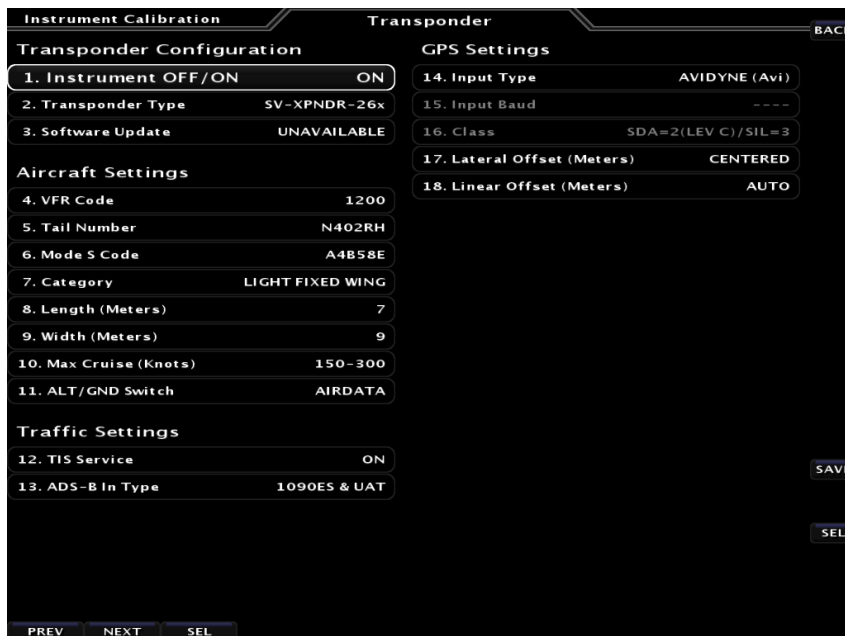


19. Configure Com Radio Setup on PFD and MFD

- Primary S/N (from SV-NET Scan)
- Radio Type SV-COM
- Squelch 70
- Side Tone 25
- Mic Gain 50

20. NAV Radio Configuration DISABLED


Electrical System Settings

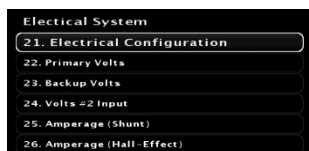

21. Configure Electrical System for ACM-ECB


The ACM-ECB configuration is what controls how the panel switches operate.

- 2. Audio Alarms Turns on ACM audio warnings
- 3. Strobe Switch Three Position Strobe/Nav or separate switches.
- 4. Switch Lights Controls Backlite always ON or turn on with NAV switch
- 5. Operation Mode Landing Lights with WIGWAG
- 6. Warm Up Time Time delay in seconds before landing lights start to flash
- 7. Cool Down Time Time delay in seconds after landing lights are turned OFF before they can be turned back ON.
- 8. On Above Airspeed Above this Airspeed (Knots) the landing lights will flash when the Panel switch is in the **PULSE** mode. Below this airspeed they will remain ON.

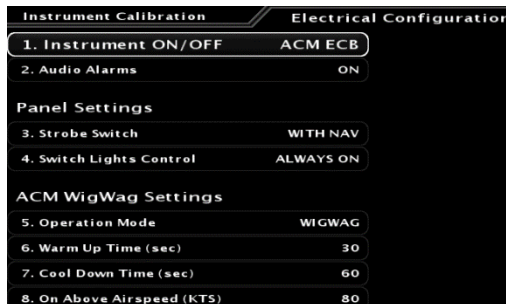


- 22. Configure Primary Volts Settings for the EFIS Primary Volt Meter
- 23. Configure Backup Volts Settings for the EFIS Backup Volt Meter. When enabled the Backup Voltmeter splits the volt meter bar to display both voltages.

24. Configure Amperage (Shunt)

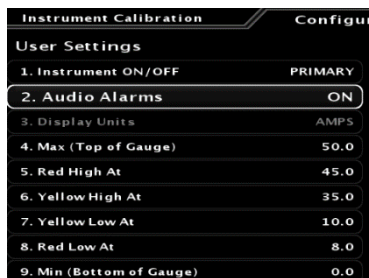


- 25. Configure Amperage (Hall-effect) EFIS Amp meter display settings from the optional shunt transducer.

Fuel System Settings

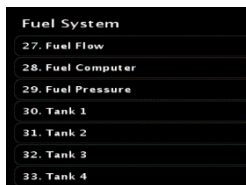

- 27. Verify Fuel Flow Settings
Set Red High and Yellow high for Engine HP

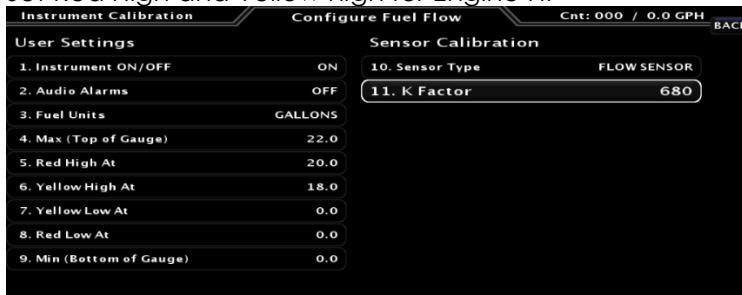

- 28. Verify Fuel Computer settings


- 29. Configure Fuel Pressure Sensor and Ranges

Sensor	Carburated		Injected	
	41201 (0-15PSI)	101690-000	41301 (0-50PSI)	101716-000
Max	15		40	
Red High	10		35	
Yellow High	8		30	
Yellow Low	3		15	
Red Low	2		12	
Min	0		0	


Carb Setting




Injected Settings

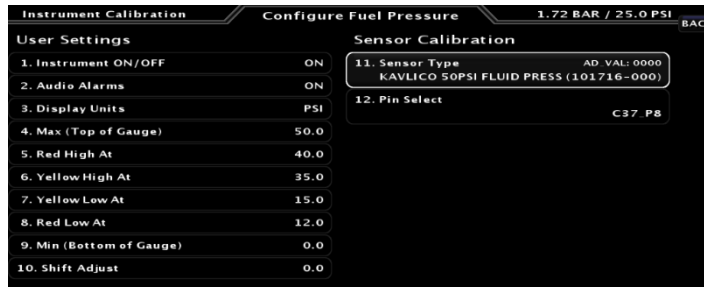

- 30. Configure Tank 1

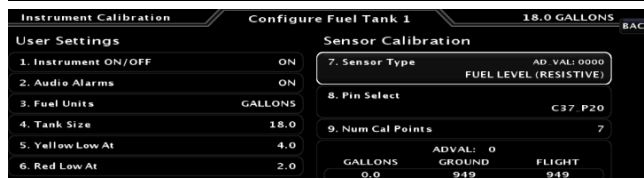


- 31. Configure Tank 2

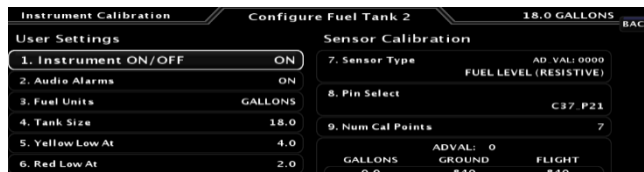


- 32. Set Tank 3 to Zero Gallons and OFF

- 33. Set Tank 4 to Zero Gallons and OFF


Engine Sensor Settings

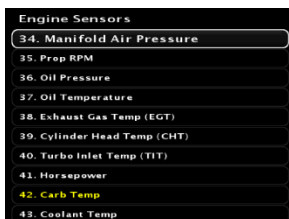


34. Verify Manifold Sensor Configuration

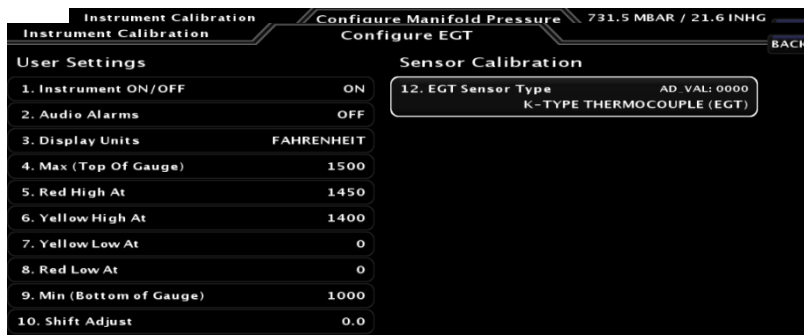


35. Verify RPM set to 2 Pulses for 4 Cylinder and 3 Pulses for 6 Cylinder

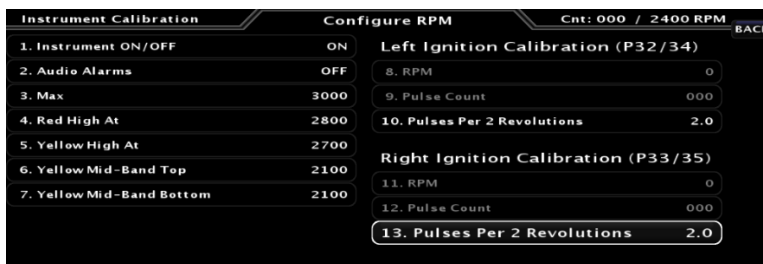

36. Configure Oil Pressure
41101 (0-150) 101693-000 Kavlico

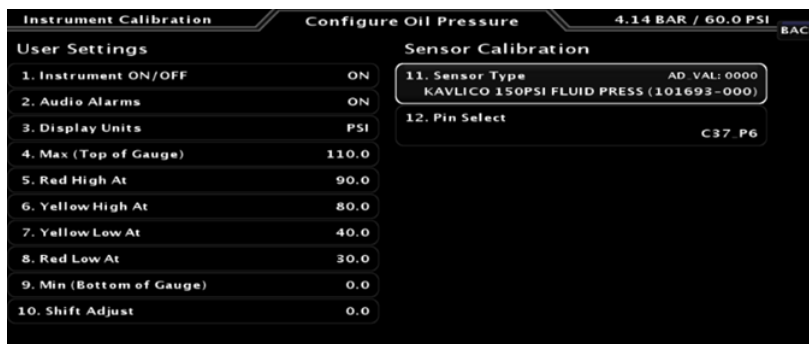


37. Configure Oil Temp
40405 VDO

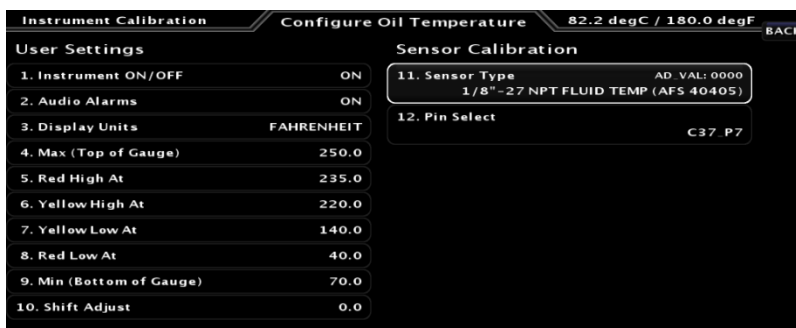

38. Verify that EGT Sensor Type is K


39. Verify that CHT Sensor type is J

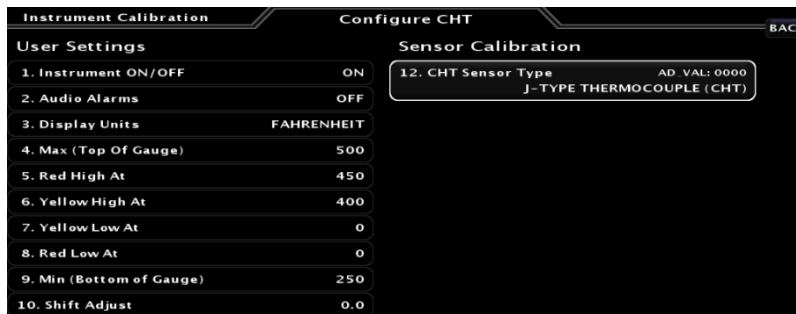

41. Configure HP Engine Type and Horse Power



42. Configure Carb Temp Carb = ON INJ = OFF

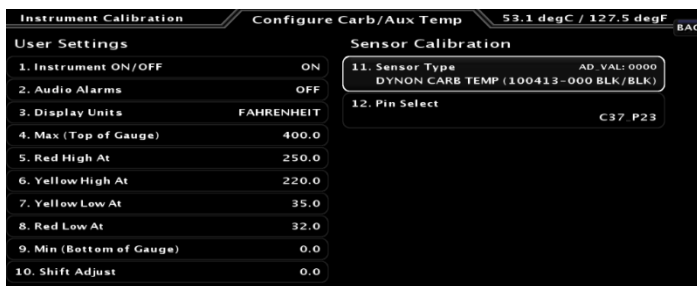

Flaps & Trim Settings



44. Configure Flap Position

Operation Mode


The Flaps can be configured for MOMENTARY or POSITION mode if you are using a RayAllen POS12 flap sensor.

Position Calibration

You can program 4 unique flap positions.

Retract Mode

Selects if the flap move all the way UP or Multi-Step to the programed positions.

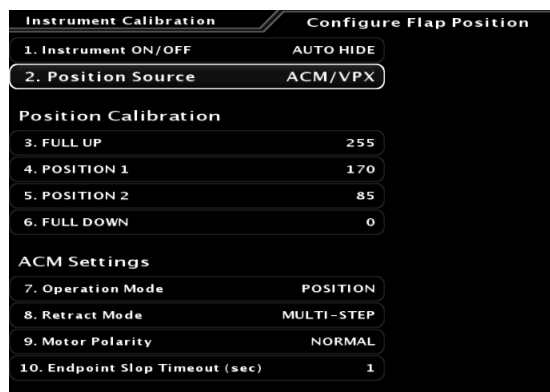


Motor Polarity

Used to change motor direction for the **CHECK > ELECTRICAL > FLAPS > UP / DOWN** buttons. **Do not use this setting to change flap direction from the stick buttons.** If the ELECTRICAL Page buttons work in the correct direction and the stick buttons are backwards you must swap the push button wiring at the sticks.

Endpoint Slop Timeout

This setting is used to make sure the flaps move up and down all the way in position mode. The flap motor will continue to run for this settings seconds in the UP and DOWN positions.

45. Configure Elevator Trim to ACM

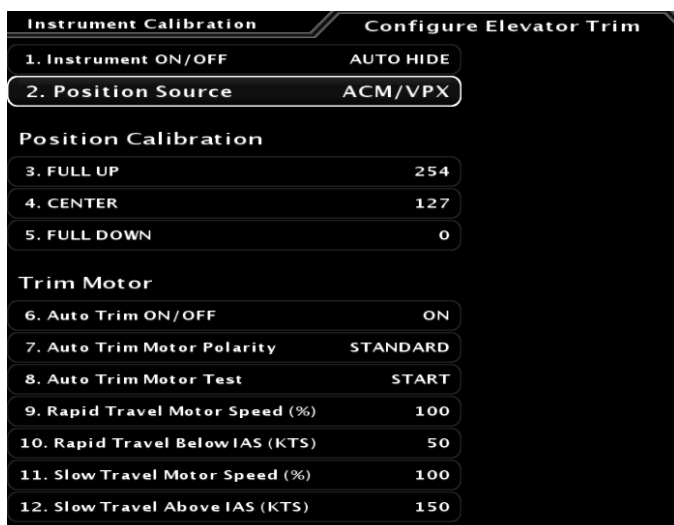

46. Configure Aileron Trim to ACM

Instrument Calibration	Configure Aileron Trim
1. Instrument ON/OFF	AUTO HIDE
2. Position Source	ACM/VPX
Position Calibration	
3. FULL LEFT	254
4. CENTER	127
5. FULL RIGHT	0
Trim Motor	
6. Rapid Travel Motor Speed (%)	100
7. Rapid Travel Below IAS (KTS)	50
8. Slow Travel Motor Speed (%)	100
9. Slow Travel Above IAS (KTS)	150


IFD-540/440 Configuration



To enter configuration mode you will need to power up the IFD with a USB memory stick.


ARINC configuration

Set all channels to HIGH Speed for Skyview HDX systems, Low for AF-5000

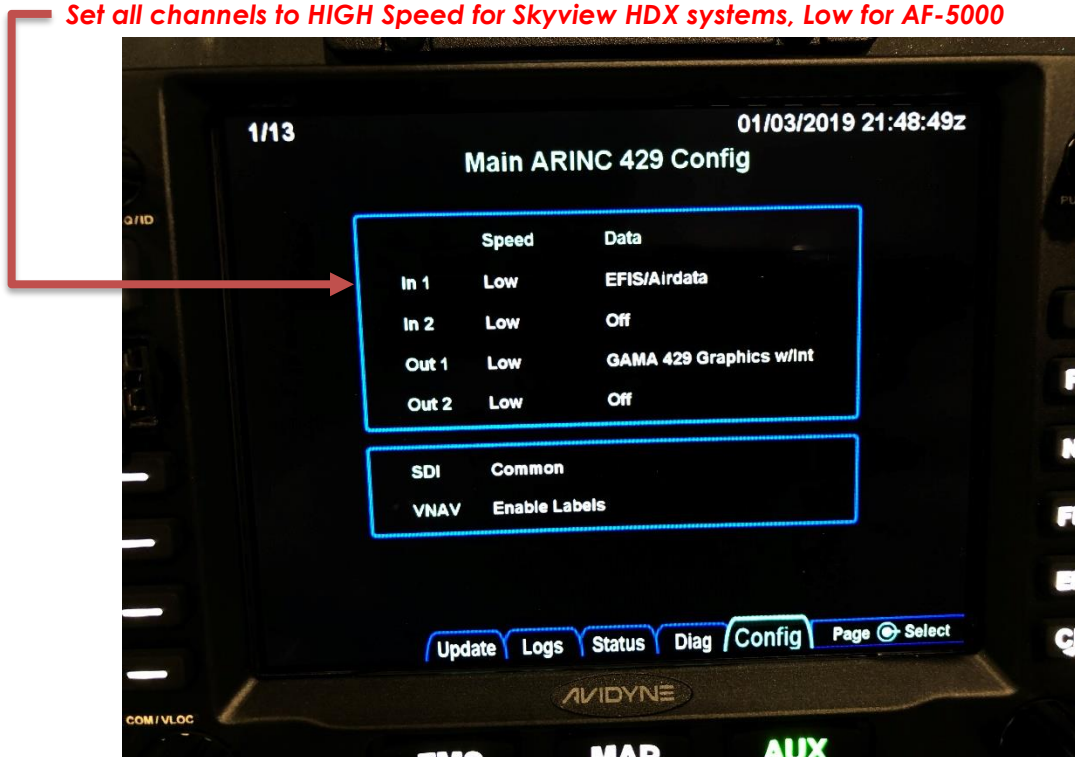

Serial Port Configuration

Only set for dual AF-5000 EFIS systems, used to get ADS-B data from AF-5000 EFIS.

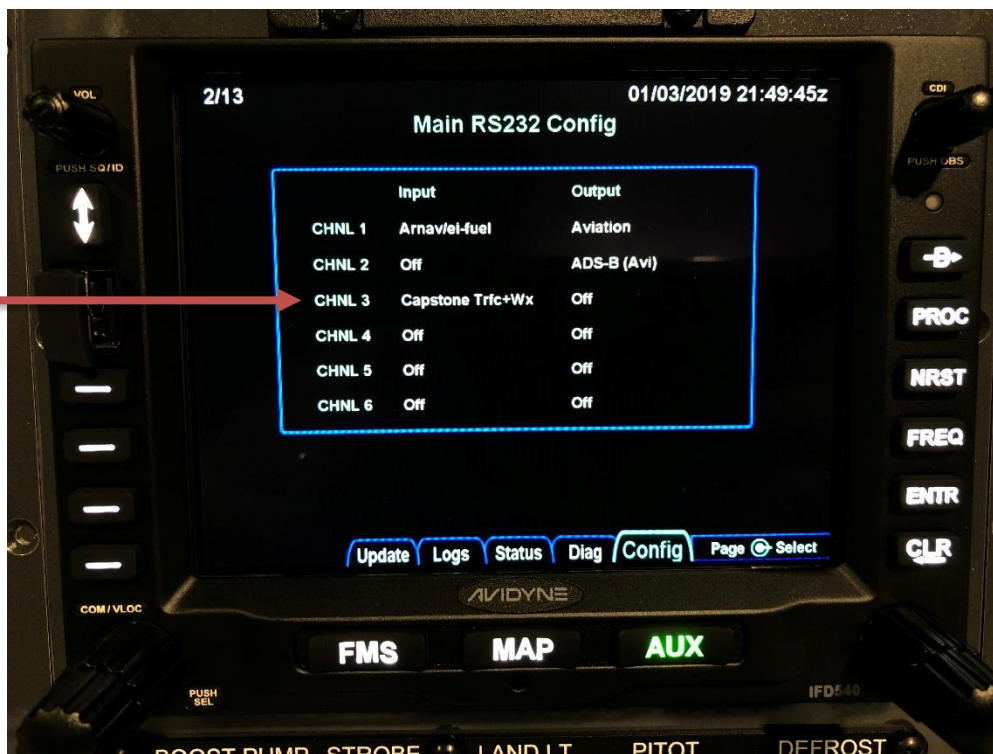


VOR / LOC / GS ARINC 429 Configuration



GTN-650 Configuration

ARINC Settings

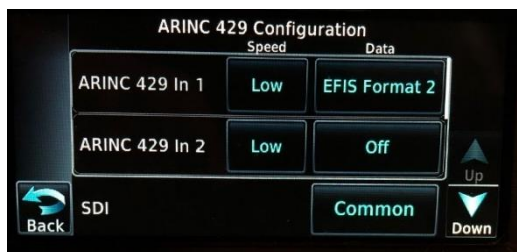

RS-232 Settings



VOR/LOC/GS Settings



Instrument Panel System Tests

- ADAHRS 1 and 2 working
- Verify all buttons
- Verify Knobs
- Verify Joystick (AF-5600)
- Test Dimmer
- Verify Ethernet (EMS and Bugs work on both screens)
- Test AP Panel FD Button
- Verify Map Database is current and High Res Terrain from USB sticks
- Verify ADAHRS cross check is working
- Verify Bugs are turned ON (Heading, ALT, Speed)
- Verify EFIS Backup Battery (Shutdown and Button 1 Power Up)

RADIO and Audio Panel Tests

- Pilot PTT – Radio TX is displayed on the AF-COM Panel and radio transmits.
- Copilot PTT – Radio TX is displayed on the AF-COM Panel and radio transmits.
- Radio receives from handheld
- Intercom works between headsets, verify squelch and volume work.
- Music input works
- EFIS PFD sets and displays radio freq
- EFIS MFD sets and displays radio freq.
- Radio displays airport data from EFIS
- EFIS audio works, test using EFIS timer
- EFIS PFD and MFD screens can flip-flop radio

Trim Servo Tests

- Trim and Flap motors work from control sticks
- Flap motor works from panel flap switch
- Trim and Flap positions change on EFIS PFD and MFD.
- Program and test flap positions

Panel Dimming

- Panel buttons dim with EFIS screens
- AP Panel Module buttons dim with EFIS screens
- Dynon Radio dims with EFIS screens

Aircraft Lights

- Left Landing light turns on
- Right Landing light turns on
- Landing lights flash in Pulse Mode
- Nav lights turn on
- Strobe lights turn on

Auto Pilot Tests

- AF-SV Scan for Servos
- Set Travel Limits
- Motors turn ON and OFF

ELT Tests

- Test GPS Signal to ELT using scope on pin 4.

D6 EFIS Tests

- Compass Wiring?
- D6 Receiving GPS data?

Pitot Tube Tests

- Pitot Status line

+12V Power Plug

- Verify Power

Backup EFIS PFD and MFD to Customer Panel Folder

Verify Switch Modules

Switch Color
Mounting Screw
Master Relay Screws
All Lences intact

Panel Shipping Checklist

Take Photo of completed running panel


Verify All Components have screws and are tight

- 1 Verify all Cables have a Description and Part Number Label
- 2 Check EFIS Seral Number Labels
- 3 Use BOM to check off every item going into the box and serial number
- 4 Take photo of components in box
- 5 Verify Panel Mounting Hardware included.
- 6 Check Starter Switch Key and Terminal screws

Remote Component Mounting


RV-7 Slider Panel

AUDIO PANEL CAN BE MOUNTED ON THE BACK OF THE SUBPANEL USING THE SUPPLIED FLANGES OR BETWEEN THE FIREWALL AND SUBPANEL ON A PLATE SPANNING THE CENTER AND COPILOT SIDE RIBS.

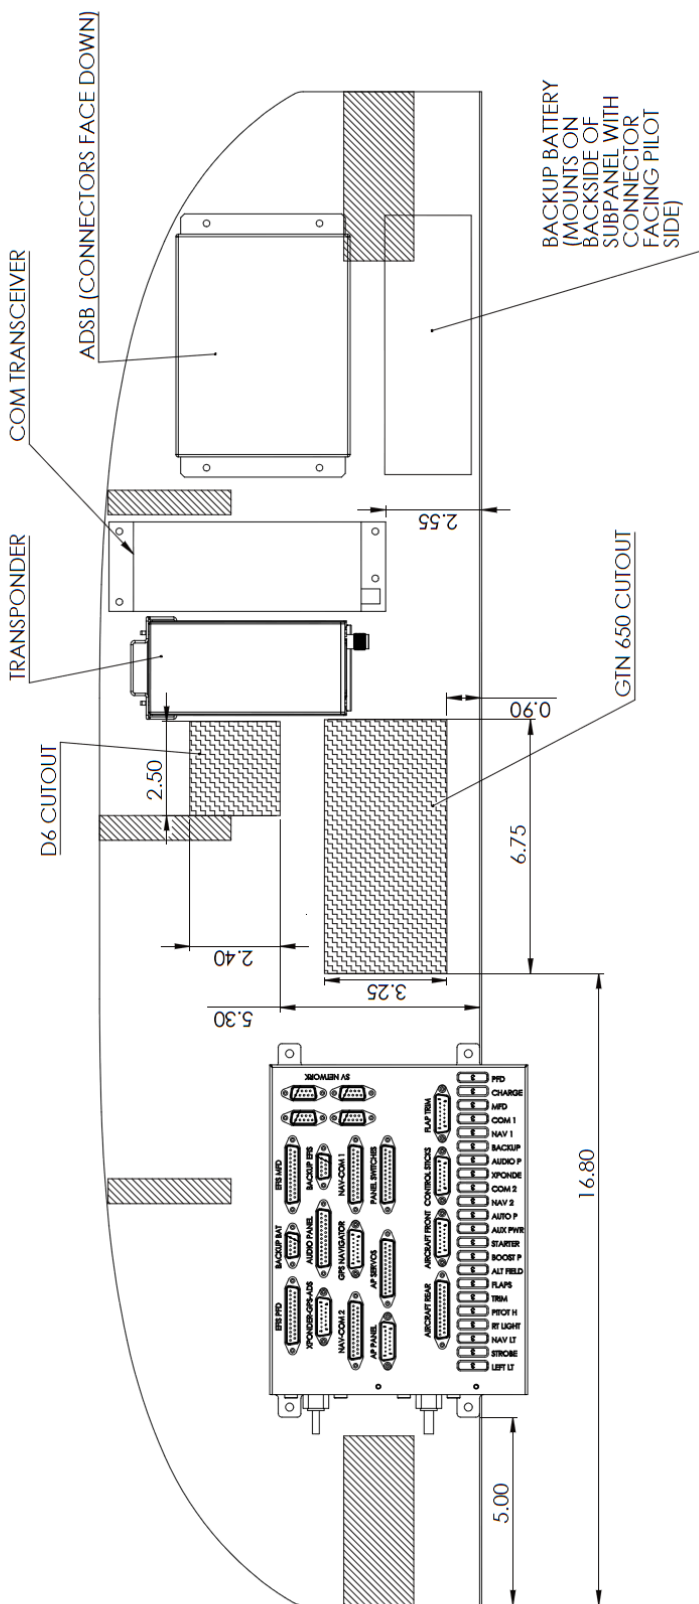

57840 Aircraft Front Harness

Use the supplied DSUB 15 Pin male connector assembly P/N: 50115MA and schematic to wire the aircraft front connector.

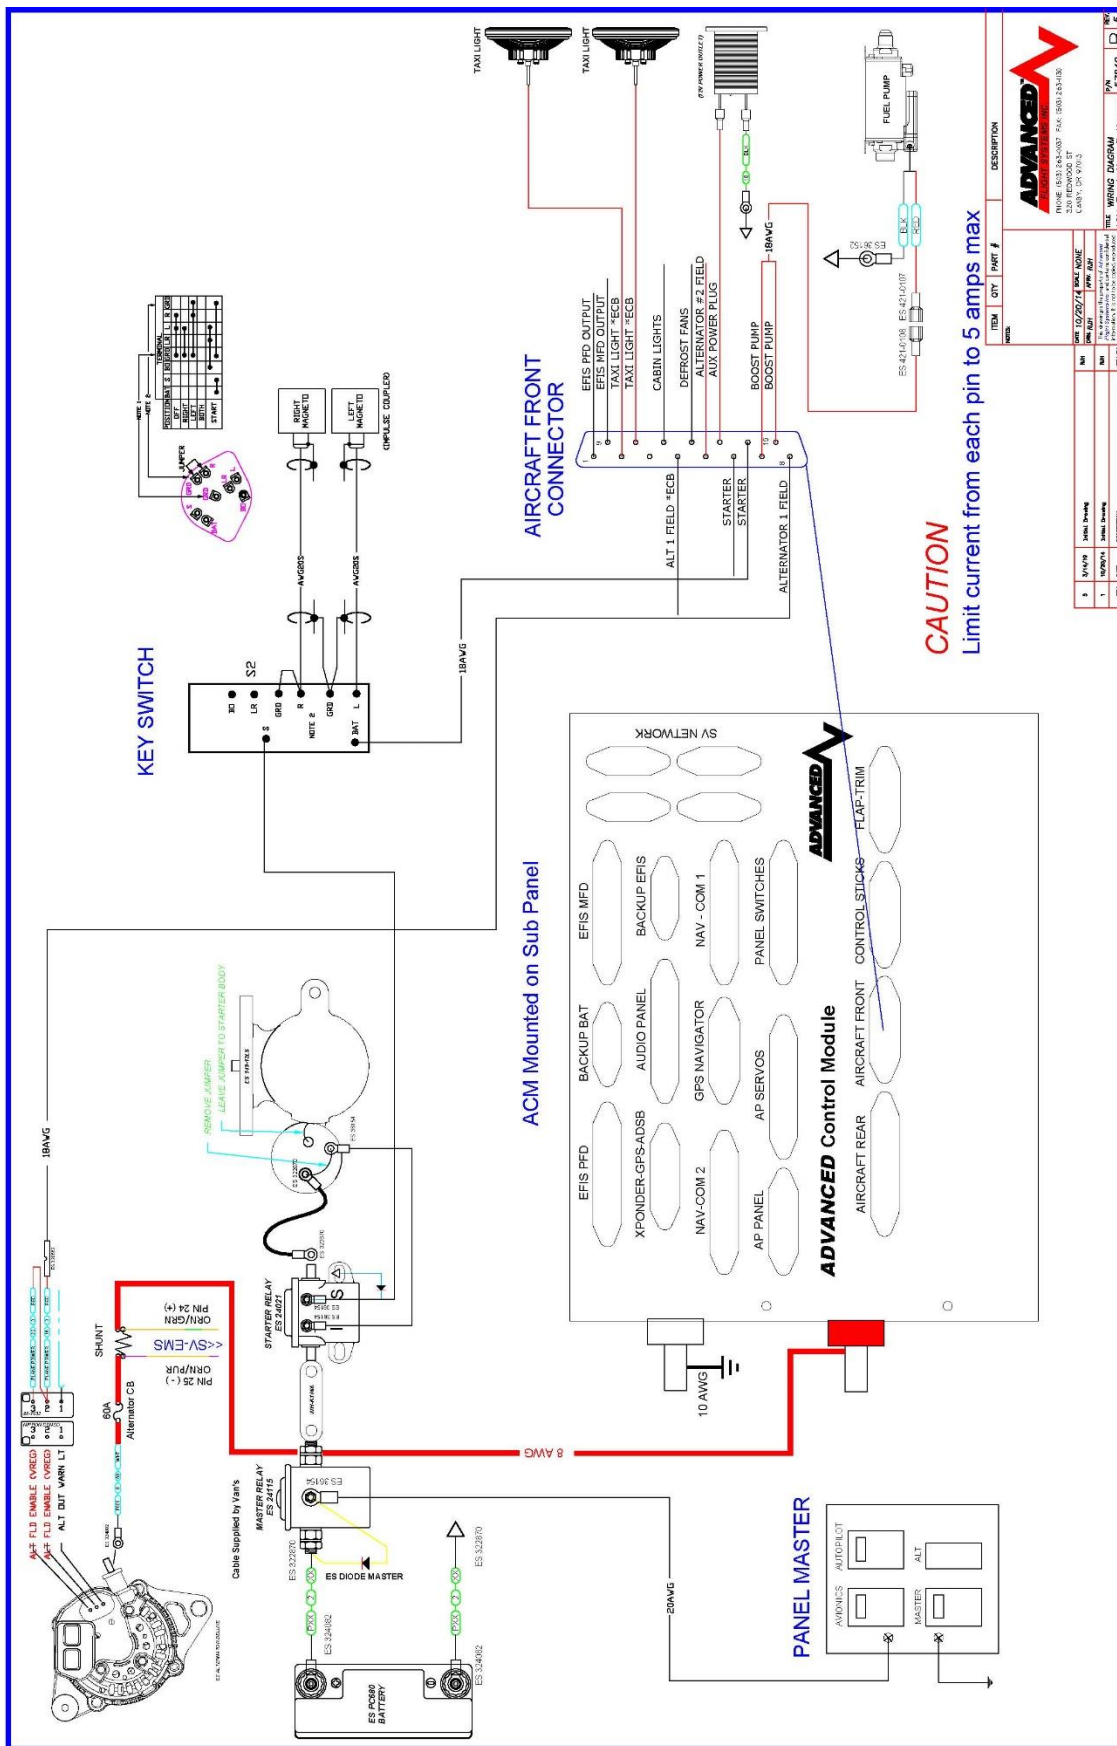


ITEM	QTY	PART #	DESCRIPTION
1	1	57840	Aircraft Front Harness
2	1	50115MA	DSUB 15 Pin male connector assembly

REV	DATE	BY	CHKD	DESCRIPTION
1	10/20/14	ES	ES	Initial Drawing
2	10/20/14	ES	ES	Revised Drawing


REV	DATE	BY	CHKD	DESCRIPTION
1	10/20/14	ES	ES	Initial Drawing
2	10/20/14	ES	ES	Revised Drawing

57850 AIRCRAFT REAR HARNESS

Use the supplied DSUB 25 Pin male connector assembly P/N: 50125MA and schematic to wire the aircraft front connector. Verify wire sizes from this drawing.

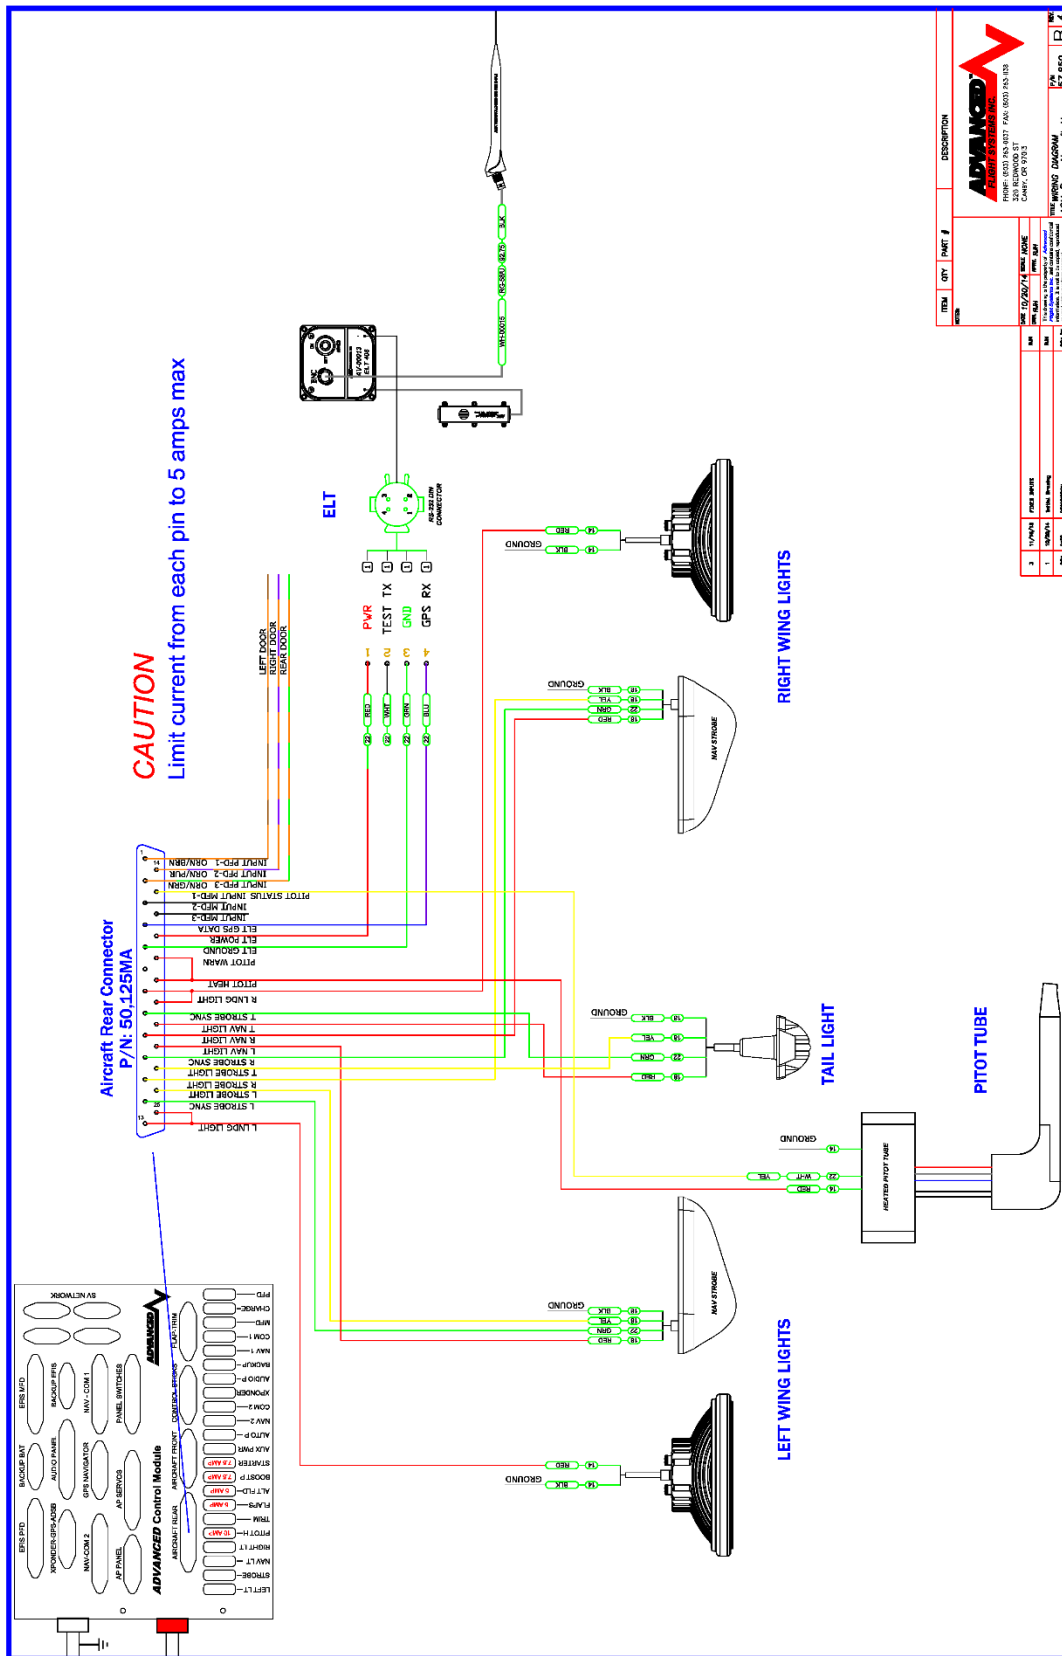

AVEO Engineering ZIP TIP Wiring


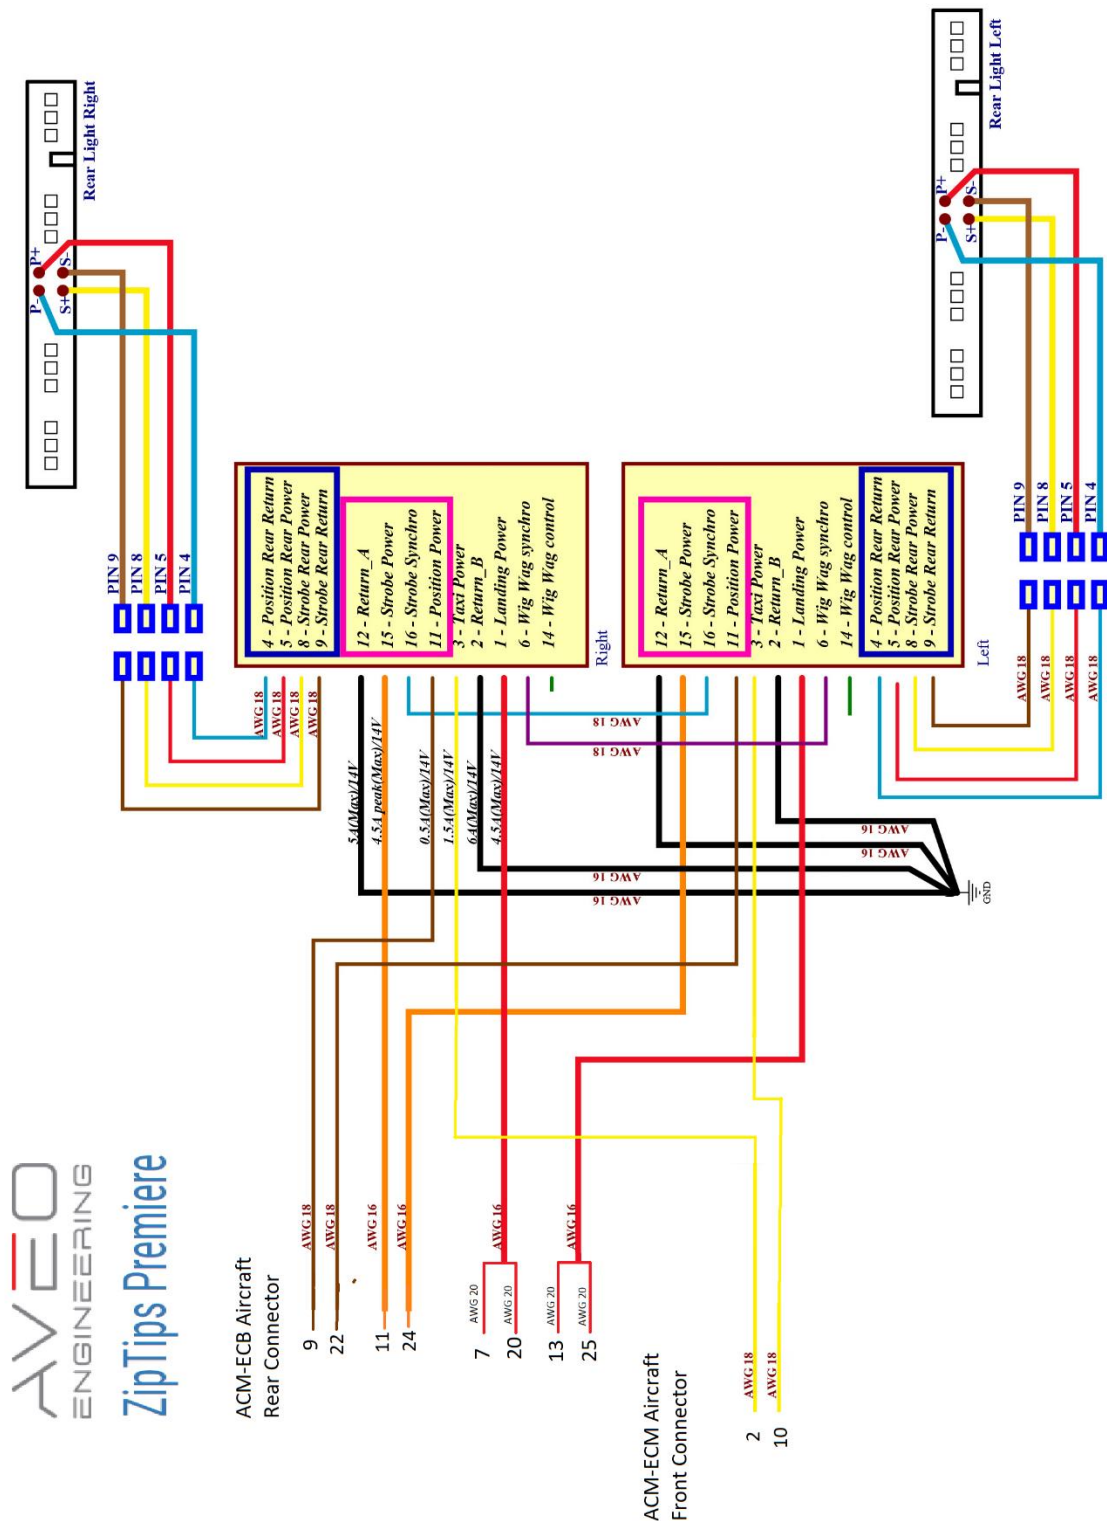


AVEO
ENGINEERING
ZipTips Premiere

EFIS Inputs


The PFD and MFD EFIS screen digital inputs (1,2,3) are wired to the ACM Aircraft Rear Connector and configured in the EFIS calibration menu. The EFIS inputs are designed to activate when connected to ground.

Aircraft Rear Connector P/N: 50,125MA

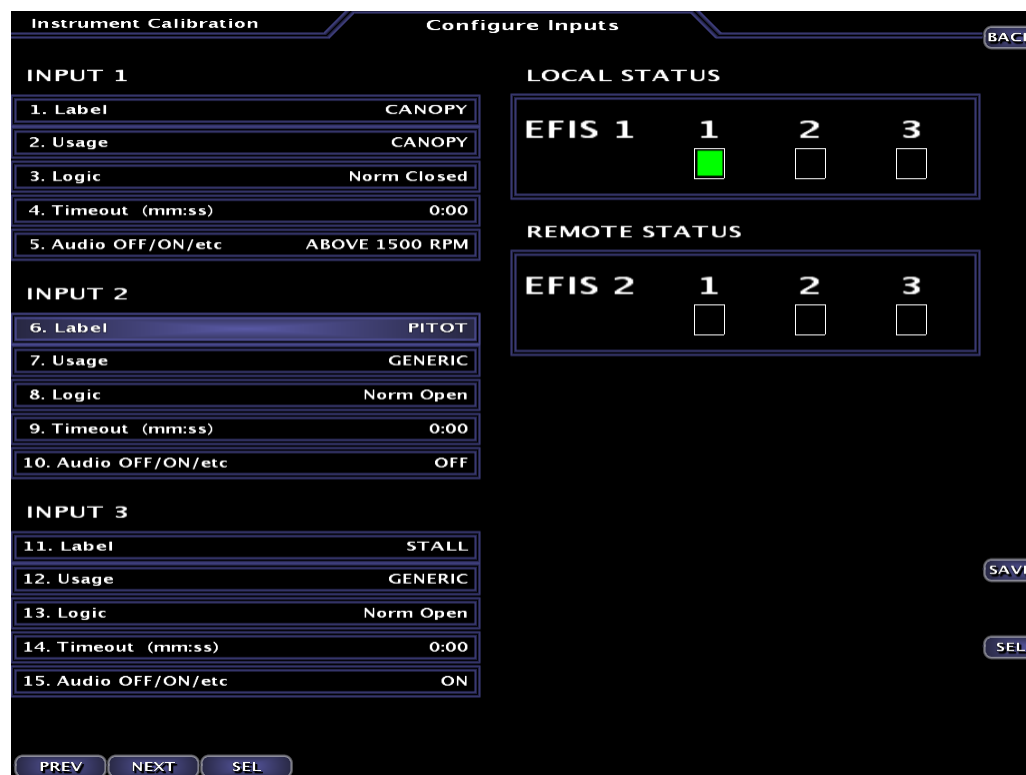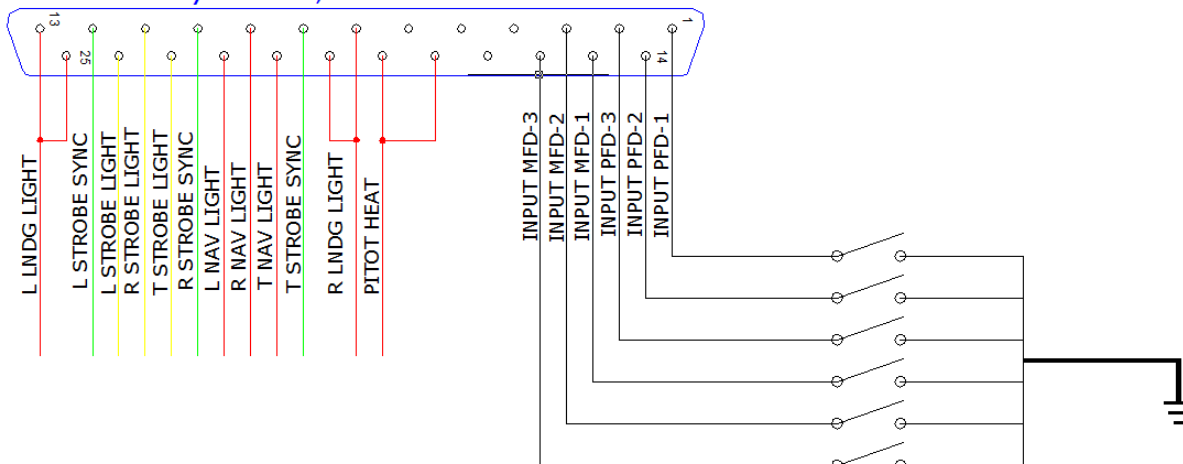


SV-GPS-250 GPS / SV-GPS-2020 / AFS P/N: 73102 GPS Wiring

After routing the AF-GPS wires through the fuselage install the supplied DSUB-9 Male connector and plug into the Female AF-GPS harness from the ACM Module. The SV-250-GPS and SV-GPS-2020 all have the same mounting and wiring.

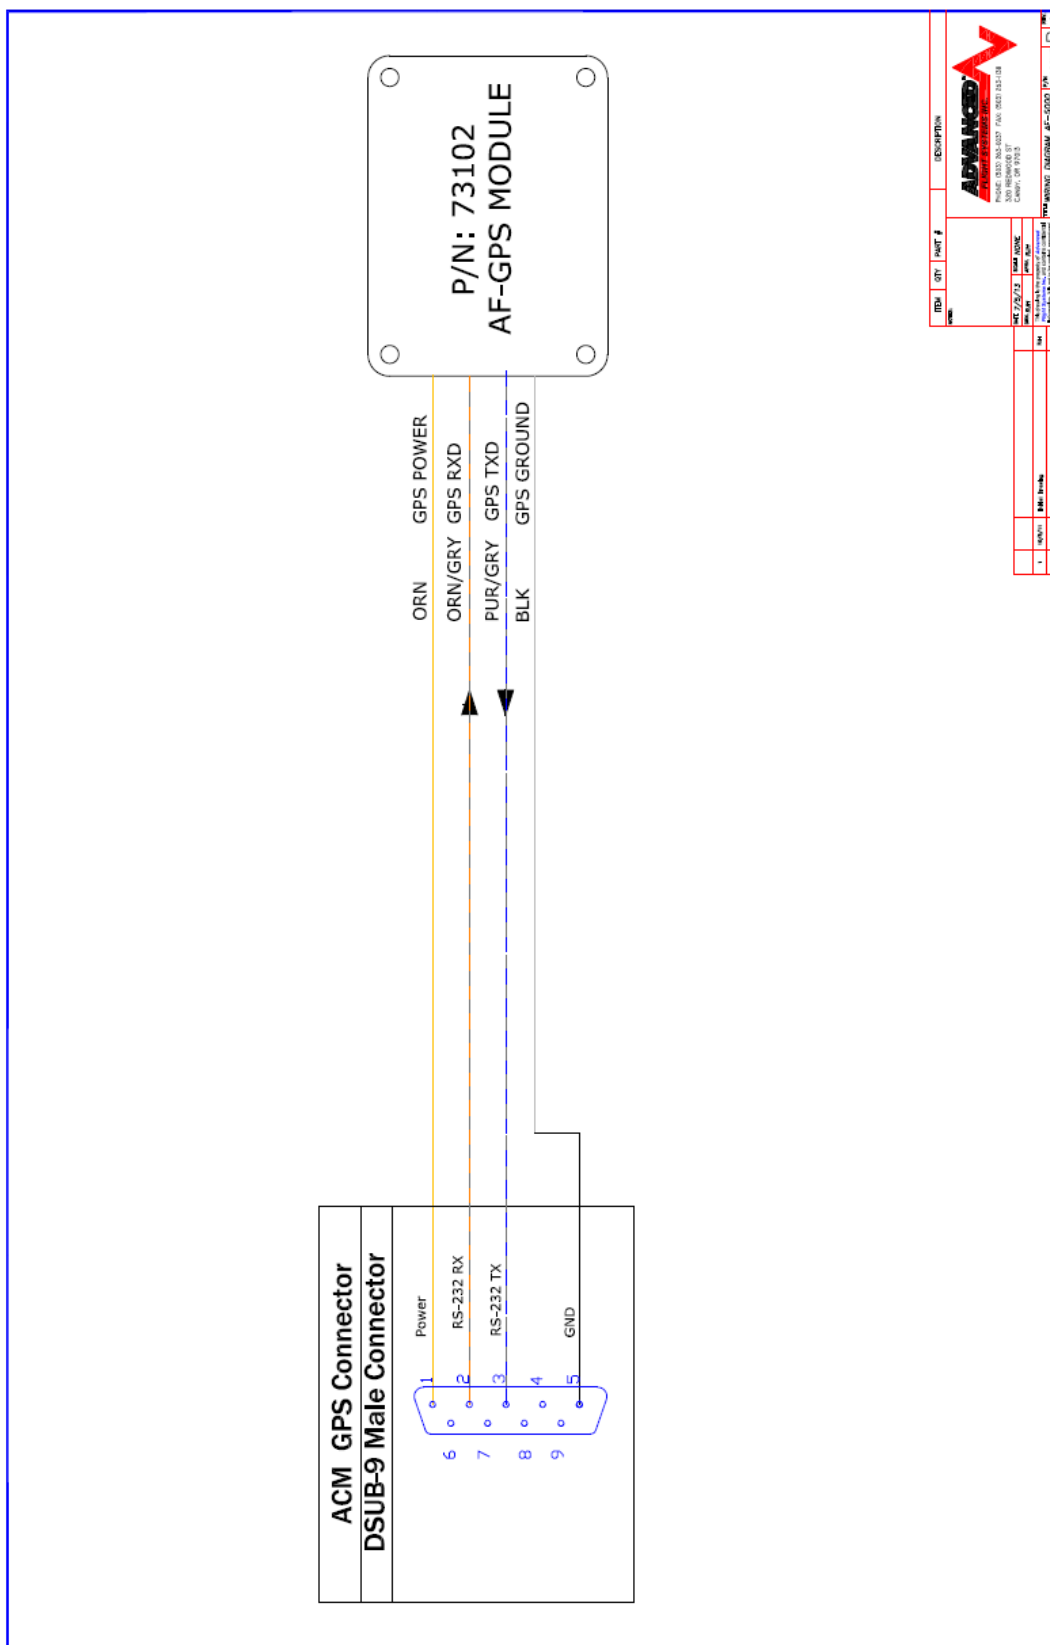


ADAHRS SV-ADAHRS 200/201 Wiring

After mounting the ADAHRS in the rear fuselage you should connect it to the spare SV-NETWORK port on the ACM module. The ADAHRS uses the standard SV-NETWORK DSUB-9 Female cables and should be wired using the following:

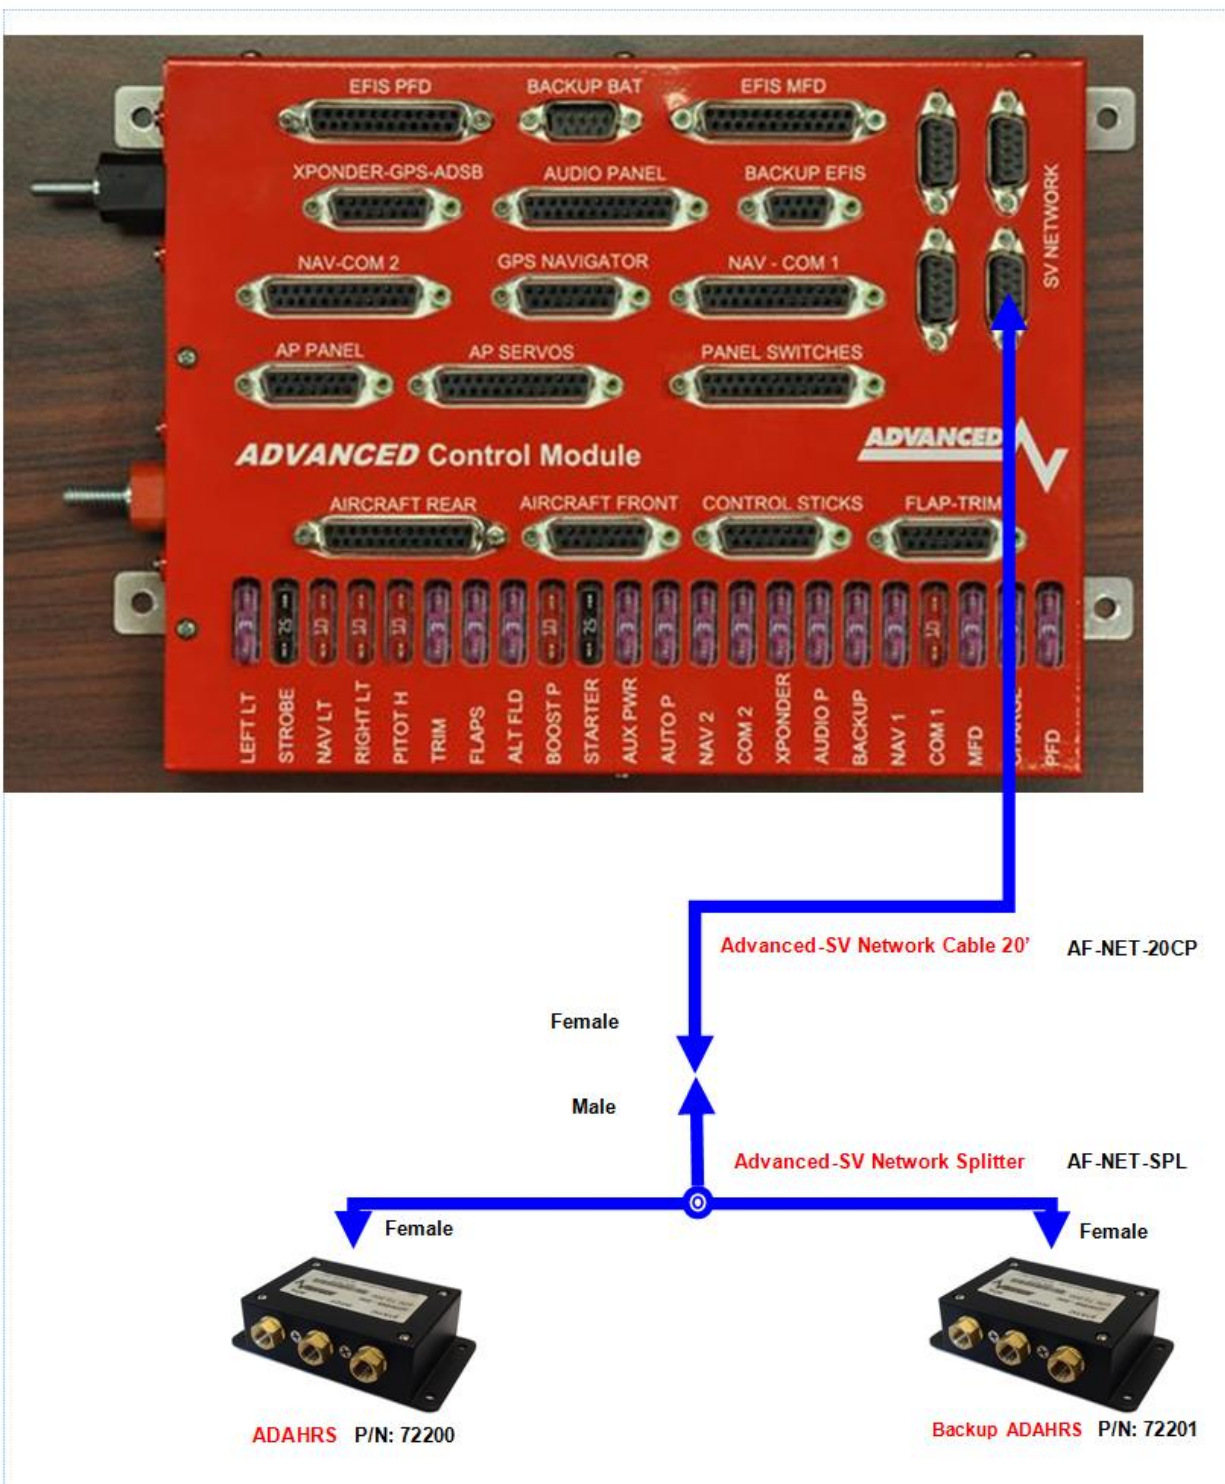



Advanced SV Network Wiring


Advanced-SV Network Female D9 Pin	Advanced-SV Network Cable Wire Color	Description
1	Green	Network Data 1 A
2	Black	Network Ground 1
3	White with Black Stripe	Network Ground 2
4	White with Blue Stripe	Network Data 2 B
5	Orange	EMS Auxiliary Voltage
6	Blue	Network Data 1 B
7	Red	Network Power 1
8	White with Green stripe	Network Data 2 A
9	White with Red stripe	Network Power 2

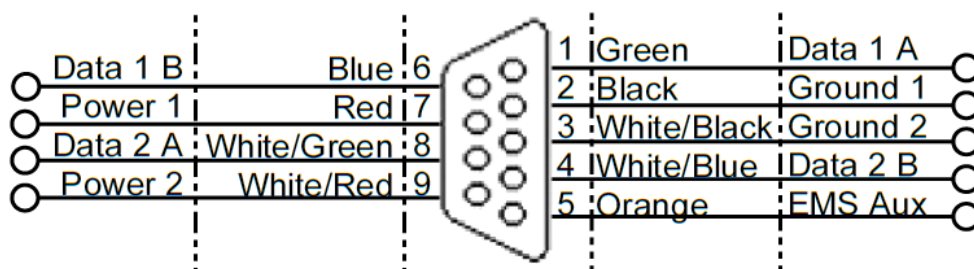

Network Female D9 Pin Insertion View (Rear)

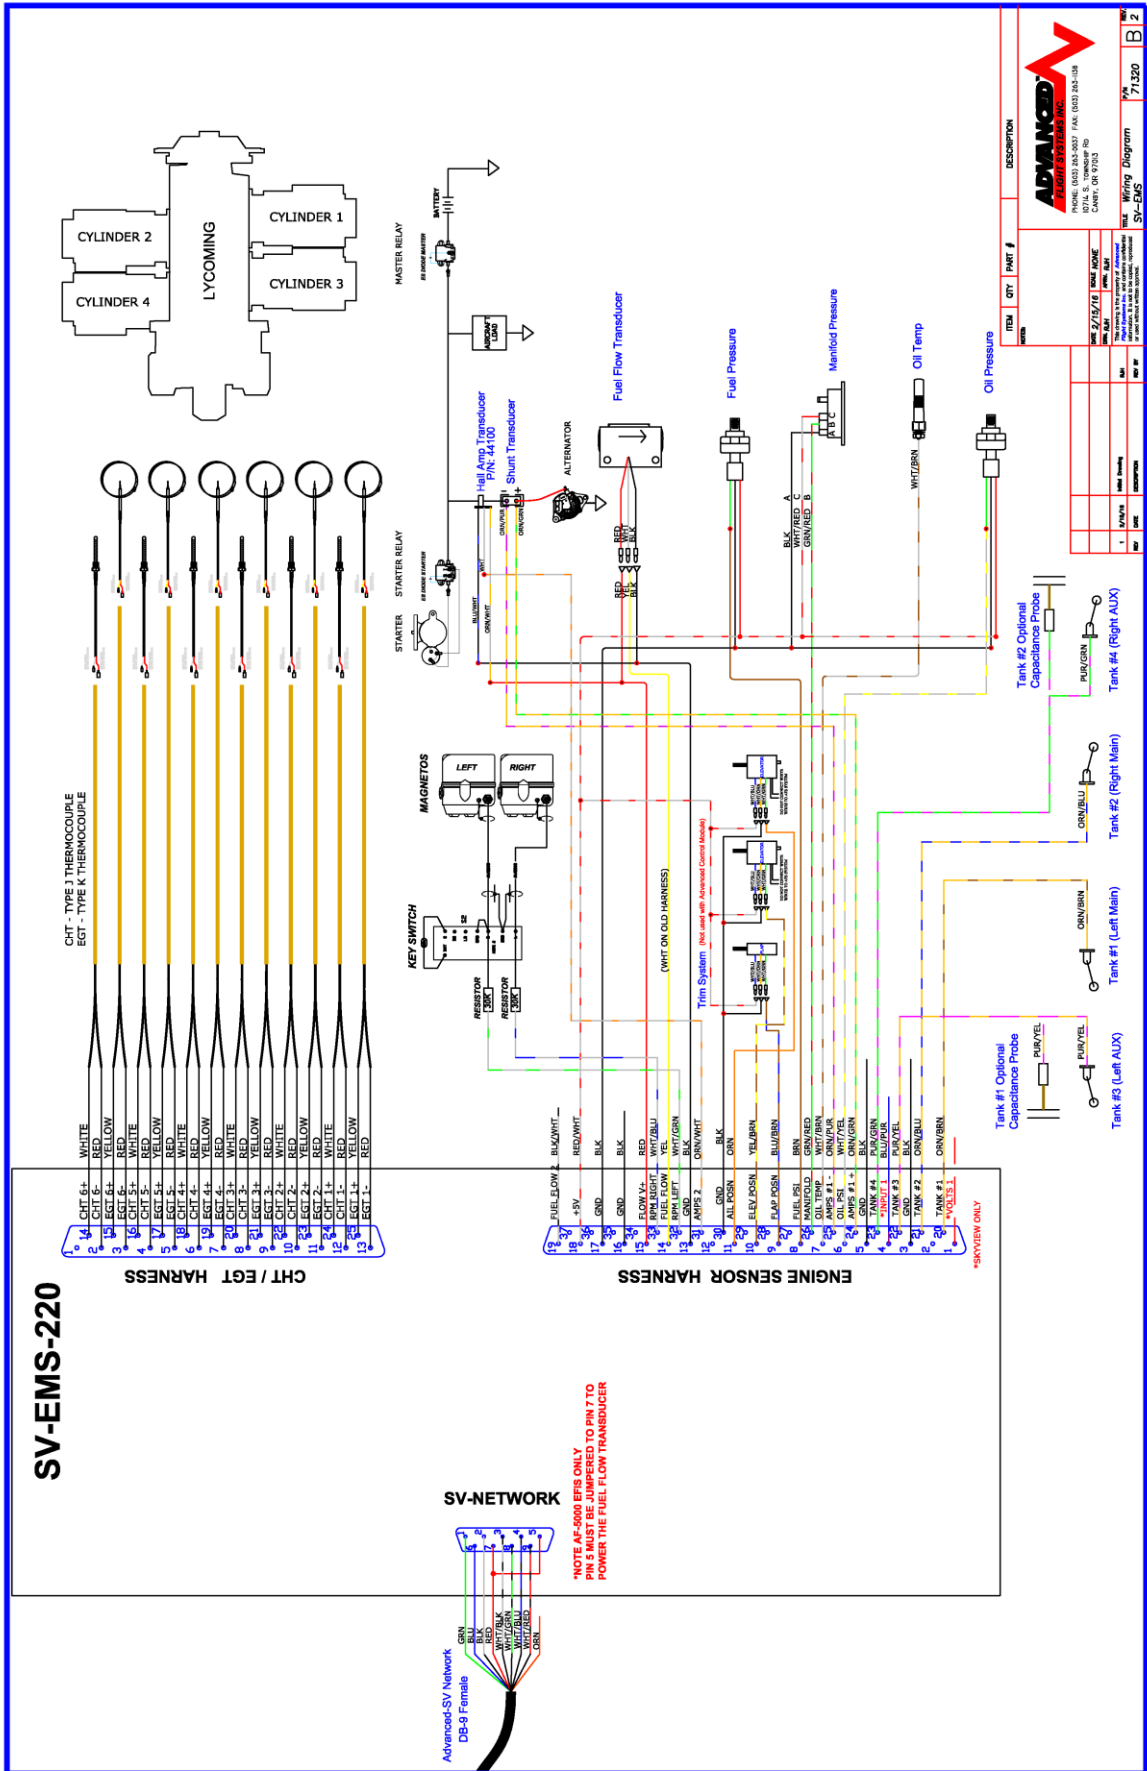

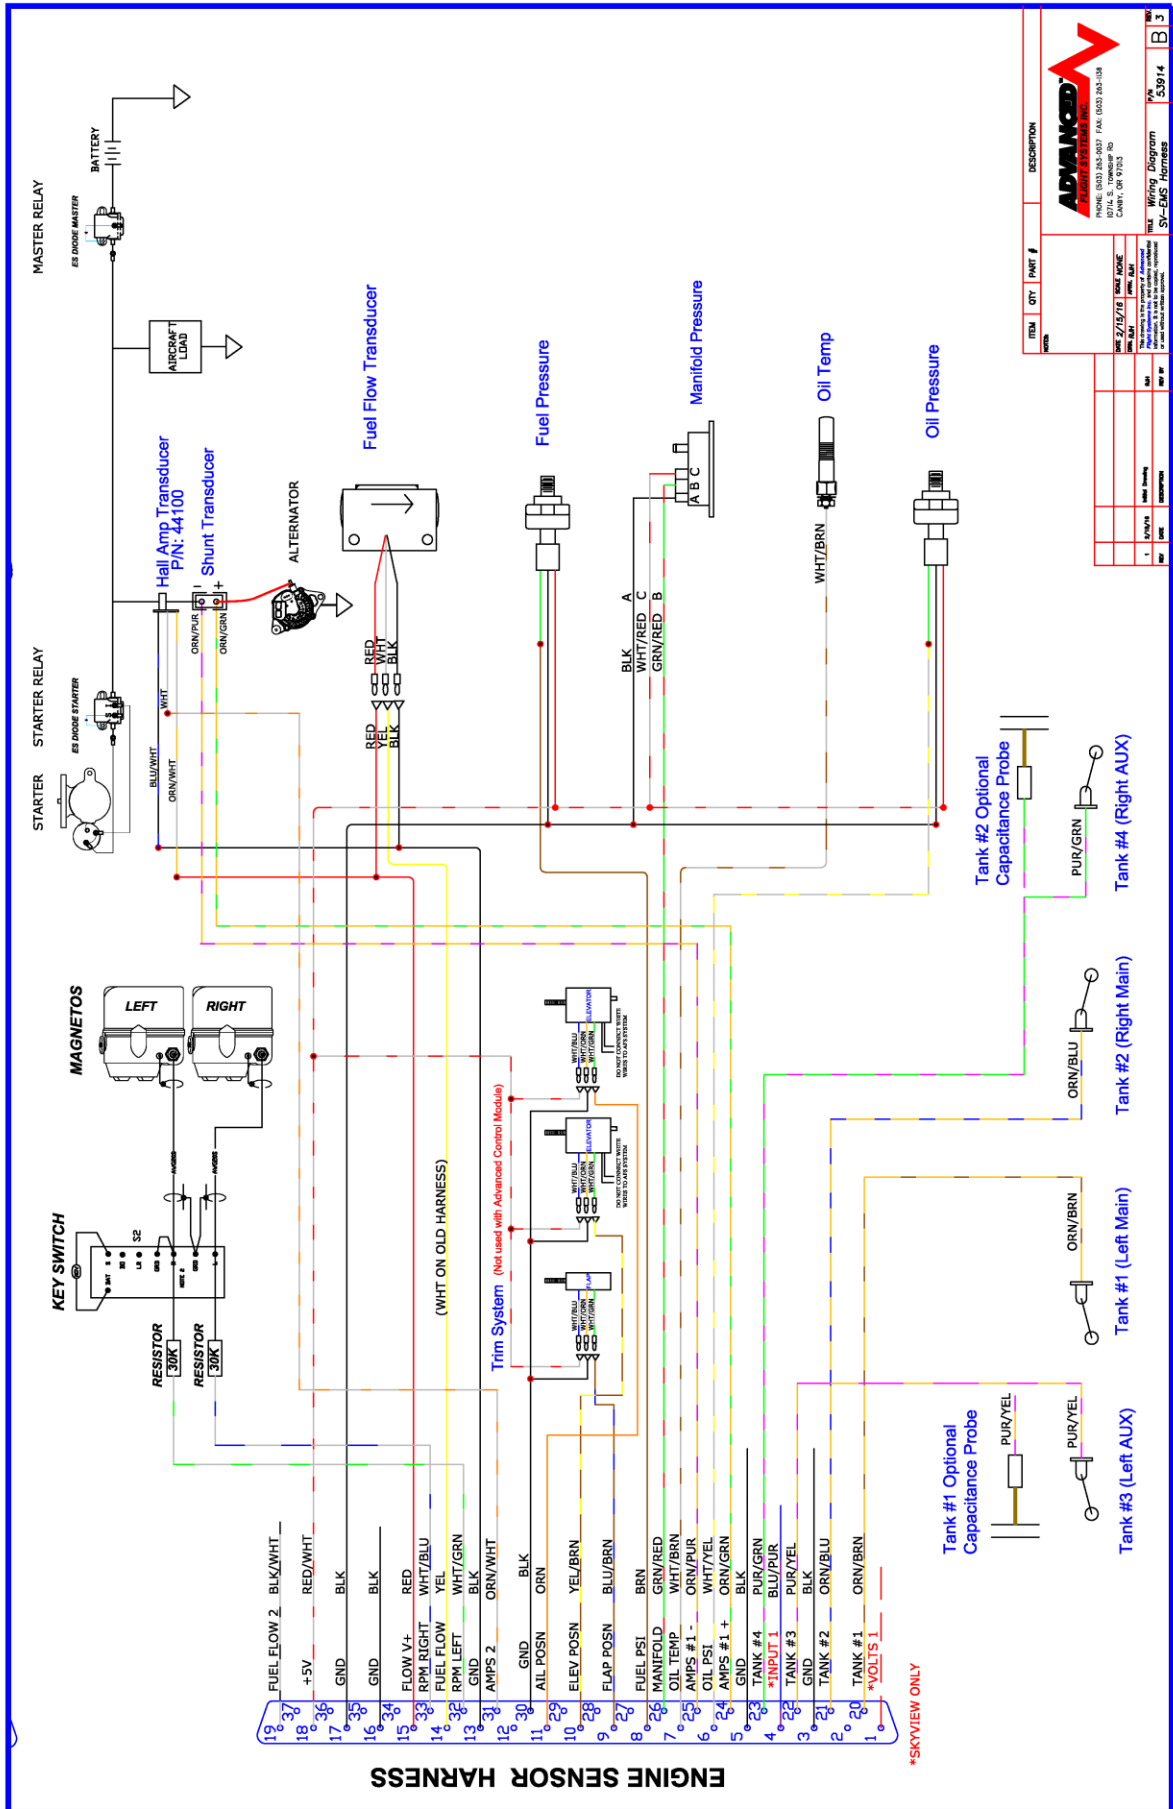

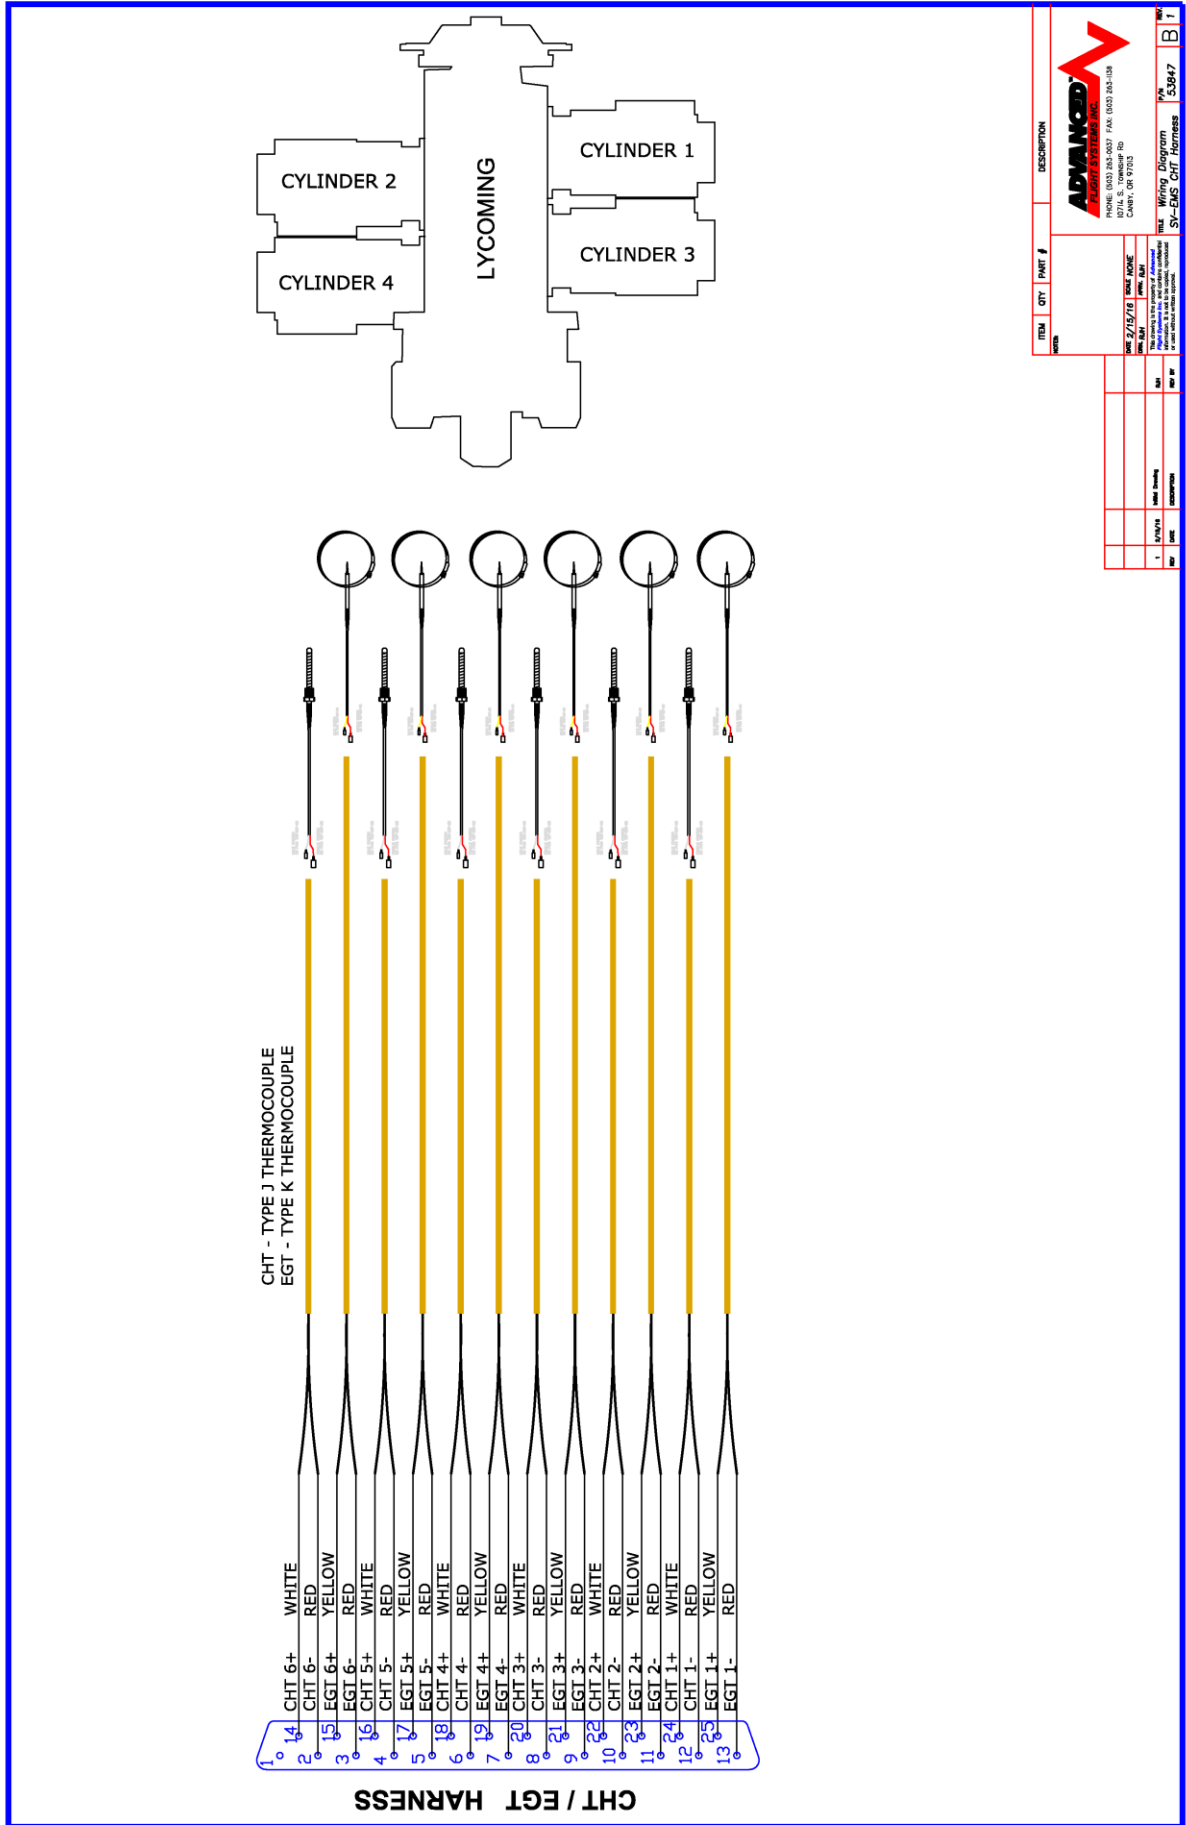


Advanced Control Module Fuses				
Fuse	Description	Max Amps	Connector (Pins)	Control
1	Left wing landing light	10	AIRCRAFT REAR (13,25)	CPU
2	Strobe Lights	10	AIRCRAFT REAR (11,23,24)	CPU
3	Nav Lights	10	AIRCRAFT REAR (9,21,22)	CPU
4	Right wing landing light	10	AIRCRAFT REAR (7,20)	CPU
5	Pitot Heat	15	AIRCRAFT REAR (18,19)	Switch
6	Trim Servos	5	AP PANEL (9)	Vin-Power
7	Flap Motor	10	FLAP-TRIM	CPU
8	Alternator Field	5	AIRCRAFT FRONT (8)	Switch
9	Boost Pump	10	AIRCRAFT FRONT (7,15)	Switch
10	Starter Contactor	10	AIRCRAFT FRONT (6,14)	Vin-Power
11	AUX Power (Defrost, AUX Plug)	5+5	AIRCRAFT FRONT (12,13)	Switch
12	Autopilot servos	10	AP SERVOS (1,5,13)	Switch
13	Nav 2 Radio	10	NAV-COM 2 (12,13)	AV2 Relay
14	Com 2 Radio	10	NAV-COM 2 (1,2,3)	AV2 Relay
15	Transponder + ADS-B	5	XPONDER-GPS-ADSB (1,6)	AV2 Relay
16	Audio Panel	5	AUDIO PANEL (1,2)	AV2 Relay
17	Backup EFIS - CO Detector	5	BACKUP EFIS (1,5)	AV2 Relay
18	NAV 1 Radio + GPS	10	NAV-COM 1 (12,13) GPS NAVIGATOR (1,2)	AV1 Relay
19	Com 1 Radio	10	NAV-COM 1 (1,2,3)	AV1 Relay
20	MFD EFIS	5	EFIS MFD (1,2)	AV1 Relay
21	Backup Battery Charger	10	BACKUP BAT (2,3)	AV1 Relay
22	PFD EFIS	5	EFIS PFD (1,2)	Vin-Power

ACM-ECB Electronic Circuit Breakers

The ACM-ECB module uses electronic circuit breakers that can be reset or shut off from the EFIS screen.



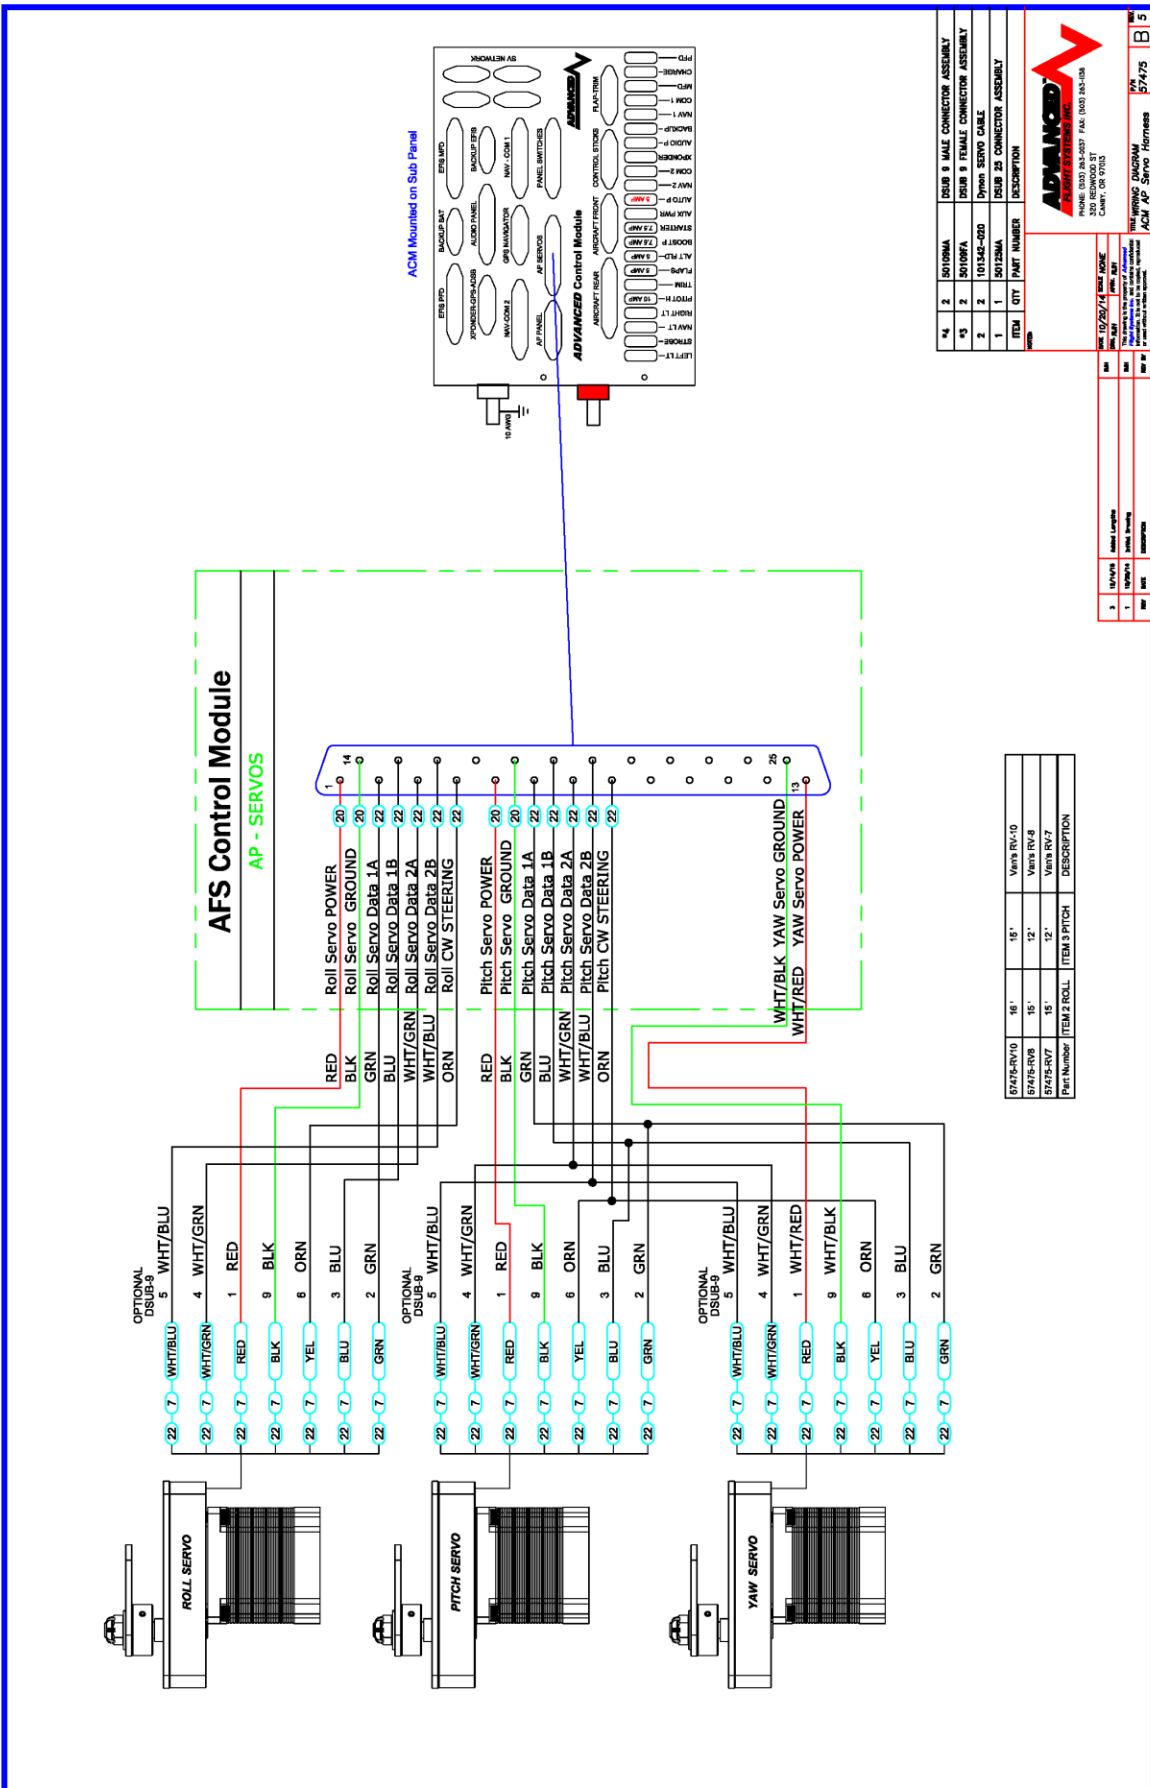


Part Number	Item 2 ROLL	Item 3 PITCH	Description
57475-RV10	16"	15"	Vers RV-10
57475-RV8	15"	12"	Vers RV-8
57475-RV7	15"	12"	Vers RV-7

ITEM	QTY	PART NUMBER	DESCRIPTION
14	2	S0150MA	DSUB 9 MALE CONNECTOR ASSEMBLY
15	2	S0150FA	DSUB 9 FEMALE CONNECTOR ASSEMBLY
2	2	1015AC-000	9pin SERVO CABLE
1	1	S0150MA	DSUB 25 CONNECTOR ASSEMBLY



PHONE (330) 244-5057 FAX (330) 244-5104
 1000 W. STATE ST. SUITE 100
 CANTON, OH 44703

REV	DATE	DESCRIPTION
1	10/20/14	REV 1
2	10/20/14	REV 2
3	10/20/14	REV 3

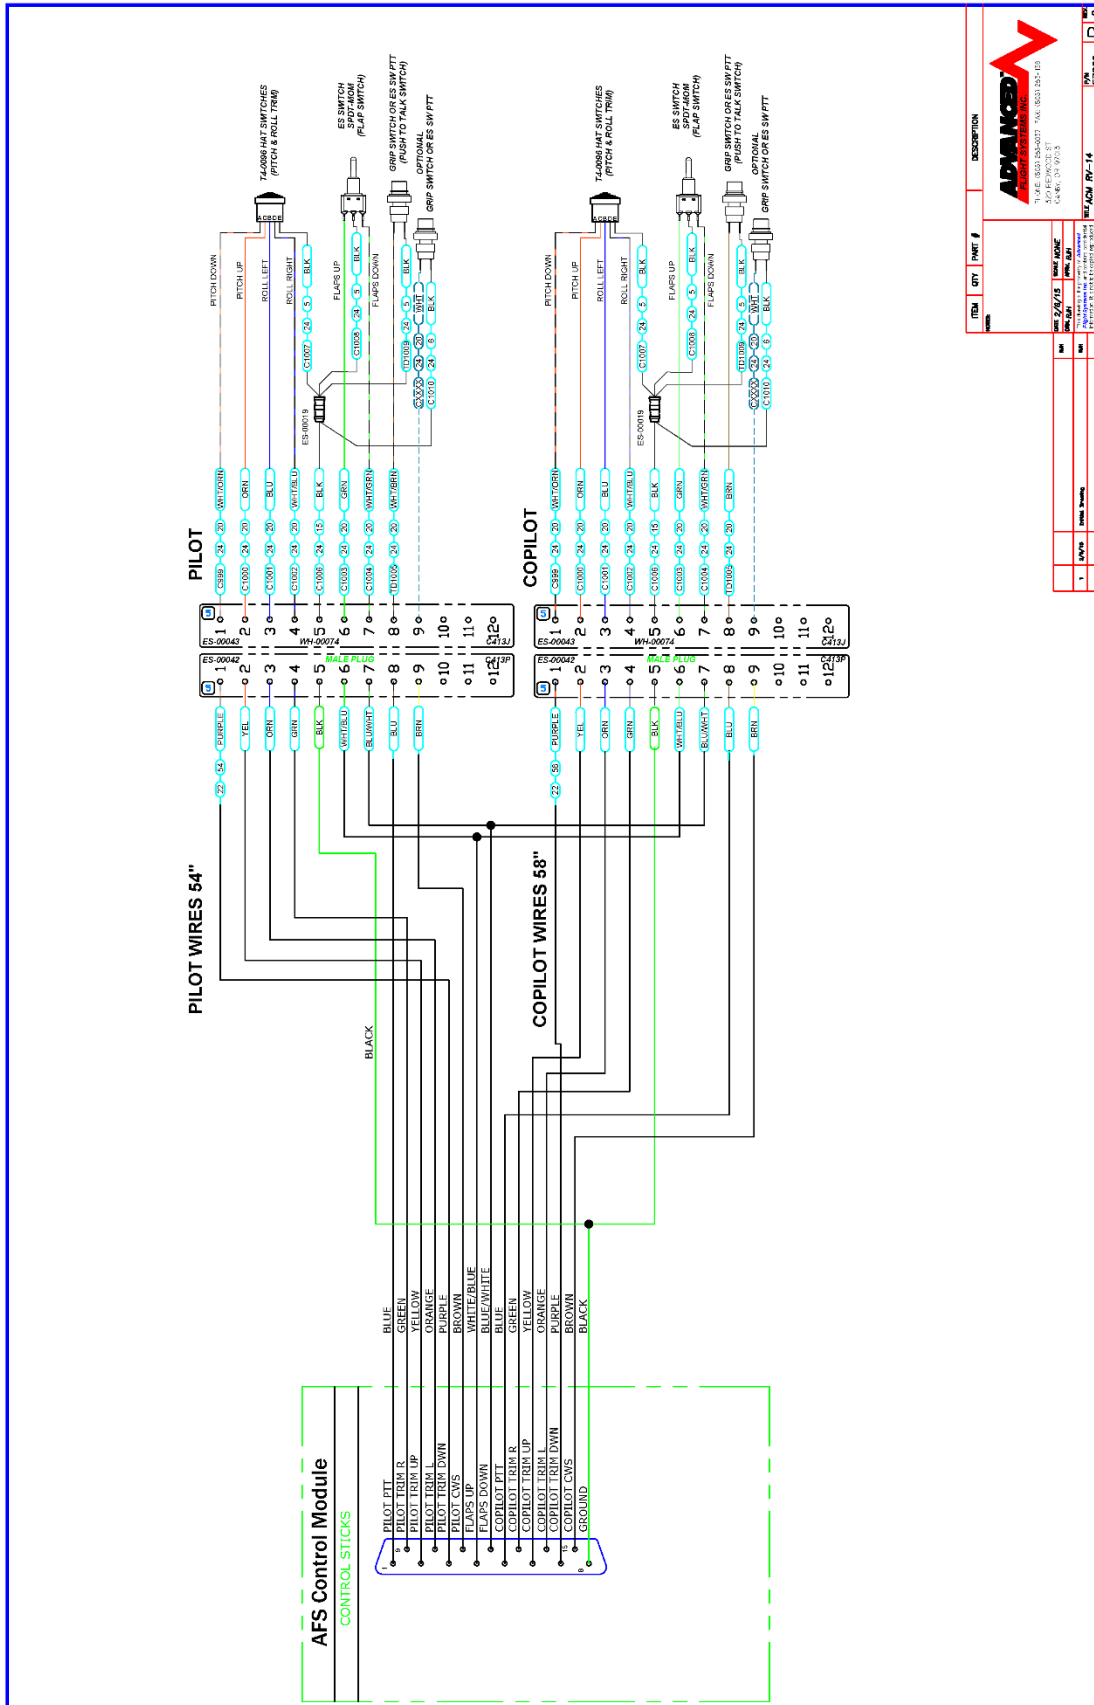

ITEM	QTY	UNIT	DESCRIPTION
1	1	EA	Control Stick Harness


REV	DATE	BY	APP	DESCRIPTION
1	2/2/15	MM	MM	REVISED

REV	DATE	BY	APP	DESCRIPTION
1	2/2/15	MM	MM	REVISED

ADVANCED
AIRCRAFT COMMUNICATIONS

7000 W. 10th Street
Littleton, CO 80120-1075
303.948.1100

Part # 57860 Rev. 2

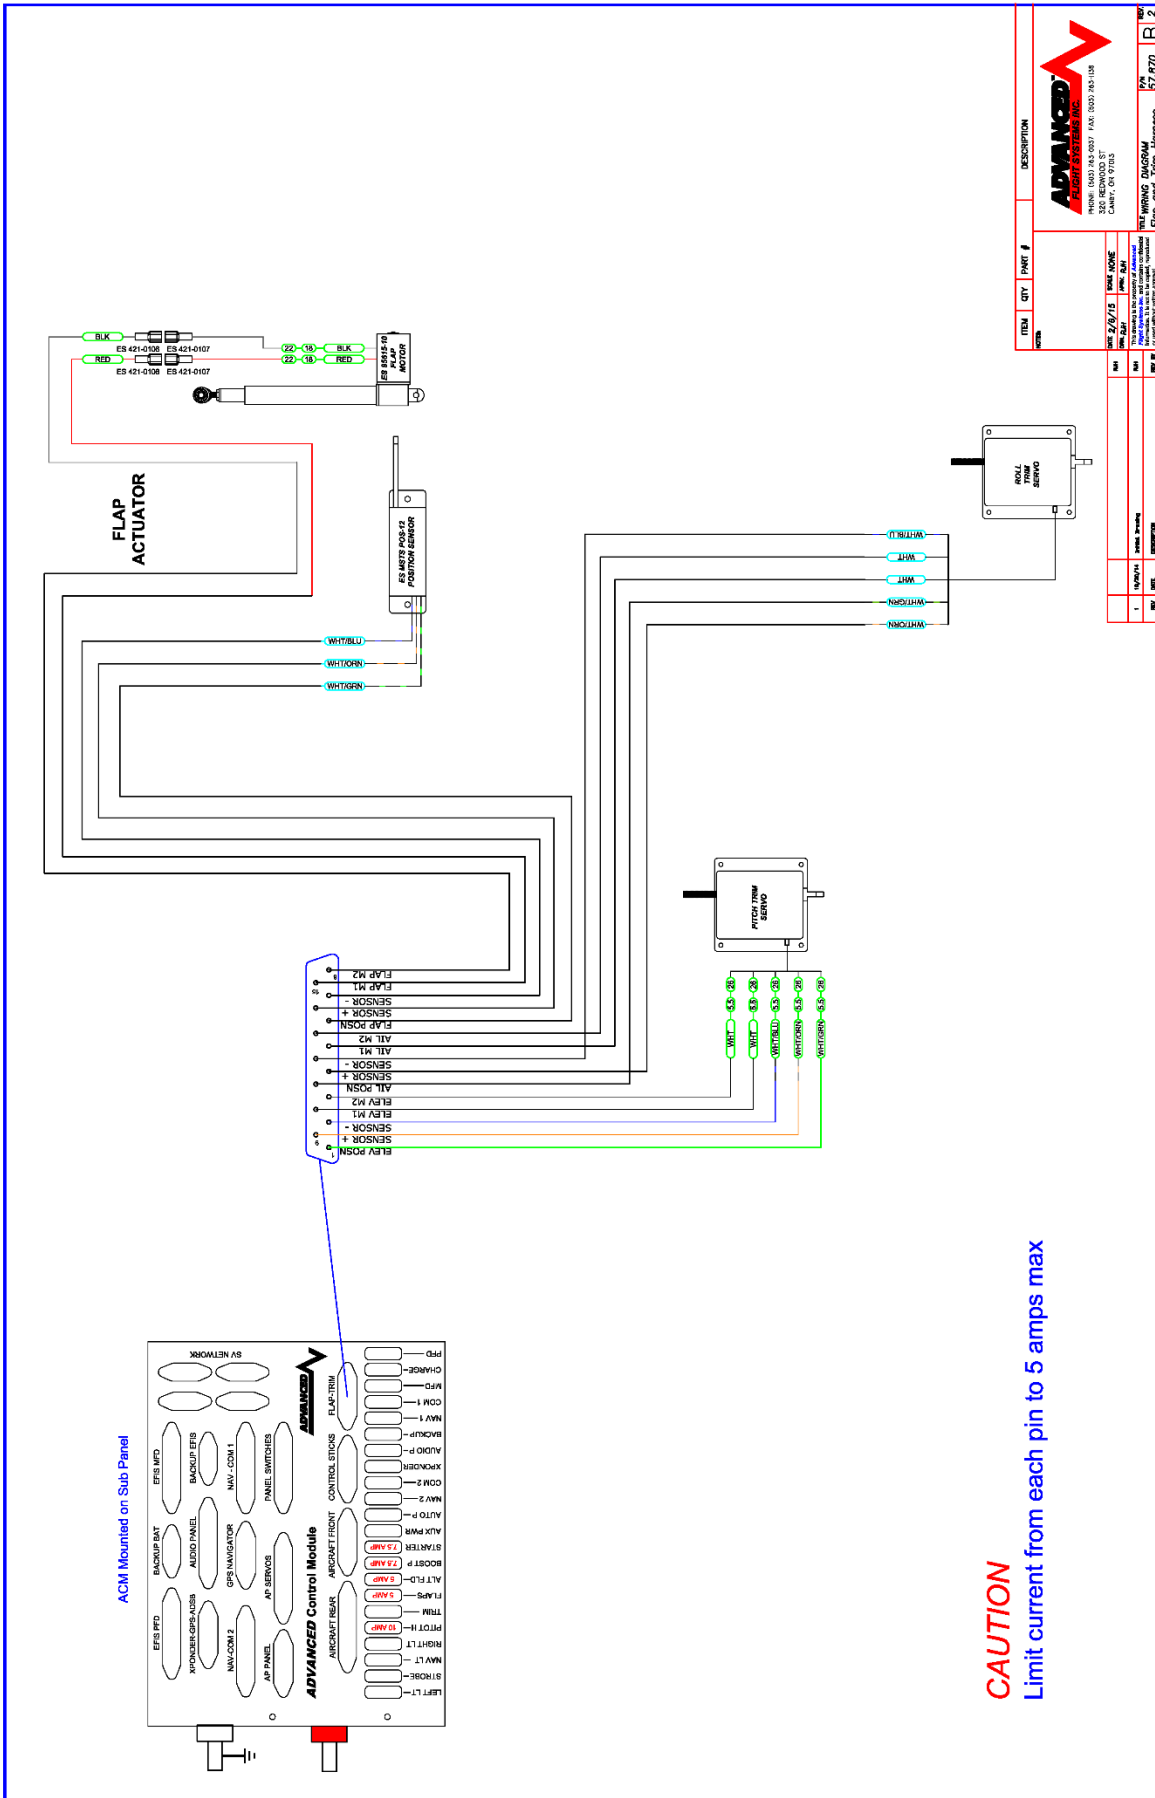

ITEM	QTY	PART #	DESCRIPTION
1	1	57870	Trim and Flap Servo Harness

REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870

REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870


REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870

REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870

REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870

REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870

REV	DATE	DESCRIPTION
1	10/20/14	Initial Release
2	08/01/15	Revised to include 57870

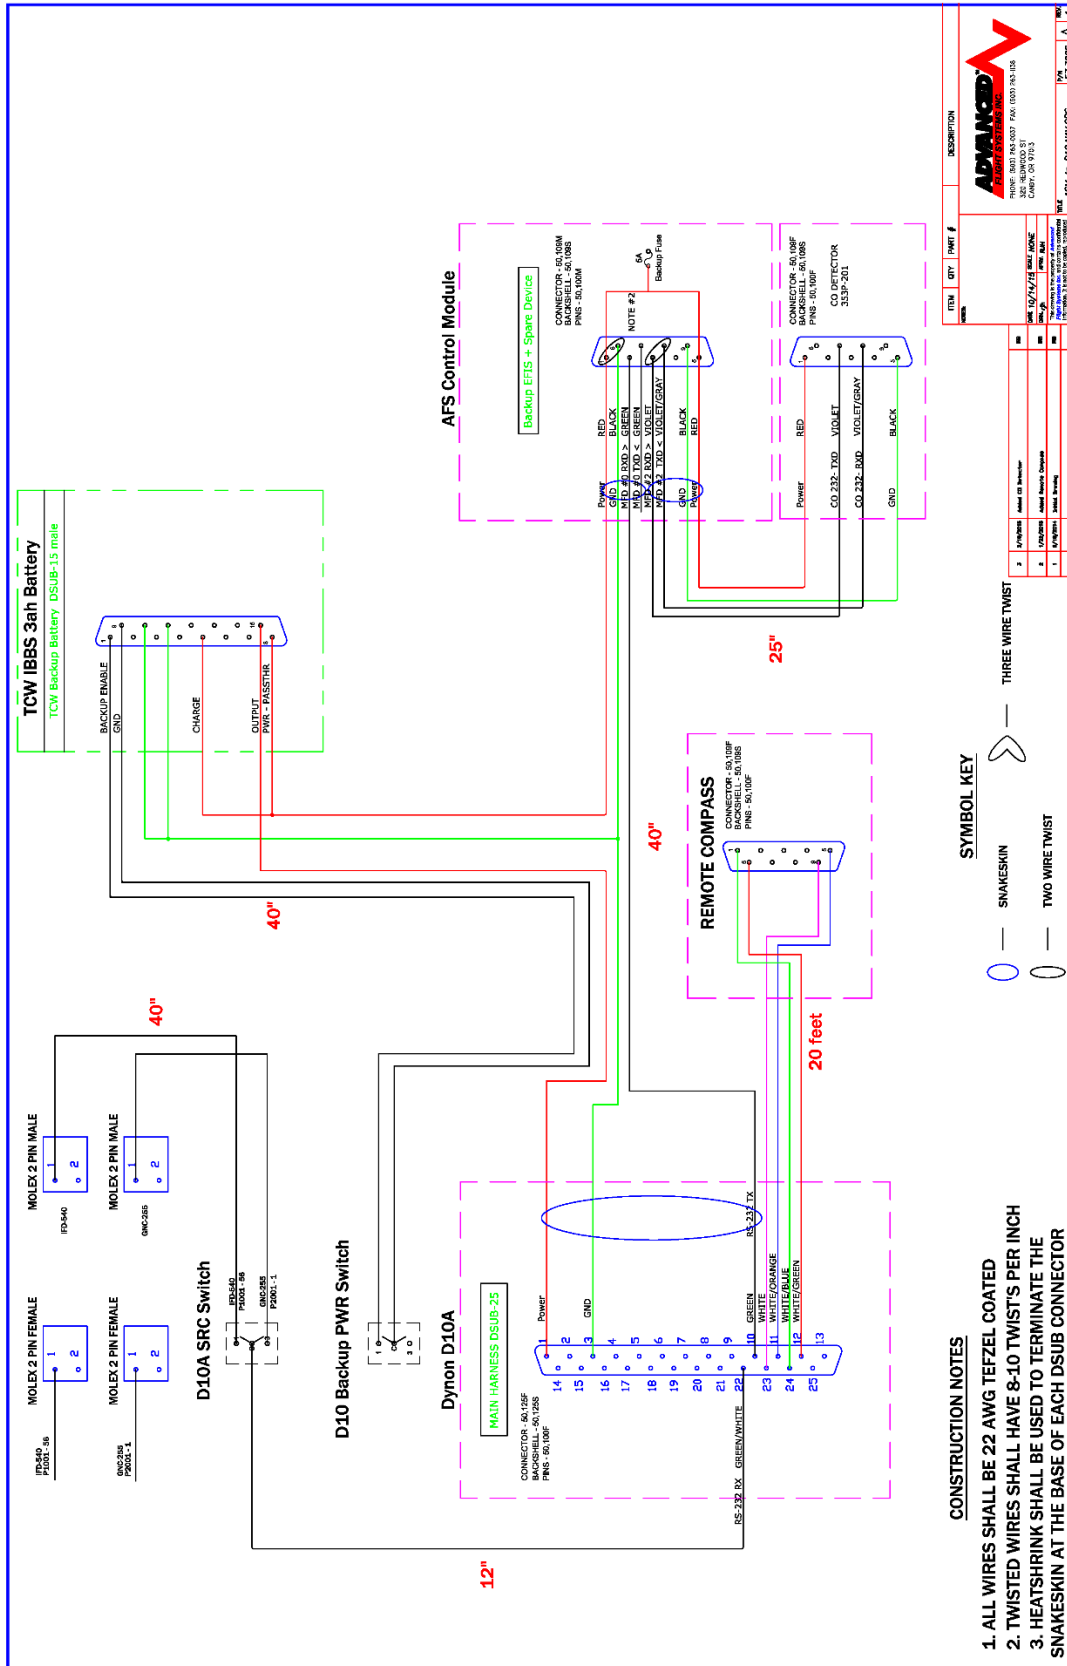

CONSTRUCTION NOTES

1. ALL WIRES SHALL BE 22 AWG TEFLON COATED
2. TWISTED WIRES SHALL HAVE 8-10 TWISTS PER INCH
3. HEATSHRINK SHALL BE USED TO TERMINATE THE SNAKESKIN AT THE BASE OF EACH DSUB CONNECTOR

SYMBOL KEY



ITEM	QTY	UNIT	DESCRIPTION
1	1	EA	TCW IBBS 3ah Backup Battery DSUB-15 male
2	1	EA	D10A SRC Switch
3	1	EA	D10 Backup PWR Switch
4	1	EA	Dynon D10A
5	1	EA	Remote Compass
6	1	EA	AFS Control Module

ADVANCED ACM
 245 SHERWOOD ST
 CHICAGO, IL 60604
 PHONE: (800) 746-0007 FAX: (800) 746-1005
 WWW: WWW.ACM.COM

Part # 57302 A 1
 Rev # 1
 Date 10/20/05
 Drawn By: [Name]
 Checked By: [Name]

Use RG400 Cable and Contact airframe manufacturer for recommended mounting locations.

Antenna Installation

AFS does not supply COM antennas, radio coaxial cable, or antenna BNC connectors. The antenna (including coaxial cable and connector) should be installed according to the manufacturer's instructions.

The following considerations should be taken into account when siting the antenna:

- The antenna should be well removed from any projections, the engine(s) and propeller(s). It should also be well removed from landing gear doors, access doors or others openings which will break the ground plane for the antenna.
- Separation of COM antenna(s) from transponder(s) and GPS receivers / antennas: 1 foot (12 inches).
- Separation of COM antenna(s) from Automatic Direction Finder (ADF) or 121.5 MHz Emergency Locator Transmitter (ELT): 4 feet (48 inches)
- Separation of COM antenna from another COM or NAV antenna: Recommended separation between COM antenna(s), NAV antenna(s), and ELT antennas is 6 feet (72 inches). Minimum required separation between antennas is 4 feet (48 inches). Ideally, install the primary COM antenna on the lower fuselage, and install the secondary / standby COM antenna on the upper fuselage.
- The COM antenna(s) should not be installed in close proximity to AF-5000 displays, modules, or servos to avoid RF interference.
- Where practical, plan the antenna location to keep the cable lengths as short as possible and avoid sharp bends in the cable to minimize the VSWR (voltage standing wave ratio).
- Double-shielded coaxial cable is superior to single shield coax – more of the transmit power will be coupled to the antenna, and less received signal will be lost.
- Electrical connection to the antenna should be protected to avoid loss of efficiency as a result of the presence of liquids or moisture. All antenna feeders shall be installed in such a way that a minimum of RF energy is radiated inside the aircraft.

Antenna Ground Plane


When a conventional aircraft monopole antenna is used it relies on a ground plane for correct behavior. For ideal performance the ground plane should be very large compared to the wavelength of the transmission, which is approx. 7.5 feet. In a metal skinned aircraft this is usually easy to accomplish, but is more difficult in a composite or fabric skinned aircraft. In these cases a metallic ground plane should be fabricated and fitted under the antenna.


As the ground plane is made smaller, the actual dimensions of the ground plane become more critical, and small multiples of the wavelength should be avoided, as should circles. Rectangles or squares are much less likely to create a critical dimension that resonates with the transmissions. The thickness of the material used to construct the ground plane is not critical, providing it is sufficiently conductive. A variety of proprietary mesh and grid solutions are available. Heavyweight cooking foil meets the technical requirements, but obviously needs to be properly supported.

Antenna Cable

When routing the cable, ensure that you:

- Route the cable away from sources of heat.
- Avoid routing antenna cables together.
- Route the cable away from potential interference sources such as ignition wiring, 400Hz generators, fluorescent lighting and electric motors.
- Allow a minimum separation of 300 mm (12 inches) from an ADF antenna cable.
- Keep the cable run as short as possible.
- Avoid routing the cable around tight bends.
- Avoid kinking the cable even temporarily during installation.
- Secure the cable so that it cannot interfere with other systems.

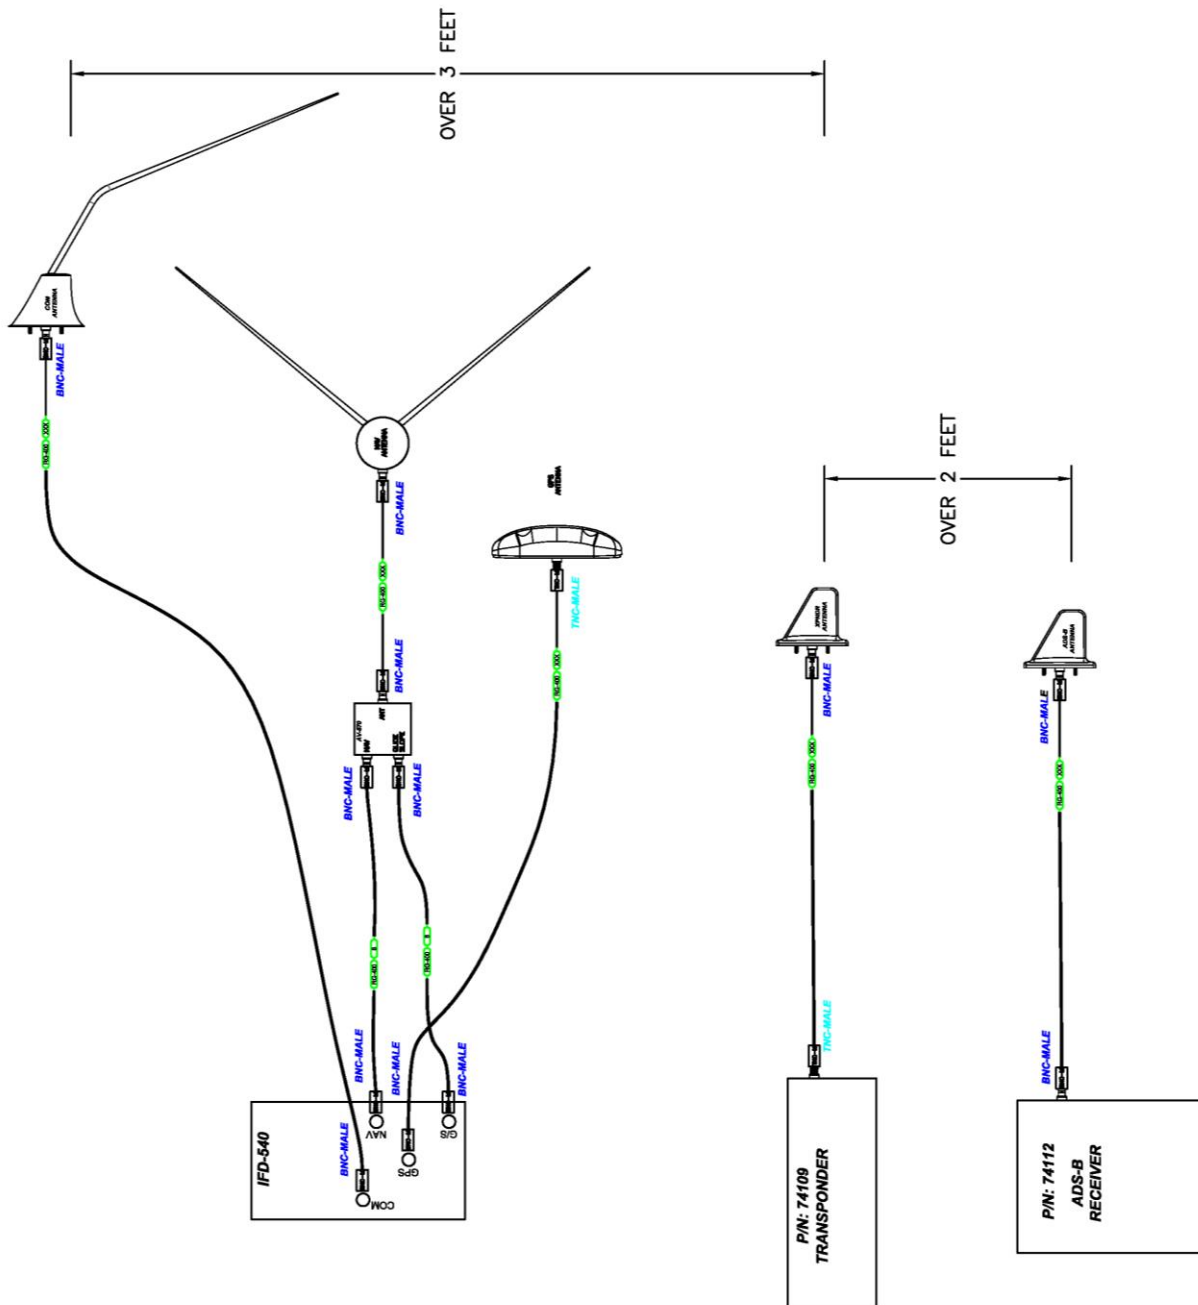

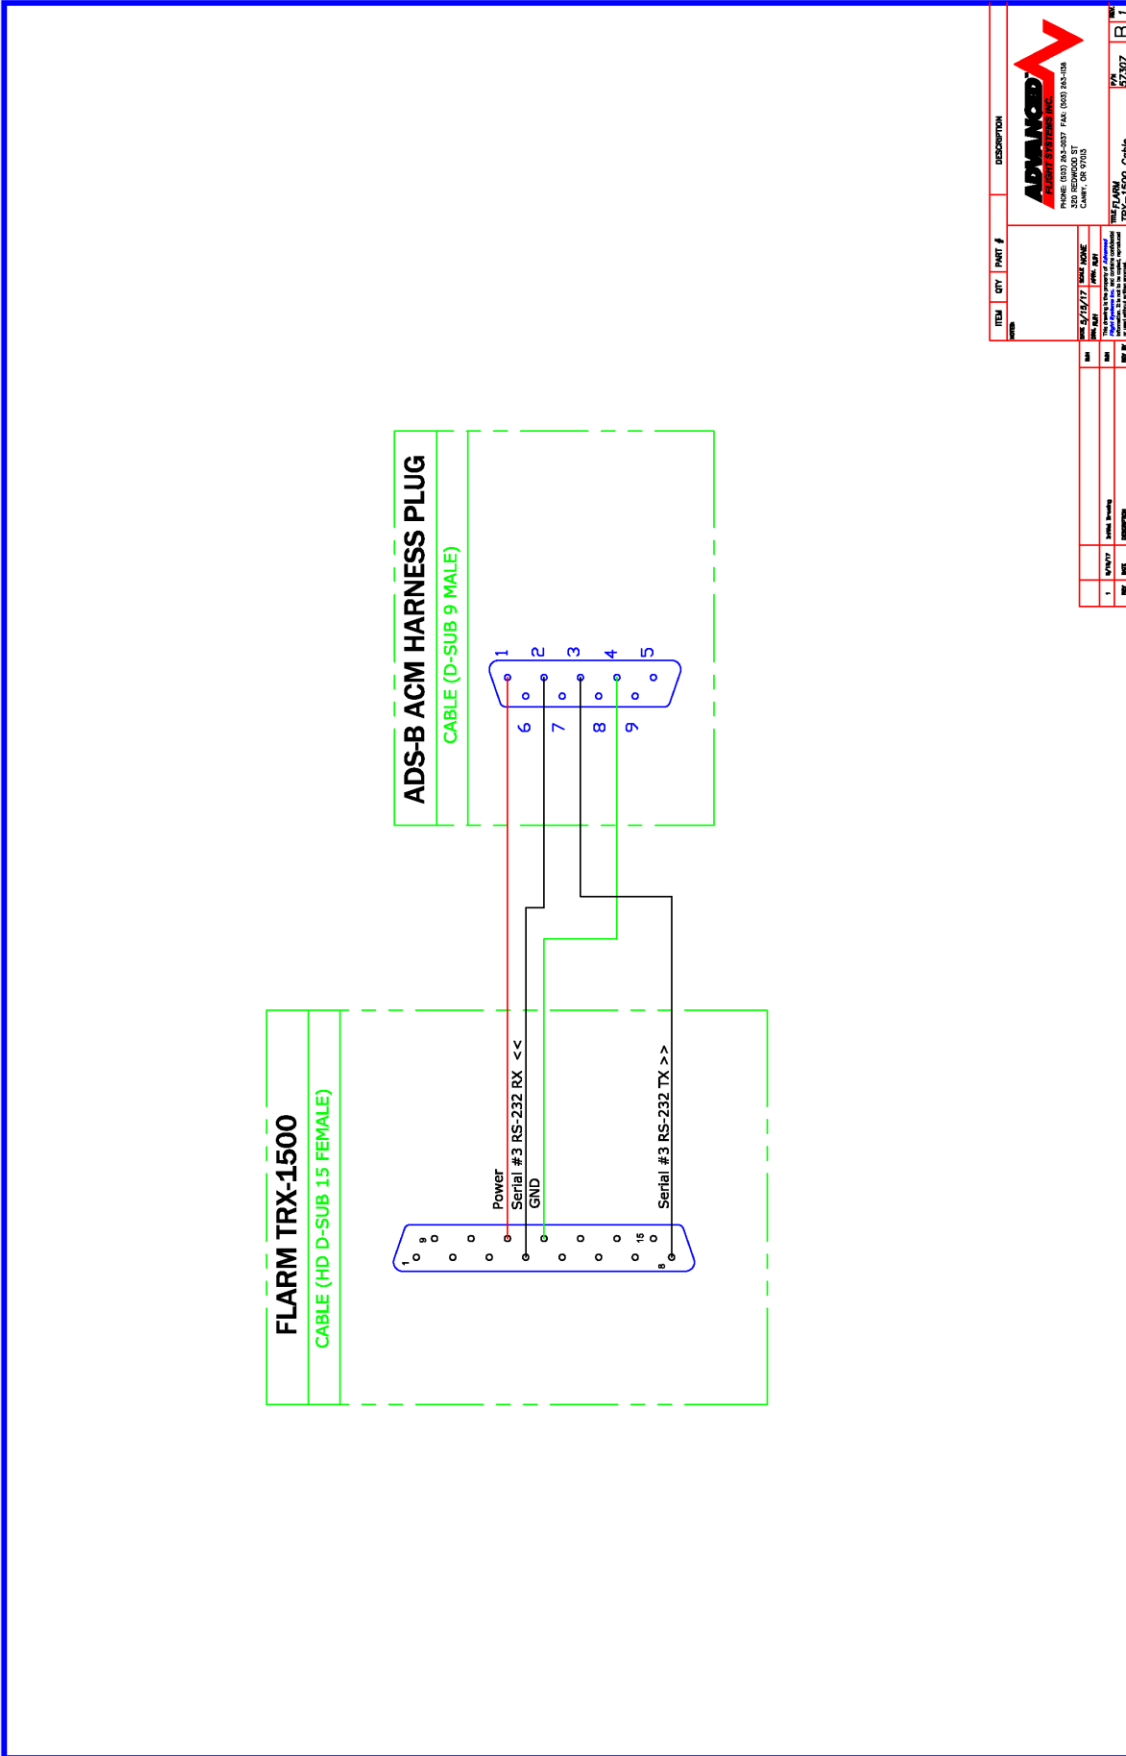

ITEM	QTY	PART #	DESCRIPTION

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

REV	DATE	BY	DESCRIPTION
1	10/20/17		Initial Release
2			Revisions

FLARM TRX-1500 Configuration


Use the TRX PC configuration software set the TRX-1500 to:

Serial Port 3 Output format: GARMIN TIS

Baud Rate: 9600

On the MFD EFIS screen:

Calibration->Admin Settings. Set item, '6. Port 3' to 'ZAON TRFC'

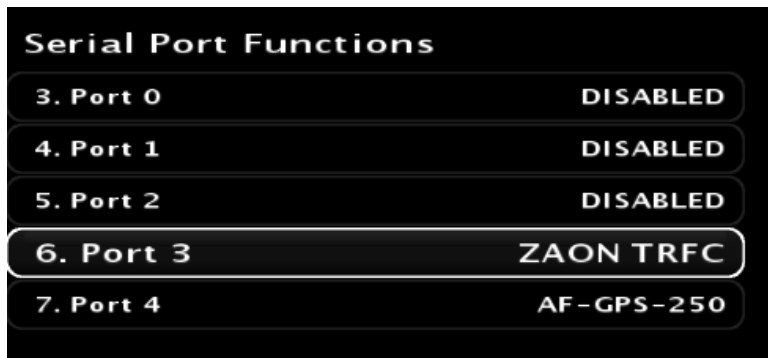



RV-14 Remote Component Mounting

The remote radio transceiver, backup battery and audio panel mount on new ribs mounted in the glove compartment area. The following modifications need to be done:

- Remove glove compartment ring from the RV-14 sub panel P/N: F-01455B
- Install new ribs to the RV-14 sub panel P/N:68102 and P/N:68103
- Install new center console cover plate with Alternator Circuit breaker and Alternator Shunt P/N: 68101

Avidyne IFD-540 Tray Mounting



The IFD Tray mounts to the RV-14 airframe panel ribs. You will need to use the IFD tray as a template to mark the side hole locations on the airframe panel ribs. After marking the 8 hole locations, 4 on each side you will need to drill for 6-32 screws. Mount the tray to the airframe panel ribs using qty 8 6-32 x 3/8" counter sunk screws and nylon lock nuts.

RV-14 EMS-220 Module Install

Mount the EMS-220 to the left side panel mounting rib, see P/N: 25014 RV-14 remote component mounting drawing.

RV-14 SV-ADSB-470/472 ADS-B Module Install

Mount the ADSB receiver to the right side panel mounting rib, see P/N: 25014 RV-14 remote component mounting drawing.

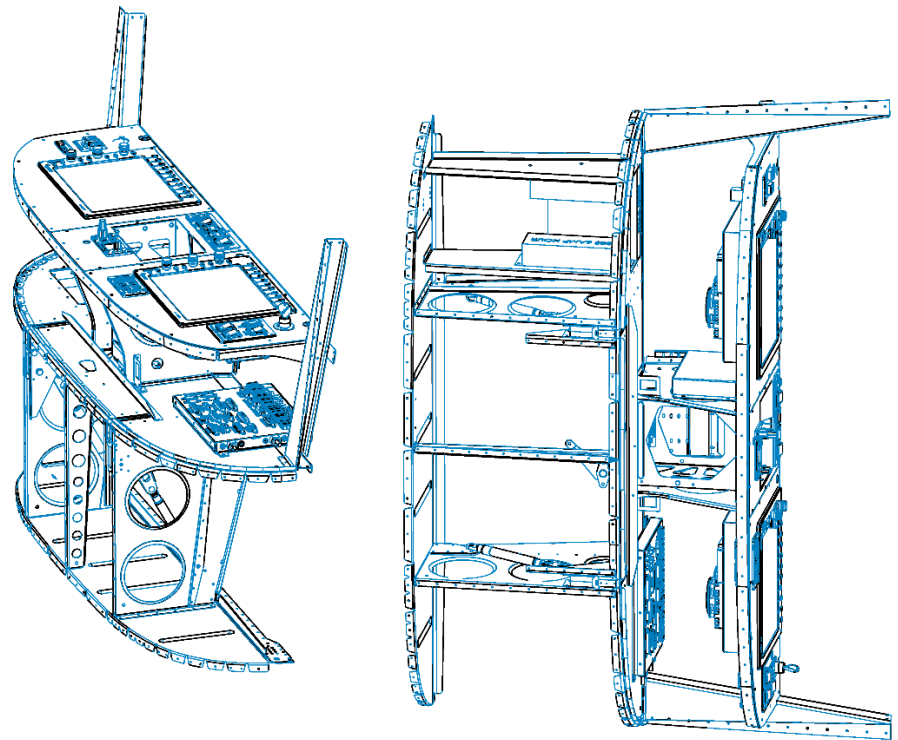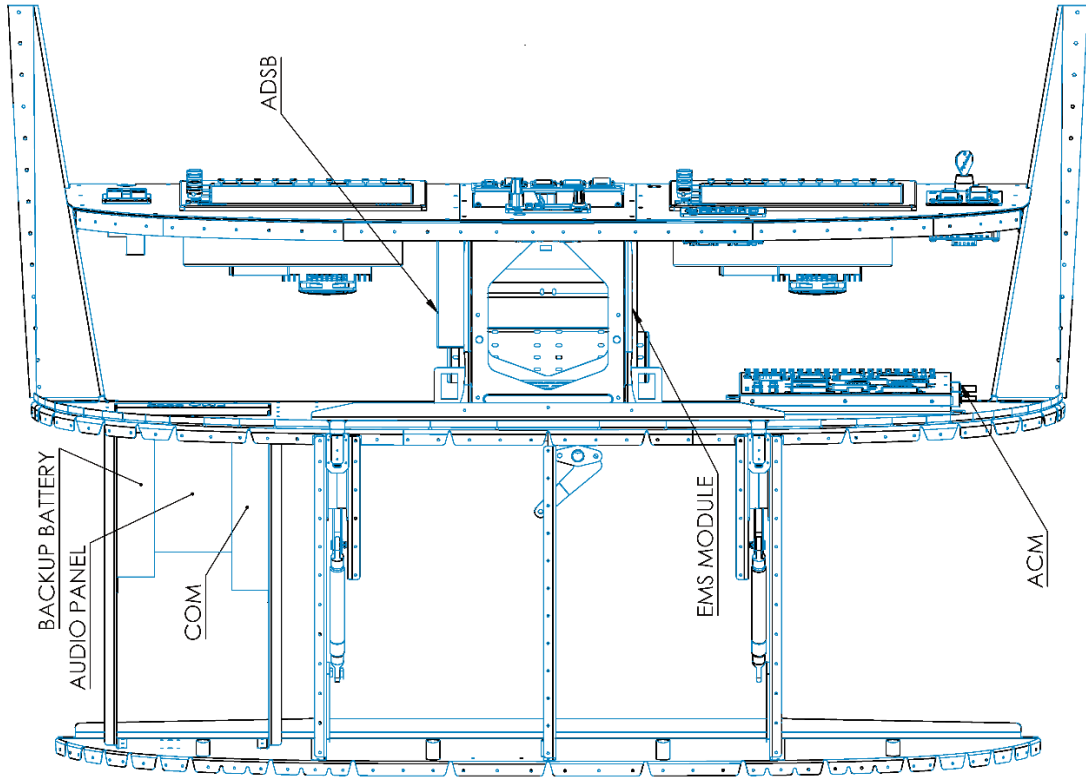

RV 14 AVIONICS ASSEMBLY

PLANNING / WIRELESS

ADVANCED FLIGHT SYSTEMS INC.
 Flight Systems Inc.
 PO Box 270 Canby, OR 97013
 Tel: (503) 269-0037 Fax: (503) 269-1138
 Email: Sales@AdvancedFlightSystems.com
www.AdvancedFlightSystems.com

Pat. Pending © Copyrighted
 DWG NO. 25014 REV. 01
 DATE: 3/16/2017
 DESIGNED BY: [Blank]
 CHECKED BY: [Blank]
 DRAWN BY: [Blank]
 SCALE: [Blank]
 TOLERANCES: .XX ±.010
 HOLES: +.010/- .000
 ANGLES: 40° 25'
 SURFACE FIN: [Blank]


REVISIONS: [Blank]

DATE: [Blank]

25014

14 COMPONENTS

THIS DRAWING AND THE DESCRIBED HEREON IS THE SOLE PROPERTY OF ADVANCED FLIGHT SYSTEMS, INC. AND IS SUBJECT TO RETURN ON DEMAND. THIS DRAWING IS NOT TO BE REPRODUCED, DISTRIBUTED OR USED FOR MANUFACTURING WITHOUT THE EXPRESSED PERMISSION OF ADVANCED FLIGHT SYSTEMS, INC.

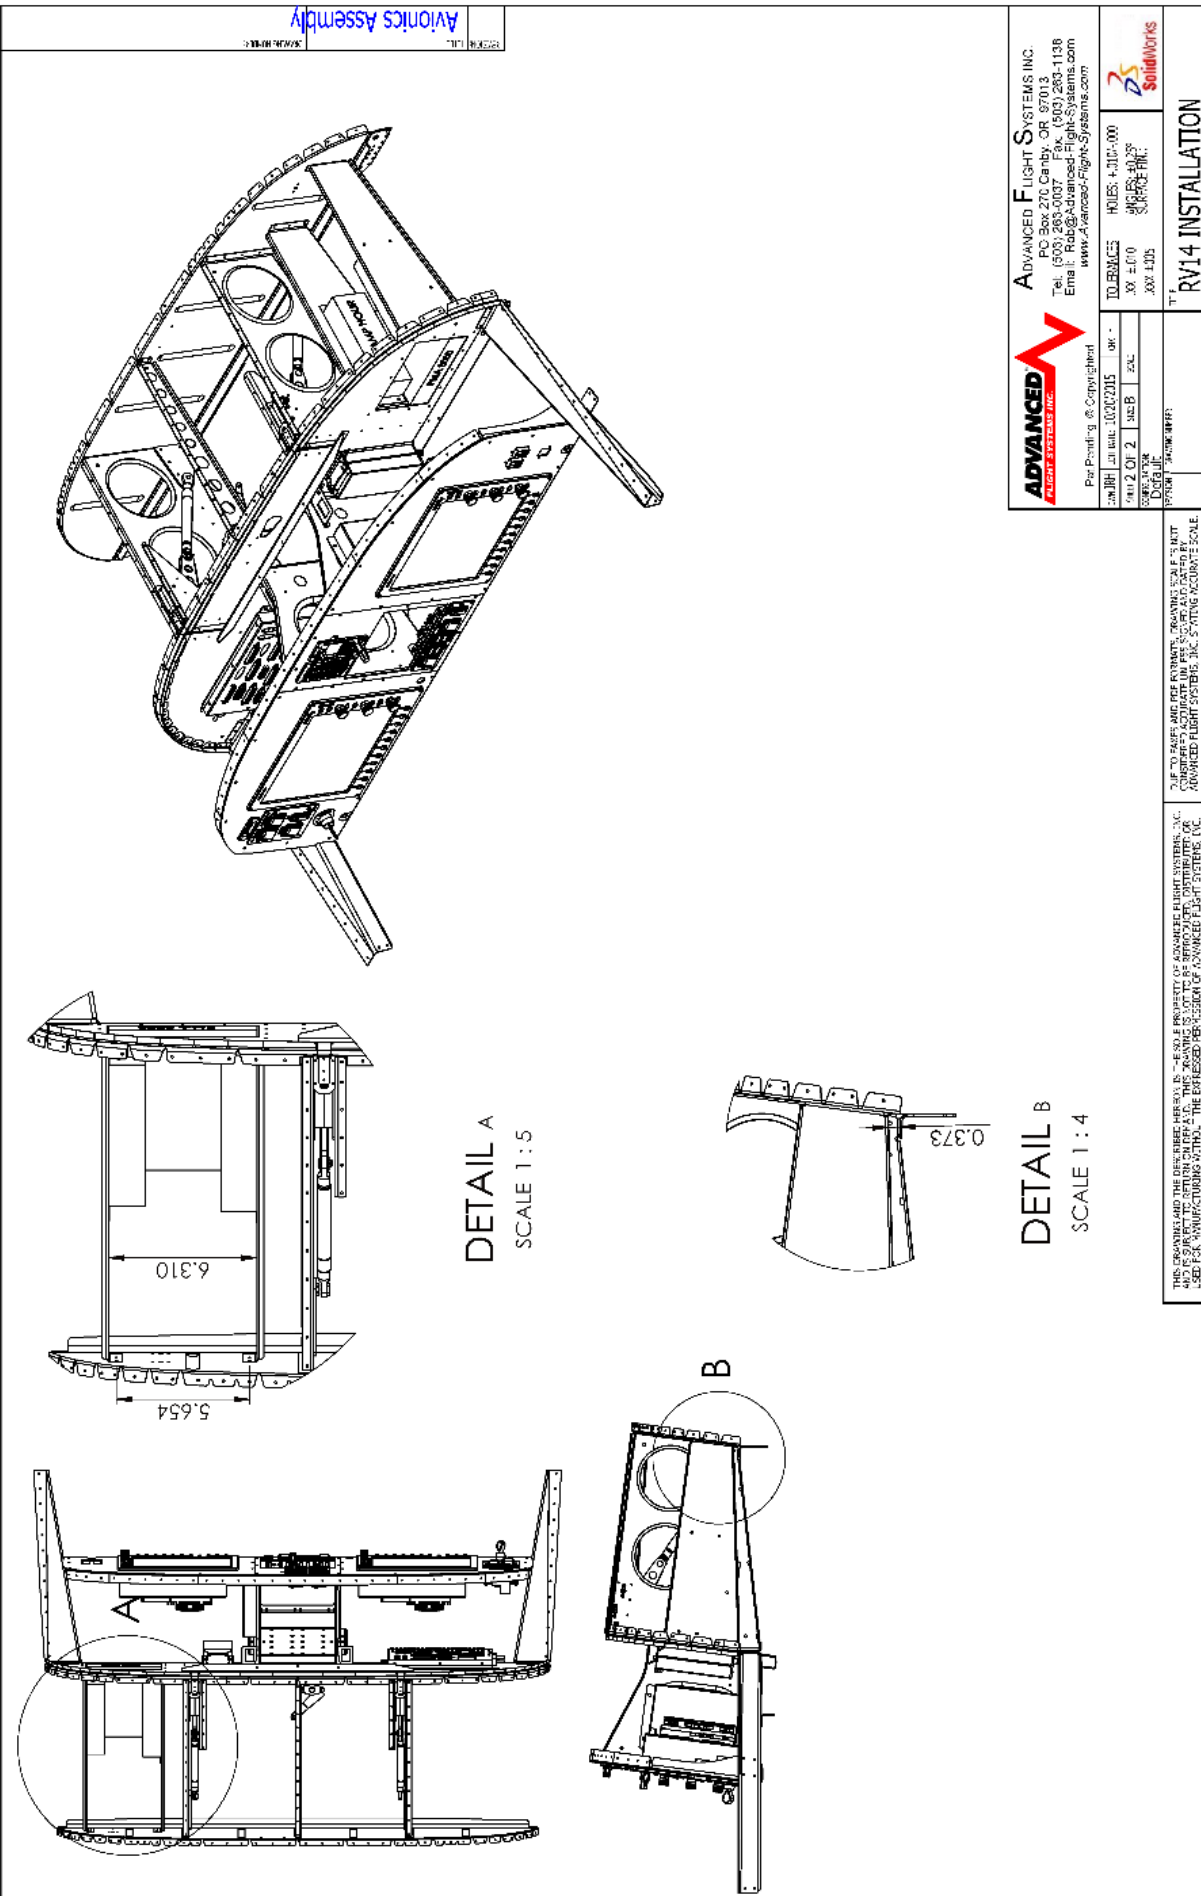

DETAIL A
SCALE 1:5



DETAIL B
SCALE 1:4



ADVANCED FLIGHT SYSTEMS INC.
 PO Box 270 Canby, OR 97013
 Tel: (503) 263-0037 Fax: (503) 263-1138
 Email: Sales@AdvancedFlightSystems.com
www.AdvancedFlightSystems.com


Part Number: 100202015	REV: 01	DATE: 02/15/15	BY: JHB	CHK: JHB
DESCRIPTION: RV14 INSTALLATION	TO: BR/ACS, HOLE# 4-110-000			
PROJ: 100202015	SHEET NO: 40/38			
	SHEET TOTAL: 40/38			
	DATE: 02/15/15			
	DWG TITLE: RV14 INSTALLATION			
<small>THIS DRAWING AND THE DESIGN HEREON IS THE SOLE PROPERTY OF ADVANCED FLIGHT SYSTEMS, INC. AND IS STRICTLY CONFIDENTIAL. THIS DRAWING IS NOT TO BE REPRODUCED, COPIED, EITHER WHOLLY OR IN PART, FOR ANY PURPOSES WITHOUT THE EXPRESS PERMISSION OF ADVANCED FLIGHT SYSTEMS, INC.</small>				

ADVANCED FLIGHT SYSTEMS INC.
 SolidWorks
 T.F.

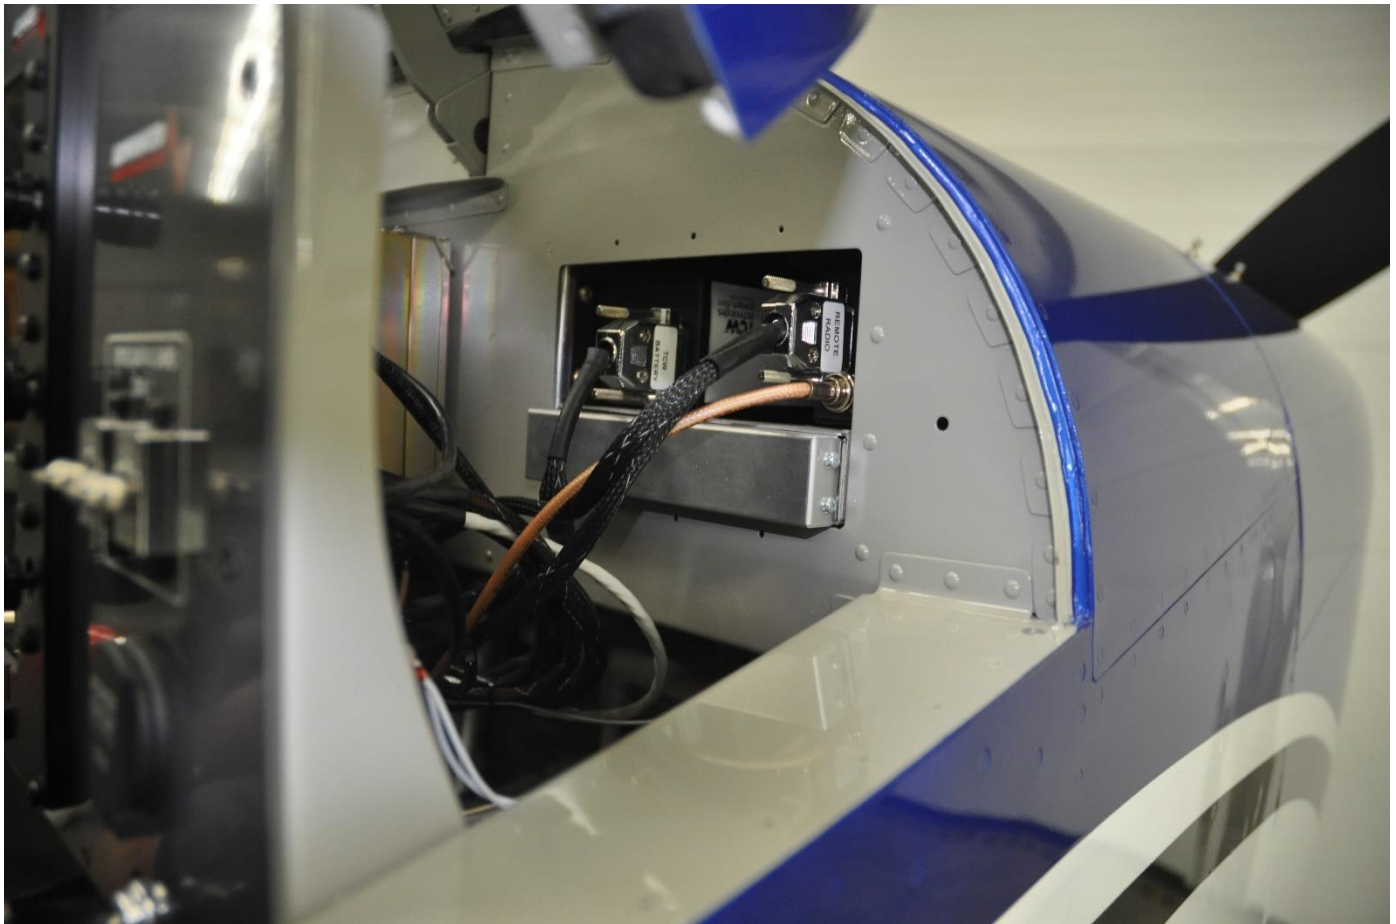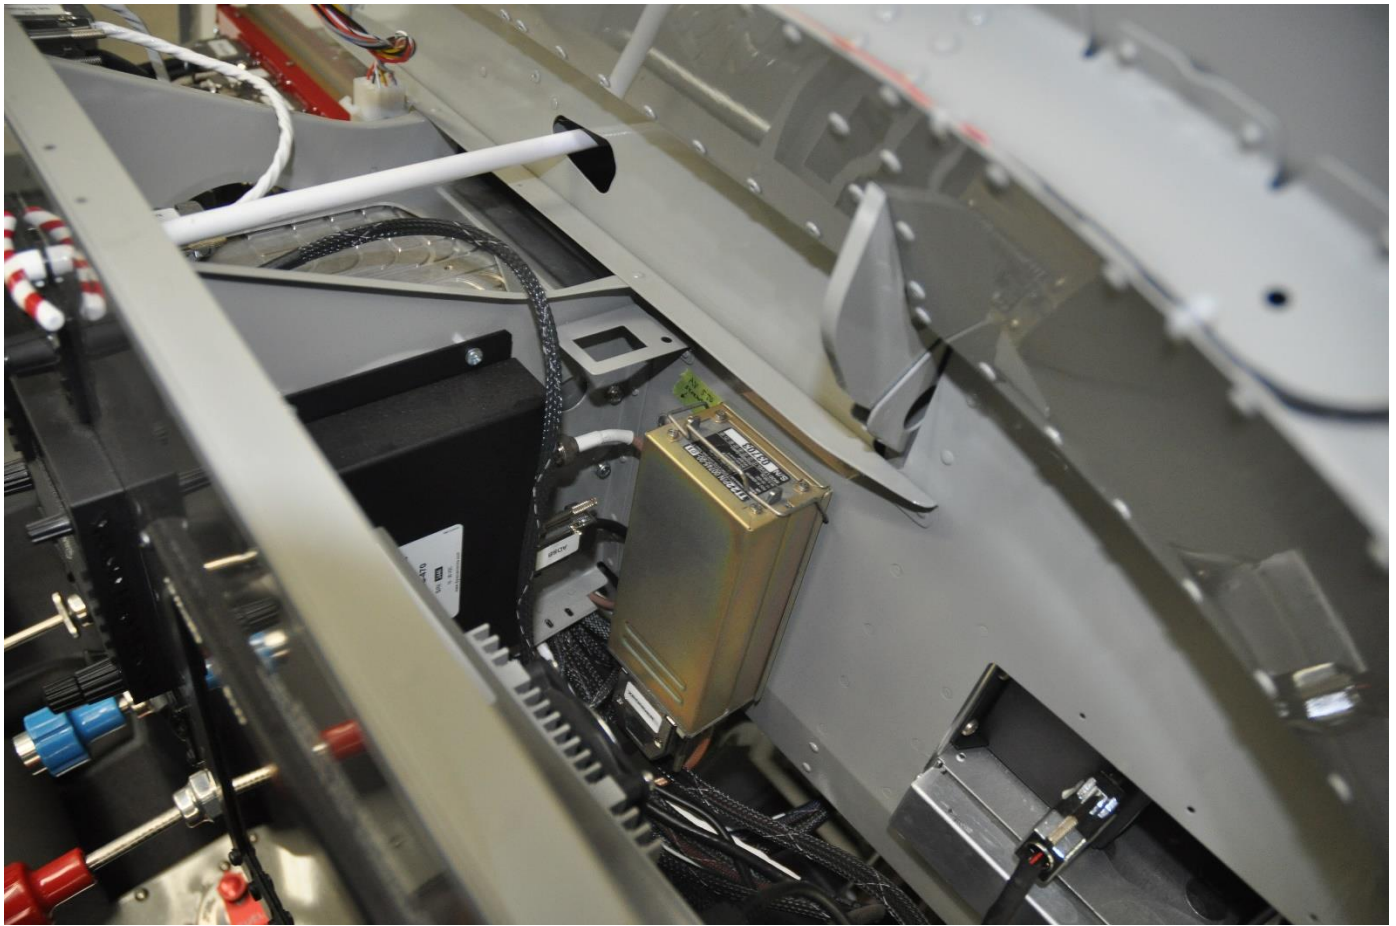

Advanced Control Module (ACM)

The P/N: 70050 ACM or 70080 ACM-ECB module mounts on the sub panel behind the EFIS PFD. You will need to drill the sub-panel using the ACM module as a template. The ACM module should be connected using QTY:4 10-32 x .5" screw, washer and nylon lock nut. You will also need to drill the sub-panel for the ACM ground wire, make sure you remove the paint for a good electrical contact using a 10-32 x .5" screw, washer and nylon lock nut.

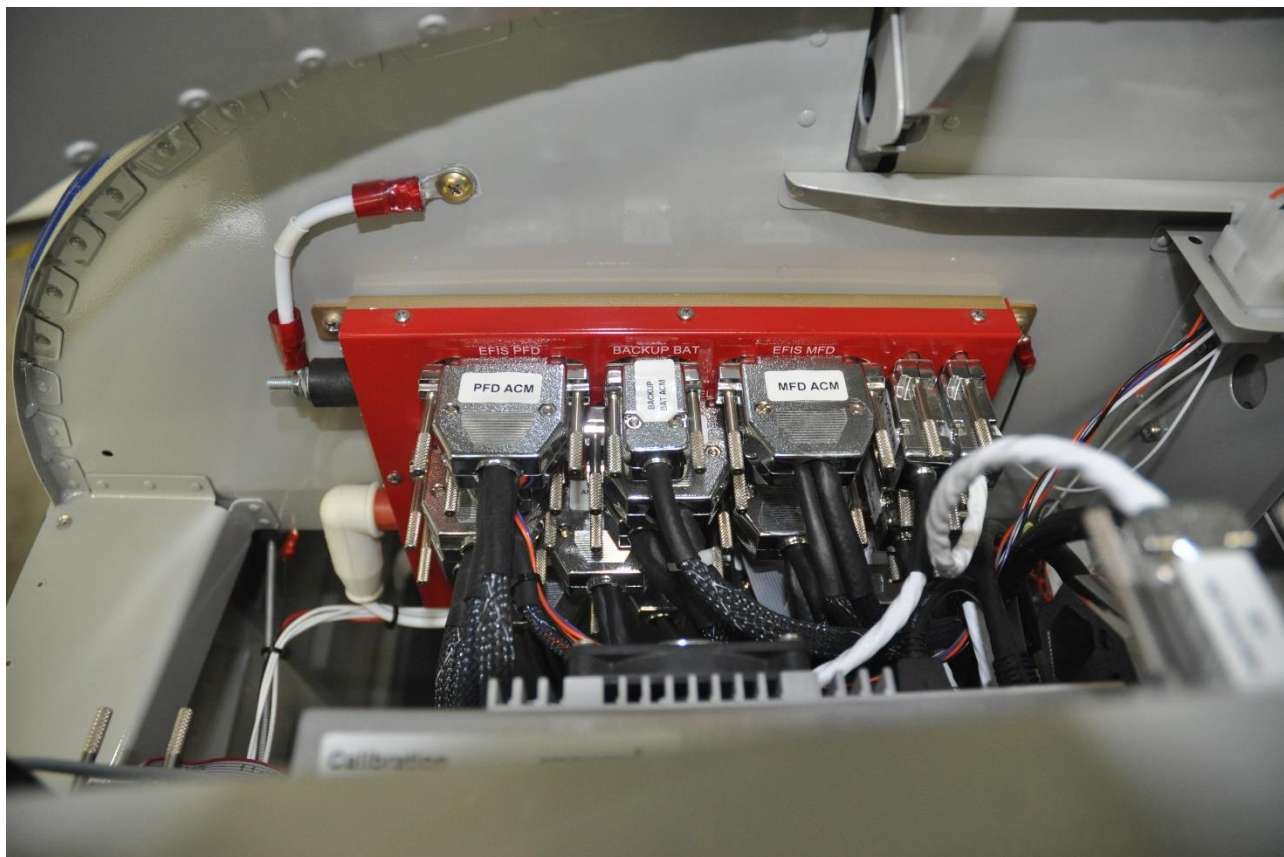

- Connect the main power wire from the battery master relay to the red power lug on the ACM. The Van's supplied main power wire should have a 1/4" (0.250") ring terminal with a molded plastic cover.
- Connect the ground power wire from the airframe ground to the black power lug on the ACM. The ACM main ground wire should have a #10 ring terminal with a molded plastic cover.

Do not over-torque the power terminal nuts, they are soft copper and will break if over-torqued.


Red Main Power Terminal Max Nut Torque: 30 in-lbs

Black Main Ground Terminal Max Nut Torque: 24 in-lbs

RV-14 ADAHRS Mounting and Wiring


The RV-14 ADAHRS mounts in the left wing using the Van's supplied slide in mounting bracket. The Van's ADAHRS bracket has a built-in tab that will hold the ADAHRS into the slide in mounting bracket. The ADAHRS should slide into the bracket slots and not have any slop or looseness. If the ADAHRS is loose in the bracket you will need to shim the ADAHRS with UHMW tape. If you are using a dual ADAHRS system you should bolt the backup ADAHRS to the primary ADAHRS using the AFS supplied Dual ADAHRS mounting kit and instructions. When the ADAHRS is properly installed the PITOT/STATIC ports should point forward.


The ADAHRS wires are supplied in the Van's wing kit, you will need to insert the pre-wired female pins into the AFS supplied DSUB 9 female connector and connector Shell.

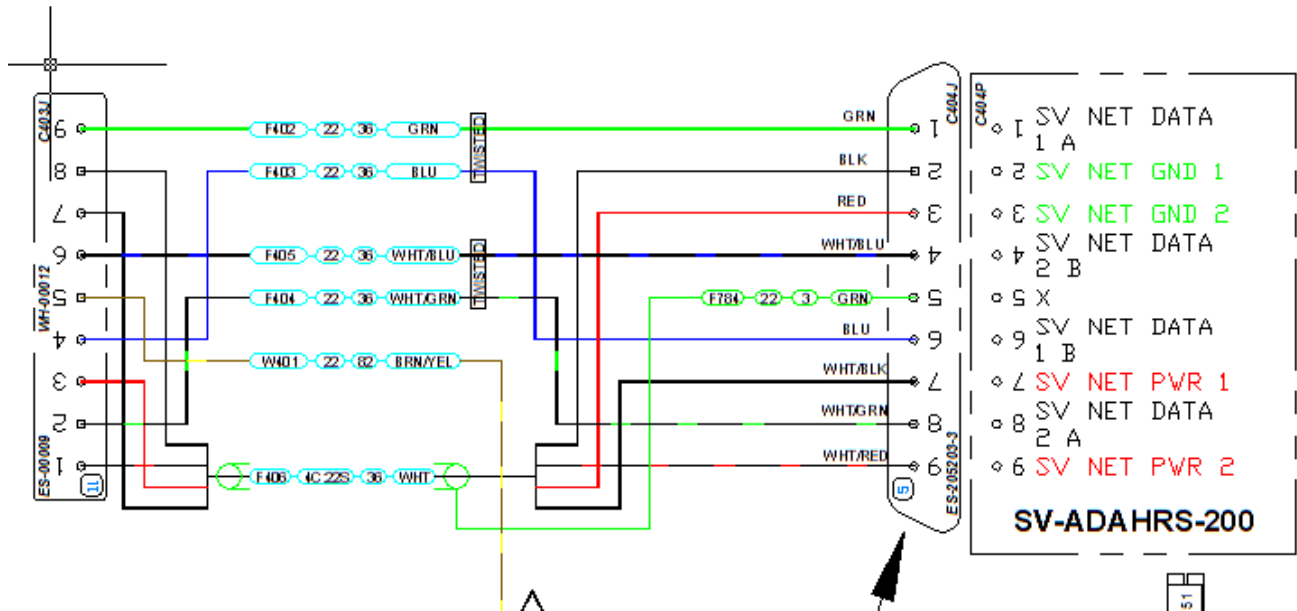

RV-14 Aircraft Front Wiring (P/N: 57842)

Complete the aircraft front wiring using the following drawing and items.

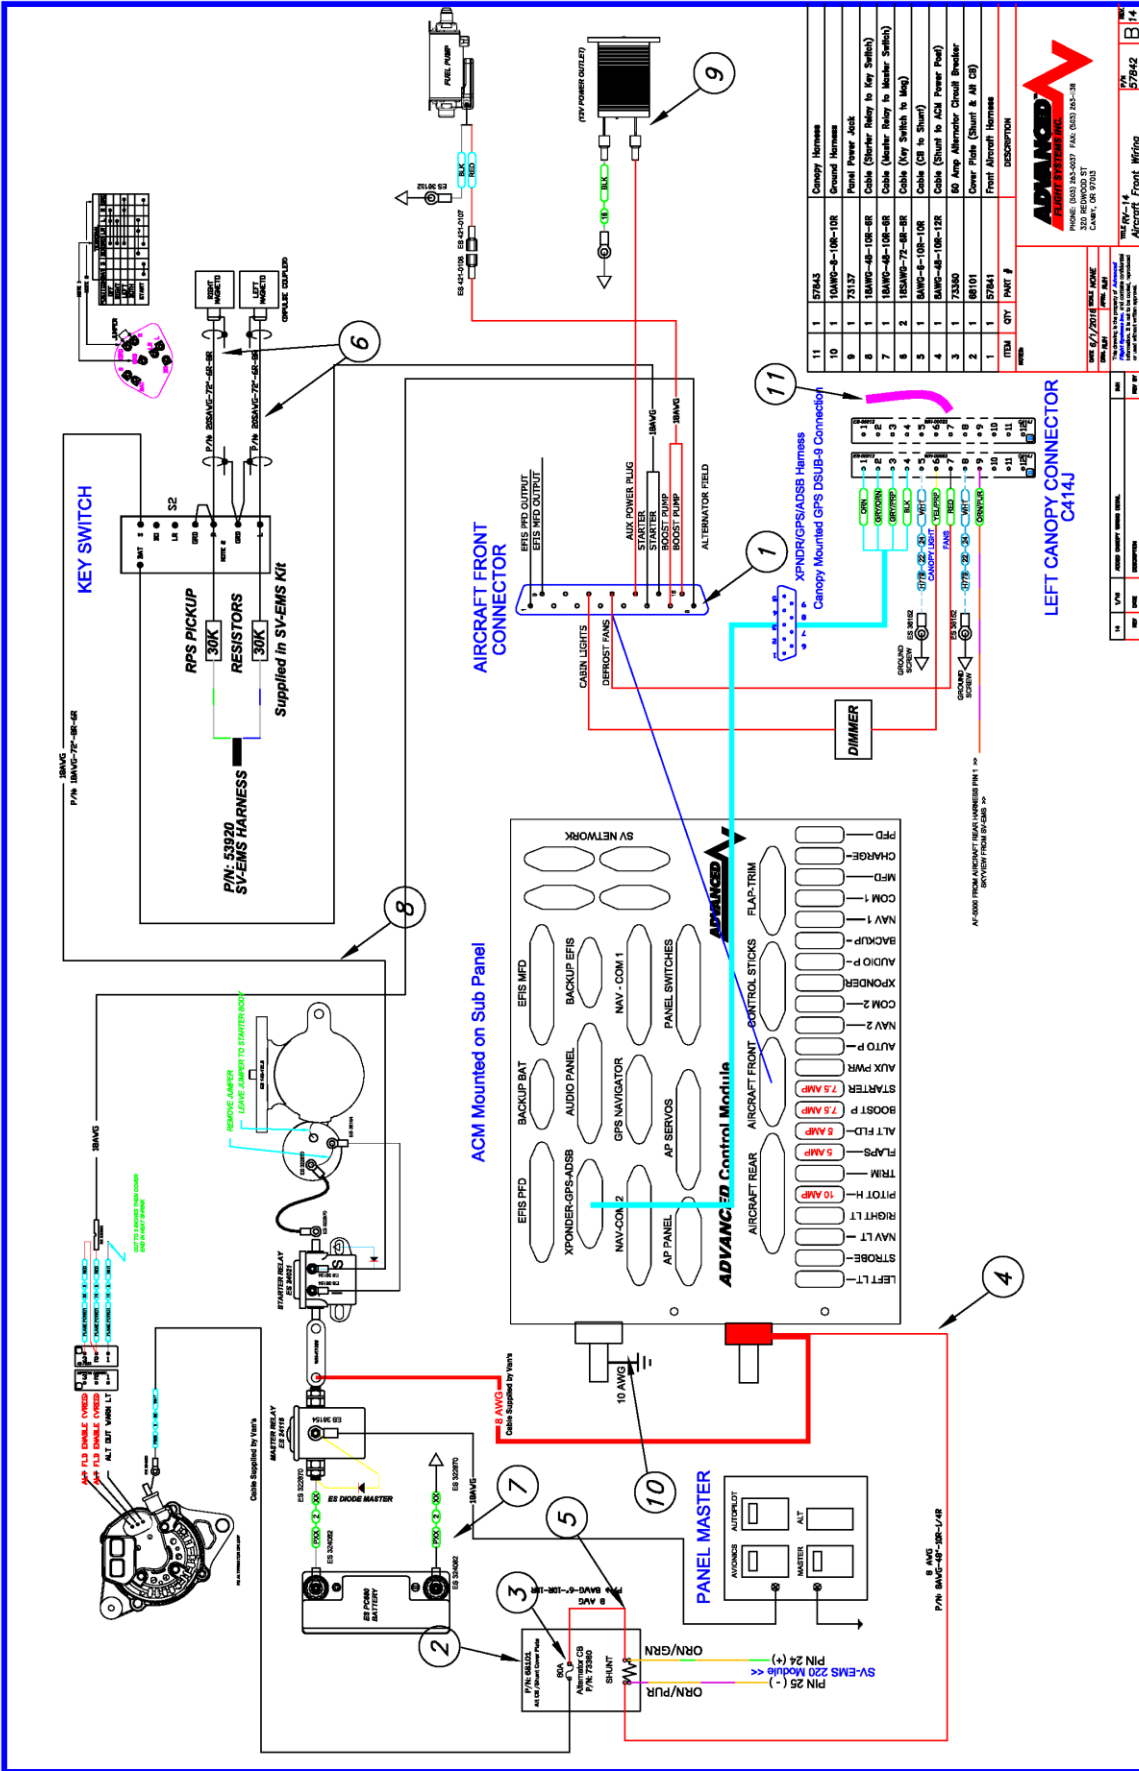

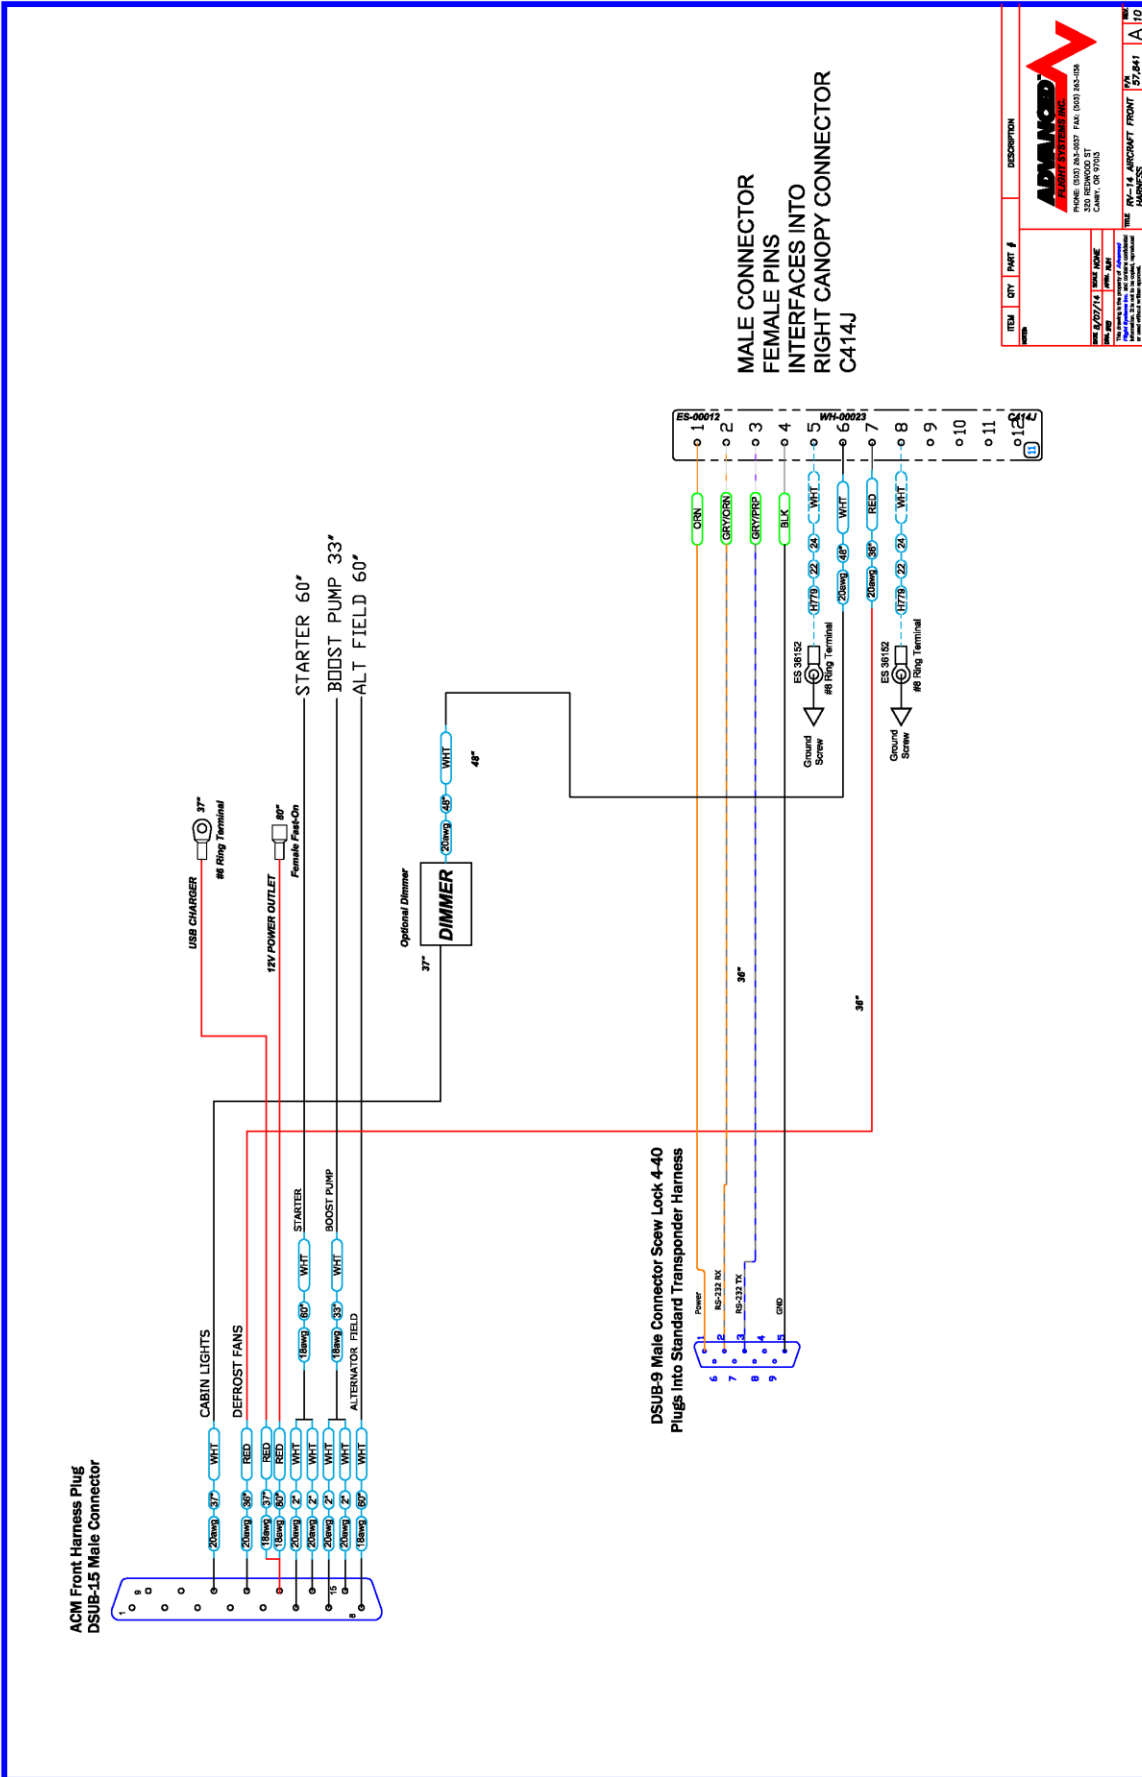


RV-14 Airframe Harnesses (P/N: 57852)




Install the AFS supplied RV-14 airframe harness

Do not purchase or use Van's RV-14 Airframe Harness

P/N: 57852AFS for AF-5600 install or P/N: 57852HDX for a Skyview HDX install. Start in the middle of the fuselage and work toward the ACM connector end (Aircraft Rear, AP Servo, Flap Trim, ADAHRS SVN-Net) routing the harness using Van's instructions Section 55-02 RV-14 Harness install. You will need to use the supplied Van's airframe harness bushing kit P/N: Van's 3346

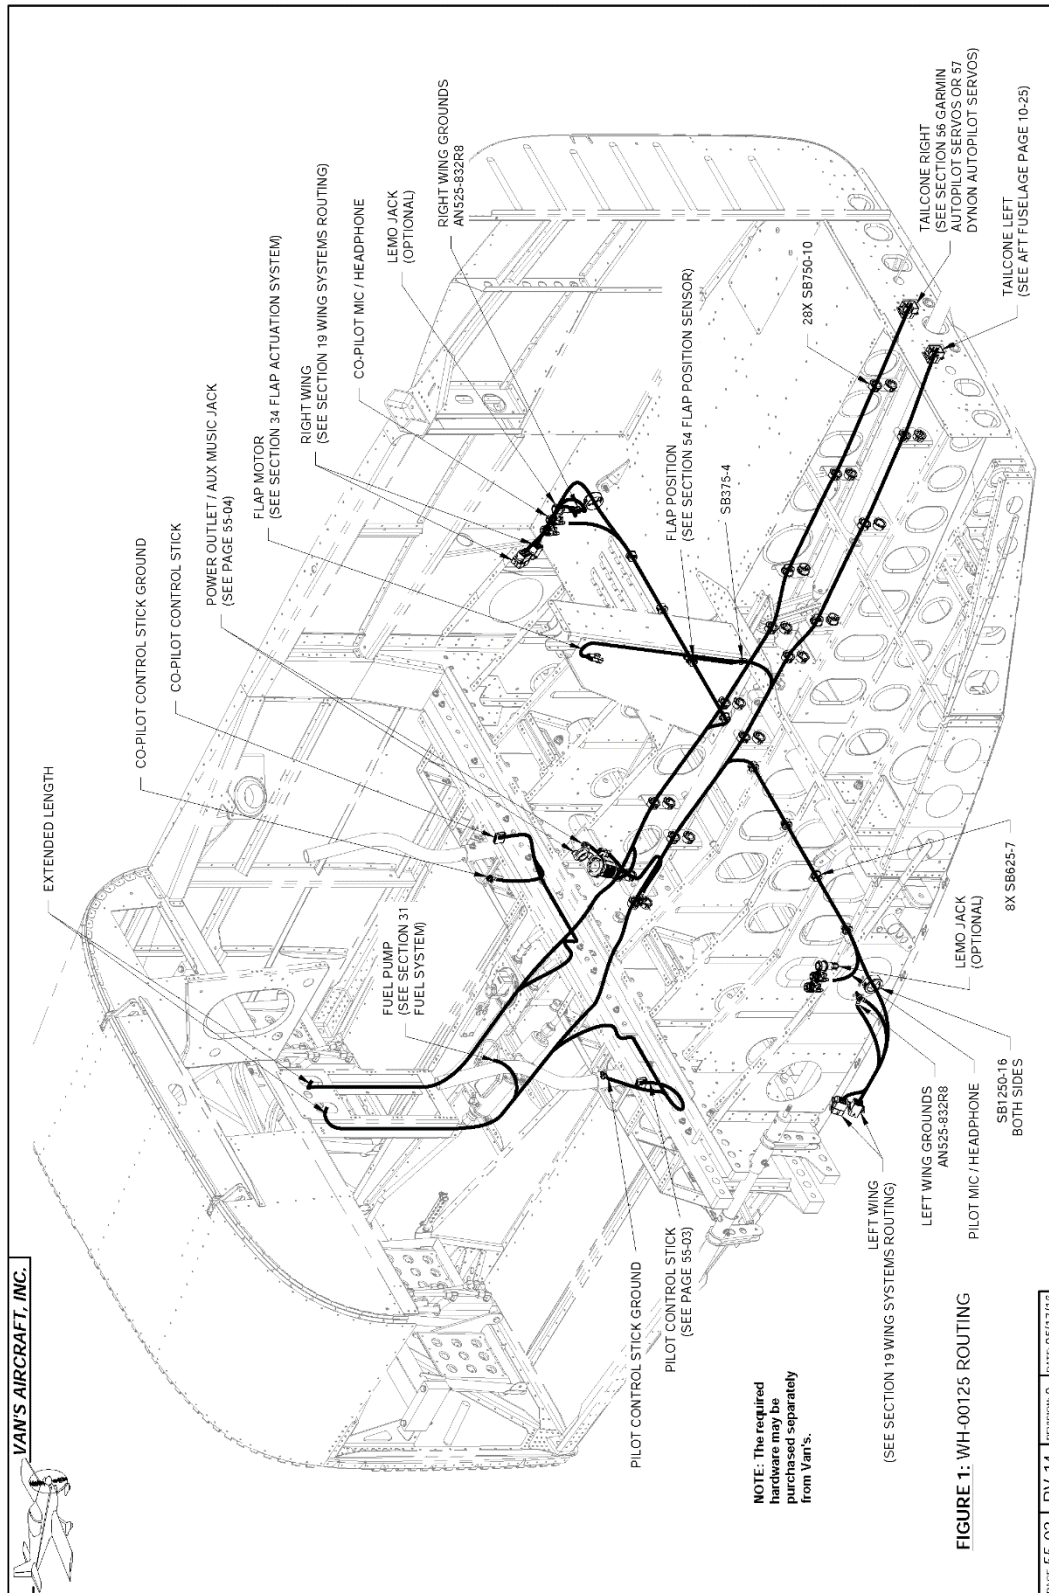

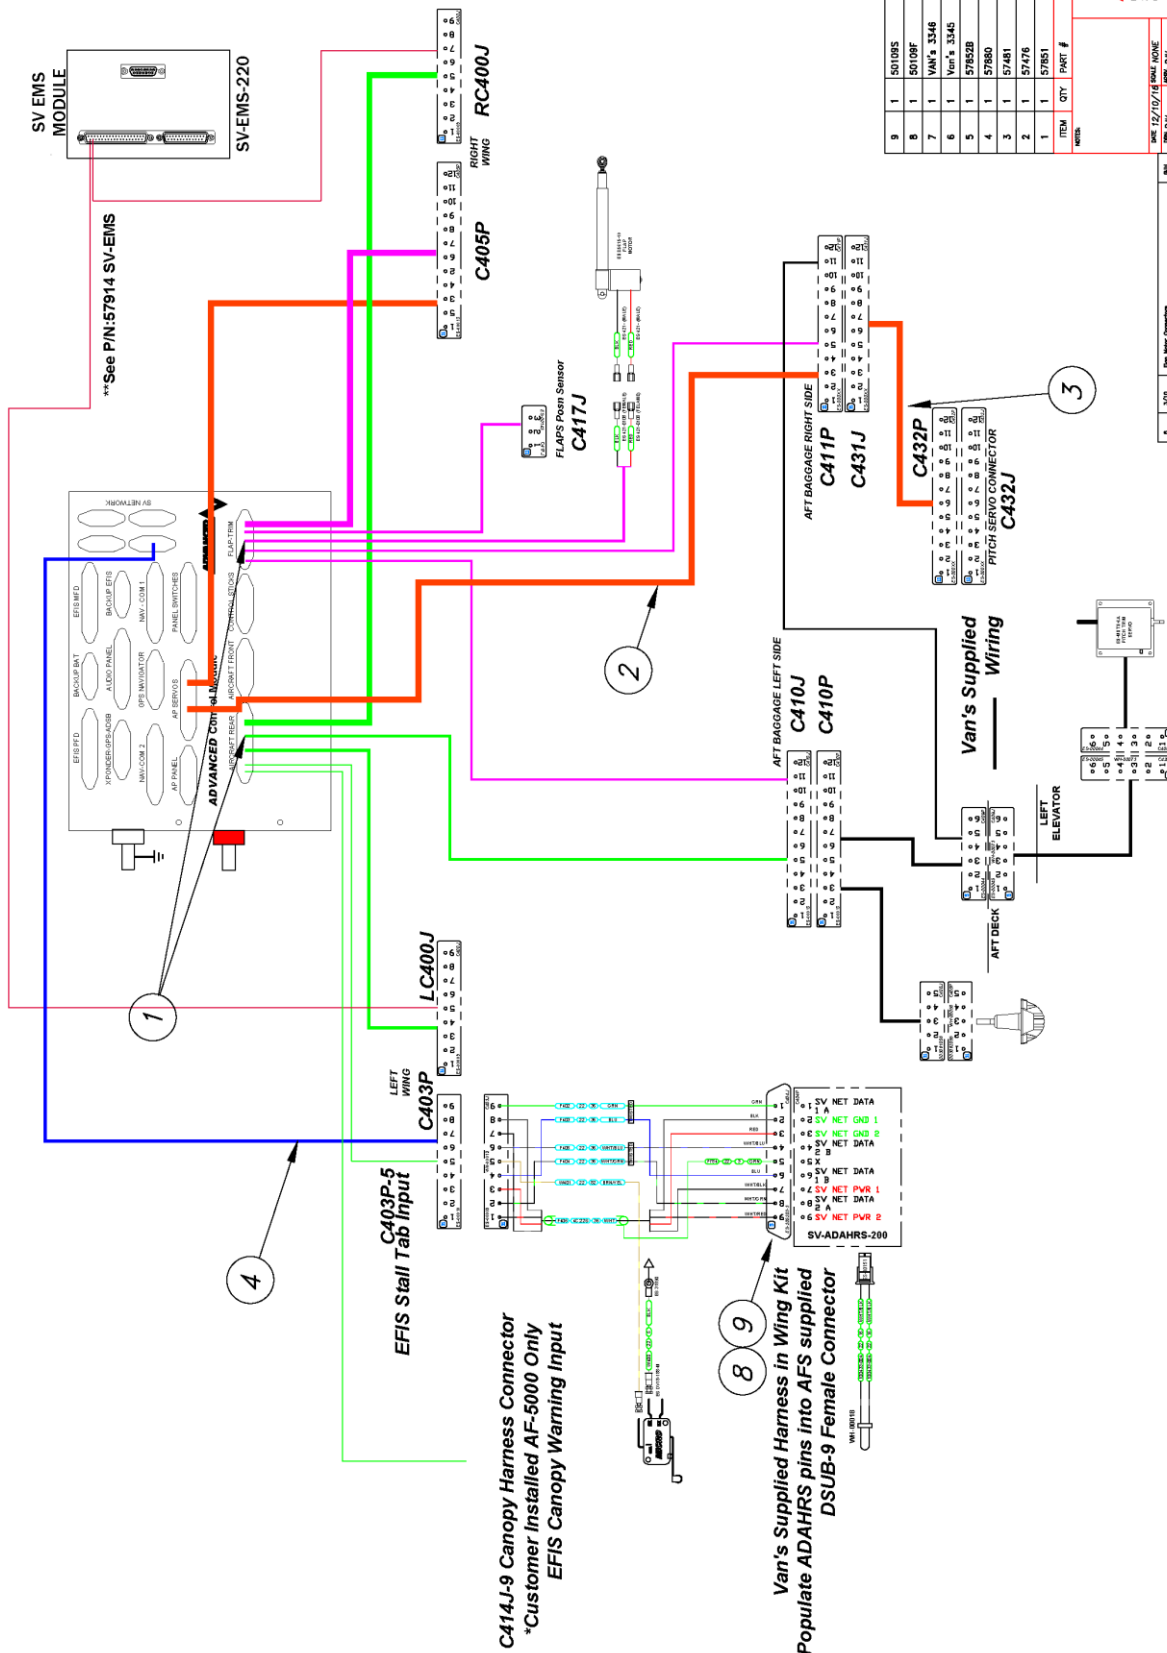

C414-9 Canopy Harness Connector
 *Customer Installed AF-5000 Only
 EFIS Canopy Warning Input

Van's Supplied Harness in Wing Kit
 Populate ADAHRS pins into AFS supplied
 DSUB-9 Female Connector

ITEM	QTY	PART #	DESCRIPTION
9	1	501095	DSUB 9 Shell ADAHRS
8	1	50108F	DSUB 9 ADAHRS Connector
7	1	VAN's 3346	RV-14 Airframe Harness Bushings
6	1	VAN's 3345	RV-14 Airframe Harness Clamps
5	1	57829B	RV-14 Airframe Assembly Instructions
4	1	57880	RV-14 ADAHRS Harness
3	1	57481	RV-14 Rear Servo Harness
2	1	57476	RV-14 Servo Harness
1	1	57851	RV-14 Aircraft Rear/Wing Harness

ADVANCED
ALLOY SYSTEMS INC.
 PHONE: (330) 333-0037 FAX: (330) 333-1138
 330 BENTWOOD ST
 CLEVELAND, OH 44115


DATE: 12/10/14 REV: 001
 PART: SV-NET HARNESS

REV # 1
 DATE 12/10/14
 REV # 2
 DATE 12/10/14
 REV # 3
 DATE 12/10/14
 REV # 4
 DATE 12/10/14
 REV # 5
 DATE 12/10/14
 REV # 6
 DATE 12/10/14

THE PART # 14
 Airframe Harness
 P/N 57852
 B 6

CANOPY AFS-DYNON

- NOTES**
1. MICRO-SWITCH AND FANS ARE PROVIDED IN FINISH KIT STRIP ONLY NOT INCLUDED WITH HARNESS ORDER FROM THE VAN'S AIRCRAFT CATALOG.
 2. 14 CANOPY HARNESS KIT INCLUDES MICRO-SWITCH AND FANS. THE HARNESS TO THE MICRO-SWITCH AND LED STRIP. KIT NOT AVAILABLE AT THIS TIME.
 3. CANOPY HARNESS CONNECTS TO THE EFIS VIA A HARNESS SUPPLIED BY THE MANUFACTURER.
 4. THE STRIPPED WIRE END MUST BE DOUBLED THIS AREA TO ENSURE A TIGHT FIT.
 5. WIRING FOR DYNON UNITS NOT SUPPLIED WITH
- WH-00126

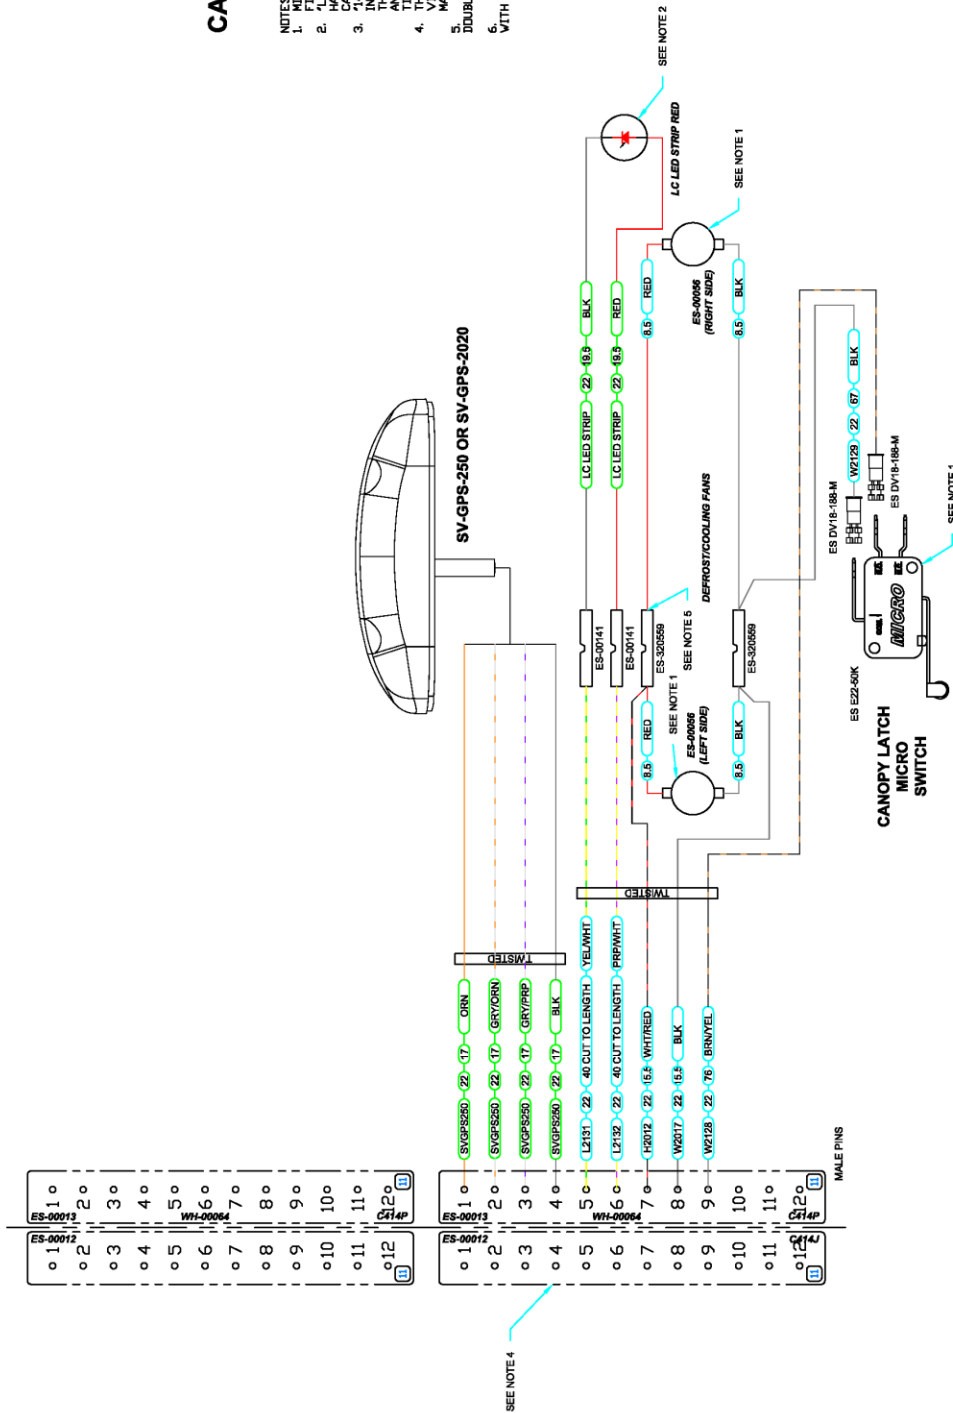


WH-00125


ITEM	QTY	PART #	DESCRIPTION

ADVANCED FLIGHT SYSTEMS INC.
 PHONE: (503) 263-0037 FAX: (503) 263-3138
 10000 NE 28TH STREET
 CANBY, OR 97022

WH-00125
 Canopy Harness

REV 5/17/17

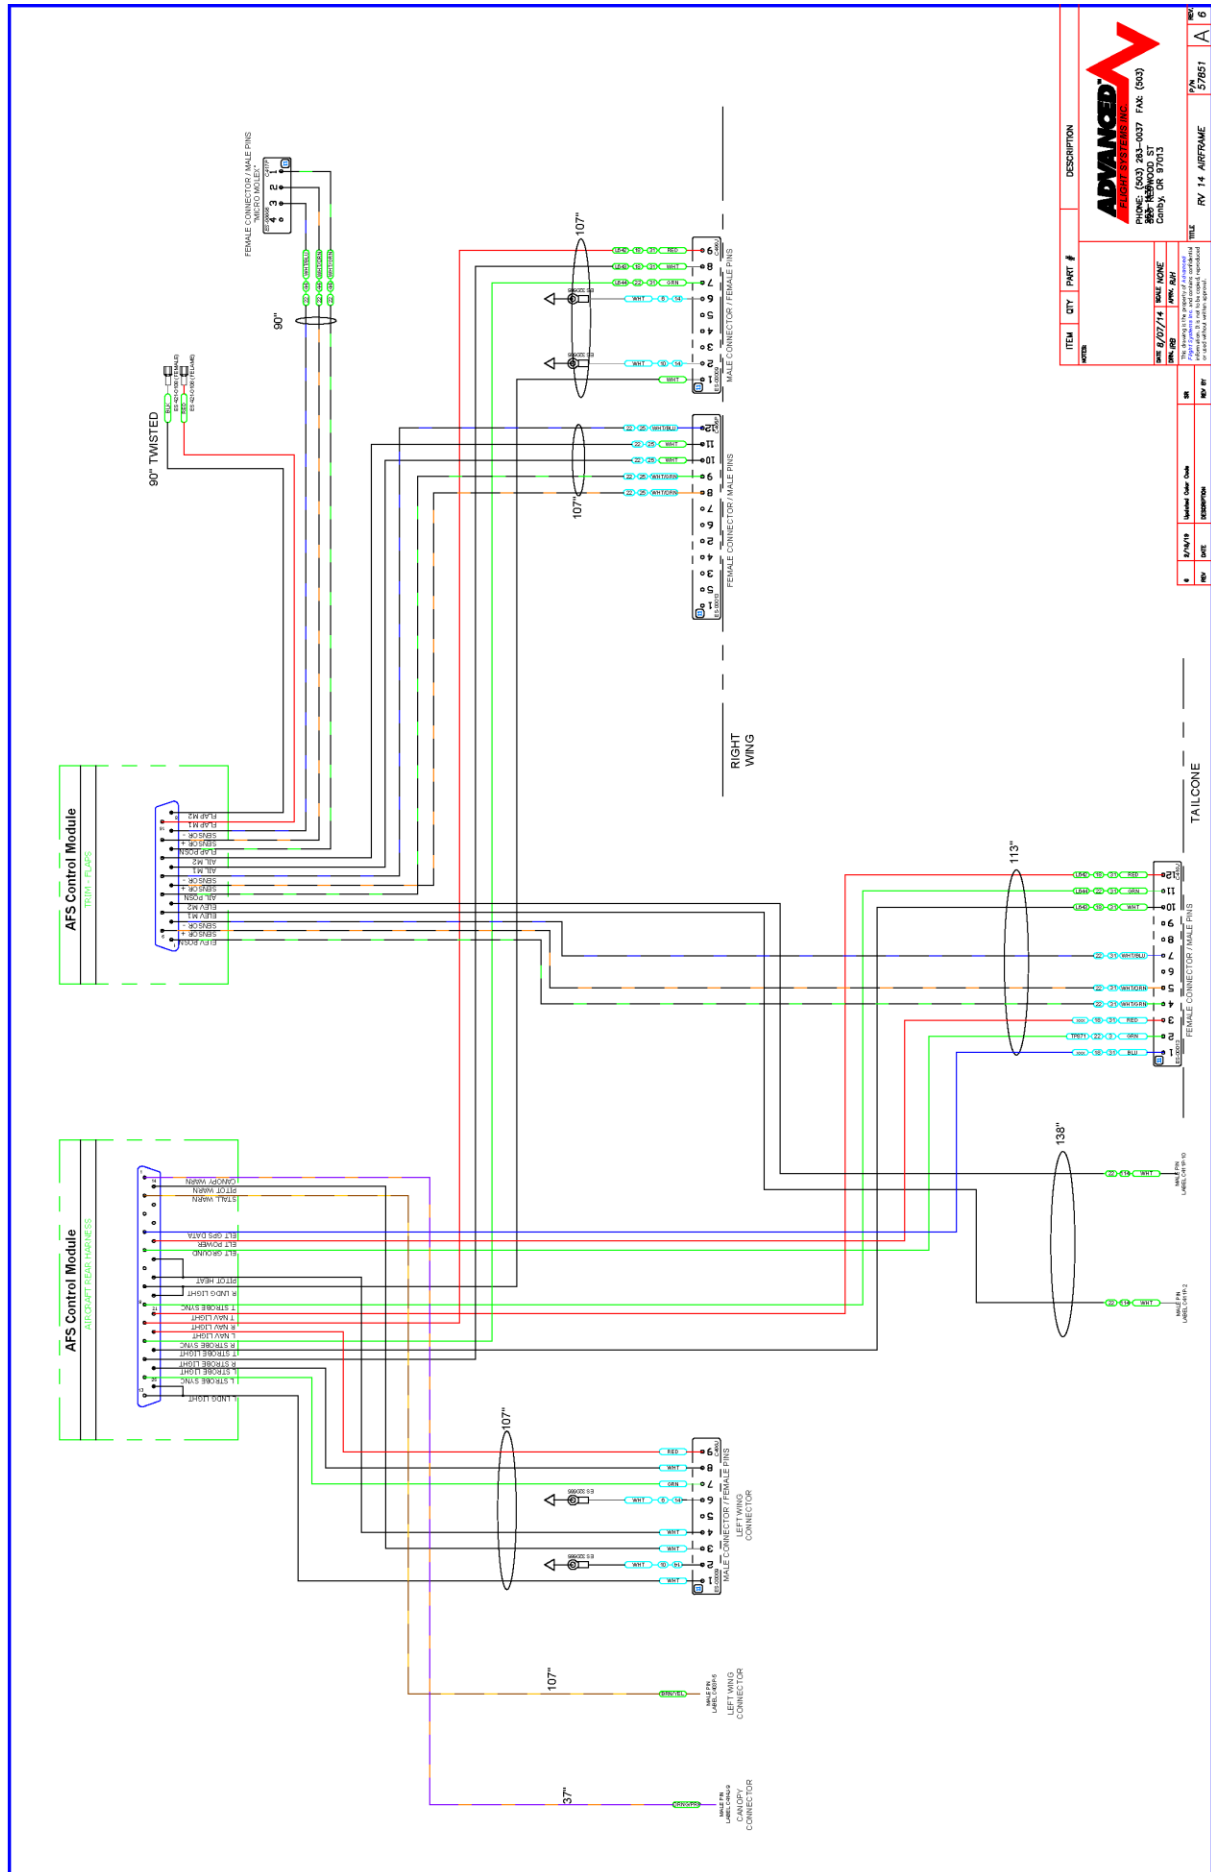

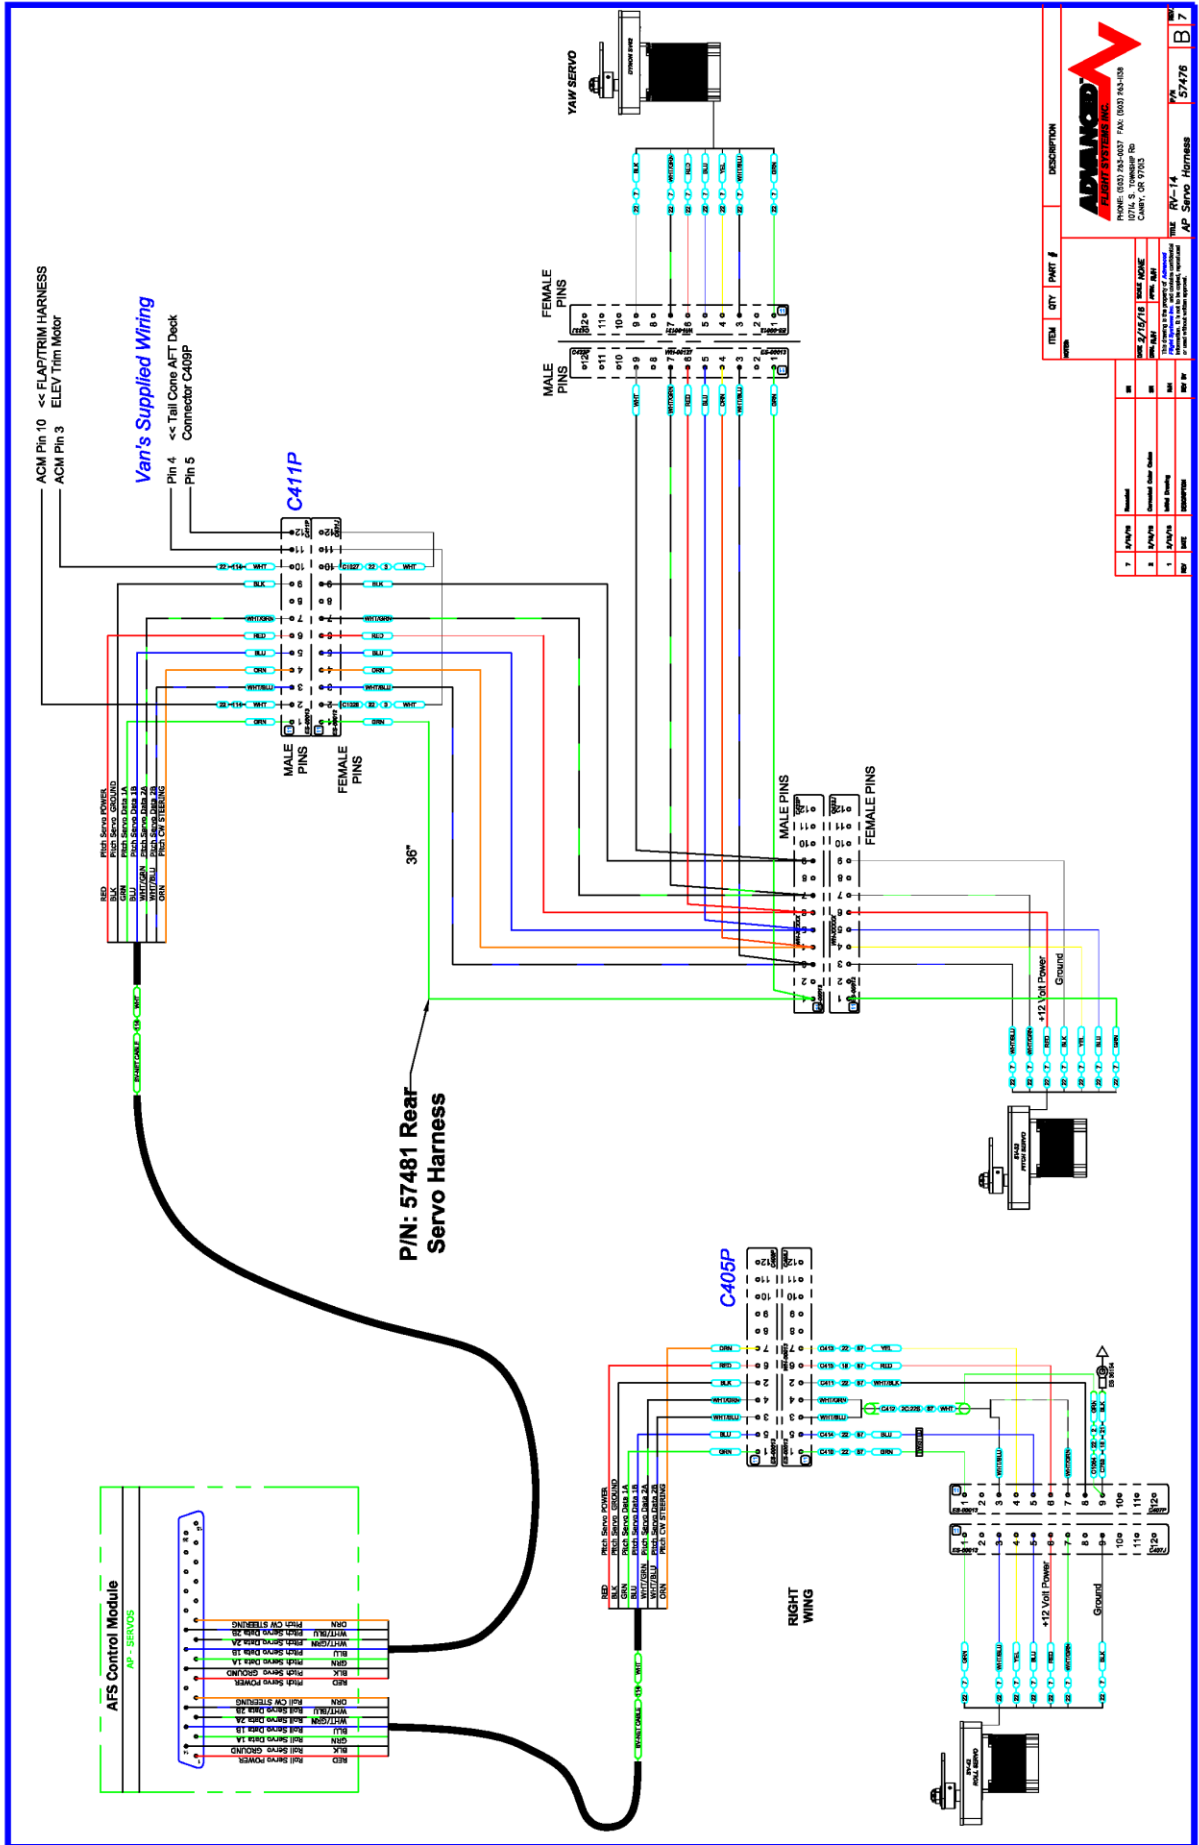

ITEM	QTY	PNMT #	DESCRIPTION


REV	DATE	BY	APP	DESCRIPTION
1	06/25/15			REVISED
2				
3				


REV	DATE	BY	APP	DESCRIPTION
1	06/25/15			REVISED
2				
3				

REV	DATE	BY	APP	DESCRIPTION
1	06/25/15			REVISED
2				
3				

REV	DATE	BY	APP	DESCRIPTION
1	06/25/15			REVISED
2				
3				

ADVANCED
 AIRCRAFT COMMERCIAL
 PHONE: (803) 533-5037 FAX: (803) 563-1308
 8774 S. Vancouver Rd.
 Columbia, SC 29915

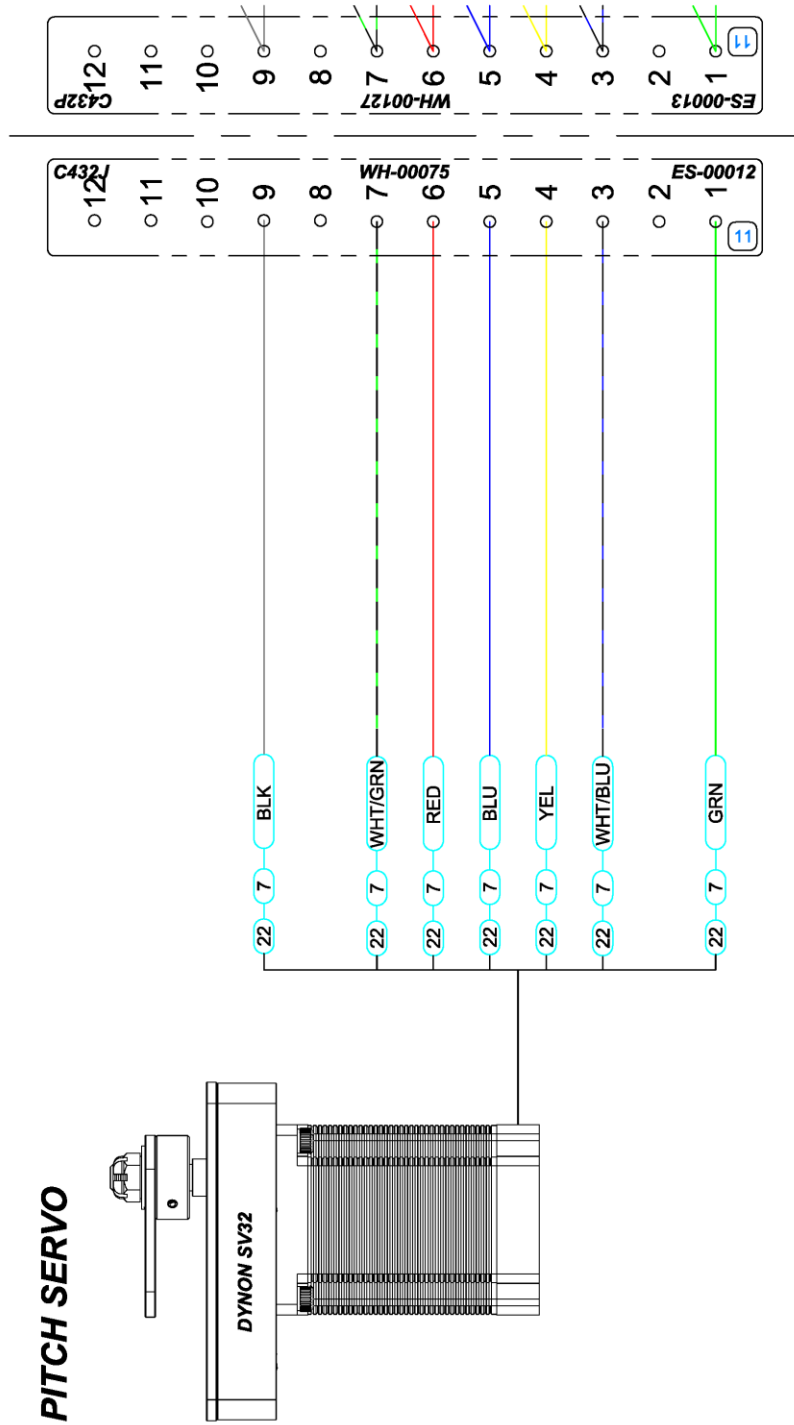


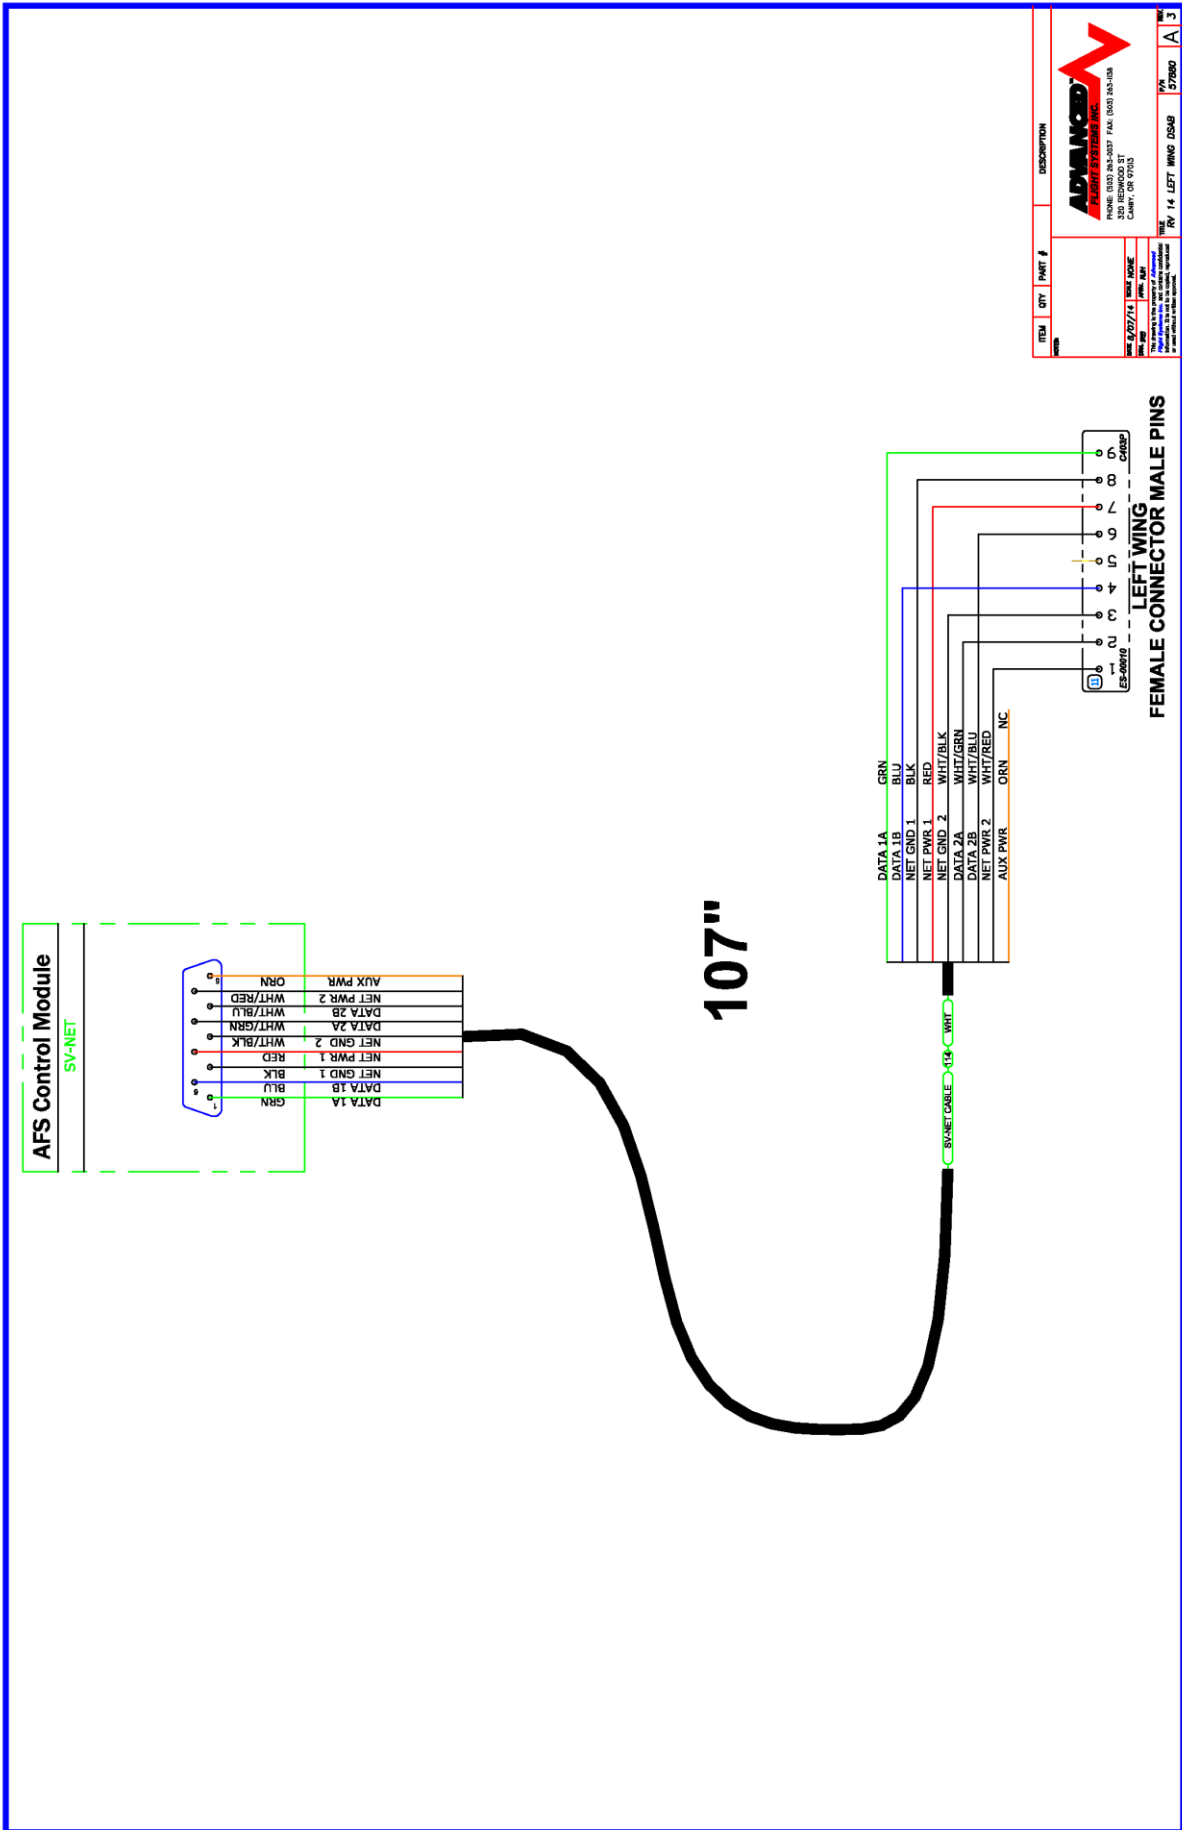

DYNON/AFS ROLL SERVO

NOTES


1. MOLEX PINS PROVIDED IN "14 SV AFS AP SERVO INSTALL KIT"
2. CONNECTOR ES-00012 MOLEX RECEPTACLE, 12 POSITION (.083" SOCKETS) SUPPLIED IN THE WING KIT.
3. PURCHASE SERVO FROM YOUR AVIONICS SUPPLIER.

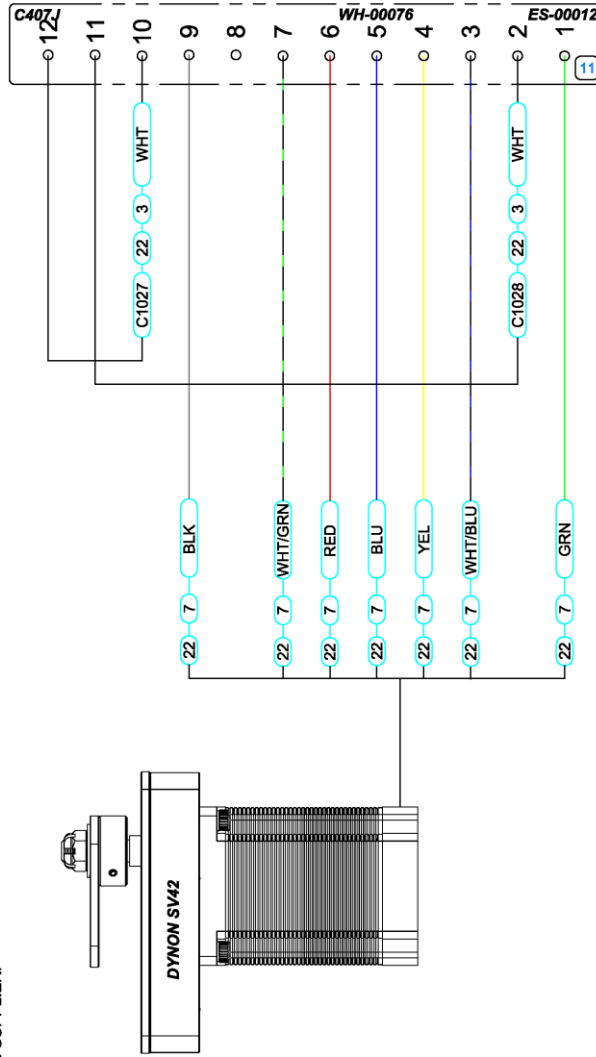

RV-14 Heated Pitot Tube


The Dynon heated pitot tube is mounted in the left wing using the Dynon Pitot Mast P/N: 102813-000

- Mount the controller box to one of the wing ribs near the pitot tube mounting location.

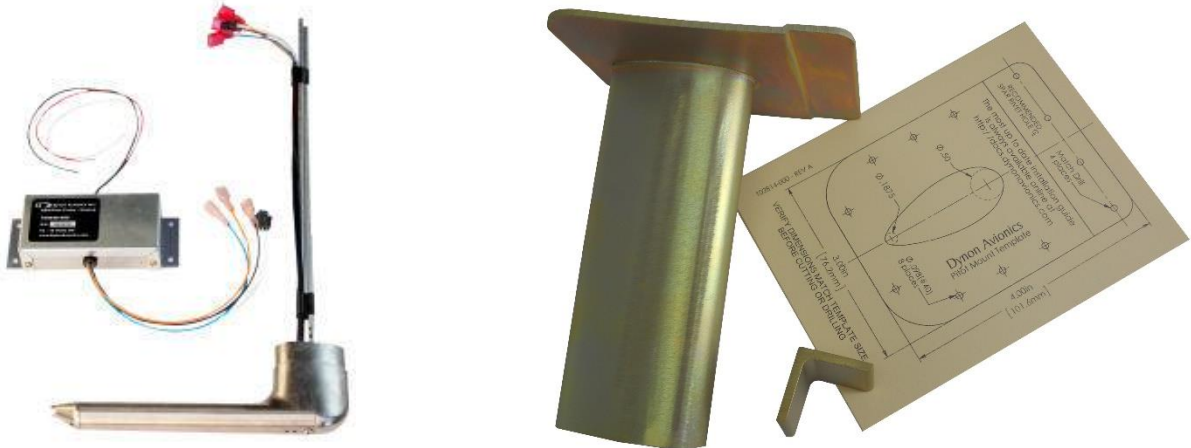


- Extend the Pitot Tube controller wires and connect to the Left Wing C400P Molex connector using the following:

Pitot Controller	Description	Wire Size	C400P Male Pin
Red	+12V Power	#14	4
Black	Ground	#14	Locally grounded using ring terminal
White	Signal	#22	3

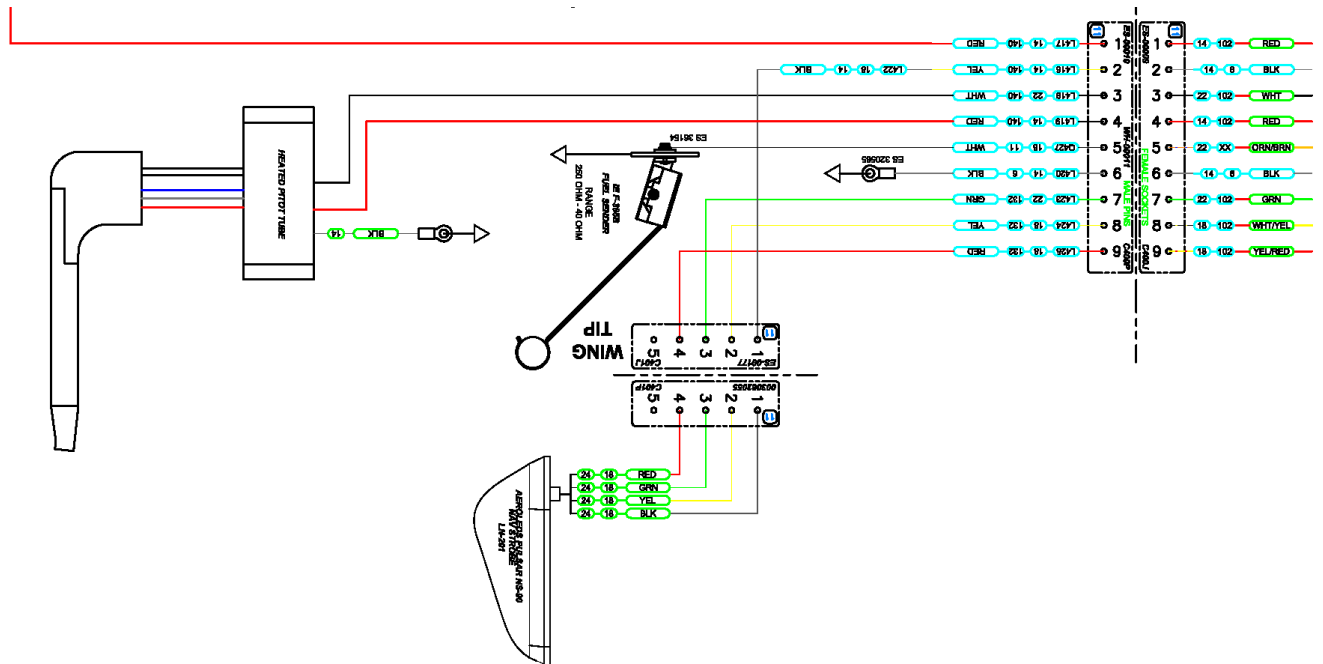

The Pitot line and AOA line should be connected to the Dynon ADAHRS using the Dynon Pitot/Static Plumbing Kit P/N: 102628-000




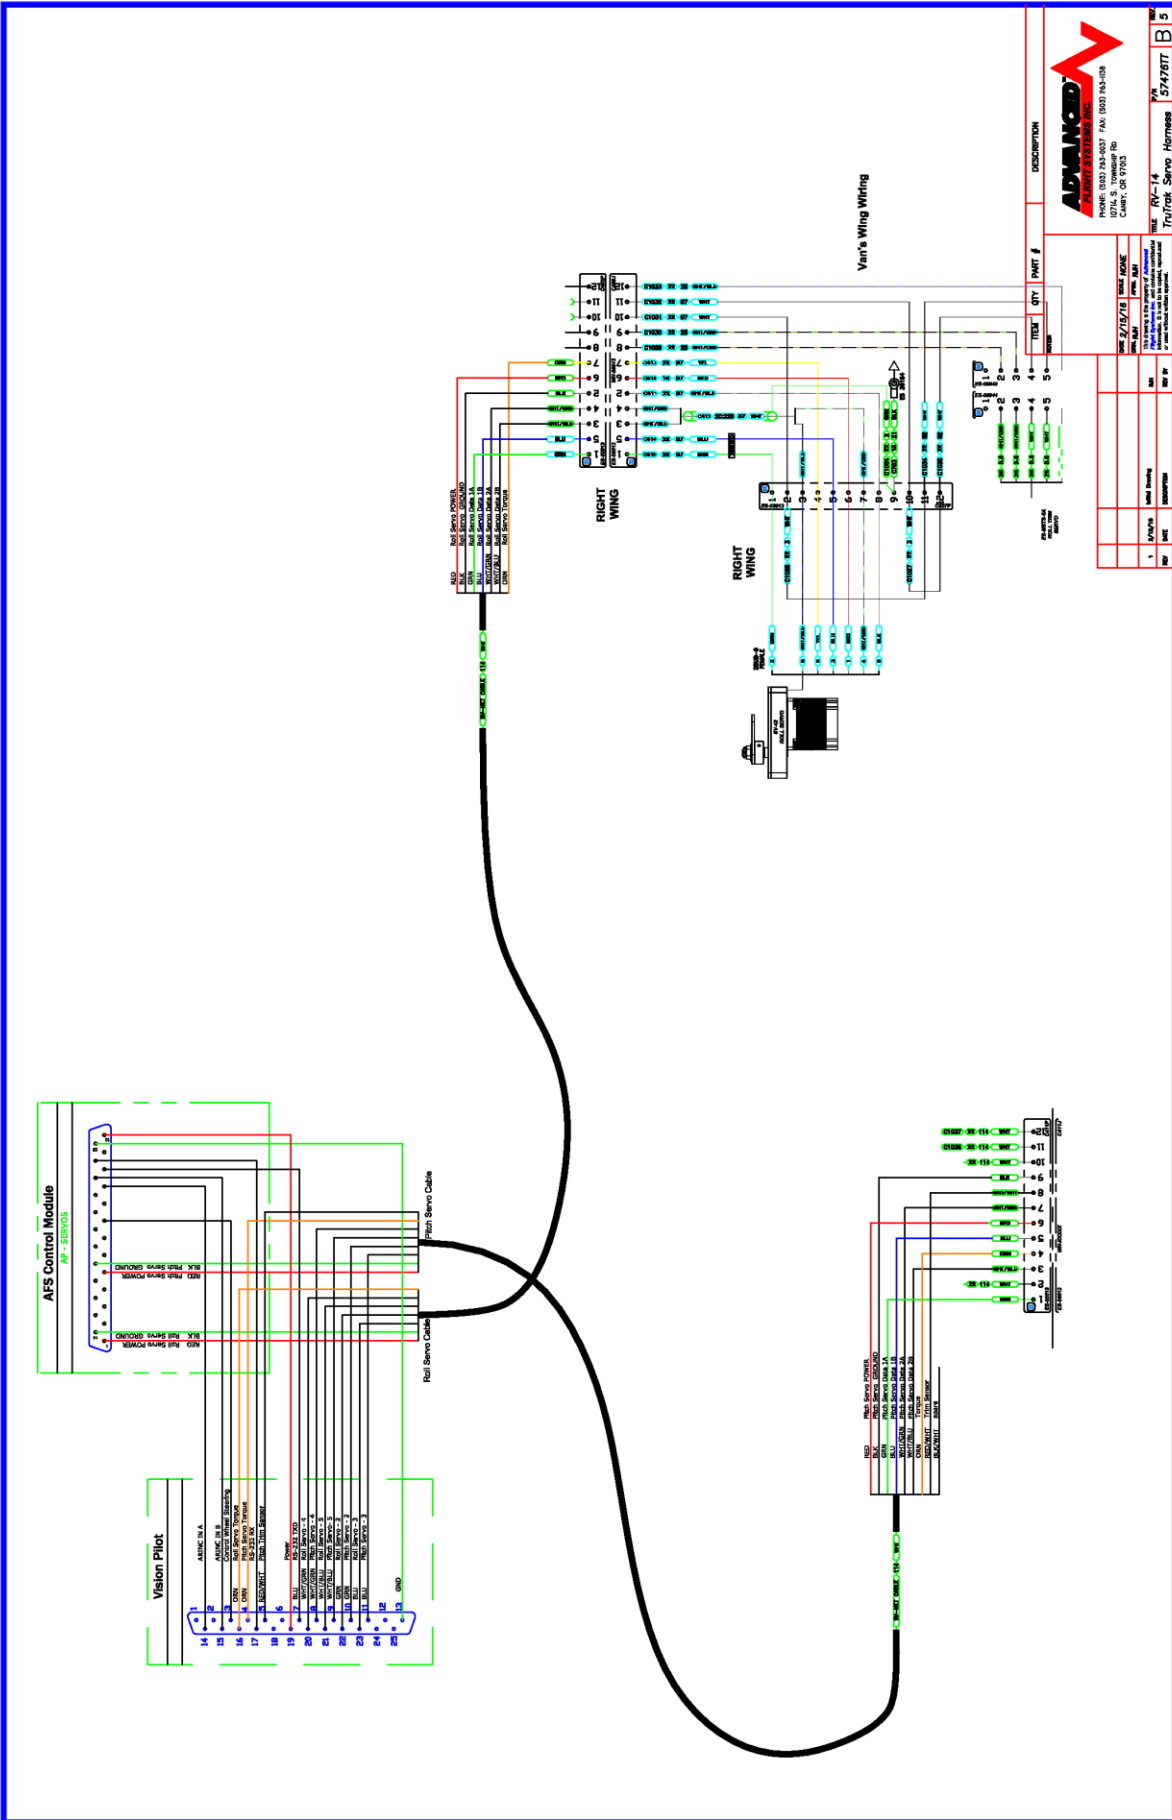



ADVANCED ACME SYSTEMS INC.
 PHONE: (833) 743-6337 FAX: (833) 743-1038
 10714 S. TORRENS RD
 CHERRY, CO 81713

Part # 574791T
 Description: TruTrak Servo Harness

REV	DATE	DESCRIPTION	BY	CHK
1	1/24/17	Initial Drawing		

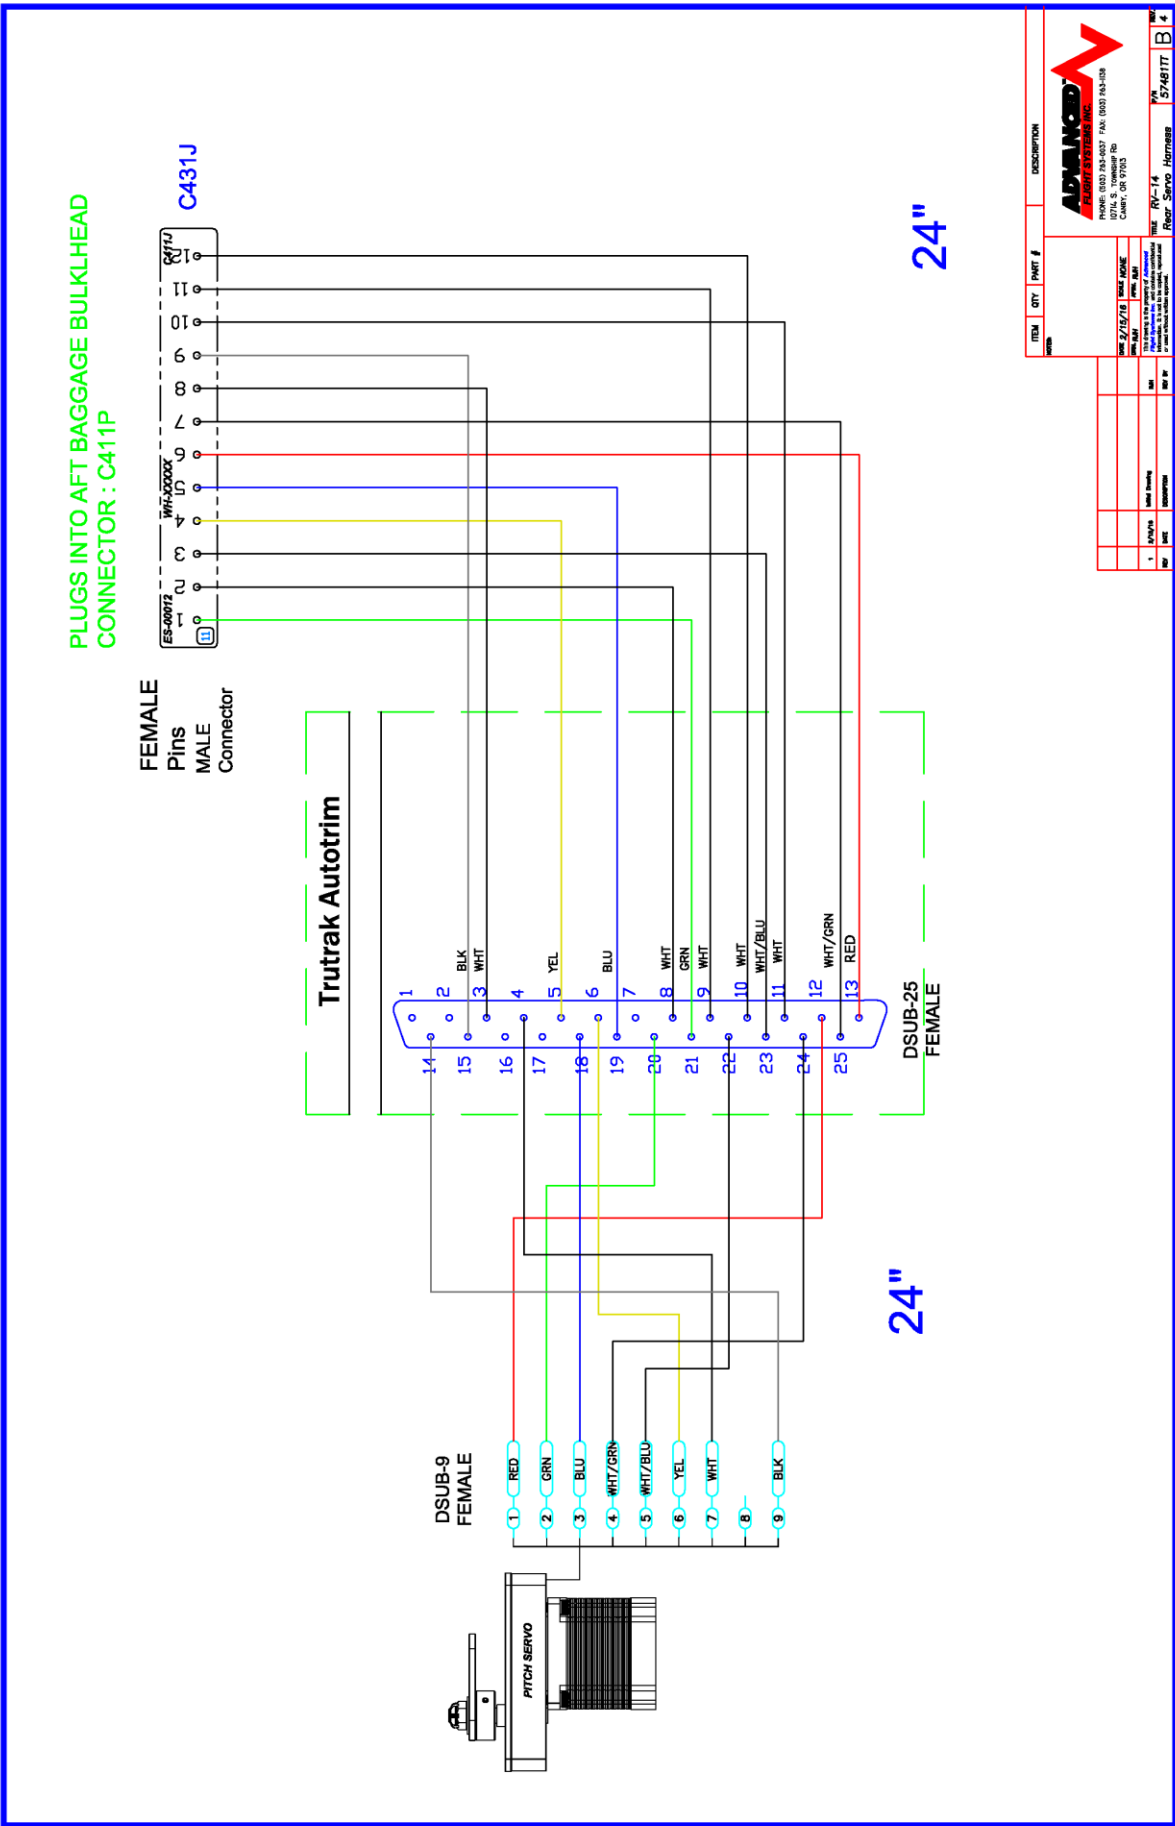


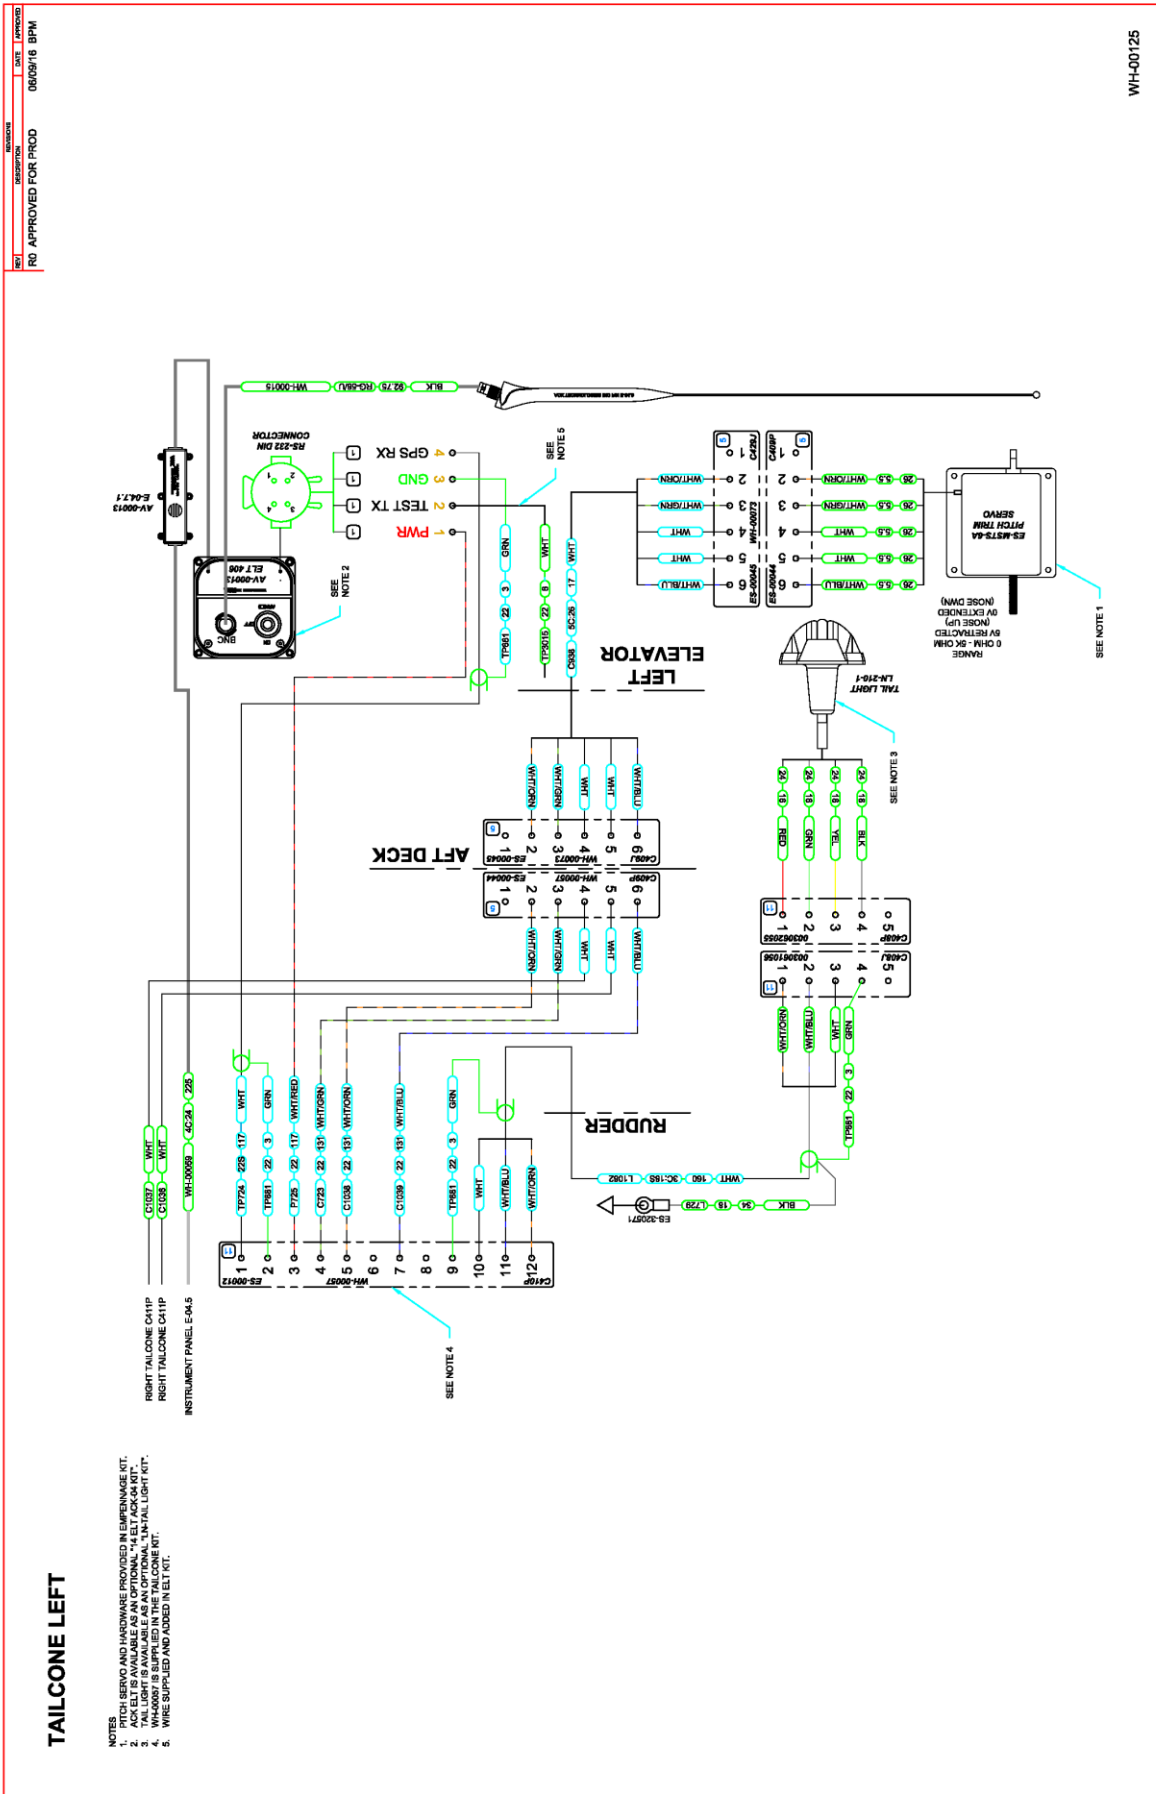


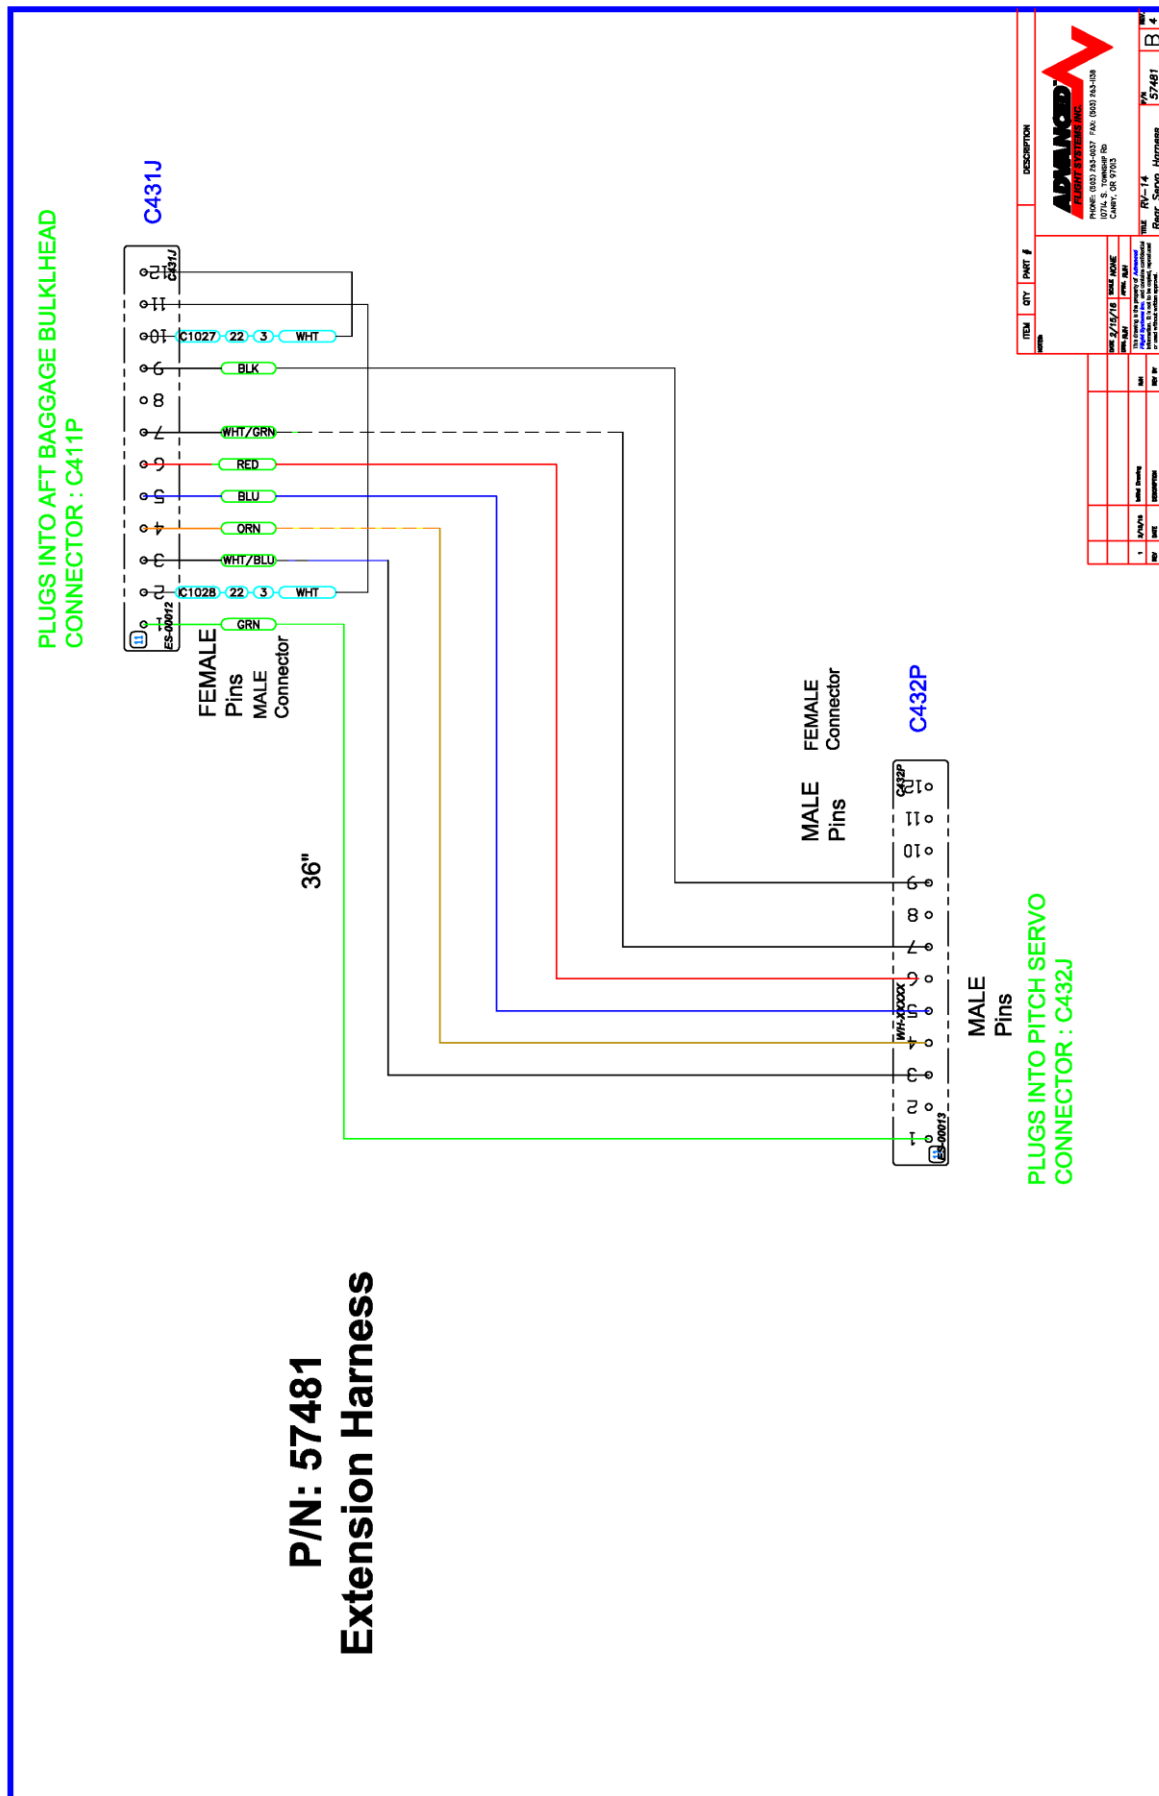


RV-14 EMS Harness Install (P/N: 53914)

If you are installing a Skyview EFIS you will need to wire the SV-EMS input pins (9,10,11) to the RV-14 airframe harness near the ACM connectors. An AF-5600 system uses the EFIS inputs for (Canopy, Stall Tab, and Pitot Heat warning).

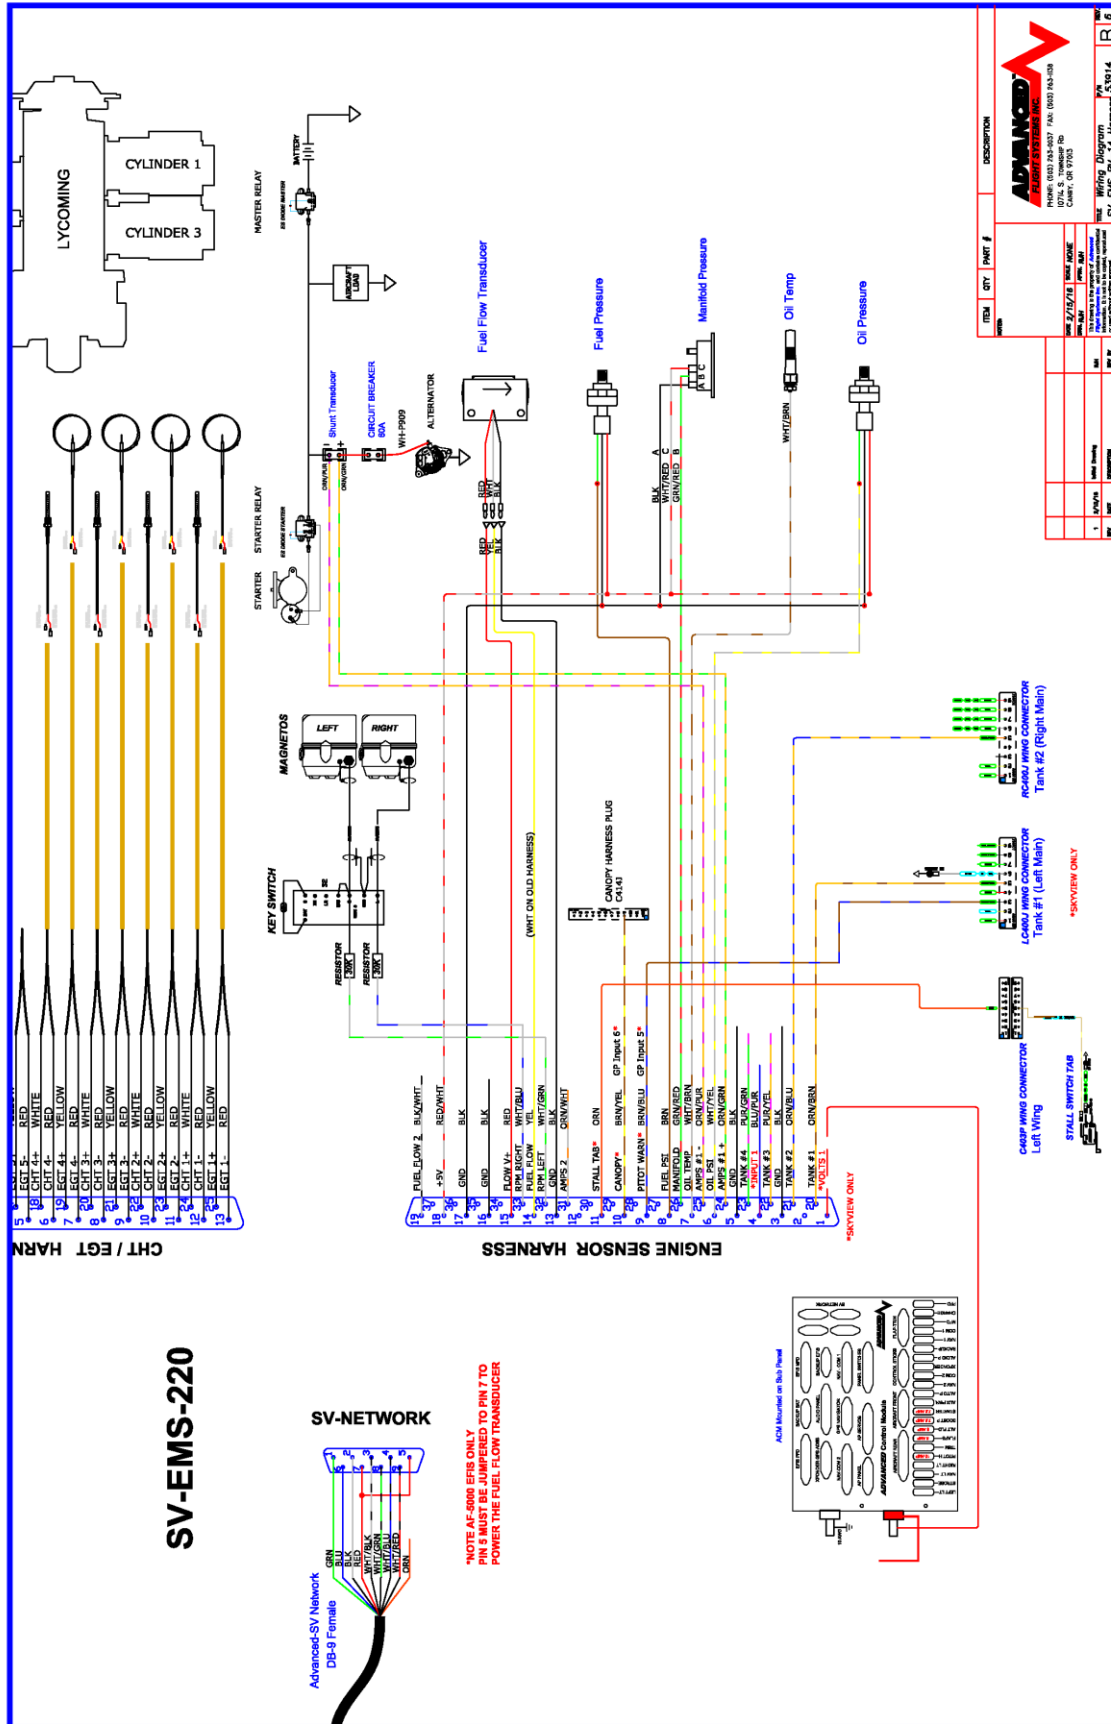

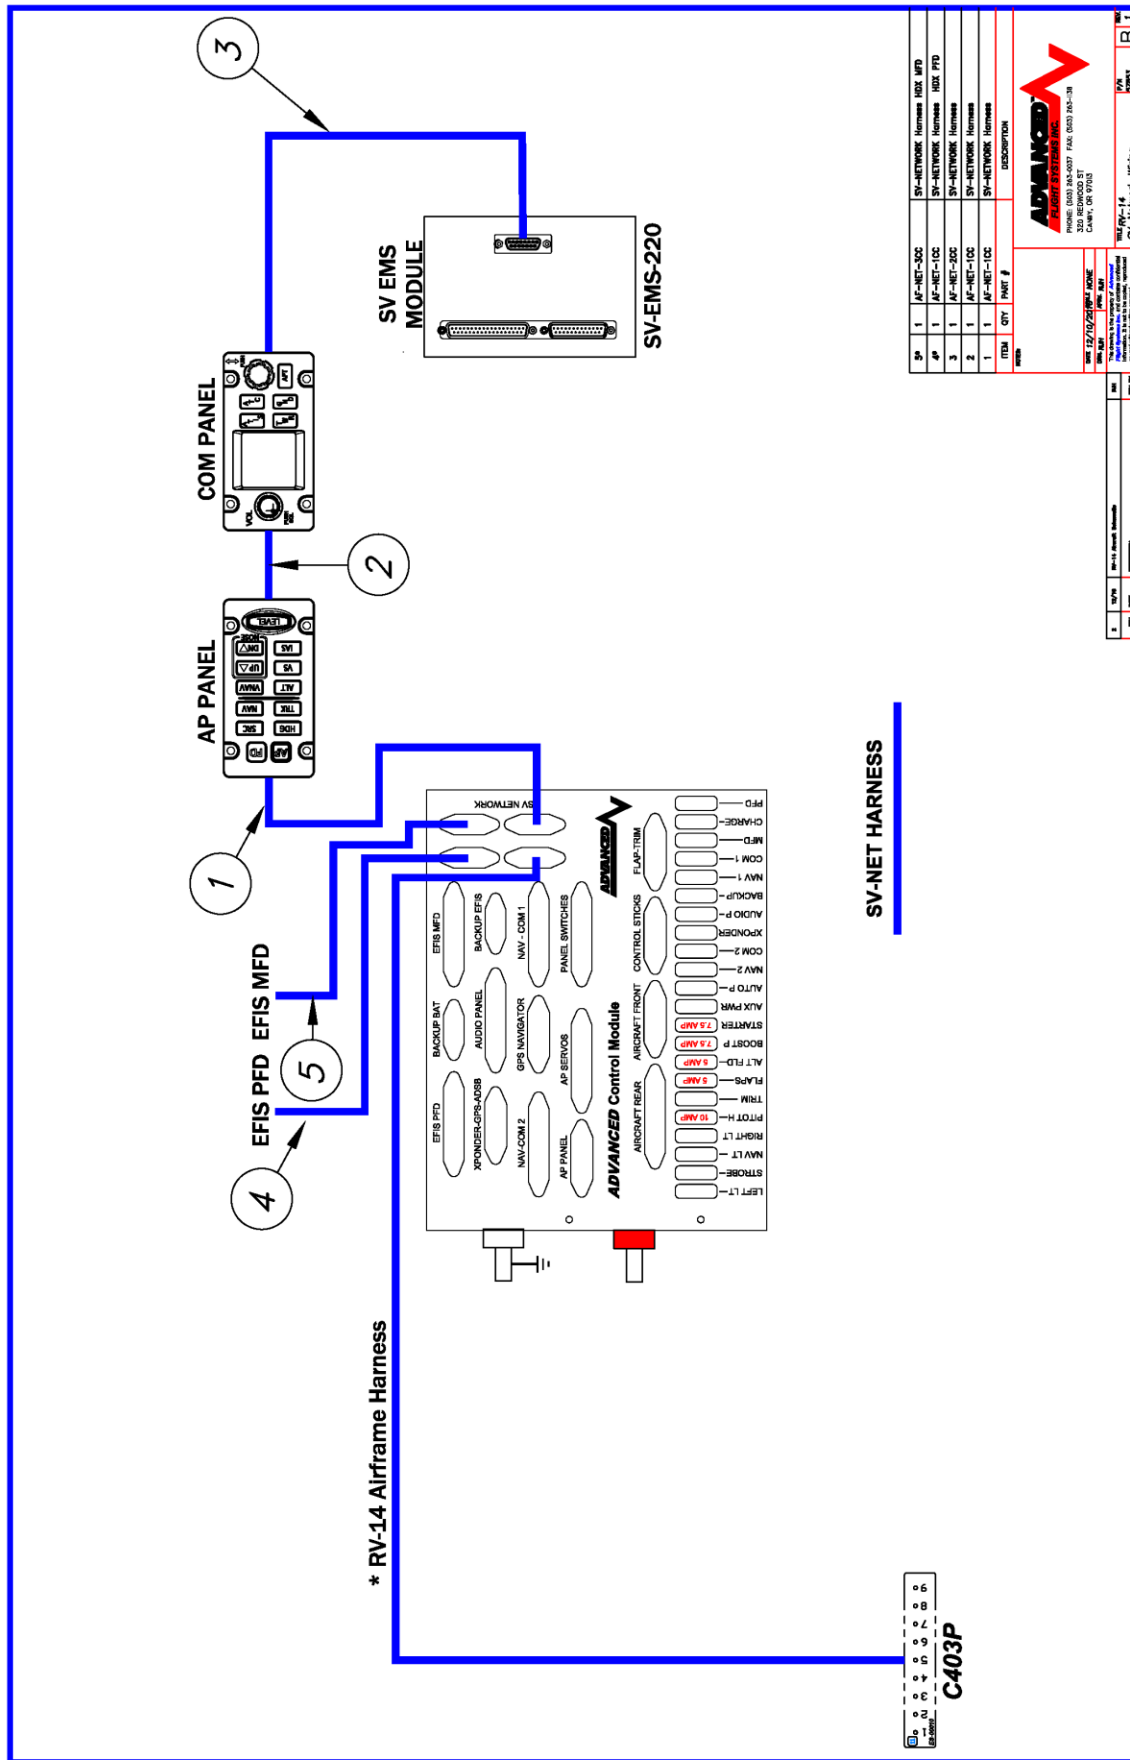

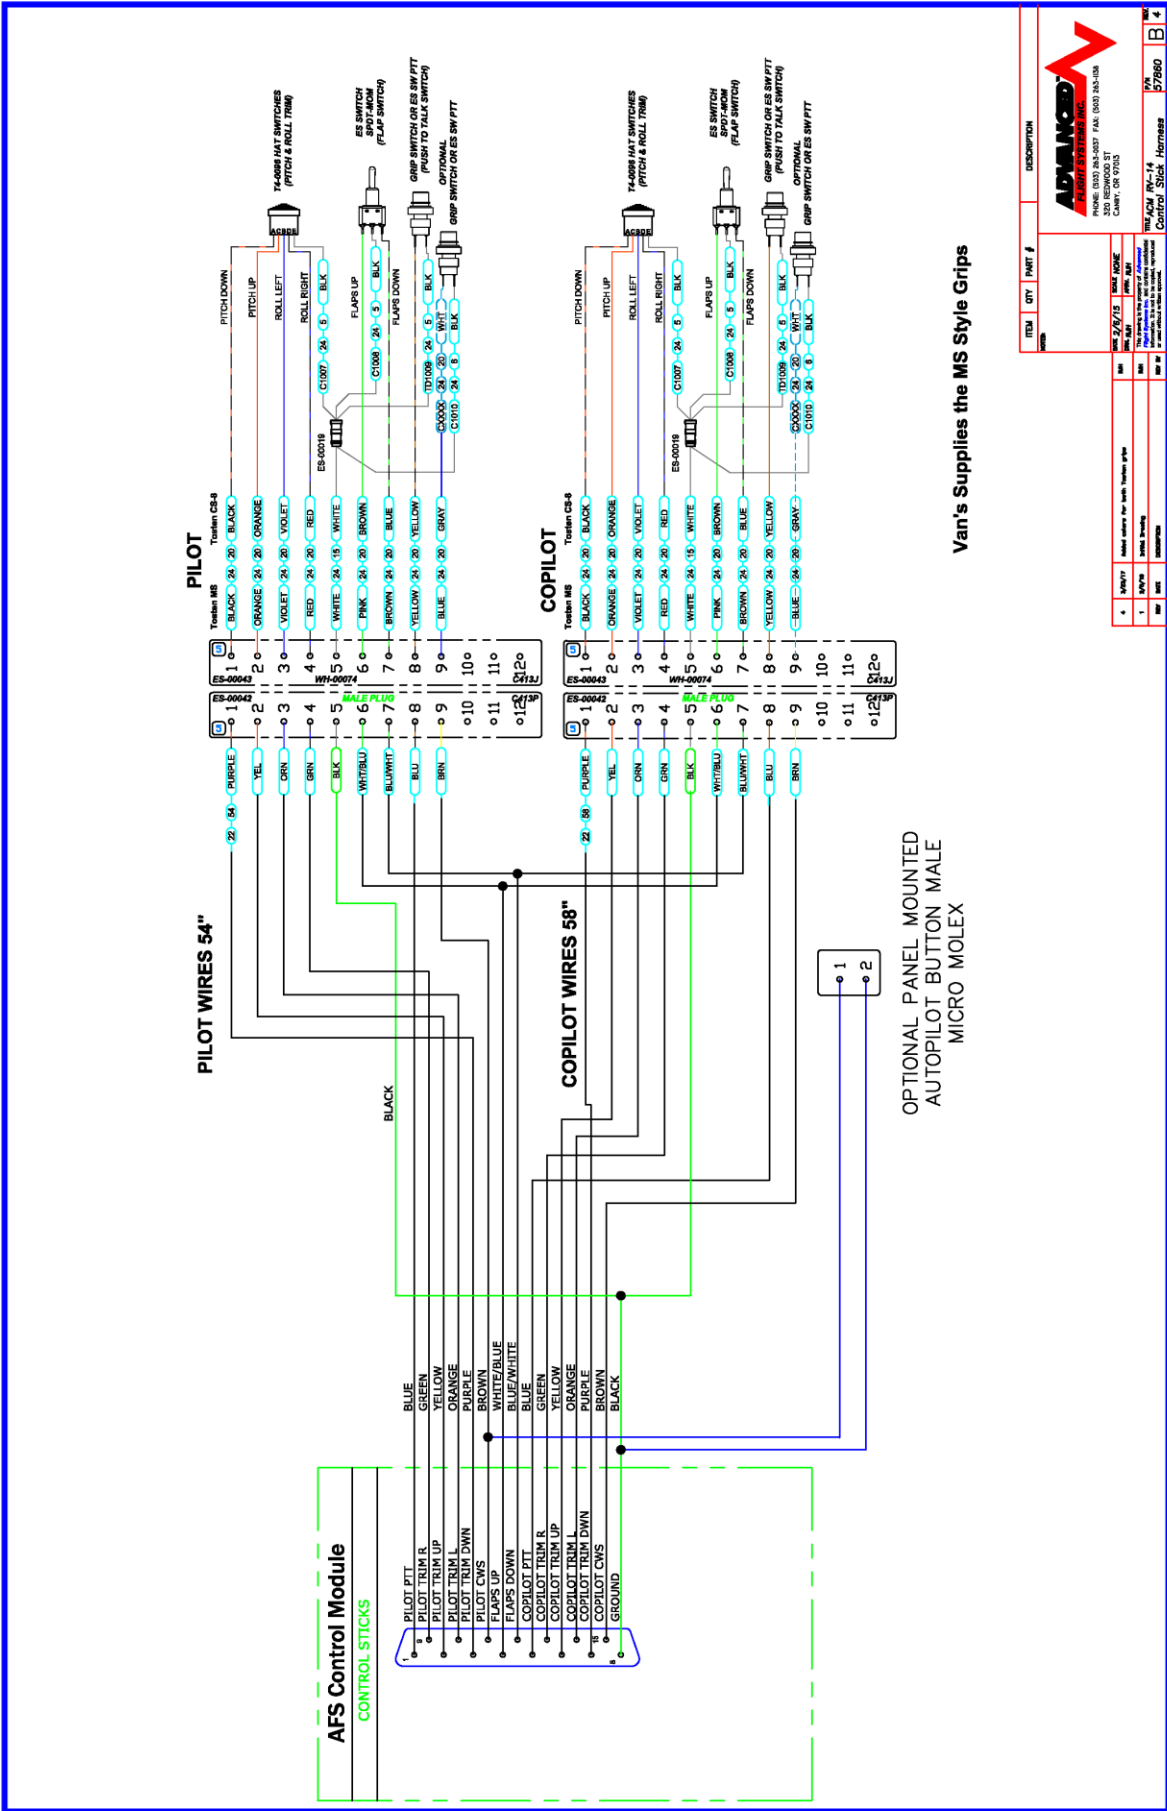

Van's Supplies the MS Style Grips


ITEM #	QTY	PART #	DESCRIPTION
4	1	ES-00042	ES SWITCH 500VDC (FLAP SWITCH)
4	1	ES-00043	ES SWITCH 500VDC (FLAP SWITCH)
4	1	WI-00074	WIRES 28/28 AWG (FLAP SWITCH)
4	1	MALE PLUG	MALE PLUG (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)
4	1	0121P	0121P (FLAP SWITCH)

ADVANCED ACME
 FLIGHT SYSTEMS INC.
 PHONE: (330) 346-5057 FAX: (330) 343-5134
 1100 W. STATE ST. SUITE 100
 CANTON, OH 44703
 TIME: ACM RV-14 Control Stick Harness P/N: 57860

RV-14 Input Wiring and Configuration (AF-5000)

The RV-14 uses the EFIS PFD inputs to monitor the Canopy Latch, Pitot Heat and wing mounted stall tab. The inputs are wired to the ACM aircraft rear harness and can be tested in the EFIS PFD Configure Inputs page in calibration.

Instrument Calibration		Configure Inputs		LOCAL STATUS		
INPUT 1				EFIS 1		
1. Label	CANOPY	1	2	3		
2. Usage	CANOPY	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>		
3. Logic	NORM CLOSED					
4. Timeout (mm:ss)	0:00					
5. Audio Alarms	ABOVE 1500 RPM					
INPUT 2				EFIS 2		
6. Label	PITOT ON	1	2	3		
7. Usage	GENERIC	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
8. Logic	NORM CLOSED					
9. Timeout (mm:ss)	0:00					
10. Audio Alarms	OFF					
INPUT 3						
11. Label	STALL WARN					
12. Usage	STALL WARN					
13. Logic	NORM OPEN					
14. Timeout (mm:ss)	0:00					
15. Audio Alarms	ON					

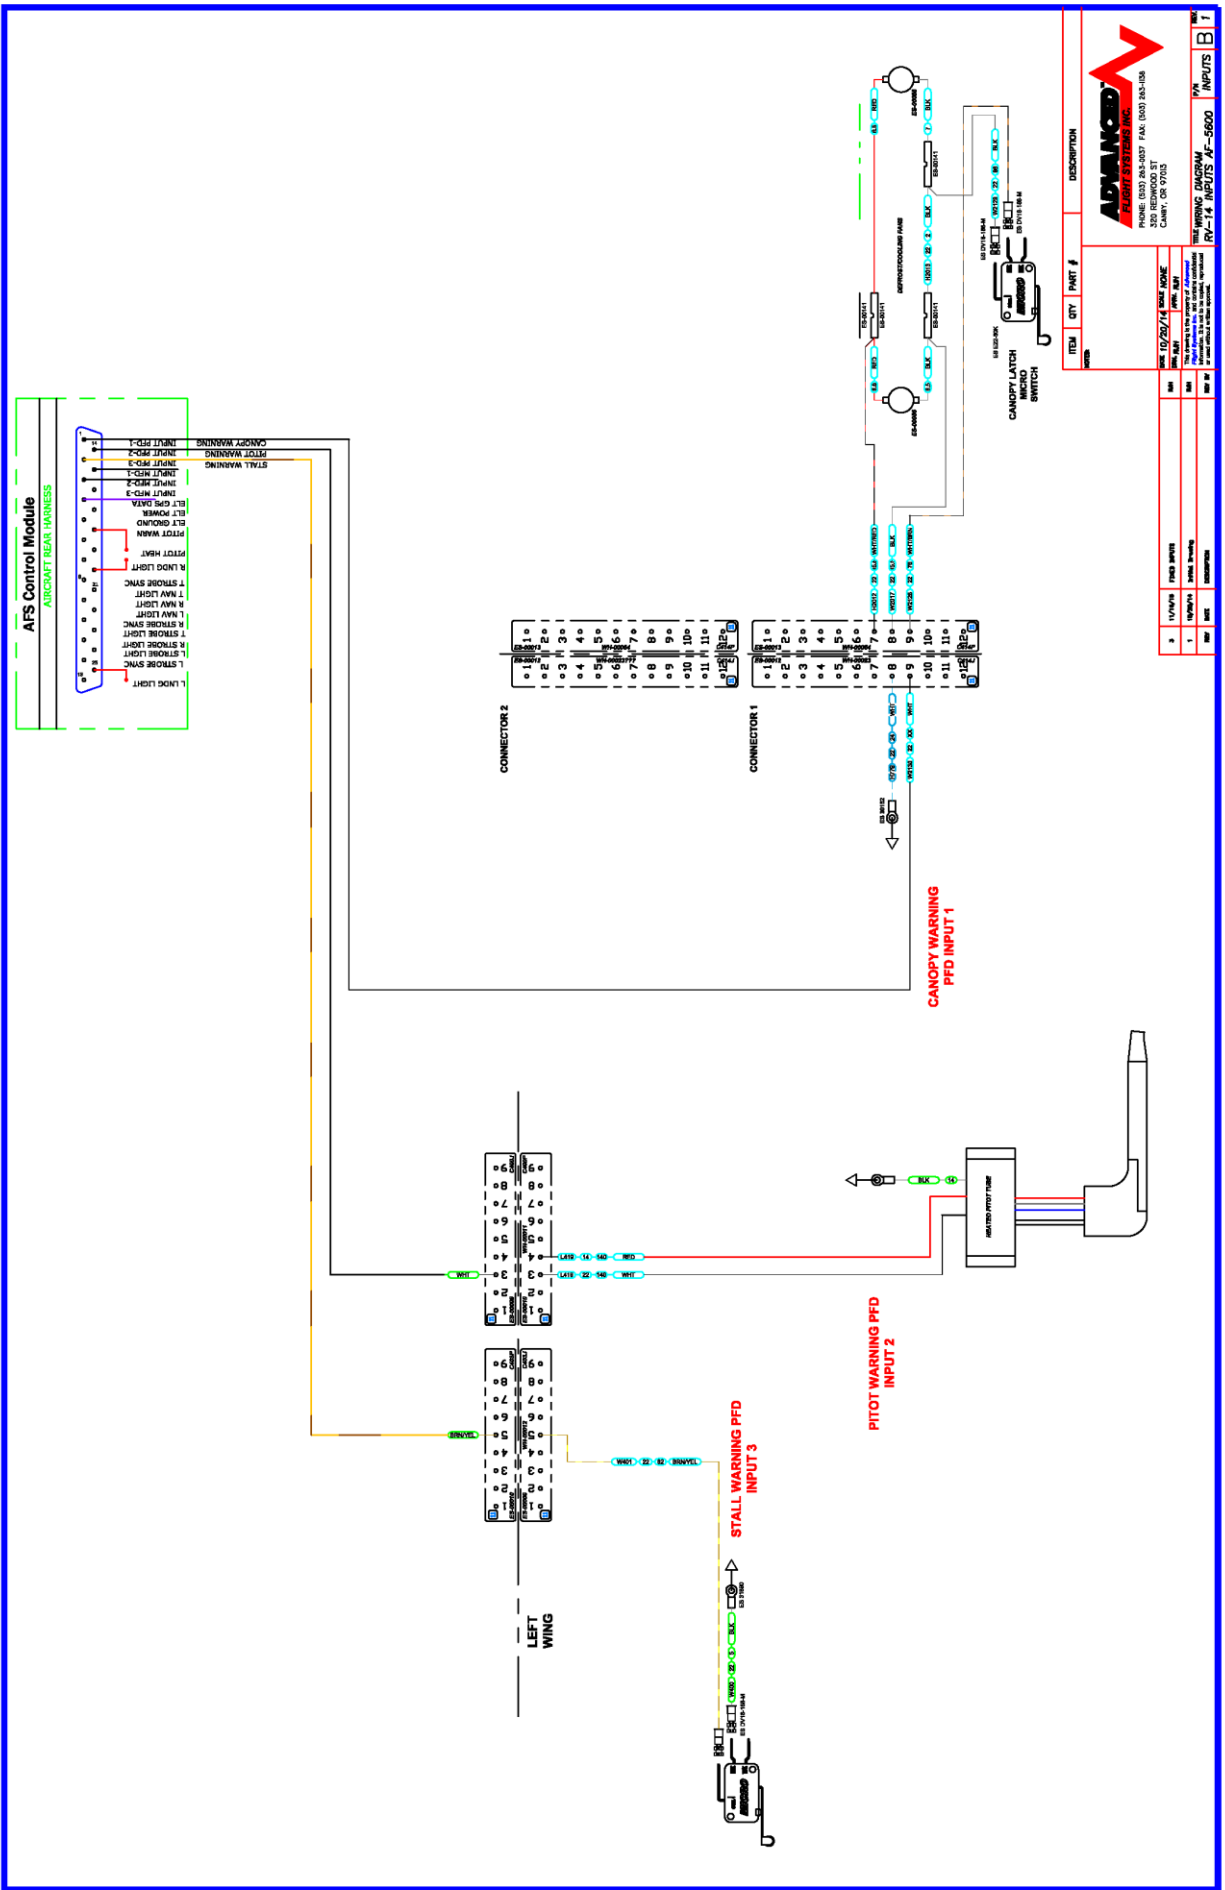


RV-14 Input Wiring and Configuration (Skyview)

The Skyview EFIS inputs cannot be used to monitor the Canopy, Pitot Heat or Stall Tab so you will need to connect the inputs from the RV-14 airframe harness to the SV-EMS harness. The RV-14 airframe harness should have three labeled wires to connect to the same color wires in the SV-EMS harness.

Function	Pin	Color	Input #	RV-14 Connector	Pin
Canopy Latch	10	Brown/Yellow	GP6	C414J	9
Stall Tab	11	Orange	GP7	C403P	5
Pitot Warning	9	Brown/Blue	GP5	LC400J	3

Using the Skyview Inputs Configuration menu you will need to configure the inputs

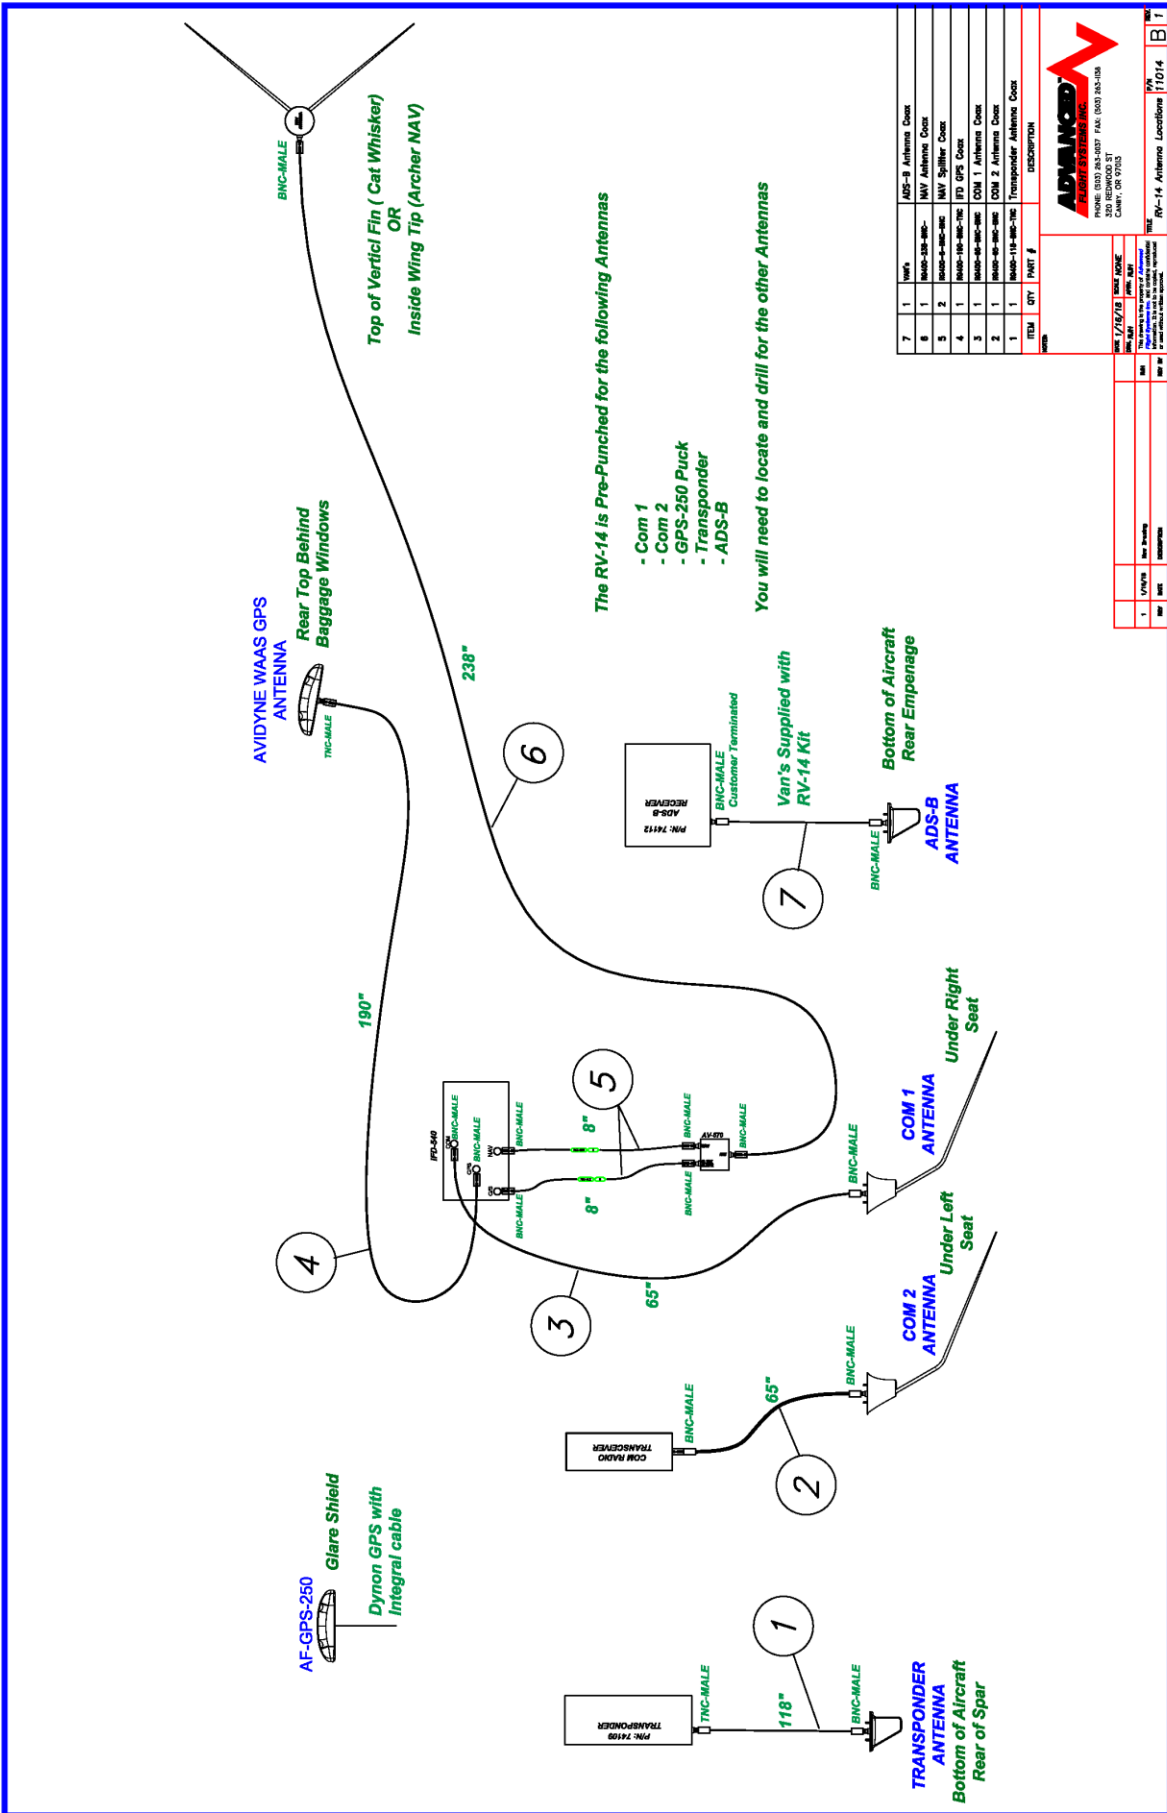

The RV-14 is Pre-Punched for the following Antennas

- Com 1
- Com 2
- GPS-250 Puck
- Transponder
- ADS-B

You will need to locate and drill for the other Antennas

ITEM	QTY	PART #	DESCRIPTION
7	1	PN: 74109	ADS-B Antenna Coax
8	1	PN: 74112	NAV Antenna Coax
9	2	PN: 74112	NAV Antenna Coax
4	1	PN: 74109	IFD GPS Coax
5	1	PN: 74109	COM 1 Antenna Coax
2	1	PN: 74109	COM 2 Antenna Coax
1	1	PN: 74109	Transponder Antenna Coax



REV	DATE	BY	CHKD	DESCRIPTION
1	1/16/15			Initial Release


REV	DATE	BY	CHKD	DESCRIPTION
1	1/16/15			Initial Release



Sportsman V Speeds

Sportsman Remote Component Mounting

Avidyne IFD-540 Tray Mounting

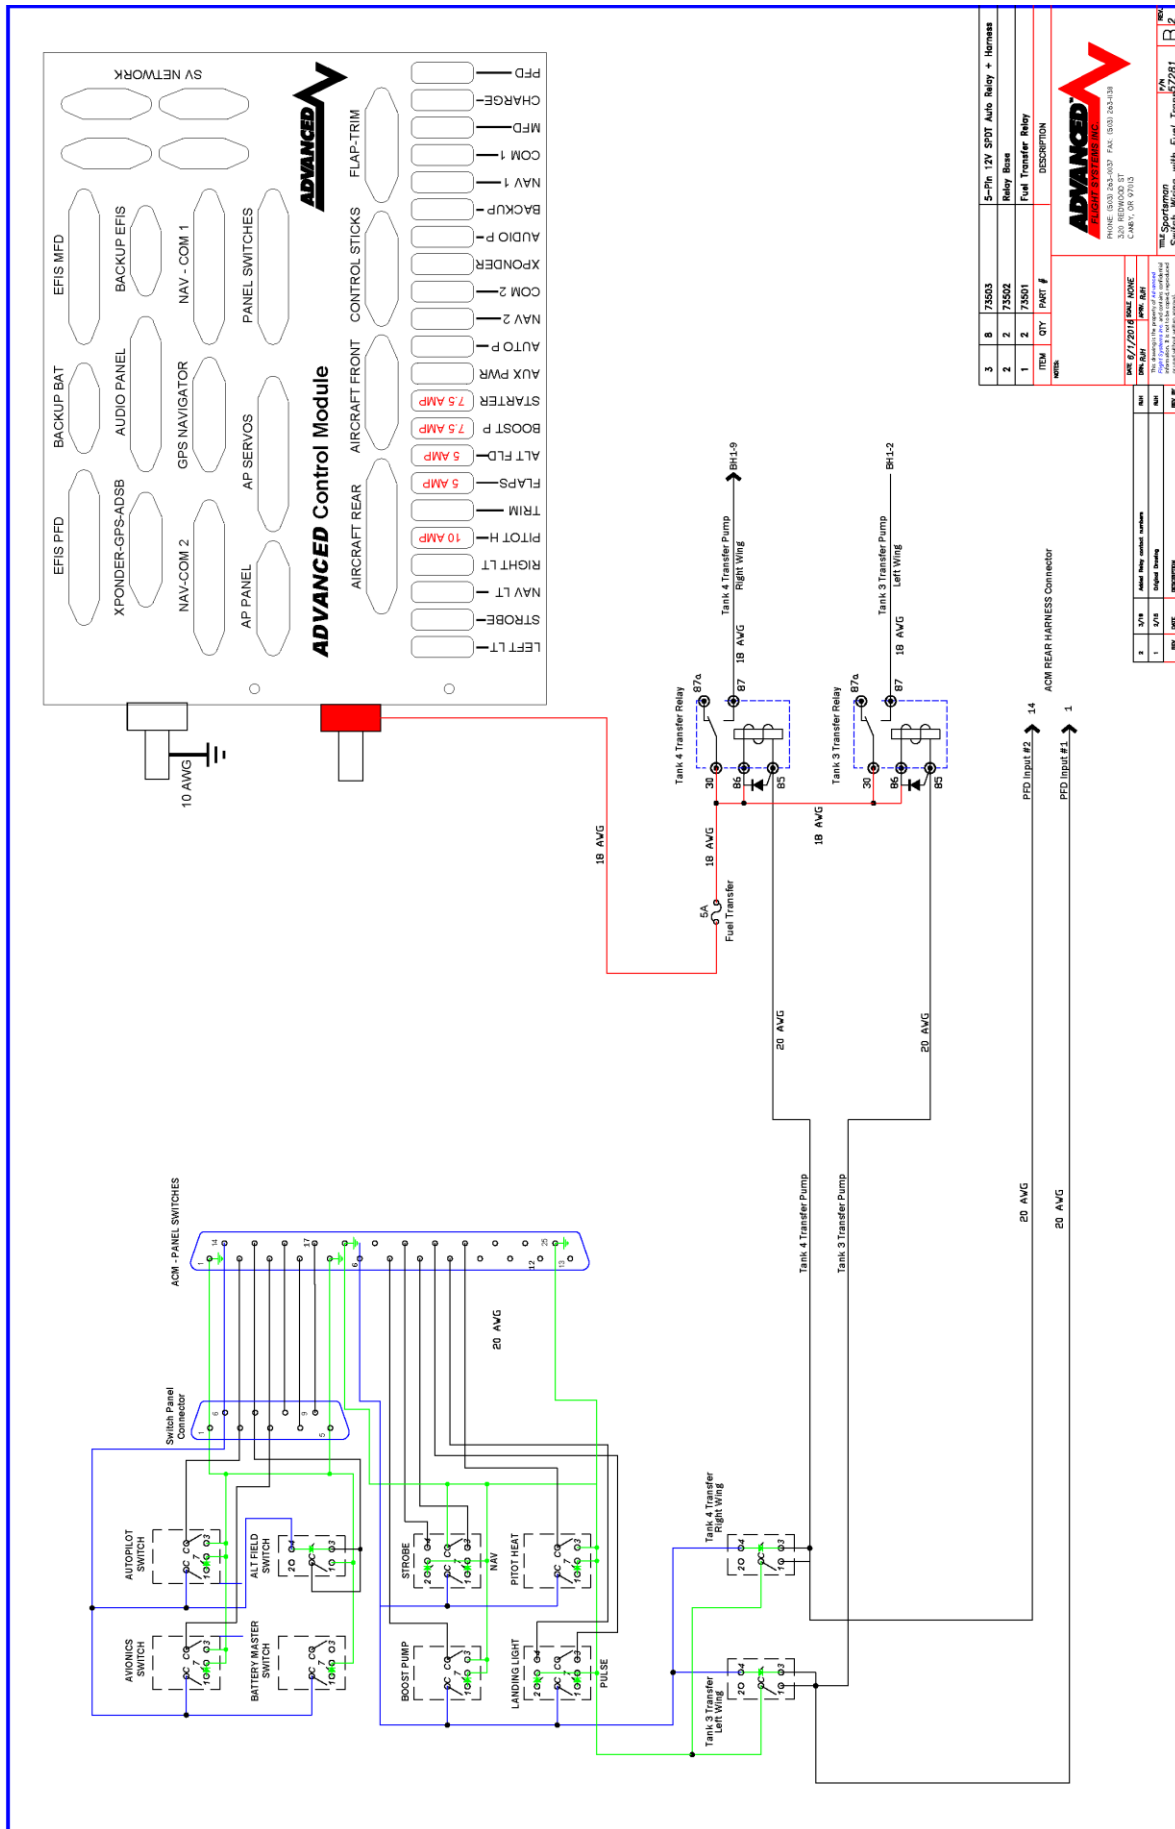

ITEM	QTY	PART #	DESCRIPTION
3	8	75503	5-Pin 12V SPDT Auto Relay + Harness Relay Base
2	2	75502	Fuel Transfer Relay
1	2	75501	Fuel Transfer Relay

REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE

REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE


REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE

REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE

REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE

REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE

REV	DATE	DESCRIPTION
1	07/17/2016	REV. NONE
2	07/17/2016	REV. NONE
3	07/17/2016	REV. NONE

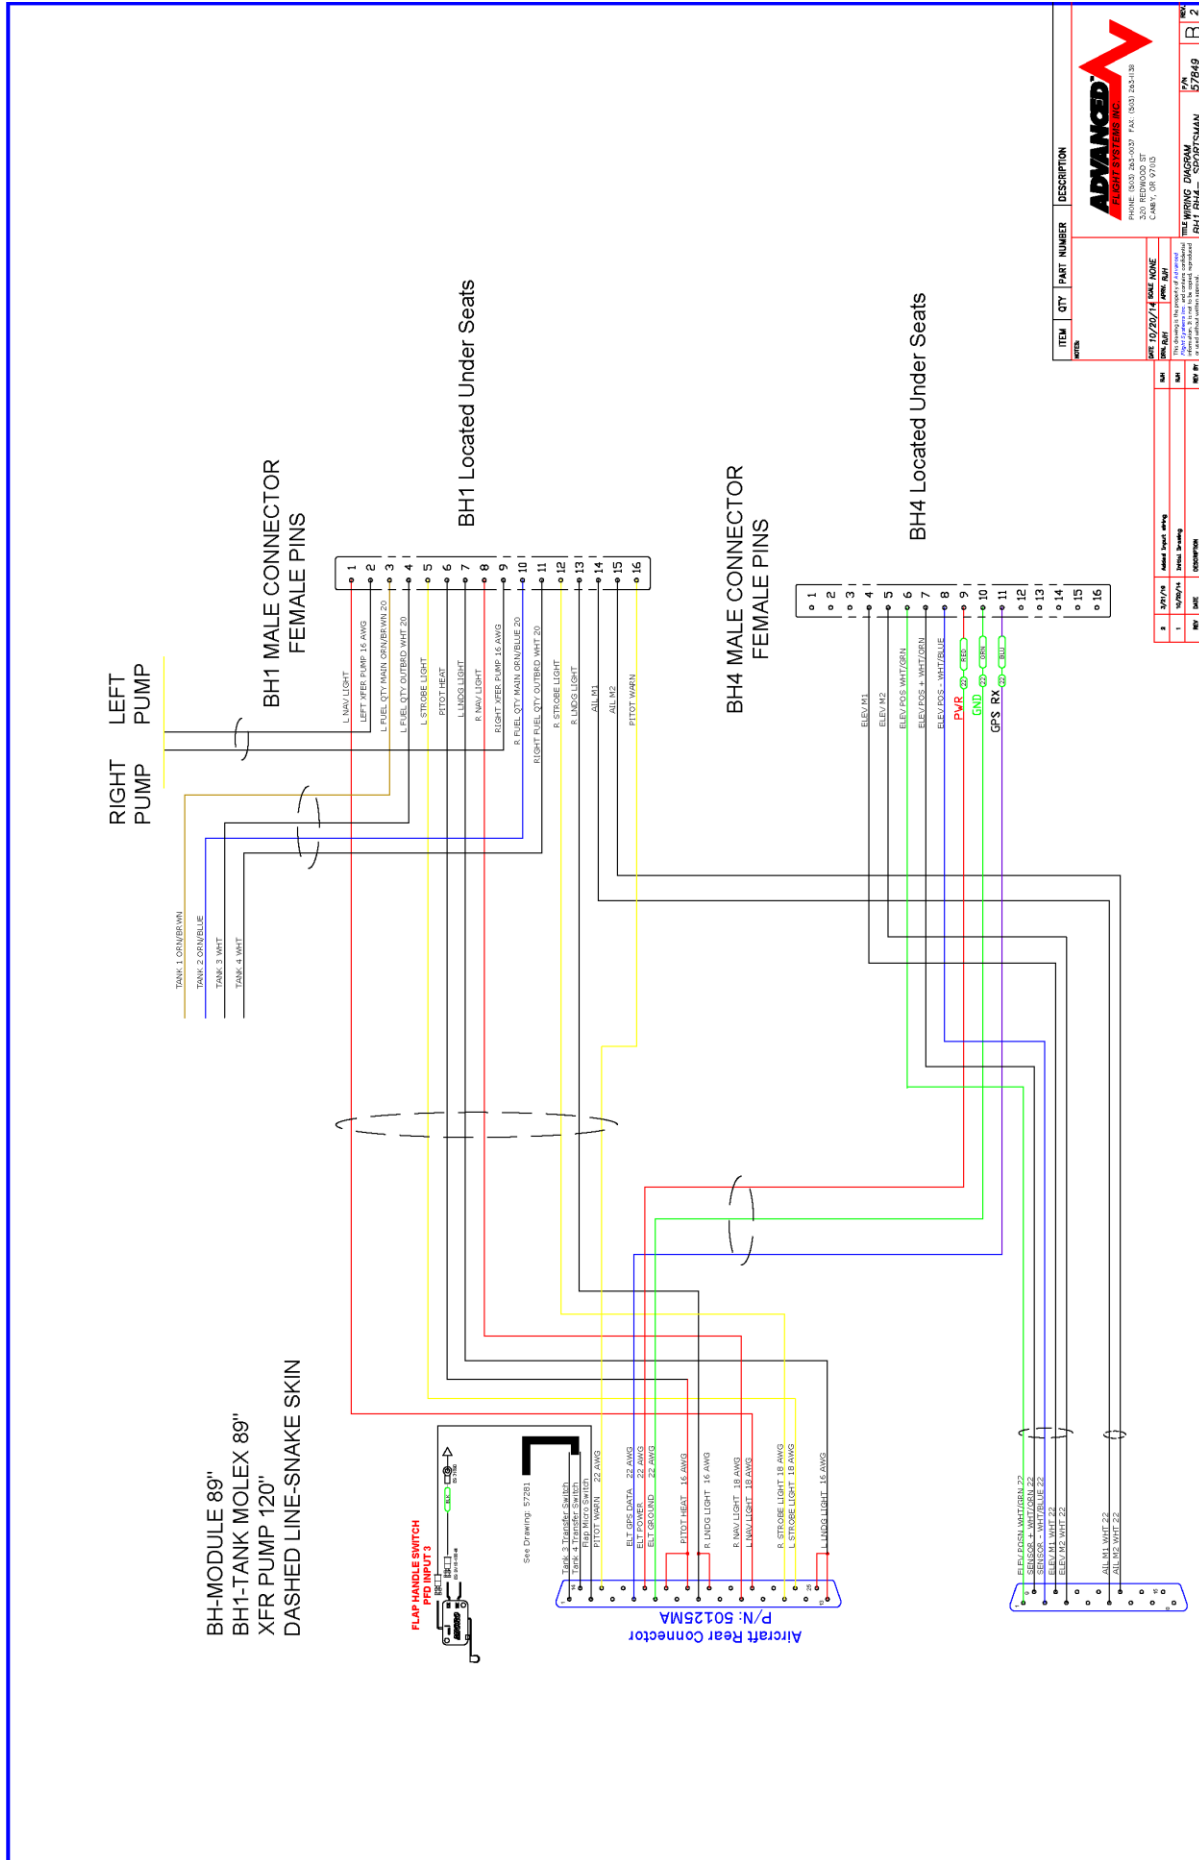




The Aerosport installation instructions for the 310 panel can be downloaded from the following link:

<http://www.aerosportproducts.com/wp-content/uploads/2019/02/RV-10-Panel-Install-Doc.pdf>

RV-10 Component Mounting

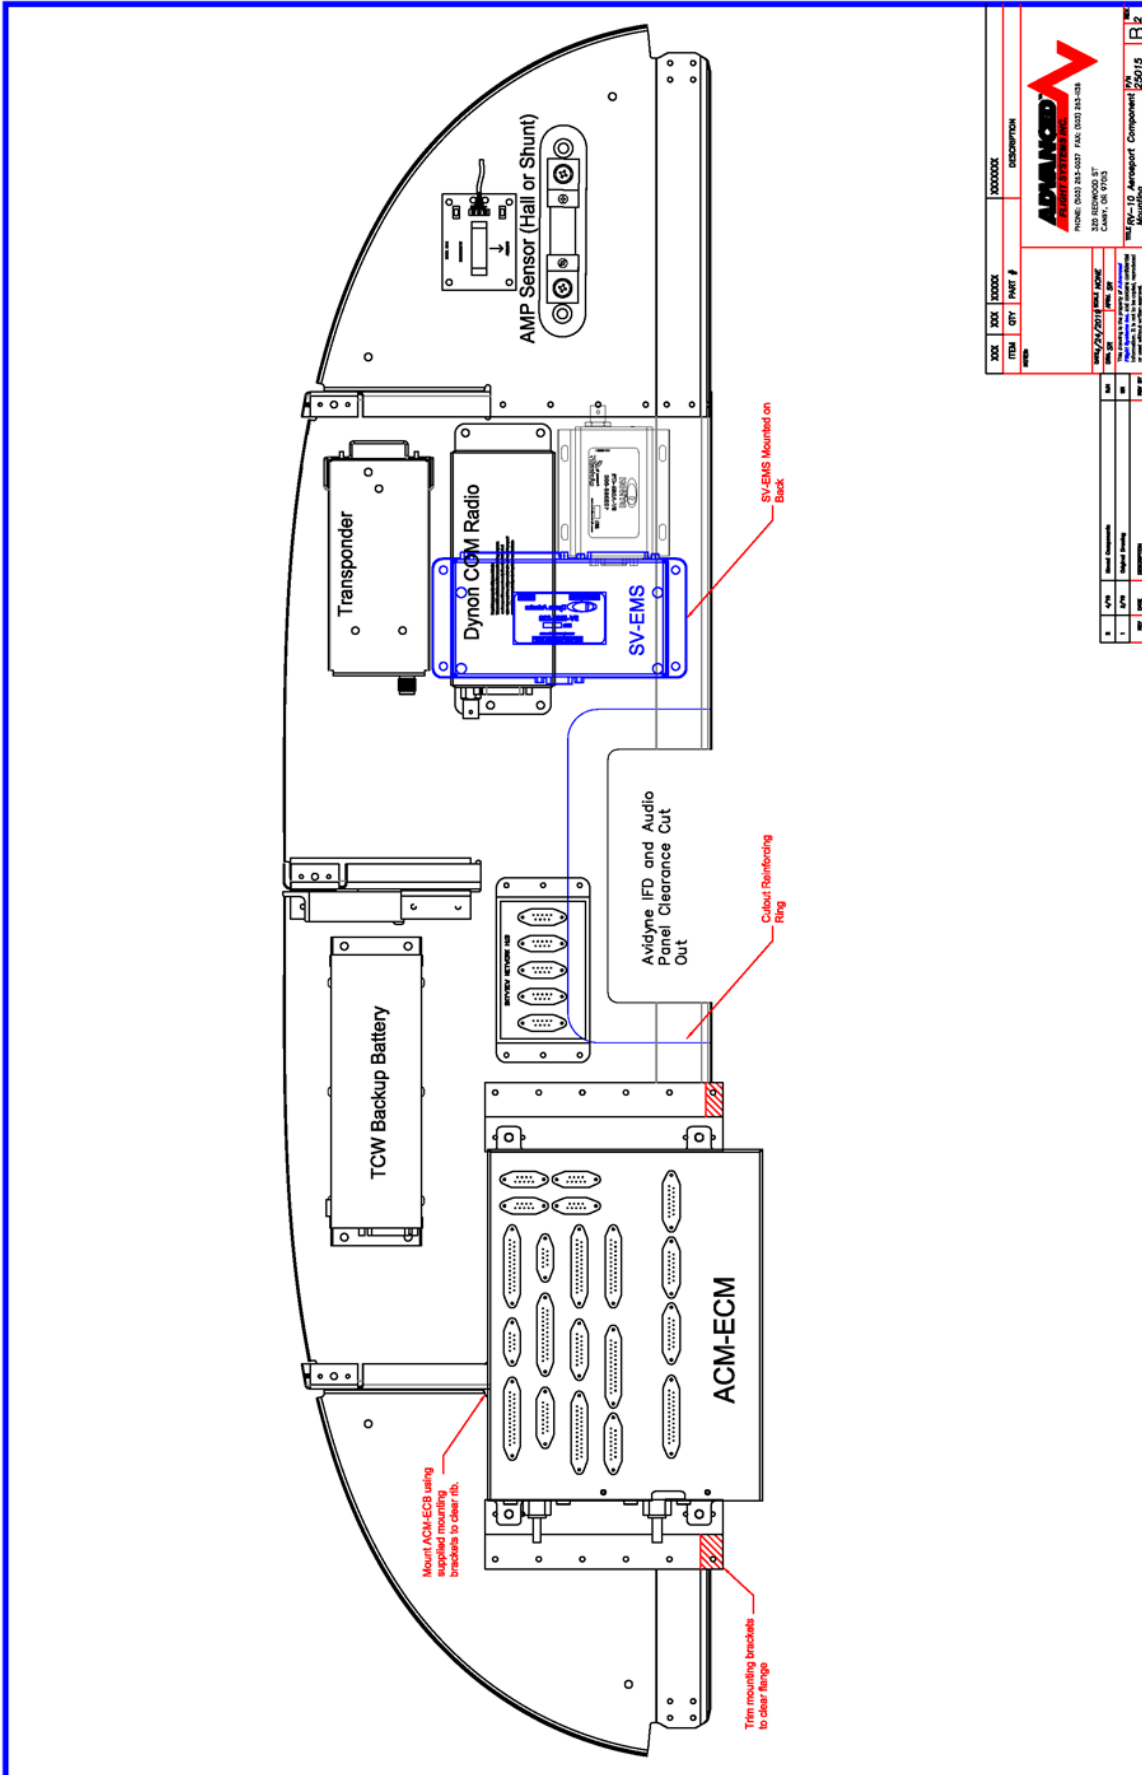

QTY	QTY	QTY	DESCRIPTION
1	1	1	RV-10

QTY	QTY	QTY	DESCRIPTION
1	1	1	RV-10


ADVANCED
AVIATION
 ELECTRONICS, INC.

PHONE: (502) 263-5227 FAX: (502) 263-5228
 1000 W. 10th Street
 Columbia, MO 65201

REV: RV-10 Aircraft Component Mounting
 2/2015

**SV-NETWORK CABLES
DSUB-9 FEMALE**


The actual plug connection does not matter as long as all the SV-NET devices are connected together

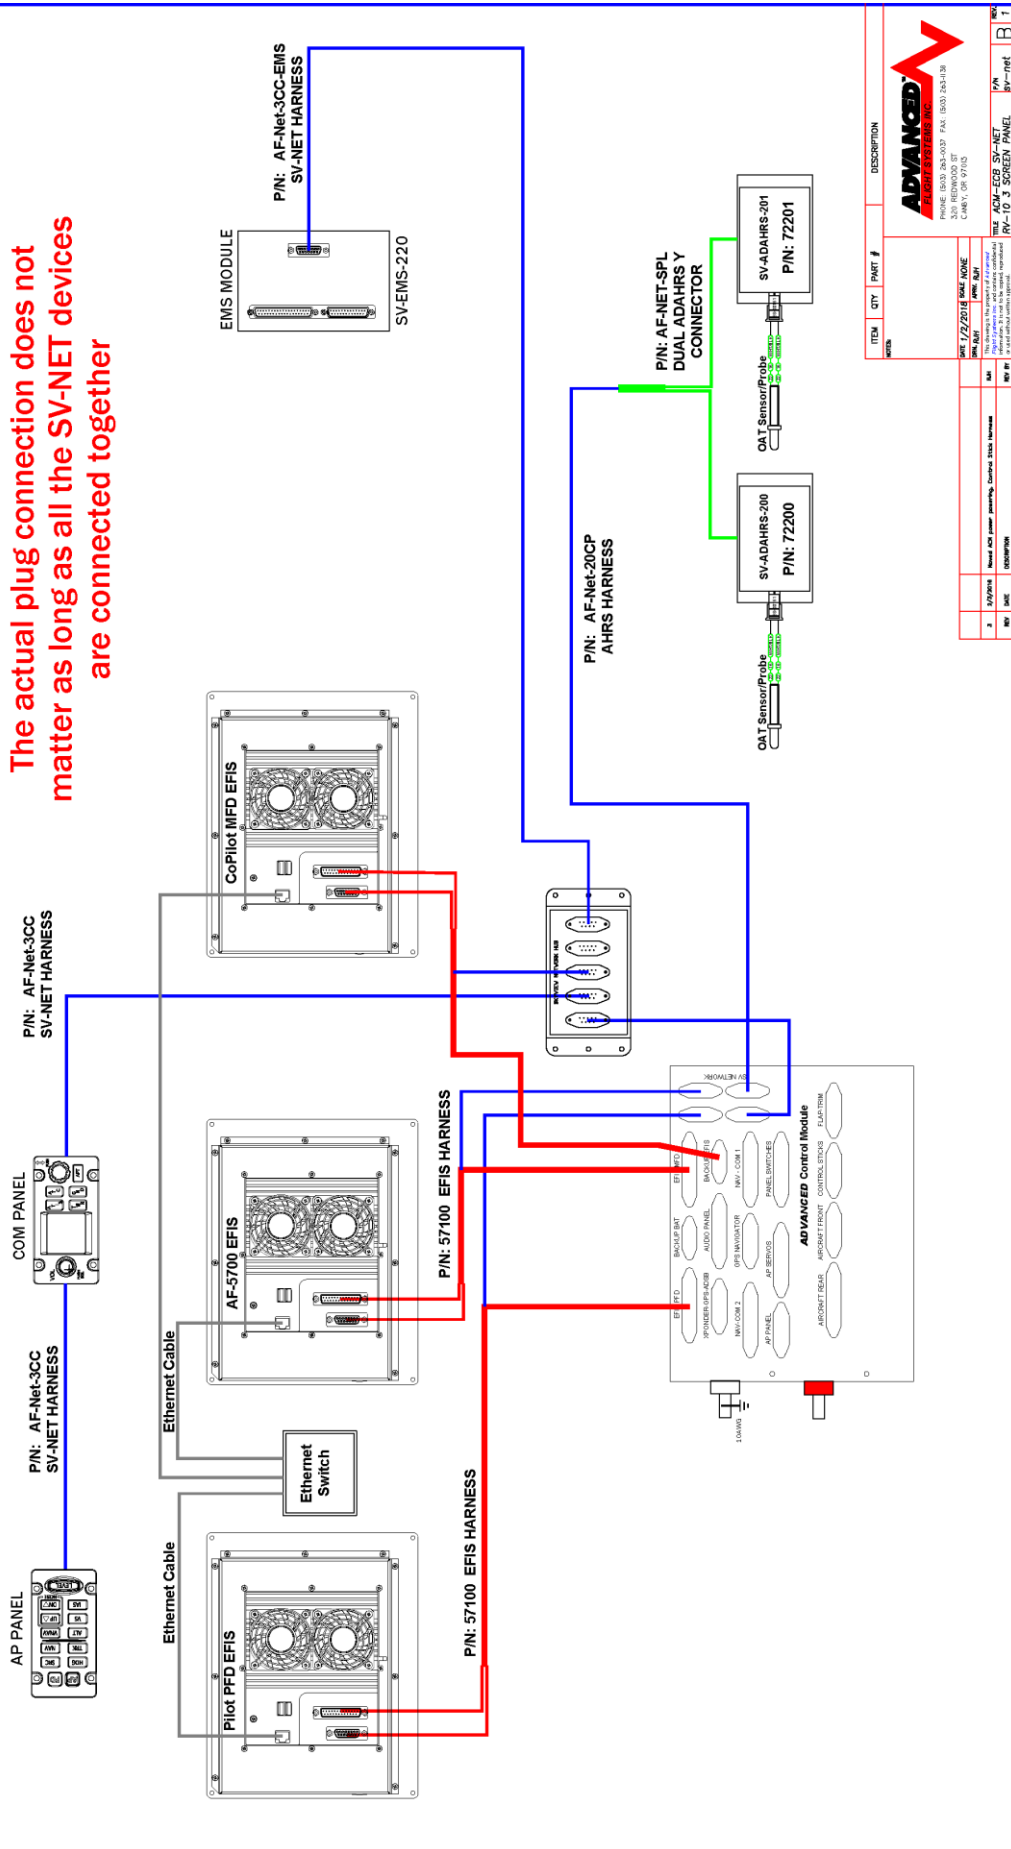

ITEM #	QTY	PART #	DESCRIPTION
1	1	AF-Net-3CC	SV-NET HARNESS
2	1	57100	EFIS HARNESS
3	1	AF-Net-SPL	DUAL ADARS Y CONNECTOR
4	1	AF-Net-3CC-EMS	SV-NET HARNESS
5	1	ADARS-200	ADARS
6	1	ADARS-201	ADARS
7	1	DLT-SensorProbe	DLT SensorProbe
8	1	EMS-220	EMS MODULE
9	1	ControlModule	ADVANCED Control Module



PHONE: (800) 284-5033 FAX: (800) 284-1138
 10000 WILSON ROAD
 CANYON, OR 97332
 TITLE: ACM-EGS SV-NET
 RV-10 3 SCREEN PANEL
 P/N: sv-net
 B 1

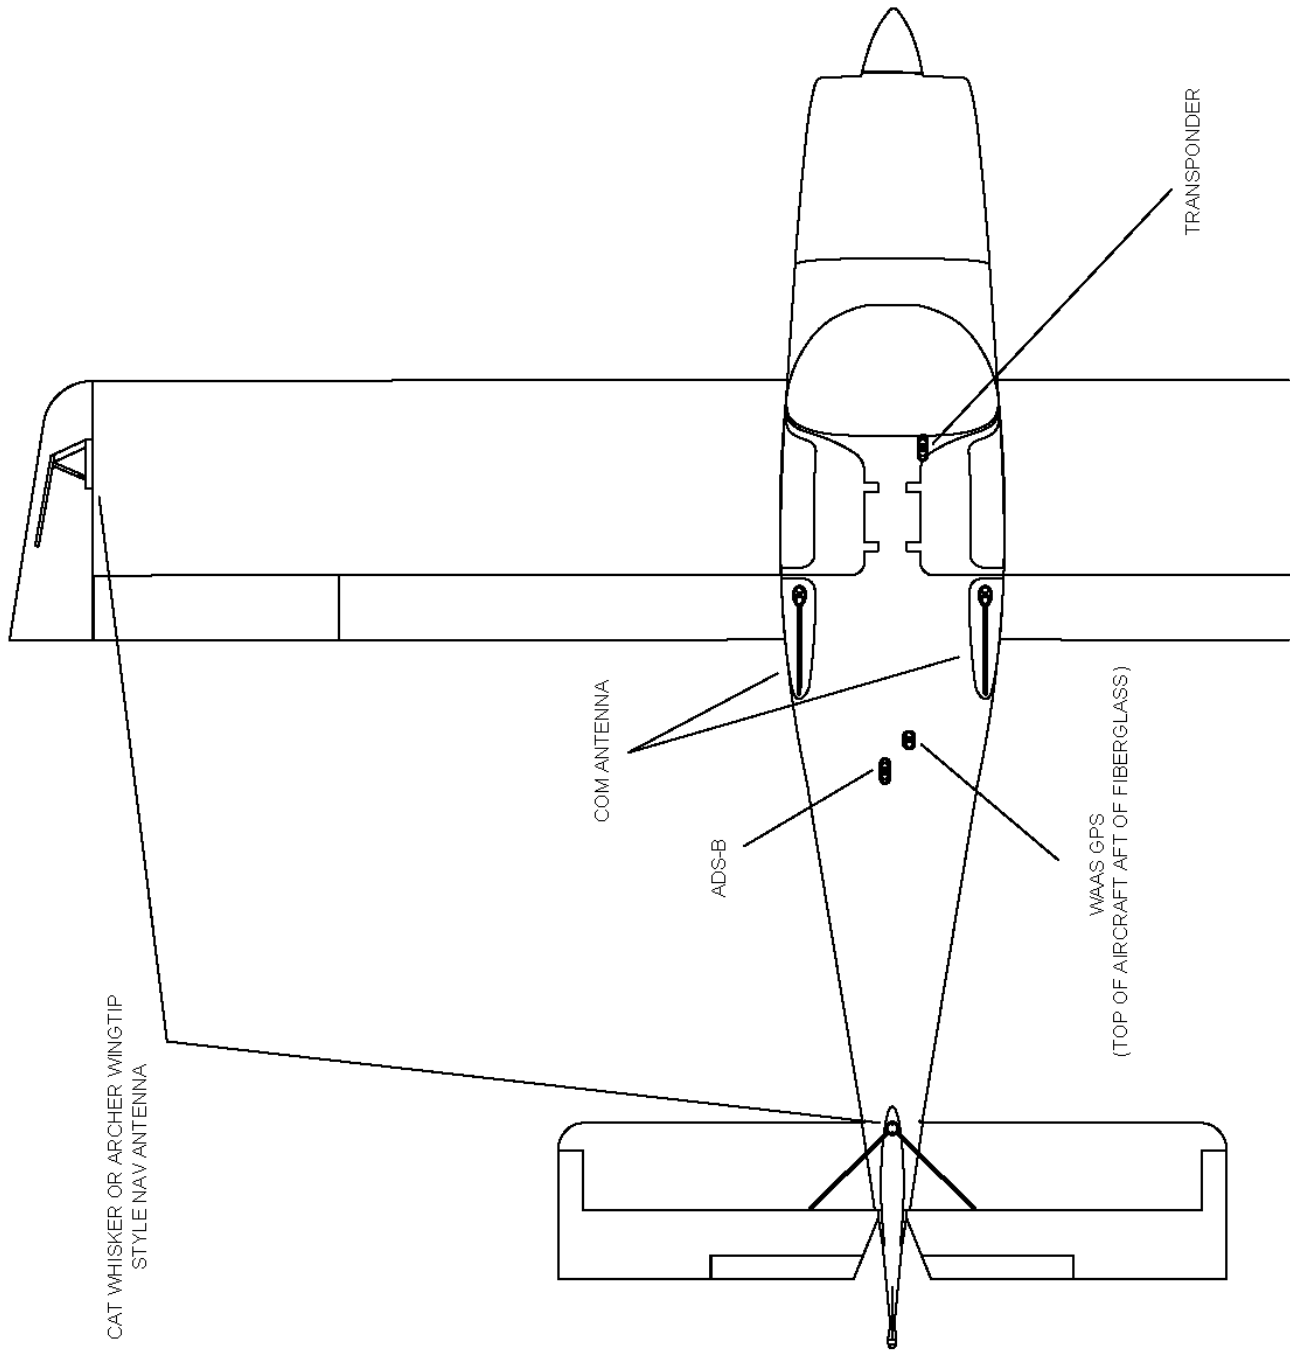

- NOTES:
- ANTENNAS ARE LOCATED ON BOTTOM OF AIRCRAFT UNLESS OTHERWISE NOTED
 - THIS SCHEMATIC IS TO BE USED IN ACCORDANCE WITH THE "AIRCRAFT ANTENNAS" SCHEMATIC
 - VERIFY ANTENNAS ARE CORRECT DISTANCES APART
 - ANTENNAS CONFIGURATION DEPENDS ON AIRCRAFT TYPE

ACM Flap Control – AF-5000

The ACM flap control can be configured from the PFD EFIS calibration menu:

SET > CAL > 44. Flap Position

7. Operation Mode:

POSITION

Flaps will stop at the programmed Position Calibration points (FULL UP, POSITION 1, POSITION 2, FULL DOWN). You must have a POS-12 position sensor installed and working to use position mode. Move the flaps to each position and use the COPY and SAVE buttons to record the position. *If the AD_VAL in the upper right hand EFIS screen corner does not change when you move the flaps you do not have the POS-12 correctly wired.*

MOMENTARY

Flaps will only move when you hold the Flap Up or Flap Down button. Momentary mode does not require a flap sensor.



8. Retract Mode:

MULTI-STEP

Flaps will move to the next position when the Flaps Up button is pressed

CONTINUOUS

Flaps will move to fully retracted position when the Flaps Up button is pressed

MOMENTARY

Flaps will only move when you hold the Flap Up button.

9. Motor Polarity (NORMAL or REVERSED) Verify that the Flaps move in the correct direction using the EFIS **CHECK > ELEC** menu buttons. If the Stick mounted buttons are backwards you will need to swap the stick Up and Down button wiring.




10. Endpoint Slop Timeout The Flap Motor will continue to run for this number of seconds to make sure the flaps are fully retracted or extended. The flap positioning system should not be used to provide an accurate position stop for full flap up or down settings.


SV Autopilot Setup

To configure the SV Autopilot you will need to do the following:

1. Verify that the ROLL and Pitch AP Servo Status is READY in the SV-NETWORK PFD EFIS Menu. If the Status shows needs update press the **UPDT** button

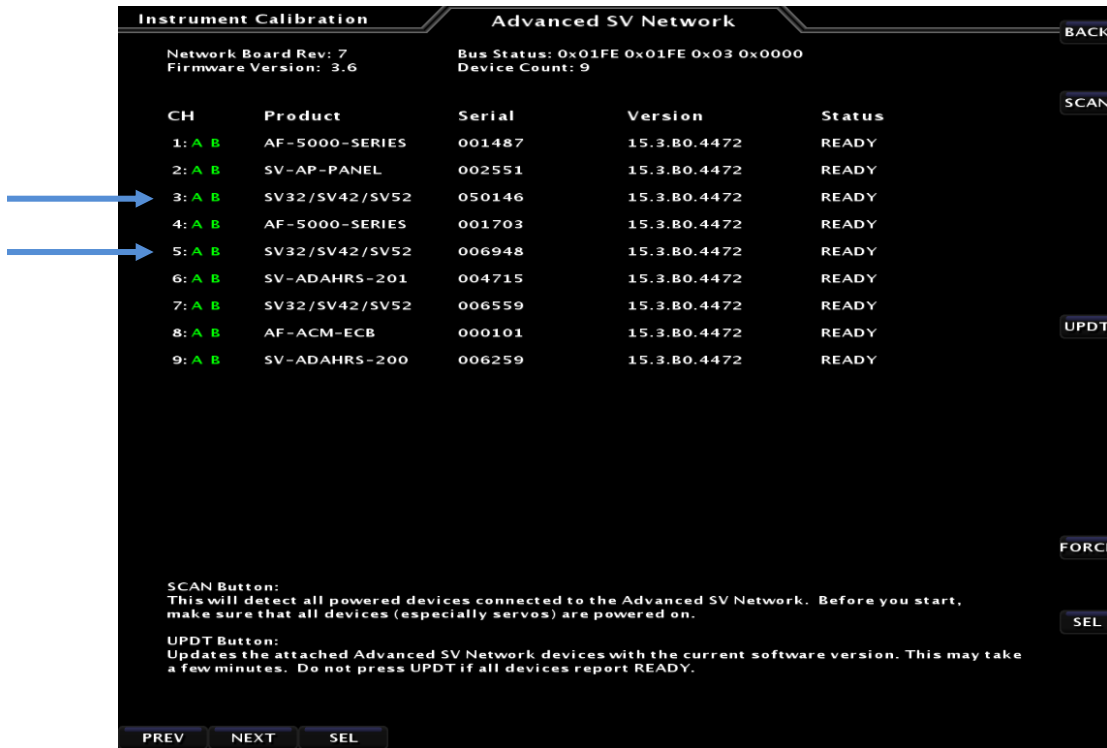

2. Perform the **3. Servo Calibration** and **4. Servo Test** following the PFD EFIS on screen directions. After completing these steps both items **MUST** show **COMPLETE** before the Autopilot can be used. The following settings are from a Van's RV-14 and RV-10.

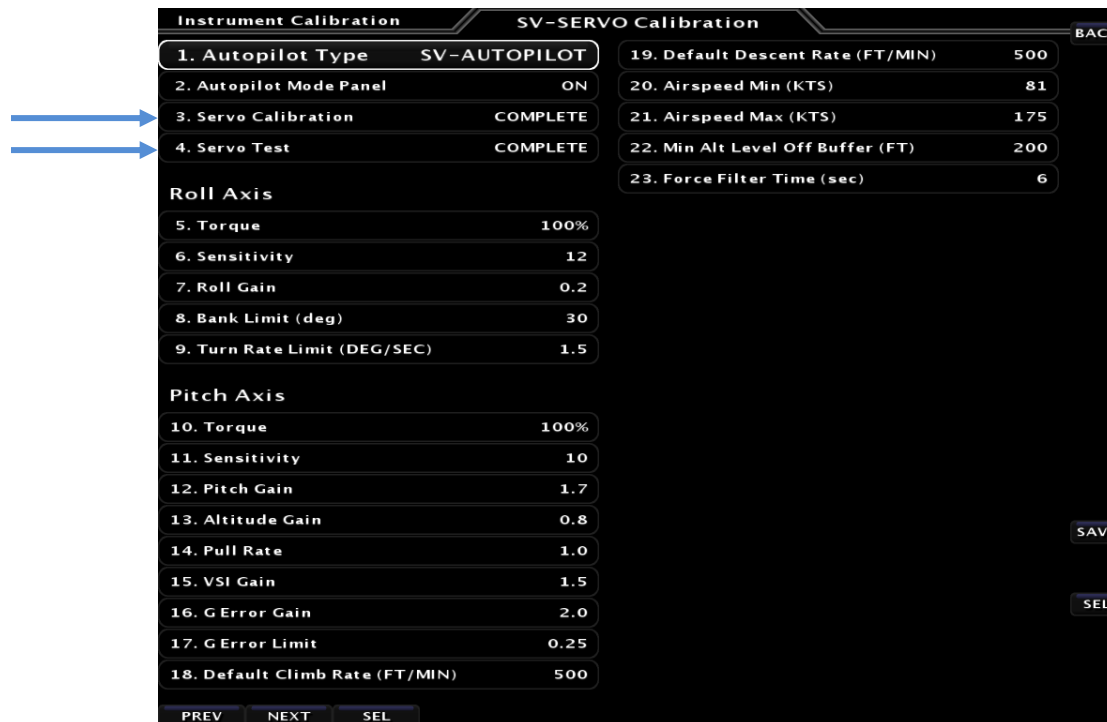

Advanced Control Module AF-GPS Routing Table

AFS GPS	Cable Color	DSUB-9	ACM 15 Pin	ACM 25 Pin	EFIS MFD
			ACM: XPND,GPS,ADSB	ACM: MFD	AUX 15 Pin
PWR +8V	Orange	1	4	12	1
Ground	Black	5	12	24	9
RS-232 TXD	Blue/Gray	3	5	22	10
RS-232 RXD	Orange/Gray	2	13	9	2

Advanced Control Module Skyview EFIS Audio Routing Table

Skyview PFD	Cable Color	Skyview	ACM 25 Pin	ACM 25 Pin	SV-INTERCOM
		DSUB-37	ACM: PFD	Audio Panel	DSUB-25
Audio Left	Brown	13	11	11	19
Audio Right	Gray	31	10	10	6
Audio Ground	Black	30	23	23	20

Advanced Control Module AF-5000 EFIS Audio Routing Table

AF-5000 PFD	Cable Color	AF-5000	ACM 25 Pin	ACM 25 Pin	PDA-360 Audio P
		DB-25	ACM: PFD	Audio Panel	J1
Audio		18	11	11	J1-31
Audio Ground		16	23	23	J1-32

Advanced Control Module ADS-B Routing Table


AFS ADS-B	Cable Color	DSUB-9	ACM 15 Pin	ACM 25 Pin	EFIS MFD Serial #3
			ACM: XPND,GPS,ADSB	ACM: MFD	DSUB 25 Pin
PWR +12V	Red	1	6	nc	nc
Ground		4	14	nc	nc
RS-232 TXD		3	7	21	5
RS-232 RXD		2	15	8	4


Advanced Control Module CO Detector Routing Table

CO Guardian	Cable Color	CO	ACM 9 Pin	ACM 25 Pin	EFIS MFD Serial #2
		DSUB-9	ACM: BACKUP EFIS	ACM: MFD	DSUB 25 Pin
PWR +12V	Red	1	5	nc	nc
Ground	Black	5	9	nc	nc
RS-232 TXD >>		7	3	20	25
RS-232 RXD <<		8	8	7	13

Advanced Control Module RV-14 Pitch Servo Routing Table

Pitch Servo	Cable Color	Servo		ACM Servo
		Molex C411P/C431J	Rear Bulkhead Molex C432P/C432J	DSUB-25
Data 1A	Green	1	1	6
Data 2B	WHT/BLU	3	3	20
CW Steering	Yellow	4	4	8
Data 1B	Blue	5	5	19
PWR +12V	Red	6	6	5
Data 2A	WHT/GRN	7	7	7
Ground	BLK	9	9	18

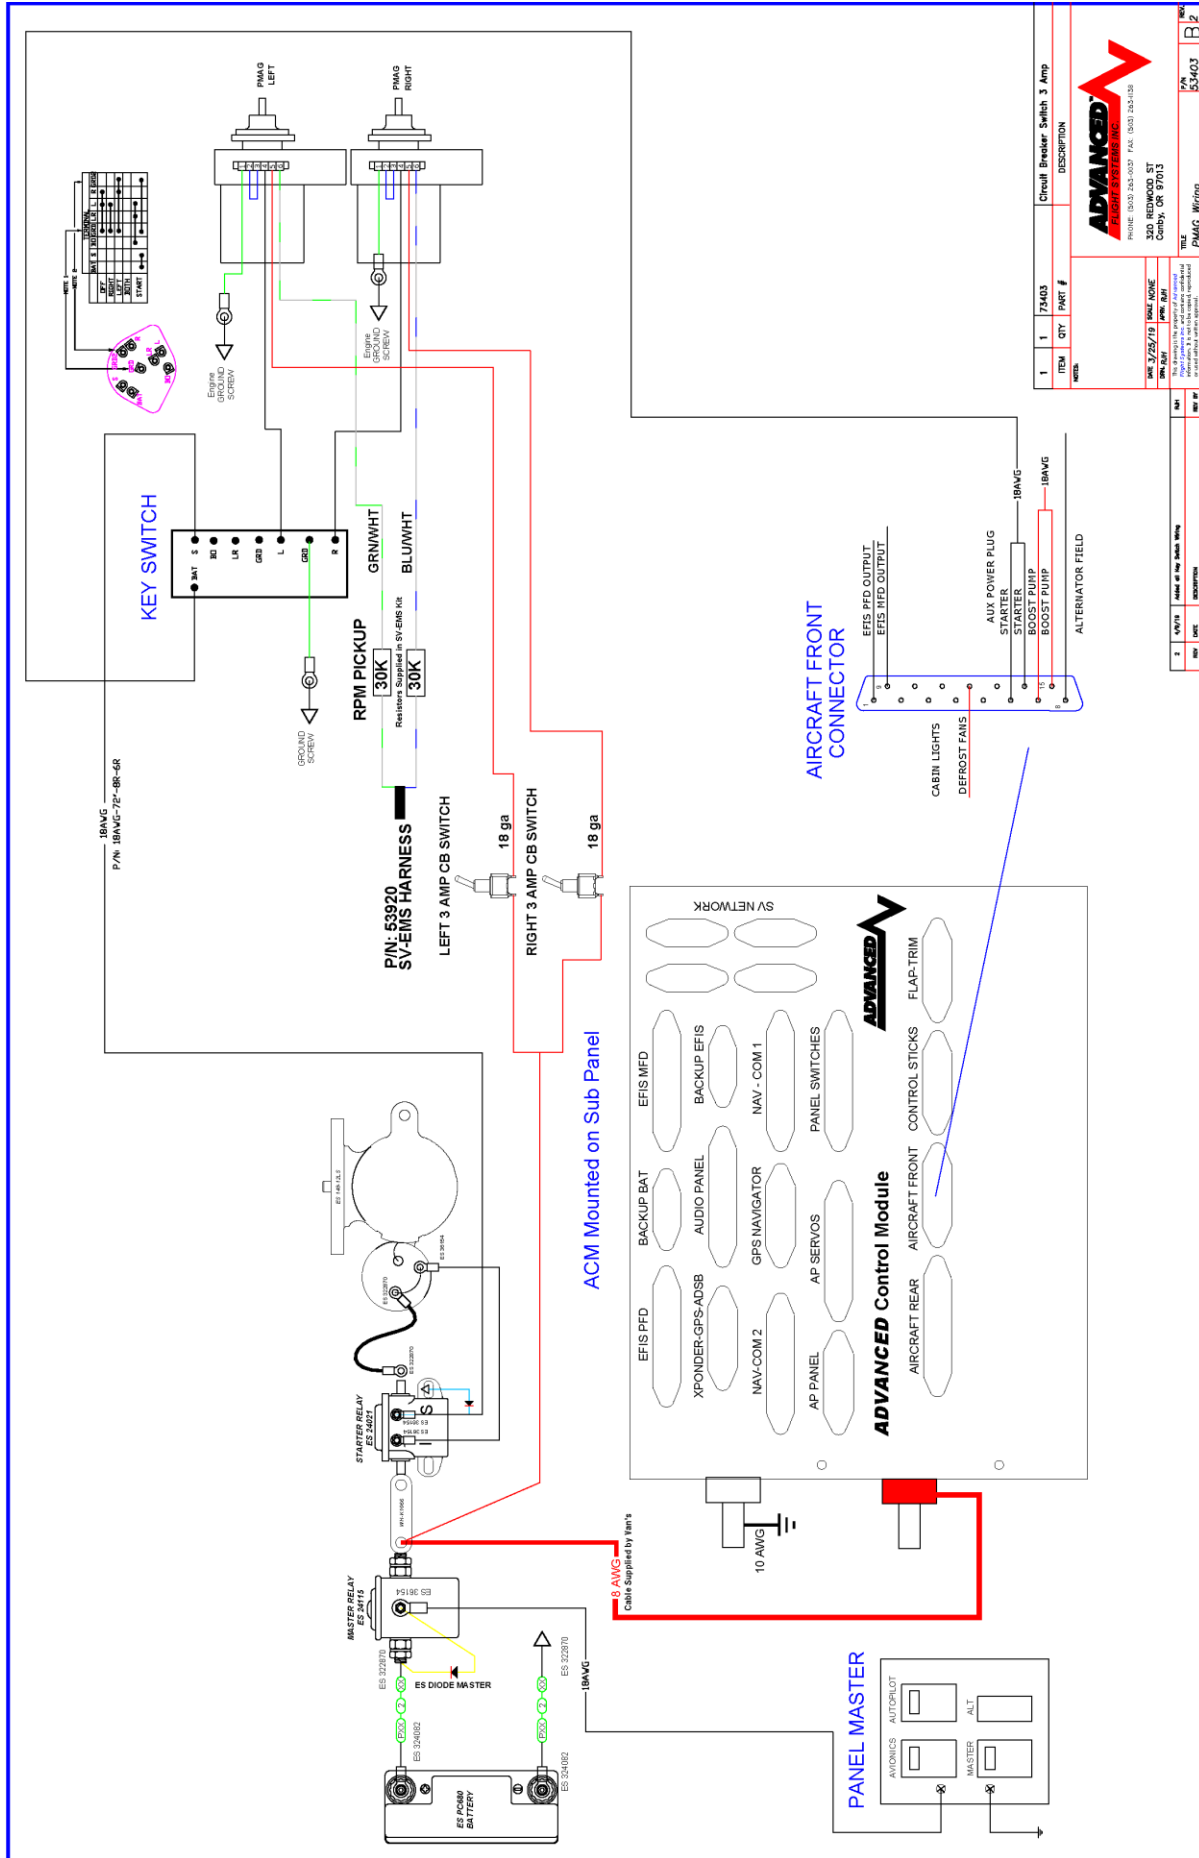

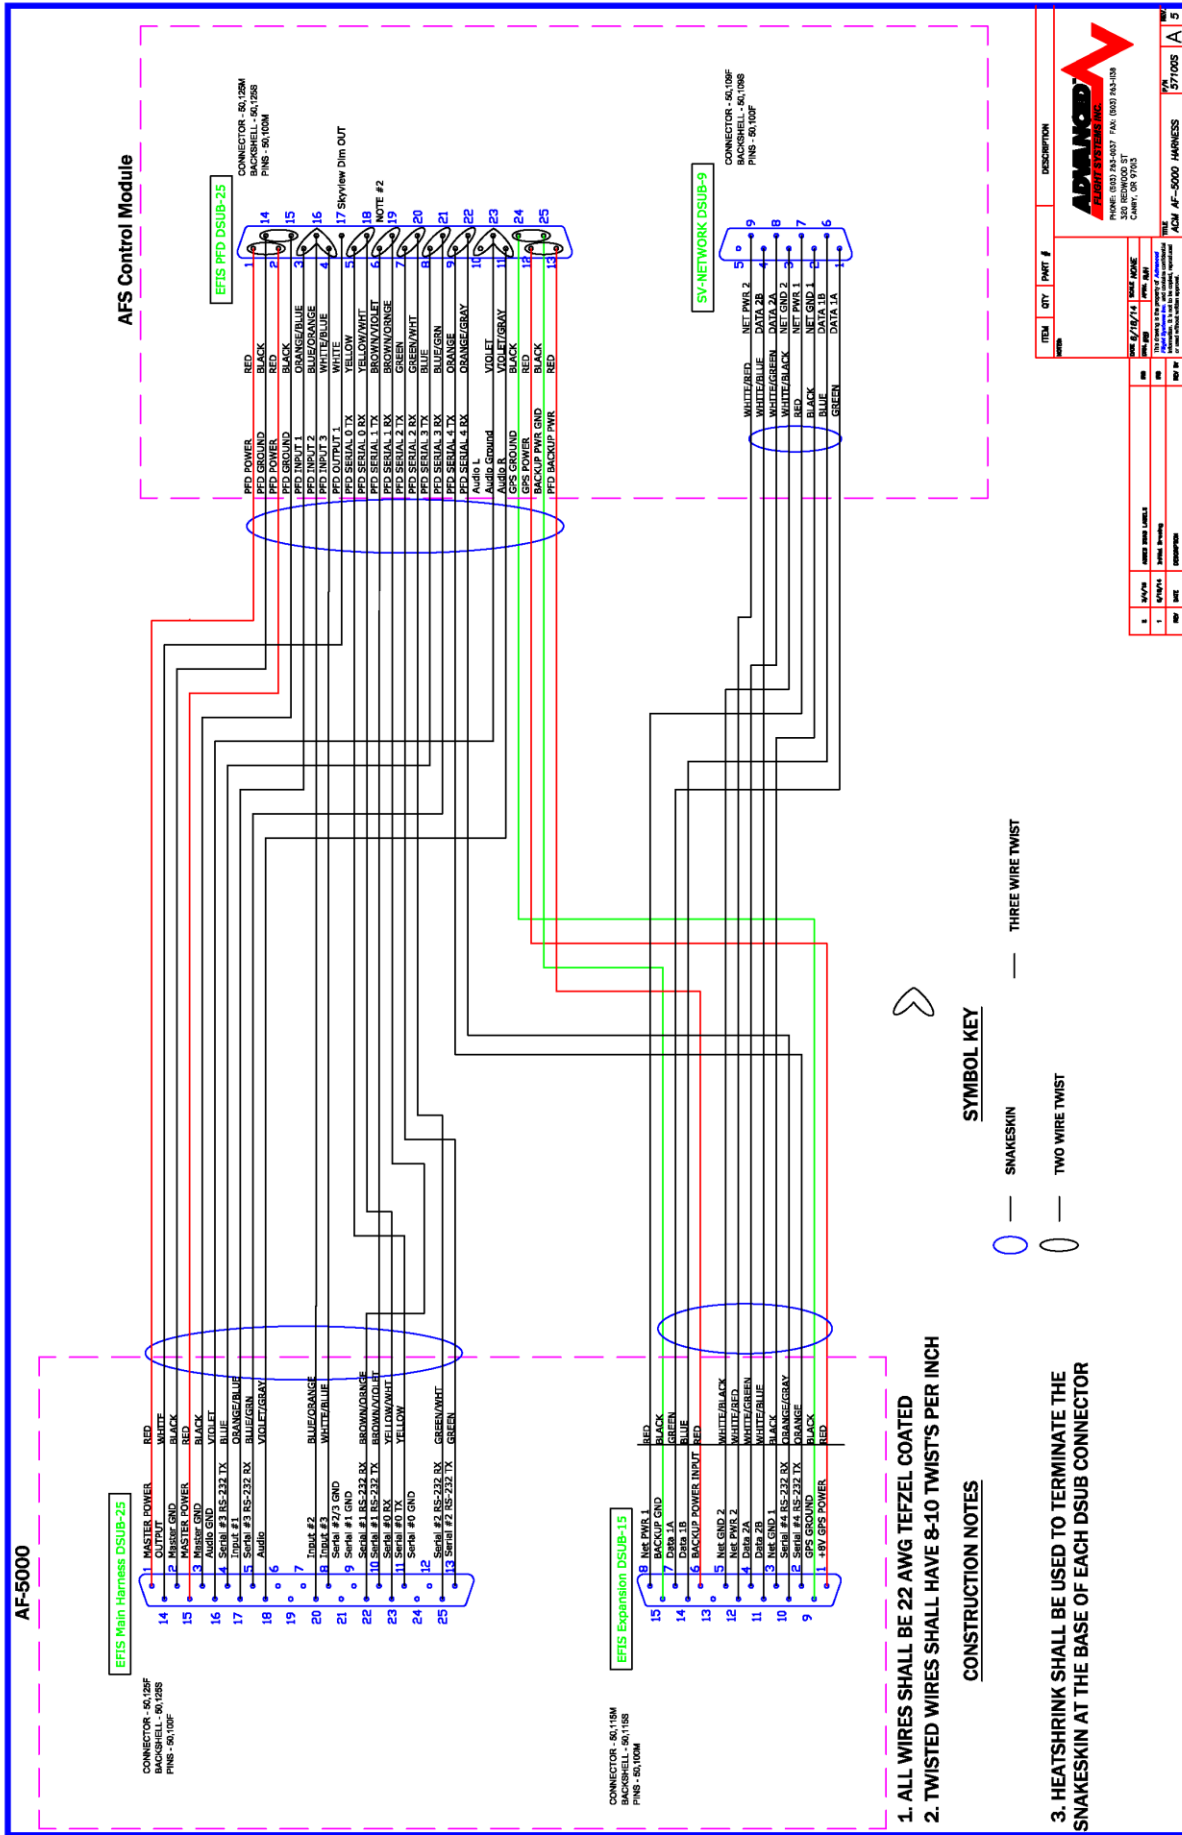

ADVANCED
ACM PANELS & HARNESS

PHONE: 800.343.4437 FAX: 503.764.0128
330 REDWOOD ST
CAMAS, OR 97103


ITEM QTY PART # DESCRIPTION

1	1	57100 AF-5000	HARNESS
---	---	---------------	---------


REV 1 DATE 07/19/14


DESIGNED BY: J. J. JONES
CHECKED BY: J. J. JONES
APPROVED BY: J. J. JONES


371005 A 5

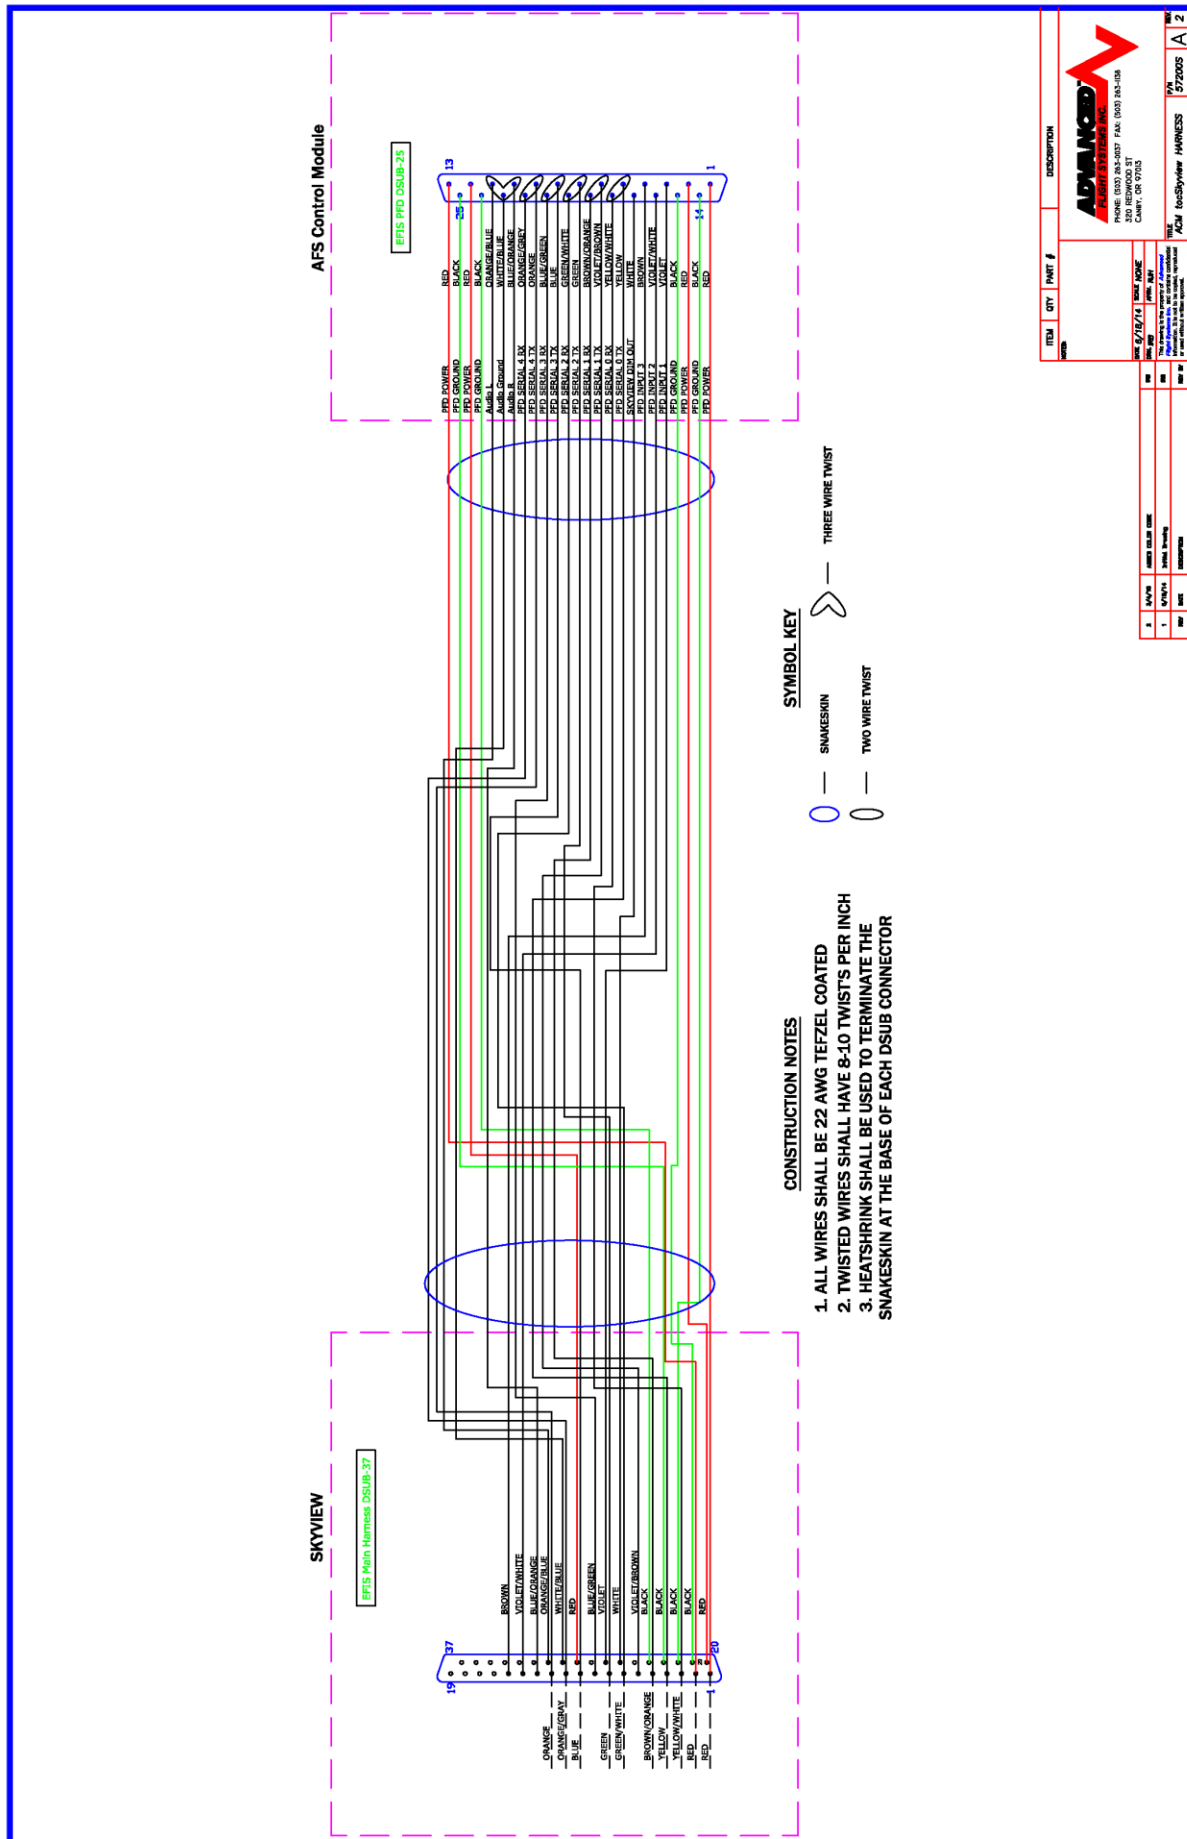


REV	DATE	BY	CHKD	DESCRIPTION
1	8/19/14	JAC	JKM	NEW PARTS LIST
2				REVISED PARTS LIST

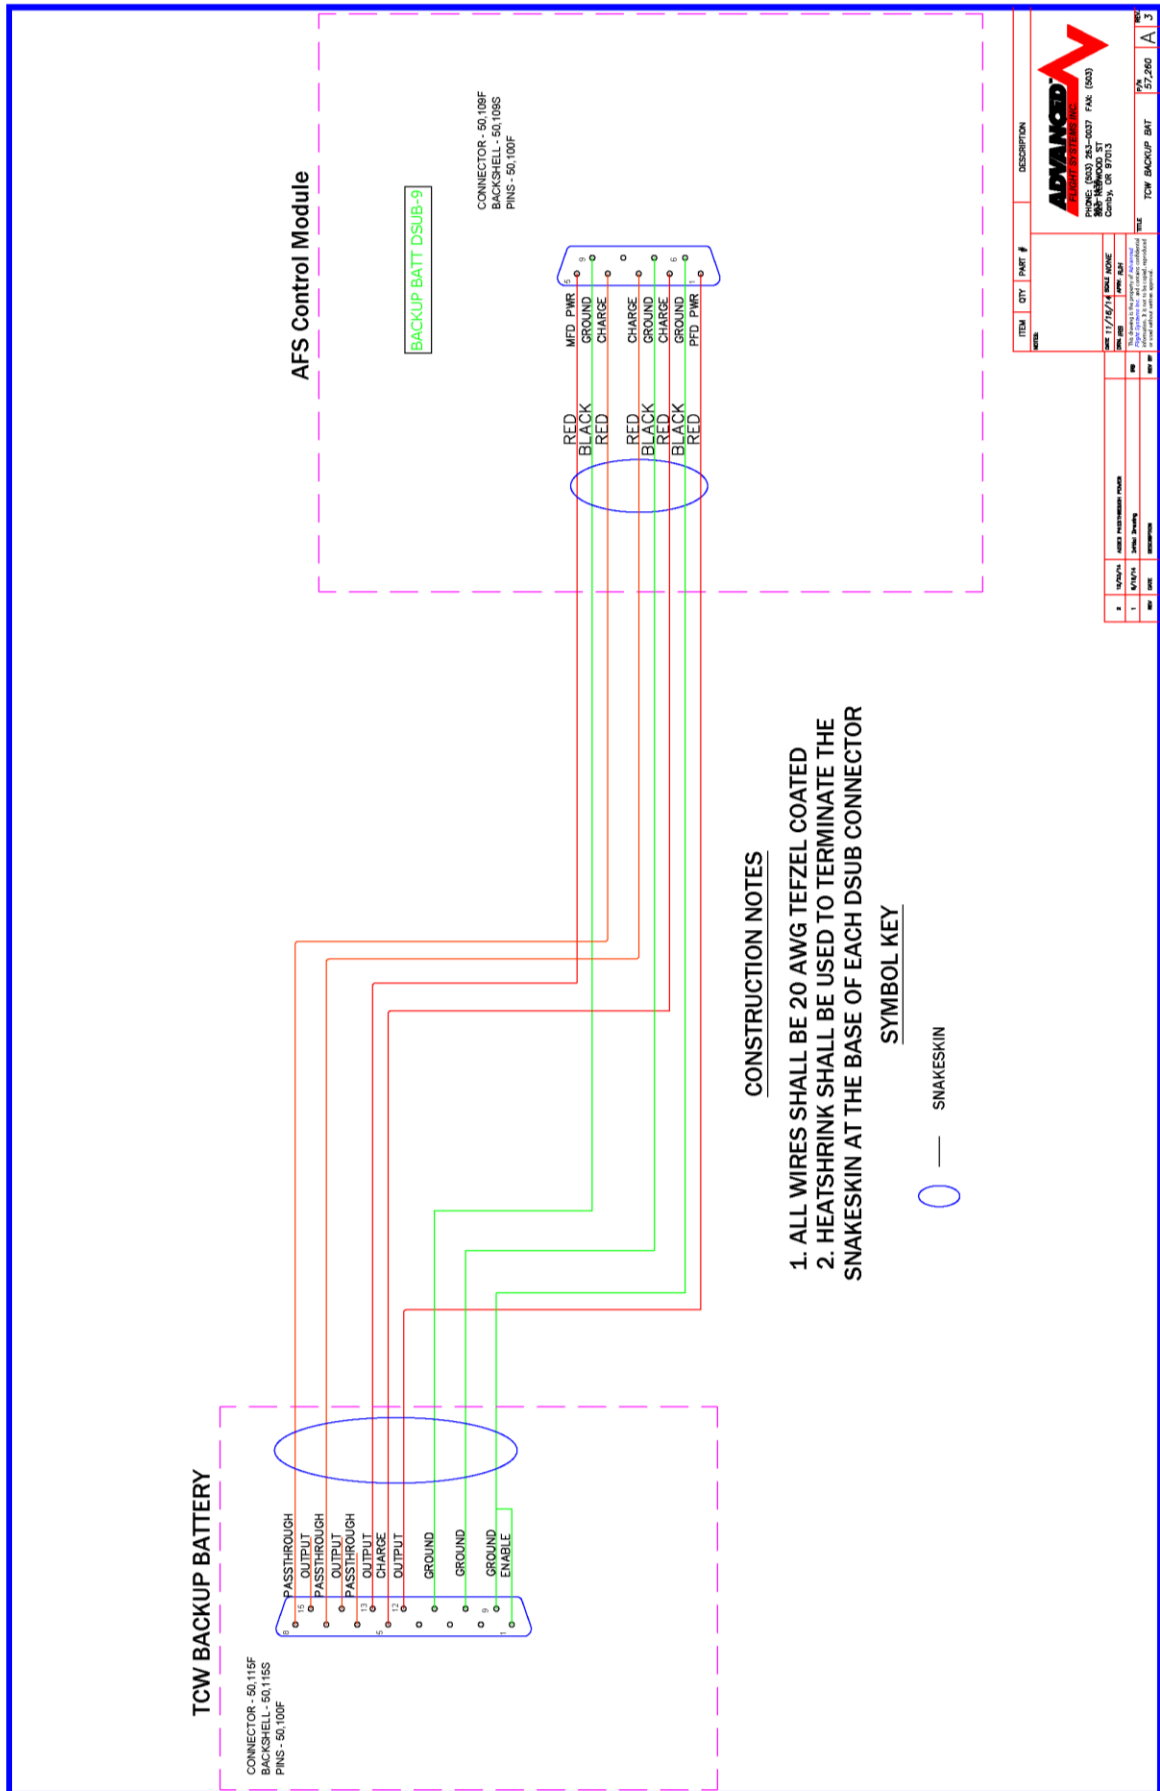

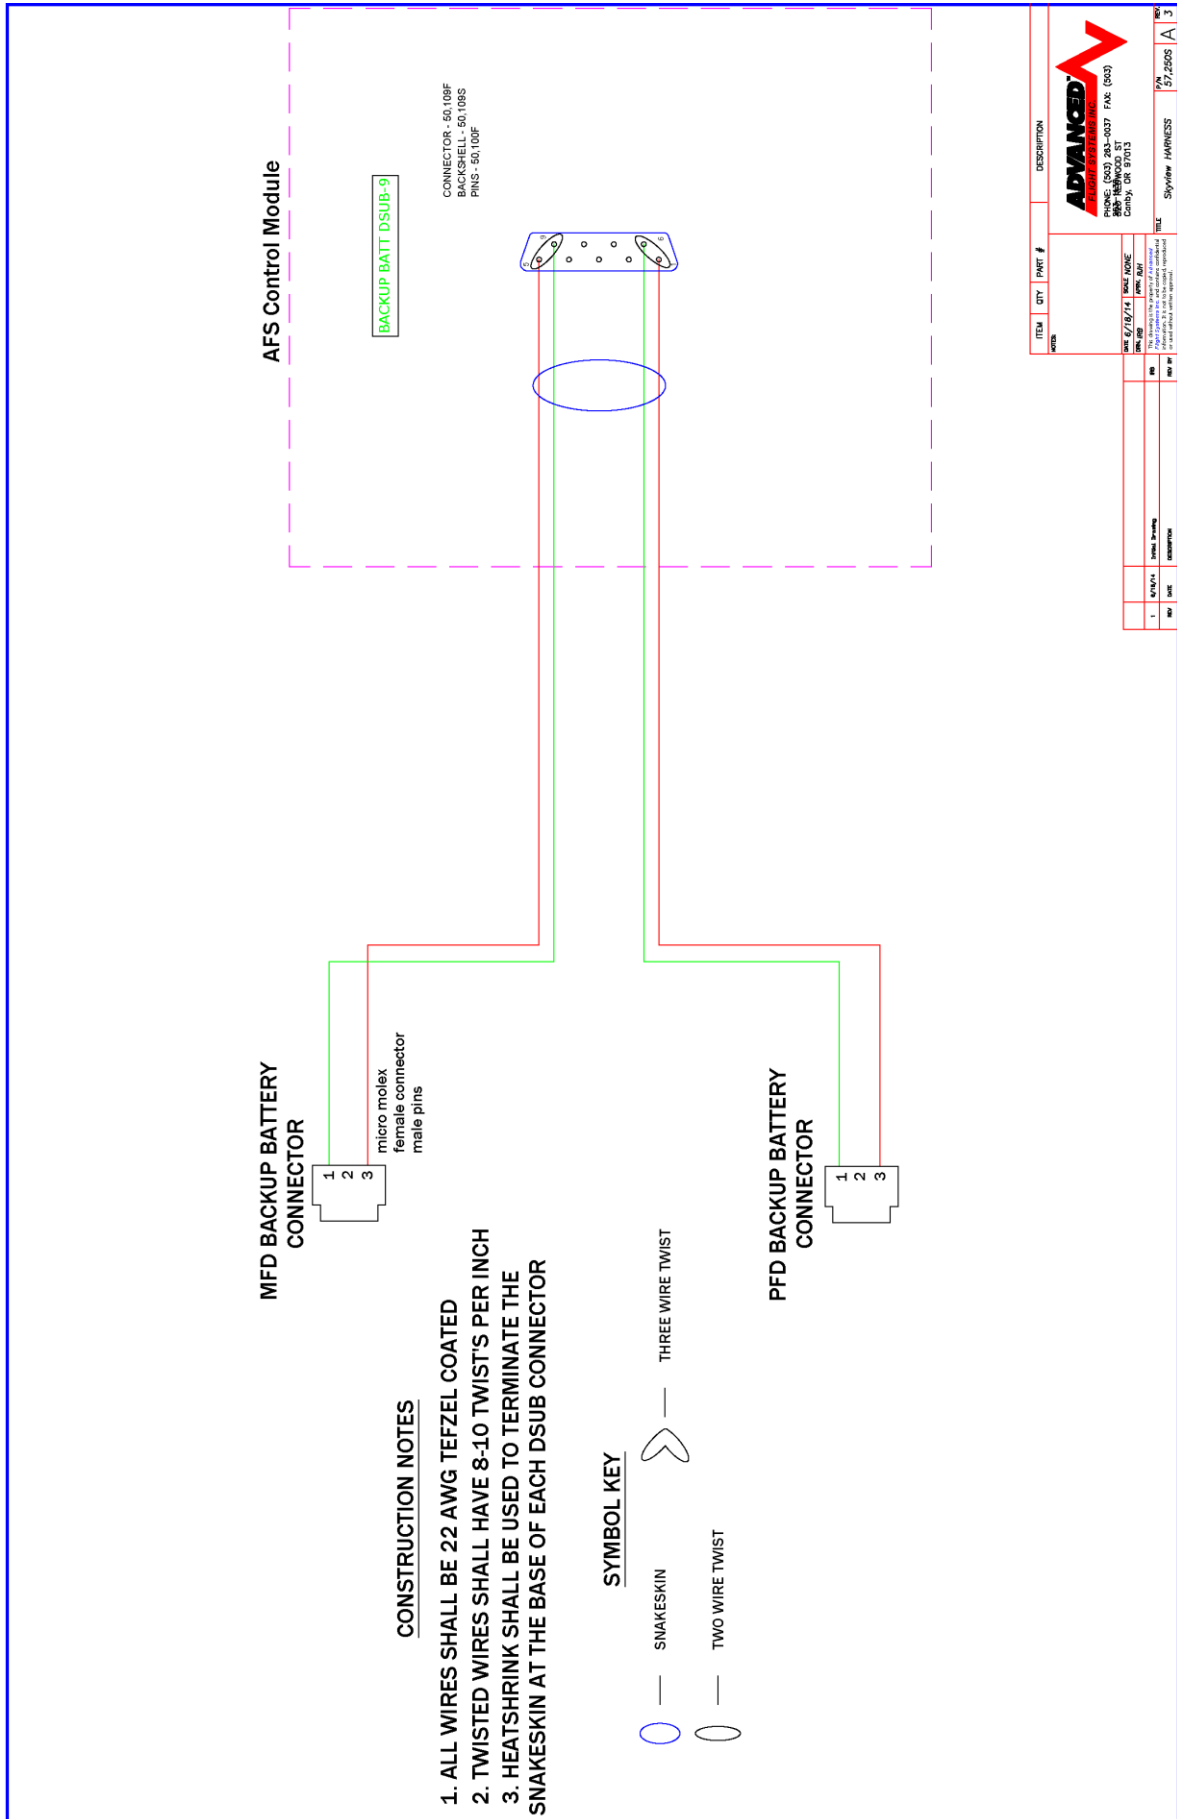

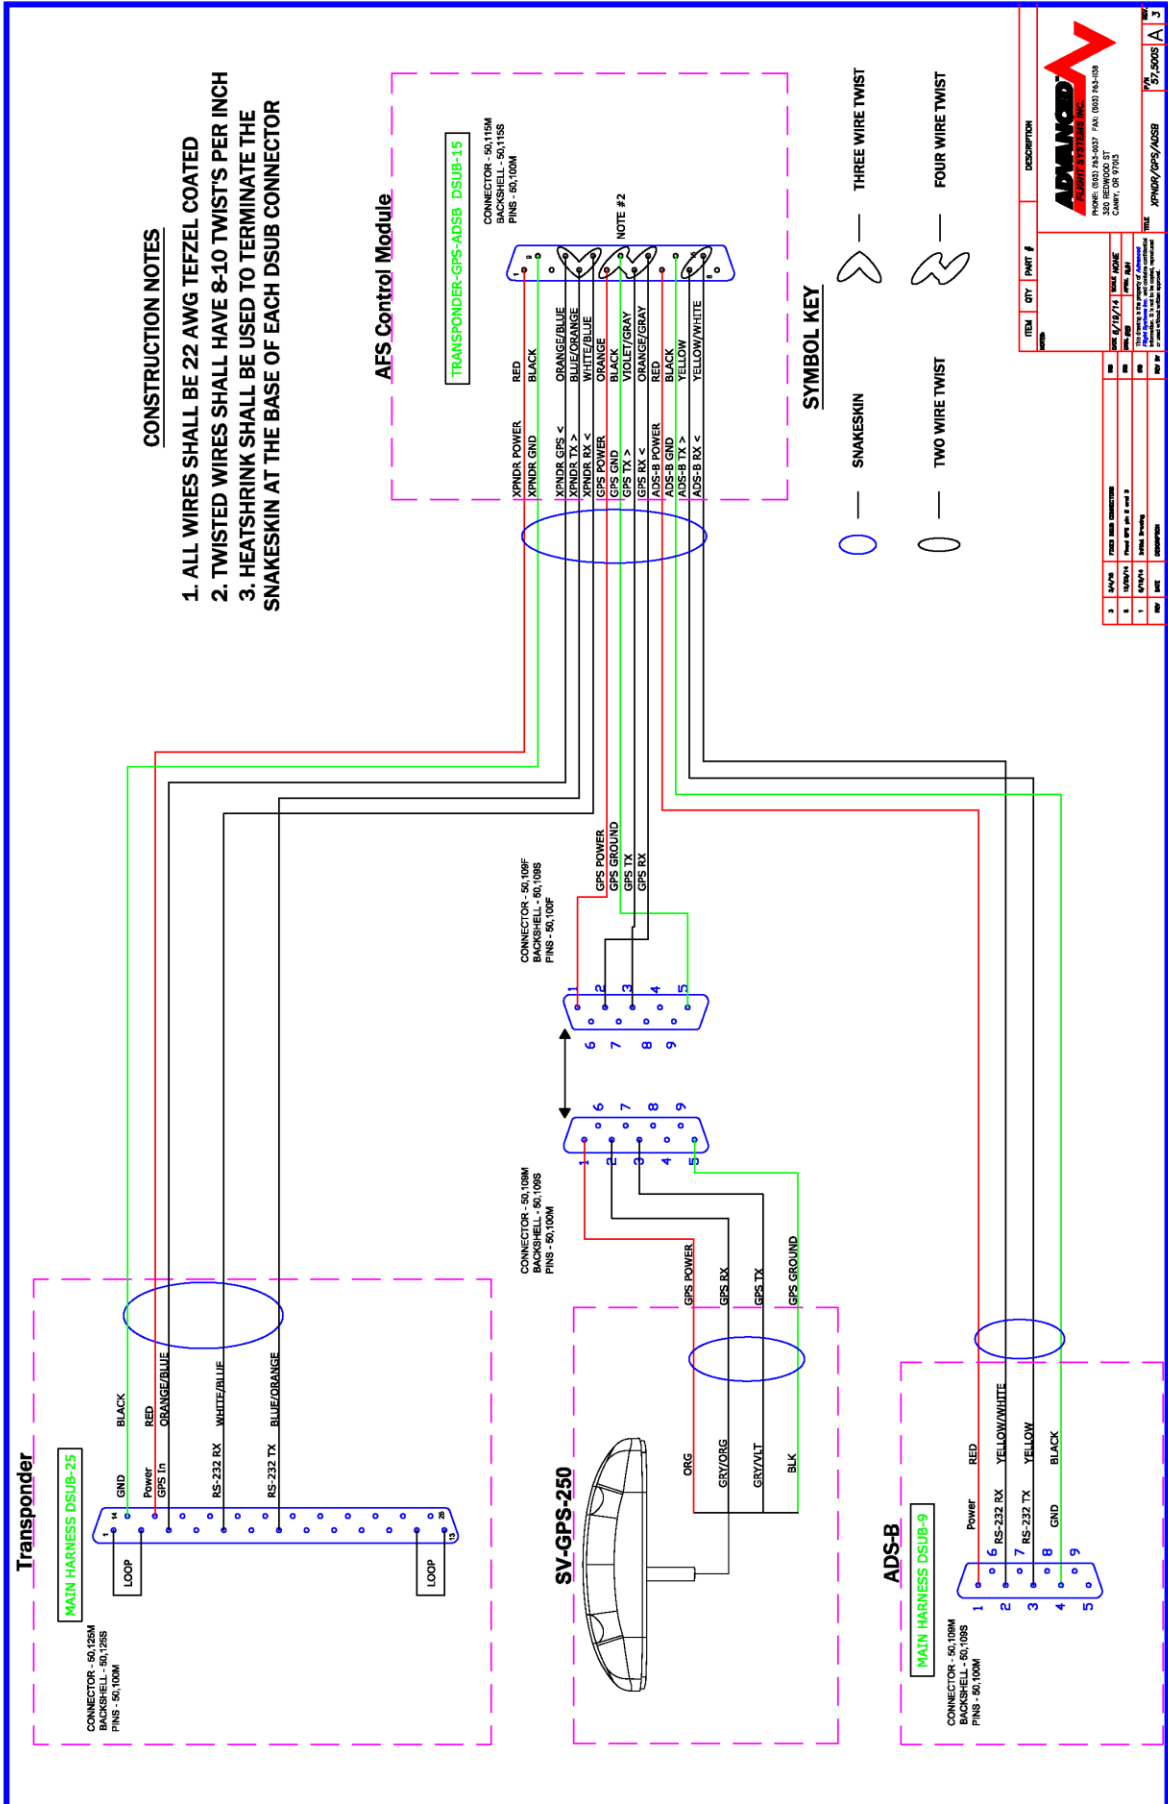

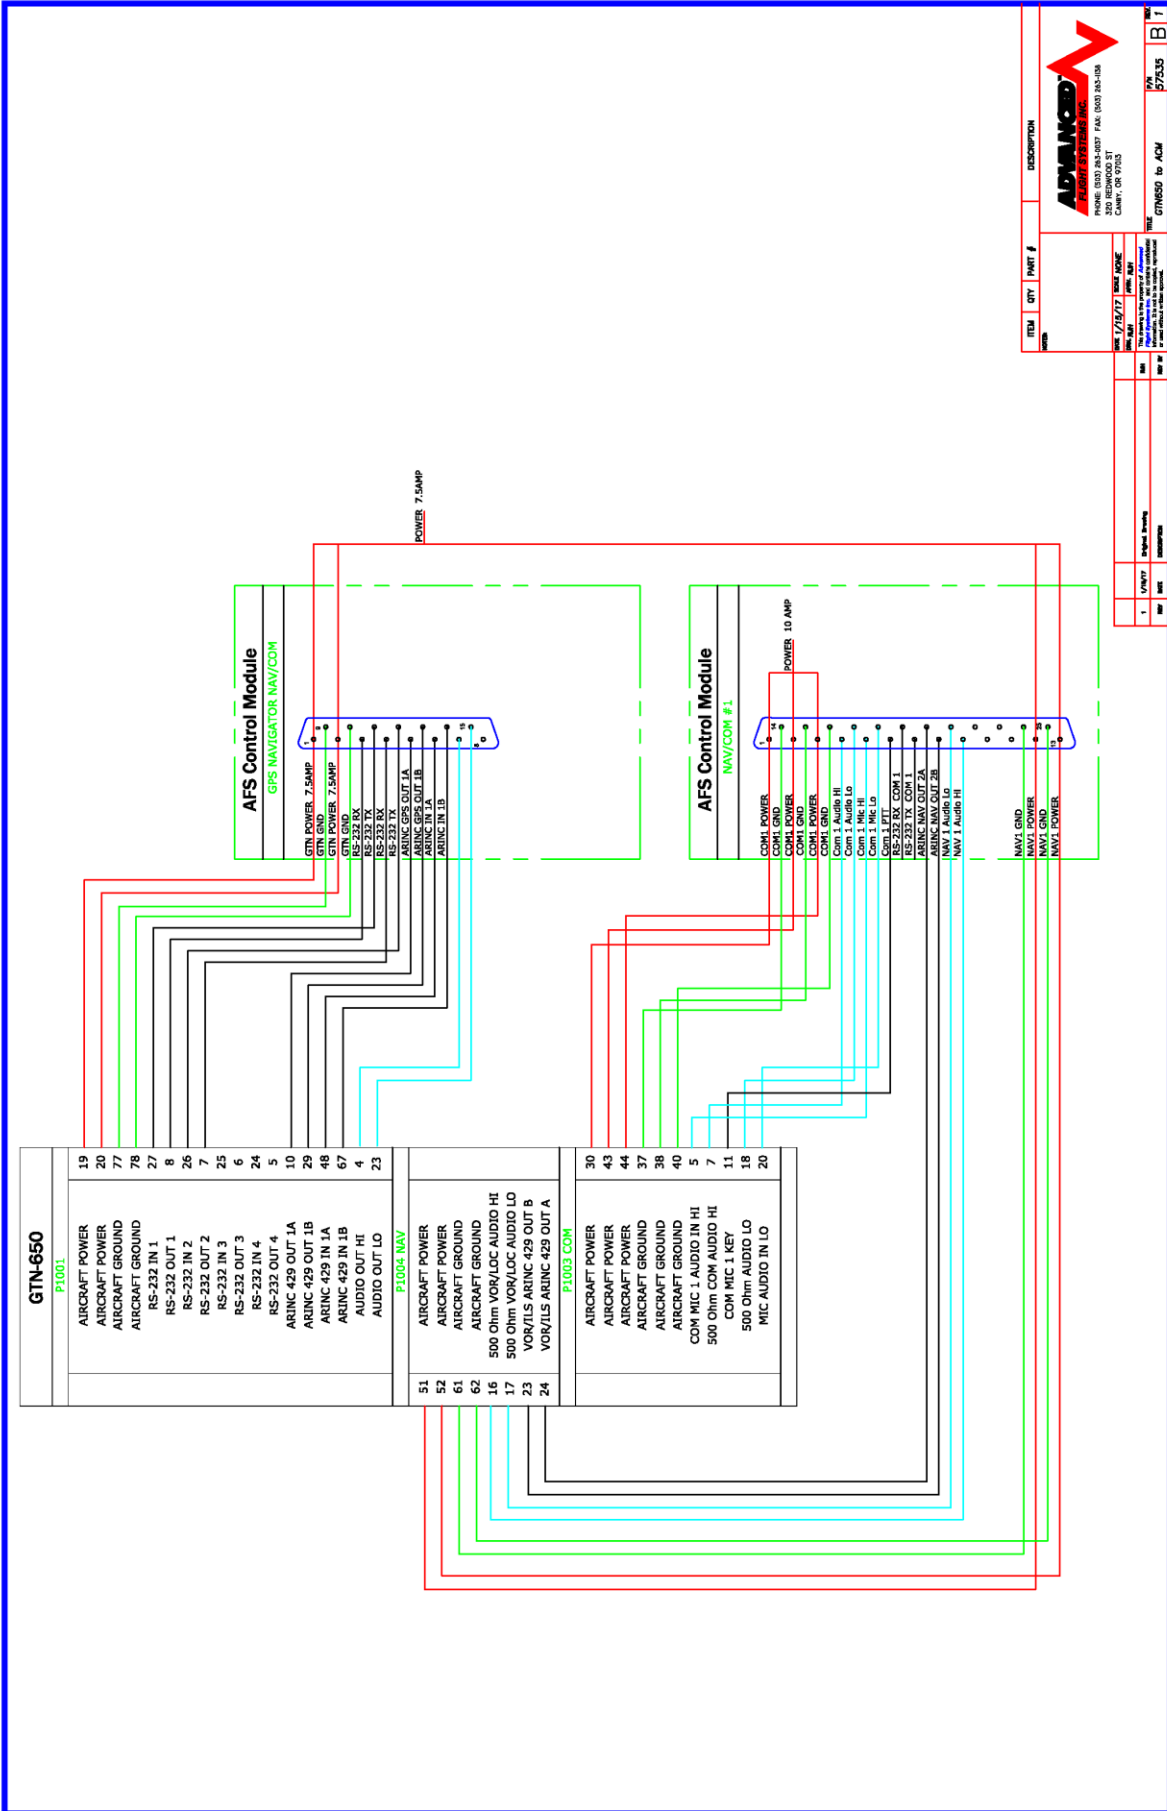


ITEM	QTY	PART #	DESCRIPTION
1	1	57535	GTN650 to ACM



PHONE (330) 242-5027 FAX (330) 242-5028
 10000 W. STATE ROAD 10
 CANNON, OR 97023

REV	DATE	DESCRIPTION
1	1/19/17	Original Drawing

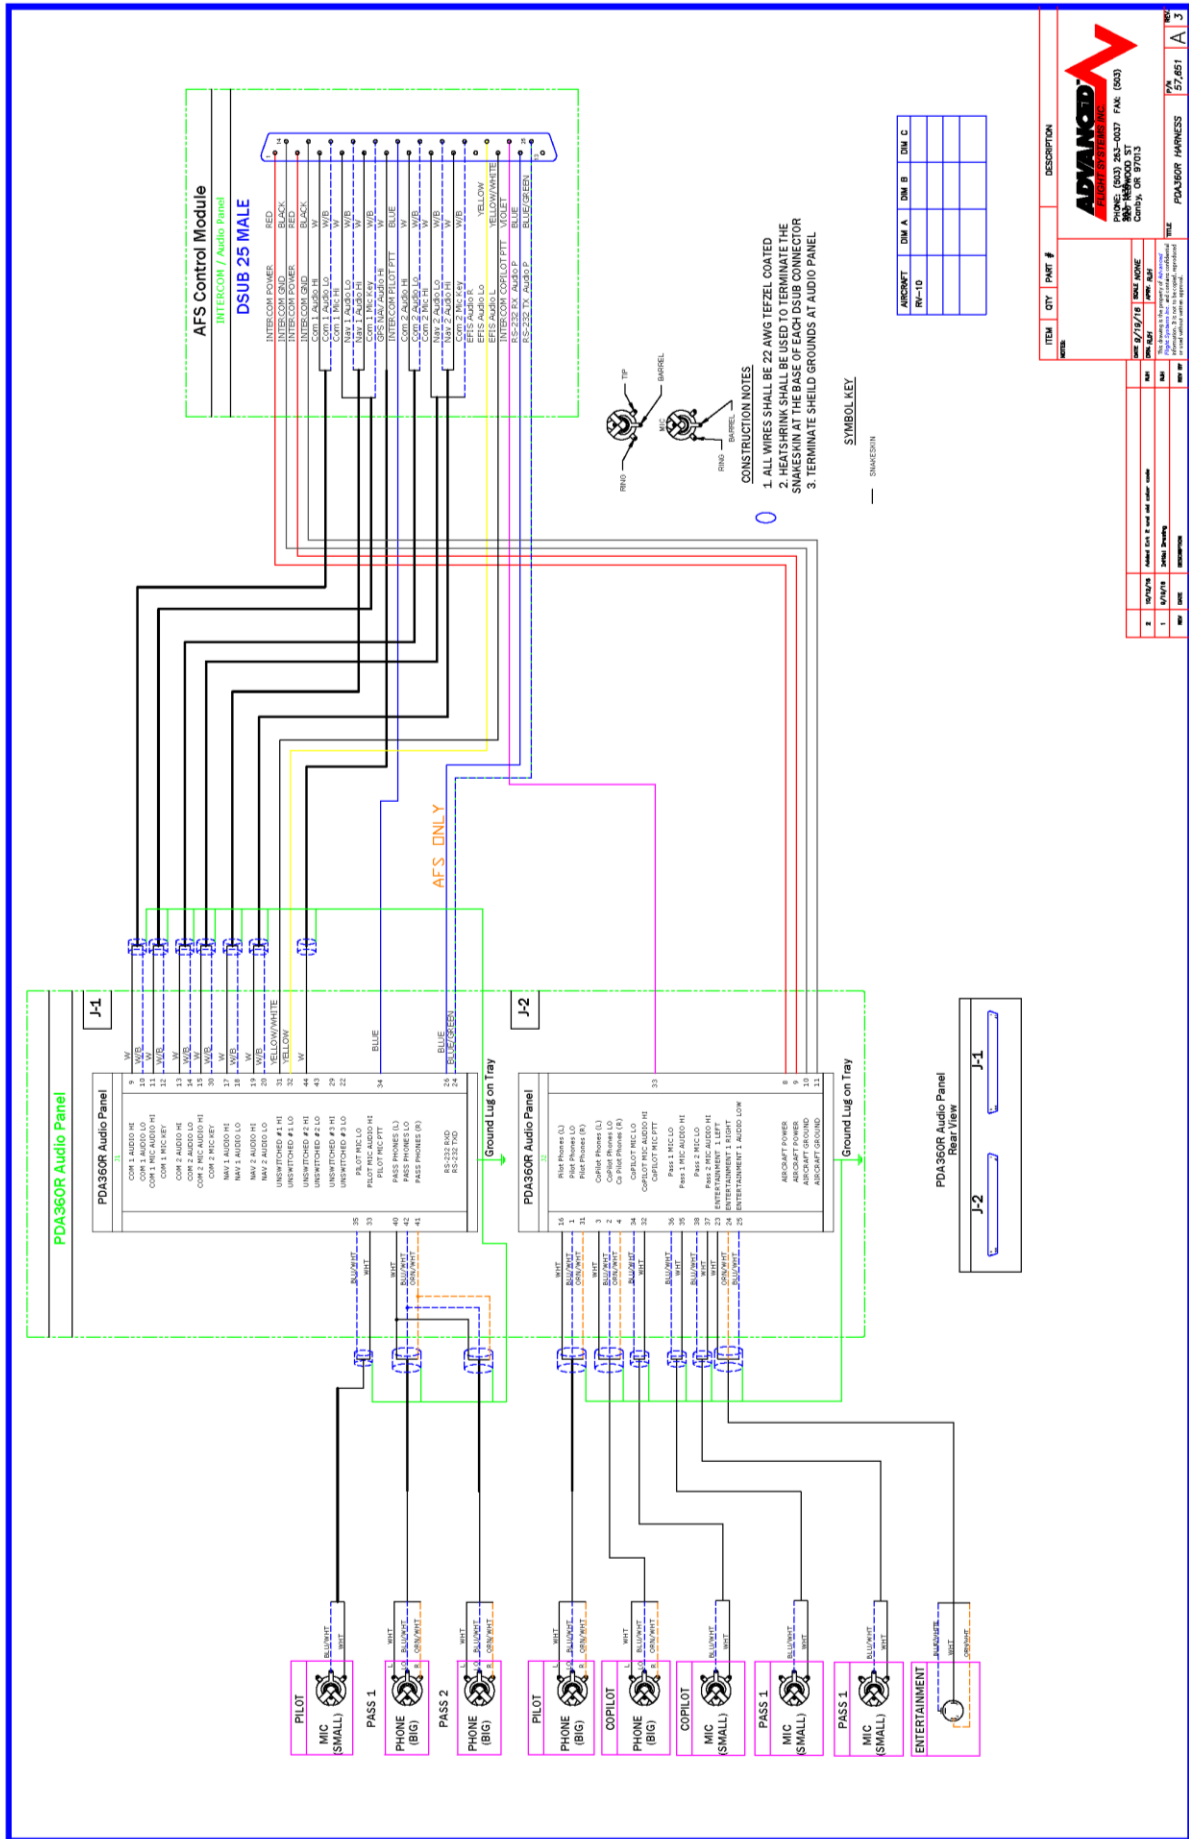


ITEM	QTY	PART #	DESCRIPTION
1	1	57651	PDA-360 AUDIO PANEL HARNESS


REV: 1
DATE: 9/19/18
DRAWN: [Name]
CHECKED: [Name]
APPROVED: [Name]


ADVANCED ACME SYSTEMS INC.
PHONES: (800) 261-0007 FAX: (800) 261-0008
WWW.ACMESYSTEMS.COM
COLUMBIA, SC 29703

REV: 1
DATE: 9/19/18
DRAWN: [Name]
CHECKED: [Name]
APPROVED: [Name]

REV: 1
DATE: 9/19/18
DRAWN: [Name]
CHECKED: [Name]
APPROVED: [Name]

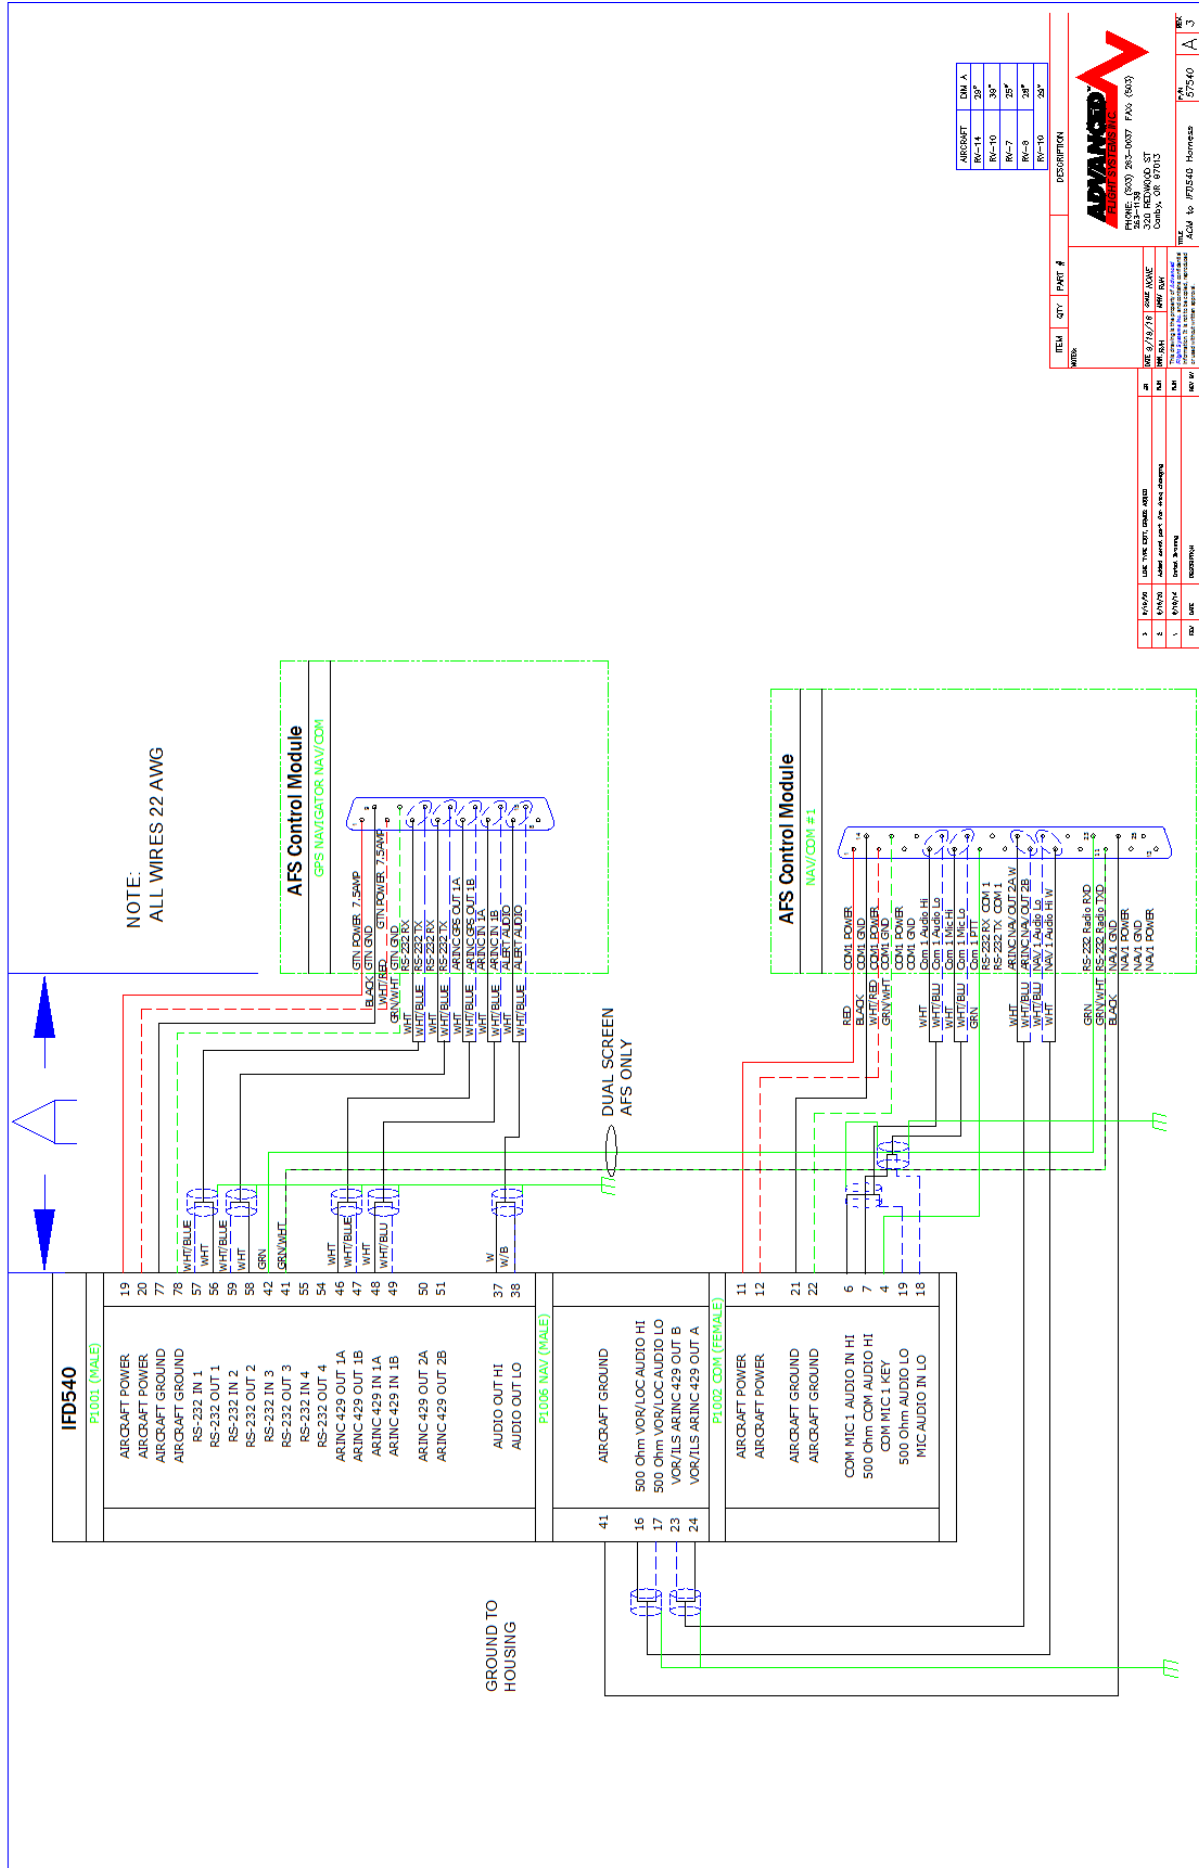

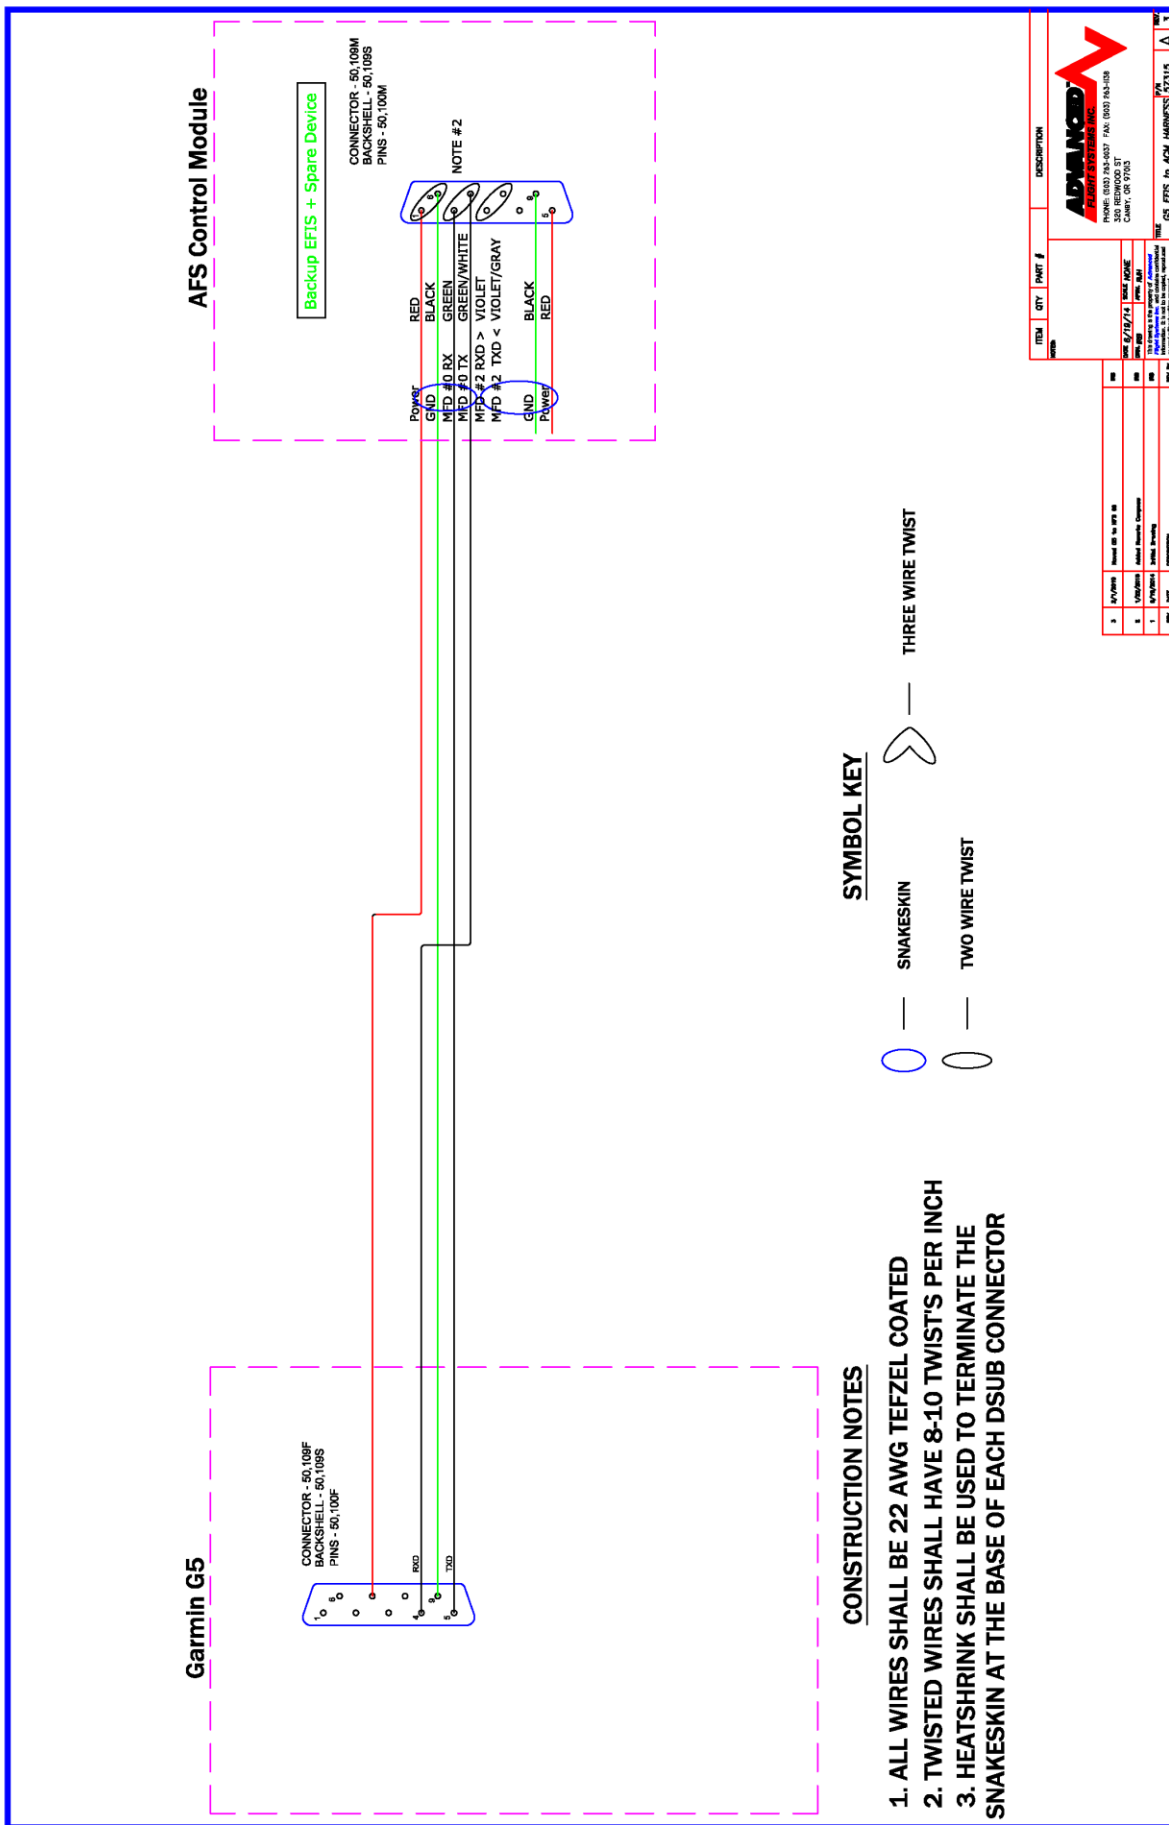

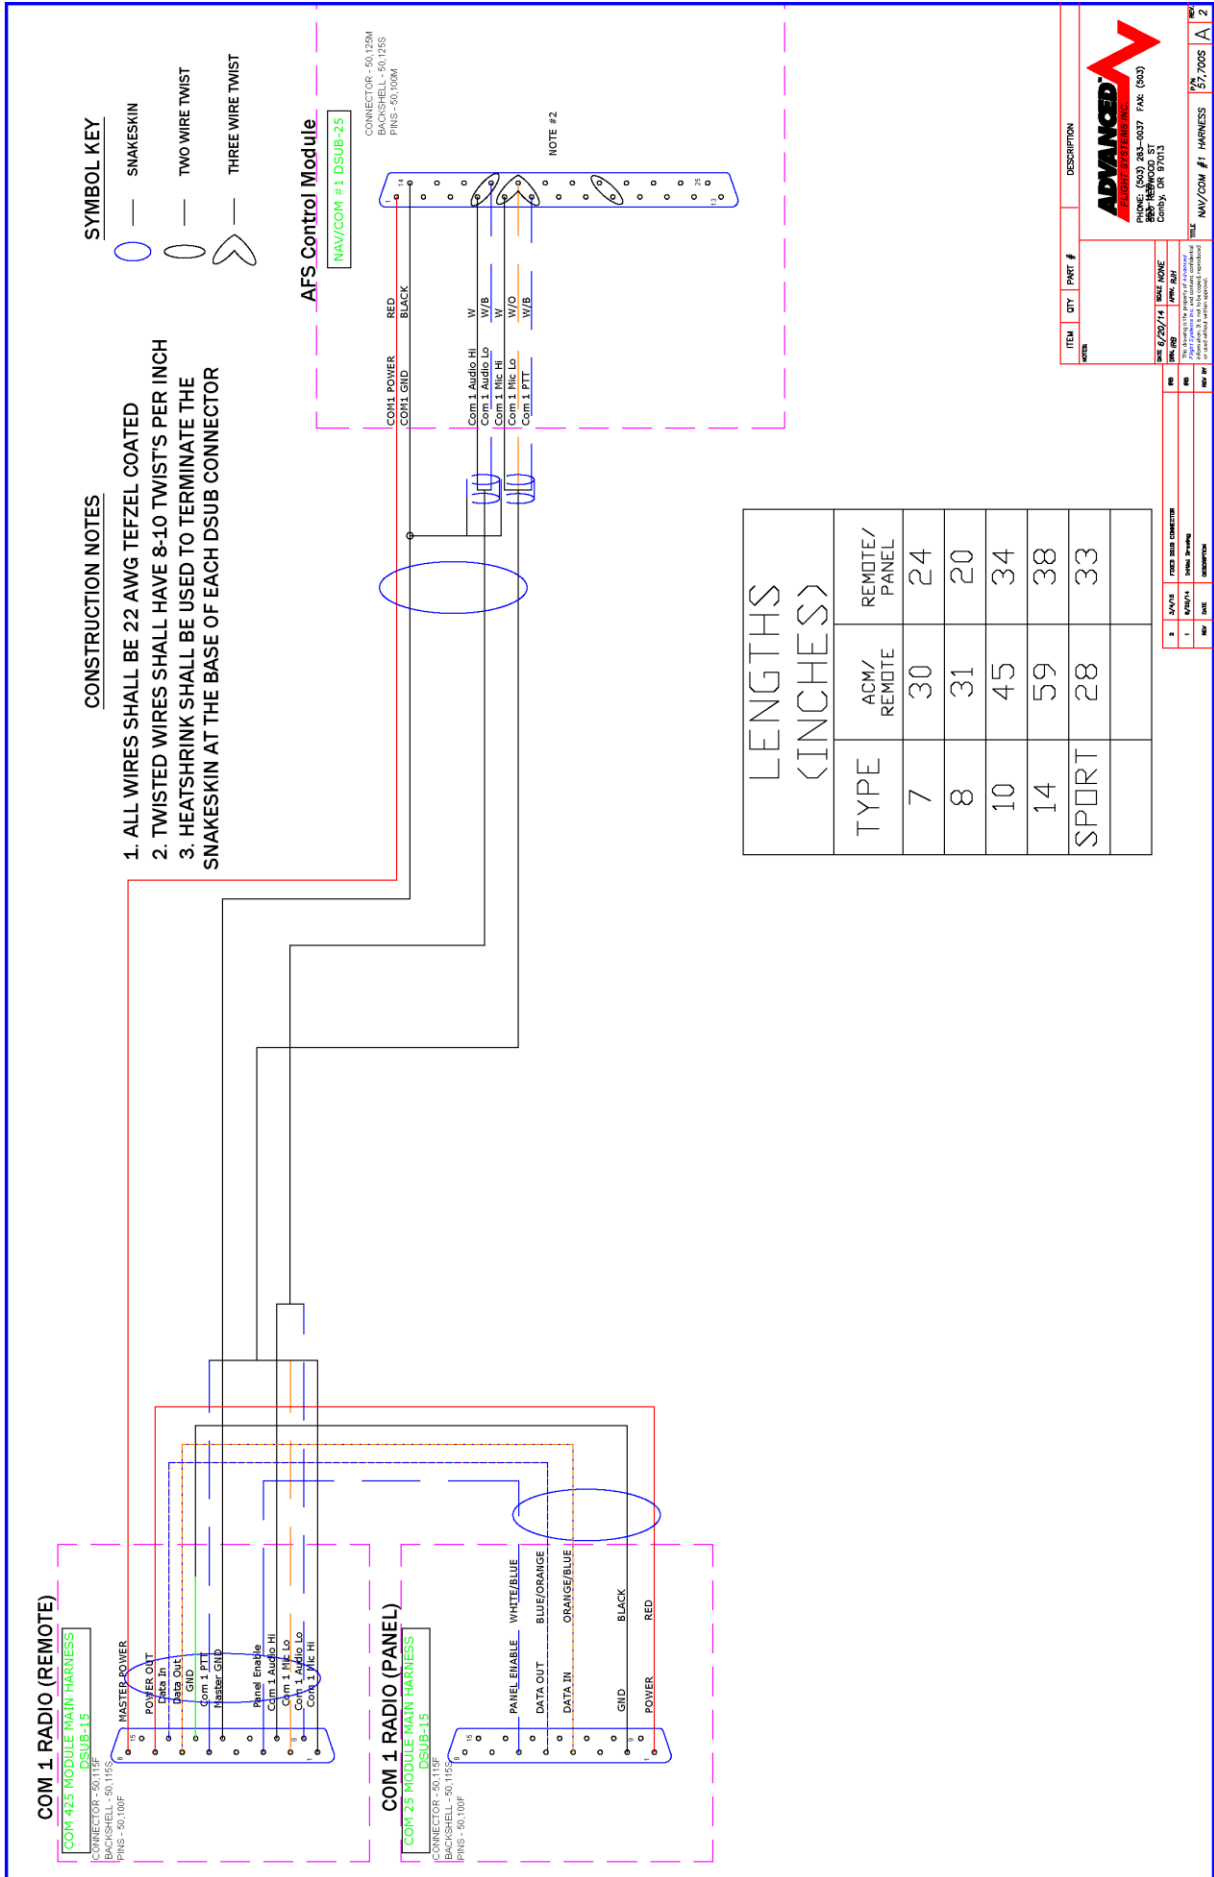



ADVANCED ELECTRONICS, INC.
 PHONE: (303) 261-0037 FAX: (303) 261-1600
 8801 HENWOOD ST
 COMEY, CO, 80103

ITEM QTY PART # DESCRIPTION

DATE 6/25/14 MAKE MAKE
 BY JMS/MSK
 CHK JMS/MSK
 The standard for this drawing is as shown. If there are any changes to this drawing, they must be made by a revision. If there are any changes to this drawing, they must be made by a revision.

NAV/COM #1 HARNESS \$7,700S A 2

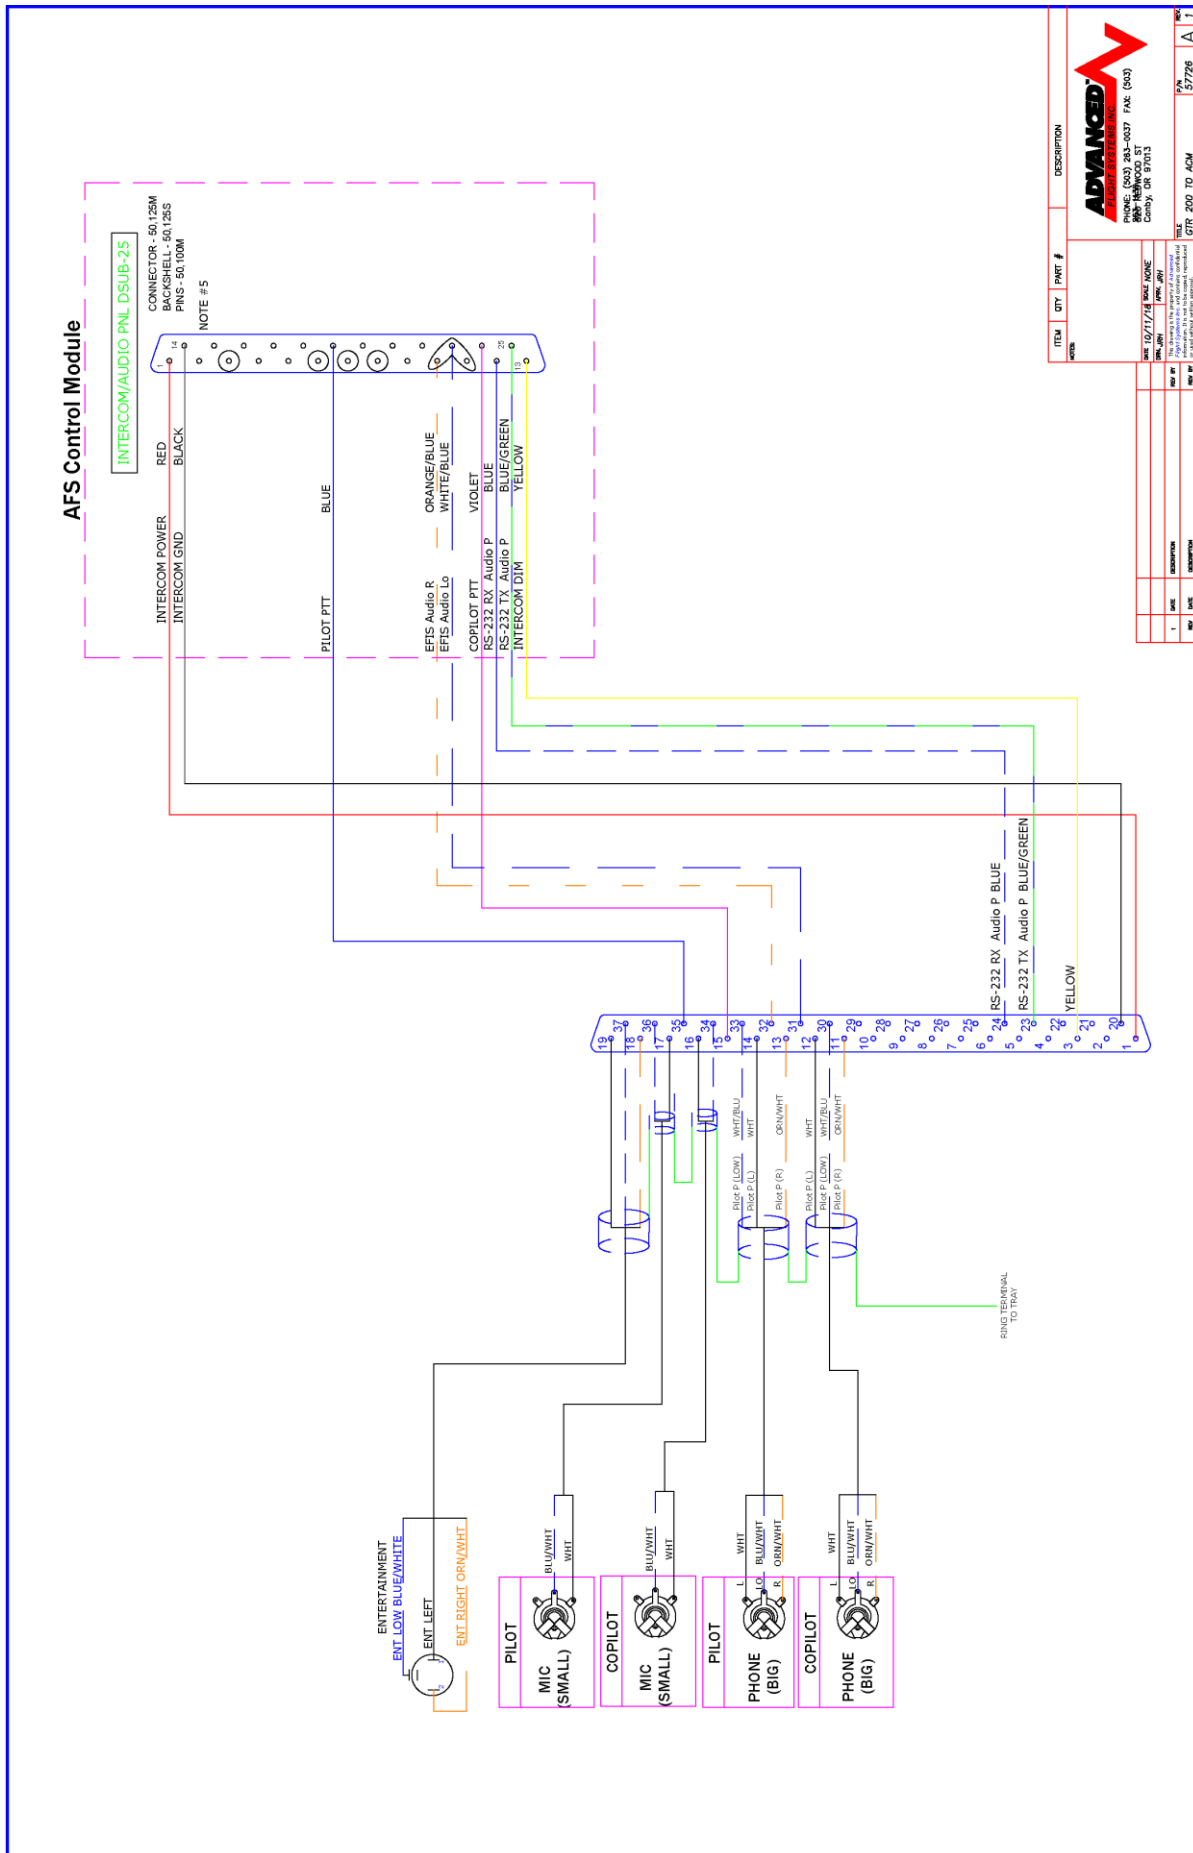

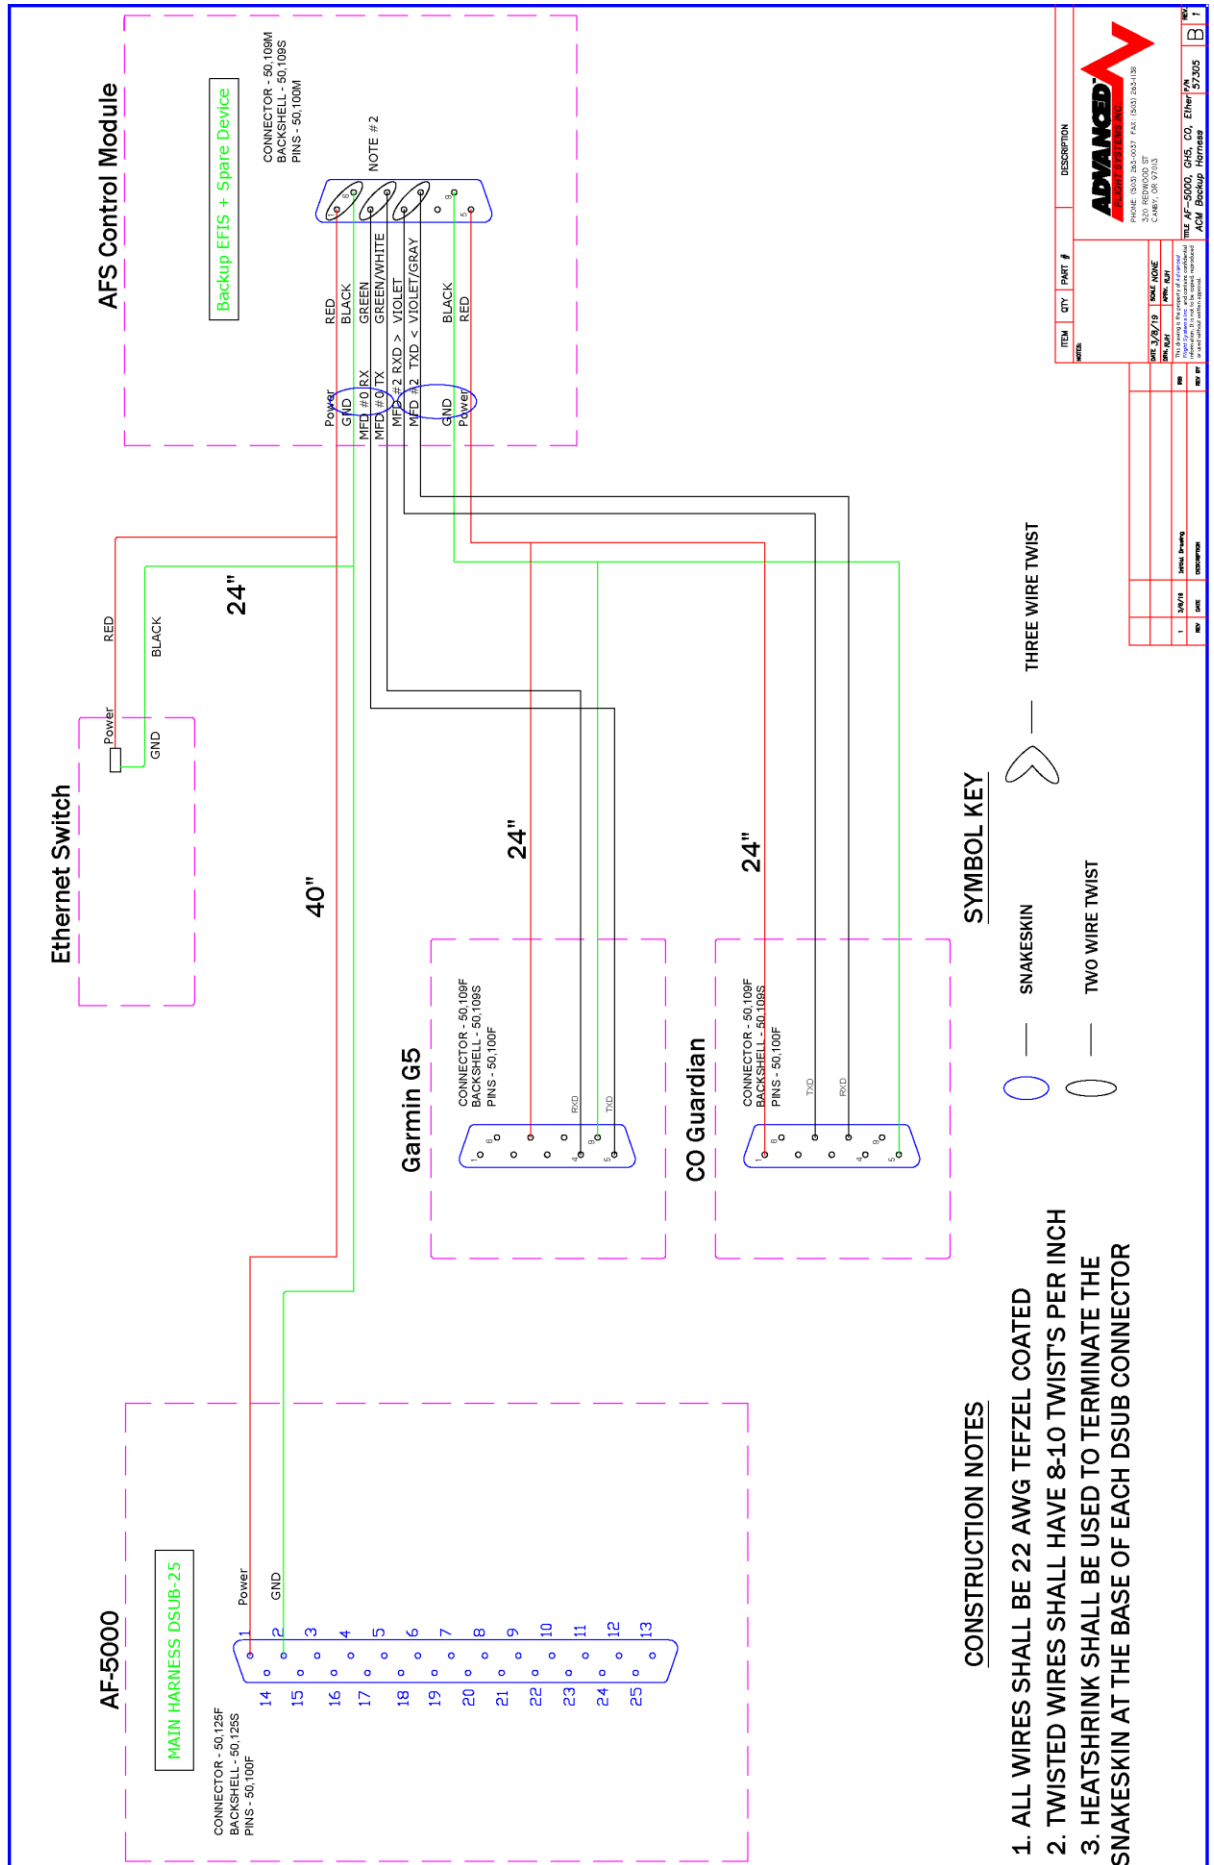

B & C Alternators


B & C sells two different linear regulators for a 12V system:

- LR3C14** Main Alternator Regulator designed to turn on with the panel mounted ALT switch. Can be used as the backup alternator regulator with an ALT2 panel switch.

- SB1B14** Backup Alternator Regulator designed to automatically turn on when the buss voltage drops below 13 volts. The S1B14 does not use a backup alternator switch on the panel. The SB1B14 has a warning line that can be connected to an EFIS input. The warning line will pull to ground when the backup alternator field is turned on and the backup alternator is being used. If the backup alternator is outputting more than 20amps the warning line will flash at 2hz.


If you are upgrading from an ACM-FUSE to ACM-ECB you will need to do the following:

1. Remove all connectors from the ACM
2. Unbolt power and ground harnesses from ACM red and black posts.
3. Remove ACM module mounting screws and remove ACM from aircraft
4. Install the new ACM module in aircraft using the 4 mounting screws
5. Install power and ground harnesses to the red and black ACM posts - **DO NOT OVERTORQUE THE POST NUTS, THEY ARE BRASS AND WILL BREAK IF OVERTORQUED.**
6. Install ACM Harness connectors. Verify that you are connecting them to the correct location.
7. Turn ON the AUTOPILOT panel switch
8. Turn ON the MASTER switch
9. Turn ON the AVIONICS switch.
10. From the EFIS PFD go into the Calibration Advanced SV-NETWORK page
SET > CAL > 2. Advanced SV-Network
11. Press SCAN
12. Press UPDATE is any item is **RED**
13. On the EFIS PFD and MFD change the Electrical setting from ACM to ACM-ECB
14. Reconfigure the Flap positions
15. Verify the Circuit Breaker sizes from the **CHECK > ELEC** menu.

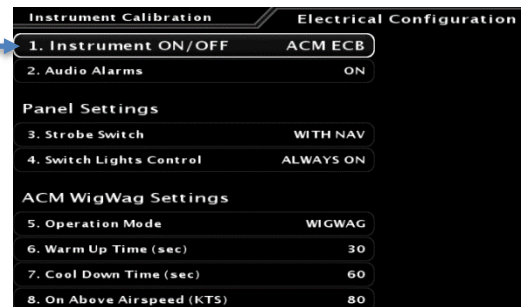

Changing a SV-COM Radio

1. Remove all connectors from the SV-COM
2. Replace the SV-COM
3. Install ACM Harness connectors. Verify that you are connecting them to the correct location.
4. Turn ON the AUTOPILOT panel switch
5. Turn ON the MASTER switch
6. Turn ON the AVIONICS switch.
7. From the EFIS PFD go into the Calibration Advanced SV-NETWORK page
SET > CAL > 2. Advanced SV-Network
8. Press SCAN
9. Press UPDATE if any item is **RED**
10. On the **EFIS PFD and MFD** select the new Primary SN for the new SV-COM

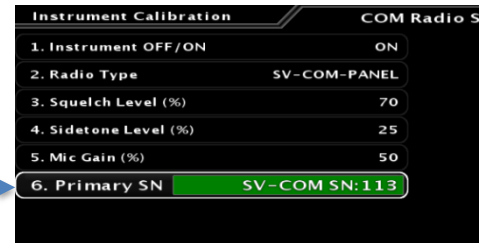

AF-5000 EFIS Messages

The **EFIS Status Message Bar** can display a number of Status or Warning messages from connected components.

EFIS Messages



ACM Messages

ALARM

ELEC COM

ELEC OFFLINE

GTR/GNC

COM NEEDS SERVICE

PUSH-TO-TALK KEY STUCK

COM TX POWER LIMITED

COM LOCKED TO 121.500 MHZ

GNC-255

VLOC NEEDS SERVICE

GLIDE SLOPE NEEDS SERVICE

NAV REMOTE TRANSFER STUCK

Autopilot

CWS ACTIVE / RELEASE WHEN READY

AP ENGAGE ARMED / RELEASE WHEN READY

AUTOPILOT / MIN SPEED

AUTOPILOT / MAX SPEED

AP SERVOS NOT FOUND / TOUCH TO SCAN

AP SERVO CAL REQD / TOUCH TO BEGIN

AP SERVO TEST REQD / TOUCH TO BEGIN

ADAHRS

USING AHRS:# /

SV-ADAHRS

XBOW500-AHRS

XBOW525-AHRS

AFS-AHRS

FSX-AHRS

DEMO-AHRS

VN200-AHRS

D6/10/100-AHRS

GARMIN-G5

MAGNETOMETER /

ERROR

TOUCH TO CALIBRATE

CALIBRATION

WARNING: /

AHRS MISMATCH

AHRS 1 OFFLINE

AHRS 2 OFFLINE

BACKUP EFIS OFFLINE

AHRS AIDING FAIL

AHRS AIDING OFF

Landing Gear

GEAR: UP

GEAR: DOWN

GEAR: TRANS

GEAR: ERROR

OVERSPEED

RAISE GEAR

POSN SWITCH

RUNWAY

WATER

Misc

TOUCH TO VERIFY / EMERGENCY SETTINGS

PLEASE VERIFY / EMERGENCY SETTINGS

GPS OFFLINE

GNAV1
GNAV2
GNAV3
GPS1
GPS2
GPS3
GPS INTEGRITY
GNAV1
GNAV2
GNAV3
GPS1
GPS2
GPS3
HIGH RES TERRAIN / NOT FOUND
AOA CAL /
FLAPS UP, CP: ***
FLAPS DN, CP: ***
SAVING SCREENSHOT <name> /
PLEASE WAIT
OUT-OF-MEMORY
HW ERROR DETECTED / PLEASE CONTACT AFS
MAINTENANCE DUE / TOUCH TO UPDATE
ON BATTERY / ## VOLTS
SD CARD / READY
SD CARD / NOT FOUND
USB MEDIA / READY
PLAYBACK MODE ACTIVE / DO NOT OPERATE AIRCRAFT
WARNING: INSUFFICIENT MEMORY / PLEASE CONTACT AFS_SUPPORT
CO Detector
CO-DETECT /
OFFLINE
CHECK BIO DATA
CABIN ALTITUDE ### FEET
CABIN ALTITUDE ### METERS
CO LEVEL ## PPM
SPO2 ##%
HR: ## BPM

Flight Planning

VERTICAL TRANSITION /
CLIMB TO ### IN ## SEC
DESCEND TO ### IN ## SEC
LEVEL AT ### ## IN ## SEC
LATERAL TRANSITION / TURN TO HDG: ### IN ## SEC
SET ILS / INBOUND COURSE
CROSSING FL180 BARO / SET TO STD
ADJUST ALTITUDE BUG / AT OR BELOW ##

Transponder

TRANSPONDER /
UPGRADE AVAILABLE
TX RESTART
DPSK UNLOCK
RX PSU FAIL
RX FAULT3
RX FAULT4
SYTH UNLOCK
TX FAULT2
ANT FAULT (#W)
TX LOW PWR (#W)
TX PSU HI (#V)
TX PSU LO (#V)
SQTR FAIL
REMOTE HOT (#C)
NO ADSB POS
GENERIC FAULT
TRANSPONDER UPGRADE: #% / DO NOT REMOVE POWER
UPGRADE FAILED / CONTACT AFS FOR SUPPORT
UPGRADE COMPLETE / CYCLE POWER TO TRANSPONDER
COPYING FILE #%
ERROR COPY FILE / *filename*
COPY FILE DONE
WRITING FILE
TRAFFIC AUDIO / ENABLED

TRAFFIC AUDIO / DISABLED

SV NETWORK / TOUCH TO UPDATE

SV NETWORK / NEEDS UPDATE

Audio Panel

CALL FROM: # / TOUCH TO ANSWER

CALL TIME: ##:##

TOUCH TO HANG UP

CALL ENDED

Engine Alarms

ALARM /

ALTITUDE

AOA

AIRSPPEED

BAT VOLTS

MAIN VOLTS

OAT

AUX VOLTS

VERTSPEED

FUEL_COMP

RPM

MANIFOLD

FUEL PSI

FUEL FLOW

AMPS

OIL PSI

OIL TEMP

CARB TEMP

TANK 1-4

ELEV TRIM

AIL TRIM

FLAP ANG

EGT 1-6

TIT 1-2

CHT 1-6

COOLENT

LANDING GEAR

GEAR OVERSPEED

MACH LIMIT

Inputs

EFIS 1-3 /

TANK TRANSFER

CANOPY

FLAPS

GEAR DOWN

CONFIRM

GEAR UP

TANK 3 XFER

TANK 4 XFER

PITOT WARN

STALL WARN

Registration Information

To receive important notification of Service Bulletins, and service difficulty reports, please EMAIL the following information to:

Info@Advanced-Flight-Systems.com

Or Mail to:

Advanced Flight Systems Inc.
320 S. Redwood St.
Canby OR 97013 USA

Owner's Name: _____

Address: _____

City: _____

State: _____ Postal Code ZIP: _____

Country: _____

Home telephone: _____

Business Telephone: _____

E-mail: _____

Aircraft Model and N#: _____

Engine Model : _____

System Model #: _____ Serial Number: _____

Installer: _____