

**PNEUMATIC ACTUATORS &  
POSITIONERS**  
MOBILE TYPE AIR CYLINDERS

**Pneumatics**  
It's that easy




**Section 1: SC-900 Pneumatic Actuators & Positioners**

Single Direction Actuator Positioners  
Two Direction Actuator Positioners

**Section 2: SC-1000 Mobile Type Air Cylinders**

Construction Grade (Cast Iron) Air Cylinders  
Multi-Position Air Cylinders  
Transmission Control Systems

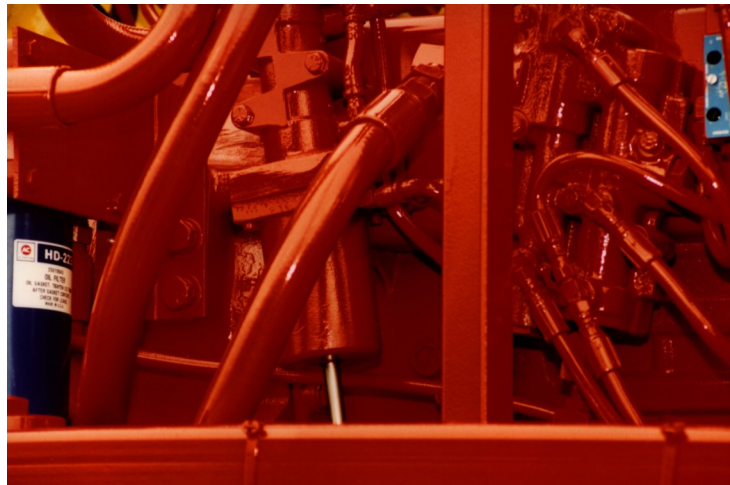

AVENTICS Corporation  
1953 Mercer Road, P.O. Box 13587 (40512-3701)  
Lexington, KY 40511-1021  
Tel: 859-254-8031  
Fax: 859-254-4188/800-489-4188  
Email: [info.us@aventics.com](mailto:info.us@aventics.com)  
[www.aventics.com/us](http://www.aventics.com/us)

The products in this catalog are most often used in mobile, marine and oilfield applications. We manufacture many other standard products that are most often used in industrial applications. Visit our web site at [www.aventics.com/us](http://www.aventics.com/us) for details.

**Single Directions Positioners**

3 1/2 thru 36 lb. Thrust ratings - Fixed Strokes  
Spring Controlled - Linear & Radial Motion Types  
Piston & Diaphragm Constructions

Specifications .....	2
AA-1 Radial Motion Type.....	3
AB-1 & BA-1 Radial Motion Types .....	4
A-2-H Radial Motion Type .....	5
TYPE "C" Linear Motion Models .....	6
TYPE "E" Linear Motion, Model 12E.....	7
TYPE "E" Linear Motion, Model 12EC Governor Positioner .....	8, 9
Repair Kits.....	10

**Two Direction Positioners**

1 3/4" & 3 1/4" bore sizes - Various Strokes  
Spring Centered - Linear Motion  
7 thru 25 lb. thrust ratings

Specifications .....	11
Cast Body Type, 1 3/4" bore .....	12
Tie Rod Type, 3 1/4" bore.....	13

**Index for Section 2 (SC-1000) immediately follows page 14 of Section 1 (SC-900)**

Note: Most service manuals can be downloaded from the web at: [www.aventics.com/us](http://www.aventics.com/us)

AVENTICS Actuator Positioners are compact, pneumatically operated devices used for accurate positioning of engine governor control arms, butterfly valves, carburetors and other low-force mechanisms.

AVENTICS offers three types of positioners: diaphragm-with radial motion lever, diaphragm-linear, and cylinder-linear. All three models use the same basic principle of applying a predetermined air pressure (supplied by a AVENTICS Type “H” Controlair® Valve or Type M PLUS™ proportional pressure control valve) to act on a diaphragm or piston to compress a positioning spring. The actuator

lever then assumes a specific position which corresponds to the applied pressure and to the control valve handle position.

Our Actuator Positioners feature light-weight, strong, die-cast construction with a minimum of connections. Years of performance in heavy construction vehicles, drill rigs, marine applications, and other types of installations have proven them to be rugged and highly dependable.

### STANDARD SPECIFICATIONS

#### MATERIALS

**A-2-H**—Die-cast aluminum utilizing close-fitting bearings with grease fittings.

**AA TYPE**—Cast aluminum utilizing close-fitting bearings with grease fittings.

**“C” TYPE (small)** Die-cast aluminum with chrome-plated piston rod.

**“C” TYPE (large)** Cast iron with chrome-plated piston rod.

**“E” TYPE**—Formed steel and cast aluminum with chrome-plated piston rod.

**TWO DIRECTION POSITIONER**—Die-cast aluminum with chrome-plated piston rod.

All positioners have long wearing synthetic rubber parts such as diaphragms and piston seals.

#### TEMPERATURE

All Models .....-40° F to 165° F  
(-40° C to 74° C)

#### MEDIA

Air and inert gasses  
(Consult factory for other uses)

#### PORTS

All models except Large 2D Positioner ... 1/4 - 18 NPTF  
(Large 2D Positioner ..... 3/8 - 18 NPT)

**Compact, versatile actuators where fast response, accurate positioning and durability are needed.**

PRESSURES	
Max. Supply Pressure 100 psig (6.89 bar)	
Model	†Operating Pressure PSIG (bar)
A-2-H	3-15 (0.21-1.03) 10-60 (0.69-4.14) 15-80 (1.03-5.52) 35-90 (2.41-6.21)
AA Type	10-60 (0.69-4.14)
“C” Type	10-60 (0.69-4.14)
“E” Type	10-60 (0.69-4.14) 10-90 (0.69-6.21)
2 Direction	10-60 (0.69-4.14) 10-90 (0.69-6.21)

FORCE RATING OUTPUT CHART	
Strokes shown should be fully utilized.	
A-2-H	*410 inch-lb. degrees (46 m-N) or 3.5 lbs. thru 2” (15.6N-50.8mm)
C-Linear (small)	*650 inch-lb. degrees (73 m-N) or 7 lbs. thru 1.5” (31.1N-38.1mm)
C-Linear (long)	*650 inch-lb. degrees (73 m-N) or 7 lbs. thru 3” (31.1N-76.2mm)
AA-AB-BA-1	*1125 inch-lb. deg. (127 m-N) or 10 lbs. thru 2” (44.5N-50.8mm)
C-Linear (large)	*1400 inch-lbs. deg. (158 m-N) or 15 lbs. thru 1.5” (66.7N-38.1mm)
12E	*4500 inch-lb. degrees (508 m-N) or 36 lbs. thru 2” (160N-50.8mm)
SPRING CENTERED POSITIONER (based on total travel)	
R431004748	*410 inch-lb. degrees (46 m-N) or 7 lbs. thru 1” (31.1N-25.4mm)
R431005261	*820 inch-lb. degrees (93 m-N) or 7 lbs. thru 2” (31.1N-50.8mm)
R431006349	*820 inch-lb. degrees (93 m-N) or 7 lbs. thru 2” (31.1N-50.8mm)

\* The force rating of the controlled device is found by multiplying the force required in pounds to move the lever, times the length of the lever in inches, times the total number of degrees of travel of the lever. Compare your results to the above chart force ratings and select the nearest rating. If your rating is between two of the ratings above always go to the next highest rating.

† Control valve output pressure should match the positioner pressures.



The AA Type actuators are the most powerful of the diaphragm-lever type positioners, with a force rating of 1125 inch-lb-degrees (127m-N). The AA Types are made in both Single (AA-1 and BA-1) and Two-Direction (AB-1) models. The AA Type are all easily mounted and take up a moderate amount of space.

Output Travel adjustable from 7/8" to 2 1/4" (22.2 to 57.2mm).

## AA-1

Standard **Single Direction** Positioner.  
The AB-1 and BA-1 are constructed from this basic model.





### Ordering Information

Model	Part No. (Old Part No.)	Pressure Range psi (bar)	Weight lbs. (kg)
AA-1 1/4" rod eye	R431005436 (P-060263-00001)	10 - 60 (0.69-4.14)	8.0 (3.63)
AA-1 5/16" rod eye	R431005437 (P-060263-00002)	10 - 60 (0.69-4.14)	8.5 (3.86)
AA-1 3/8" rod eye	R431005438 (P-060263-00003)	10 - 60 (0.69-4.14)	8.5 (3.86)

Repair kit: Part number R431006220 (old P-063381-00000)

For service information, see service manual SM-900.4401

MODEL AA-1

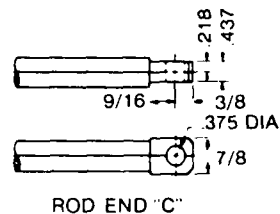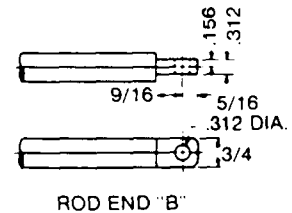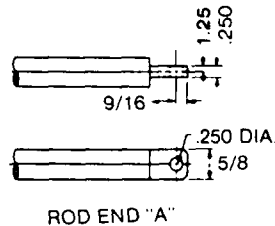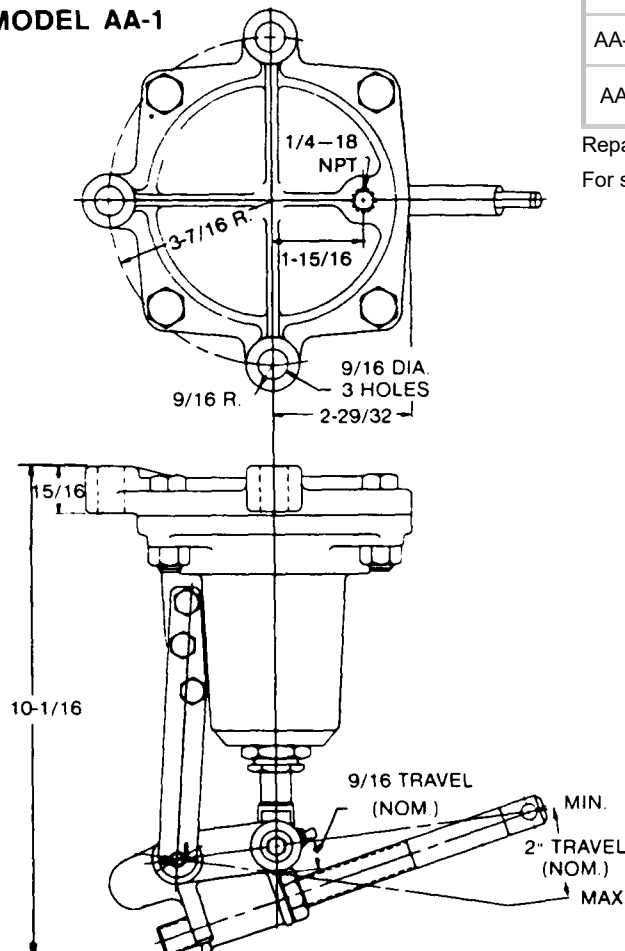

### AB-1

Basic AB Type **Two-Direction** Positioner is made from the basic AA type and the addition of a separately controlled stop cylinder.

### BA-1

Basic AA Type, **Single Direction** Positioner with a "vernier" feature added by the use of an additional diaphragm that is controlled separately. (An H-4 Controlair® Valve is a great combination.) This allows for exact positioning and very fine control.



### Ordering Information

Model	Part No. (Old Part No.)	Pressure Range psi (bar)	Weight lbs. (kg)
AB-1 1/4" rod eye	R431005441 (P-060266-00001)	10 - 60 (0.69-4.14)	11.5 (5.22)
AB-1 5/16" rod eye	R431005442 (P-060266-00002)	10 - 60 (0.69-4.14)	11.5 (5.22)
AB-1 3/8" rod eye	R431005443 (P-060266-00003)	10 - 60 (0.69-4.14)	11.5 (5.22)
BA-1 1/4" rod eye	R431009018 (P-060269-00001)	10 - 60 (0.69-4.14)	11.0 (4.99)
BA-1 5/16" rod eye	R431005445 (P-060269-00002)	10 - 60 (0.69-4.14)	11.0 (4.99)
BA-1 3/8" rod eye	R431005446 (P-060269-00003)	10 - 60 (0.69-4.14)	11.0 (4.99)

Repair kit for AB-1: Part number R431006218 (old P-063379-00000)

Repair kit for BA-1: Part number R431006219 (old P-063380-00000)

For service information, see service manual SM-900.4401

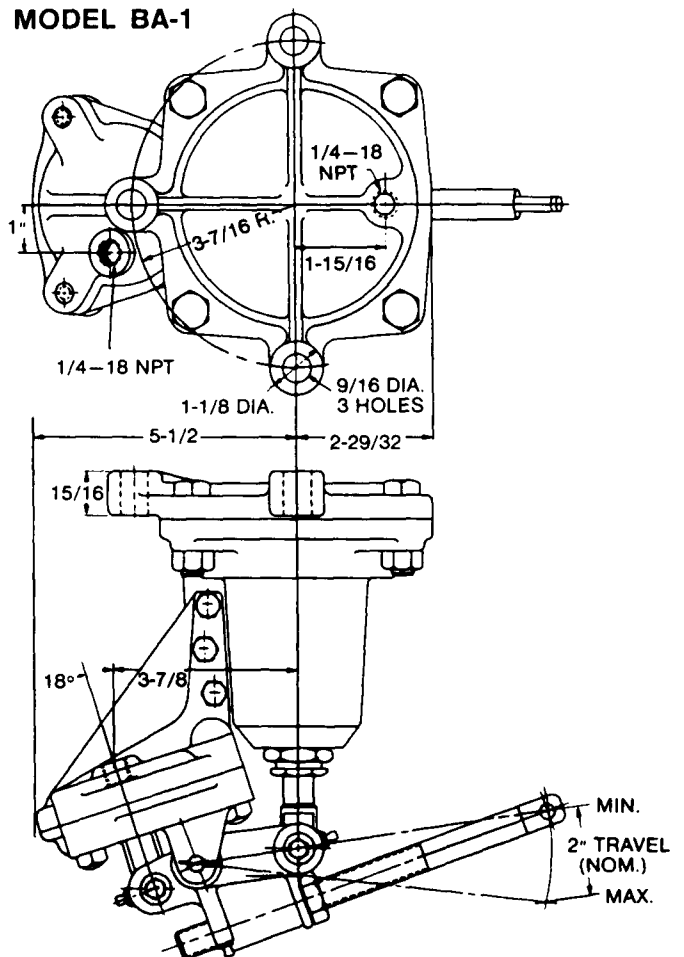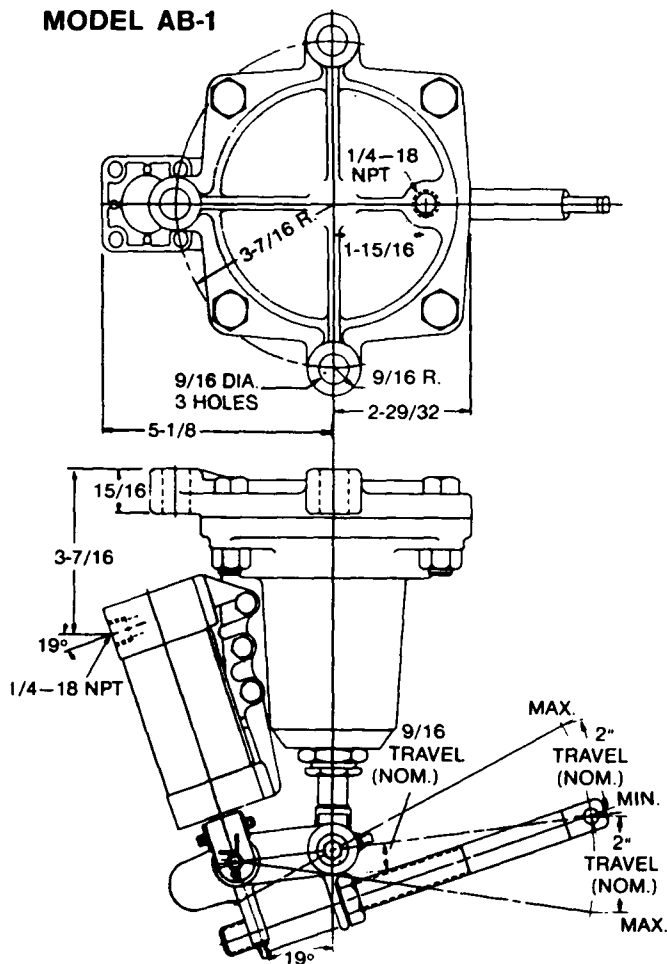

**Ordering Information**



(shown less accessory kit)

Pressure Range psi (bar)	With Accessories Part No. (Old Part No.)	Less Accessories Part No. (Old Part No.)	Accessory Kit Part No. (Old Part No.)	Actuator Weight lbs. (kg)
3 - 15 (0.21 - 1.03)	R431005217 (P-059718-00011)	R431005216 (P-059718-00010)	R431004144 (P-057415-K0000)	3 (1.36)
10 - 60 (0.69-4.14)	R431004010 (P-057159-00011)	R431004009 (P-057159-00010)	R431004144 (P-057415-K0000)	3 (1.36)
10 - 60* (0.69-4.14)	R431004011 (P-057159-00012)	R431004009 (P-057159-00010)	R431004146 (P-057416-K0000)	3 (1.36)
15 - 80 (1.03-5.52)	R431004529 (P-058430-00011)		R431004144 (P-057415-K0000)	3 (1.36)
35 - 90 (2.41-6.21)	R431003984 (P-057086-00011)	R431003983 (P-057086-00010)	R431004144 (P-057415-K0000)	3 (1.36)

\*With ball joint accessory instead of standard clevis.


Part number R431005745 (old P-61289-00010) is 10-60 less accessories, with drain hole.

Major repair kit: Part number R431006212 (old P-063286-00000)

Minor repair kit: Part number R431005743 (old P-061278-K0000)


For service information, see service manual SM-900.4407

The A-2-H has the lowest power rating: 410 in-lb-degrees (46 m-N); this compares with the small "C" Type Linear Positioner of 650 in-lb-degrees (73 m-N), but has better accuracy due to the low-friction characteristics of its diaphragm operation. The A-2-H has a nominal stroke of 2", adjustable from 1 7/8" to 2 1/4" (50.8mm, adjustable from 47.6 to 57.2). Integral mounting lugs make installation simple and clean.

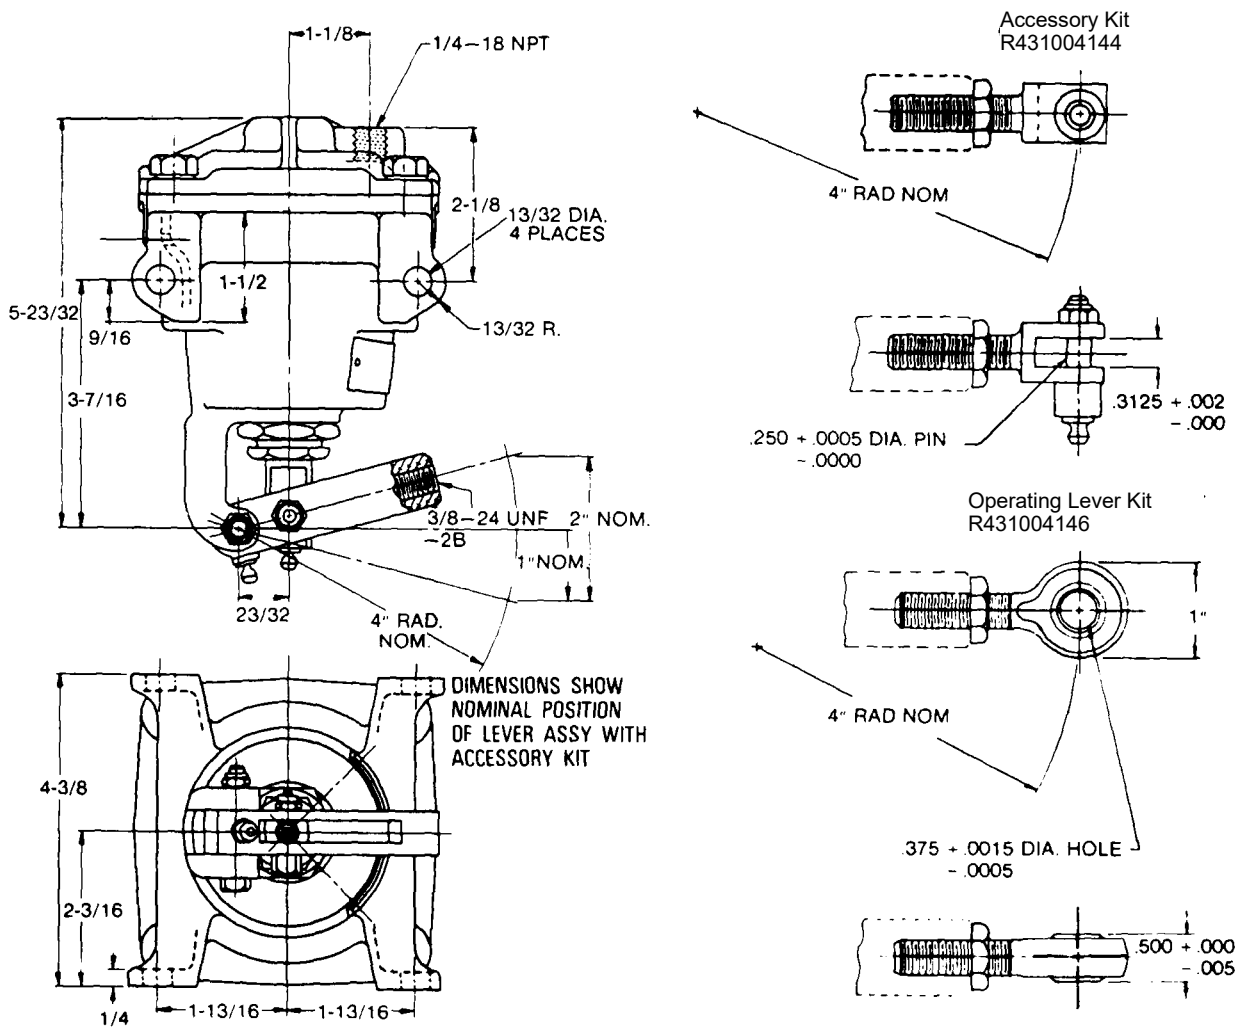

# Type "C" Linear Positioners

## Linear piston type

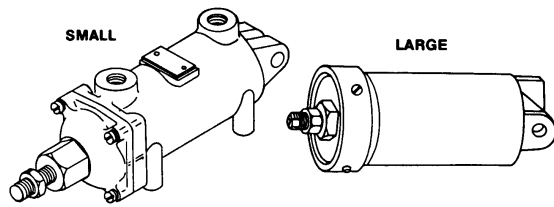

### Ordering Information

Model	Part No. (Old Part No.)	Pressure psi (bar)	Stroke in. (mm)	Weight lbs. (kg)
"C" Linear (small) with preload adj. nut	R431004882 (P-059023-00001)	10 - 60 (0.69-4.14)	1.5" (38.1)	2.5 (1.13)
"C" Linear (small) less preload adj. nut	R431004883 (P-059023-00002)	10 - 60 (0.69-4.14)	1.5" (38.1)	2.5 (1.13)
"C" Linear (small) less preload adj. nut	R431006478 (P-064713-00002)	8-80 (0.55-5.52)	1.5" (38.1)	2.5 (1.13)
"C" Linear (small) less preload adj. nut	R431006434 (P-064433-00000)	10 - 60 (0.69-4.14)	3" (76.2)	3 (1.36)
"C" Linear (large)	R431003945 (P-055952-00000)	10 - 60 (0.69-4.14)	1.5" (38.1)	9 (4.08)
"C" Linear (3.25" bore*)	R431009144 (P-065519-00000)	10 - 30 (0.69-2.07)	4" (101.6)	12 (5.44)

The "C" Type are the smallest and most economical of the positioners. They are linear piston type, with force characteristics of 650 inch-lb-degrees (73 m-N) and 1400 inch-lb-degrees (158 m-N). The "C" Type have integral female clevises for easy mounting.

Repair kit for C small P-59023 & P-64713 series: R431005657 (old P-061051-00000)


Repair kit for C small R431006434: R431006593 (old P-065291-00000)

Repair kit for C large R431003945: R431004612 (old P-058613-00000)



\*Drawing not shown for special 3.25" bore R431009144

For service information, see service manual SM-900.4408


### "C" Linear (small) Positioner

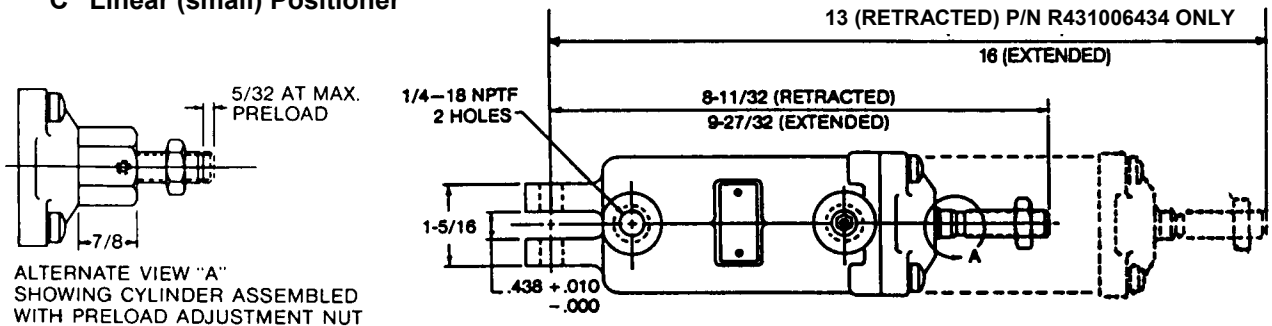

ALTERNATE VIEW "A" SHOWING CYLINDER ASSEMBLED WITH PRELOAD ADJUSTMENT NUT

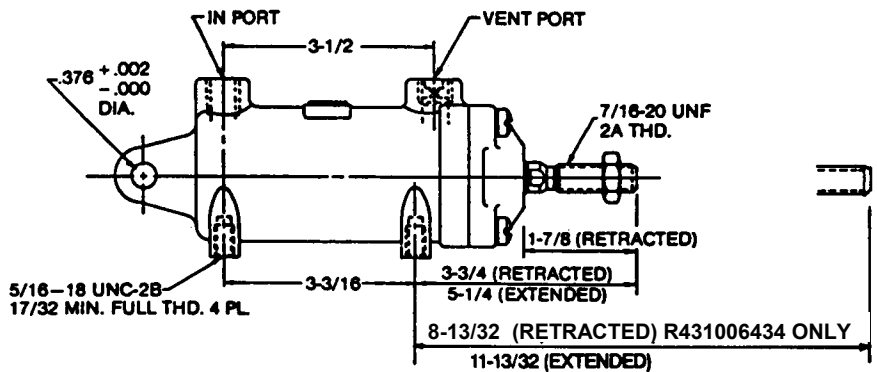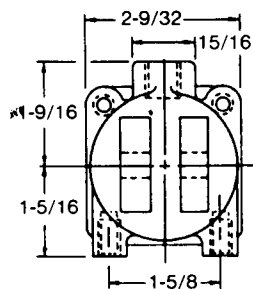

### "C" Linear (large) Positioner

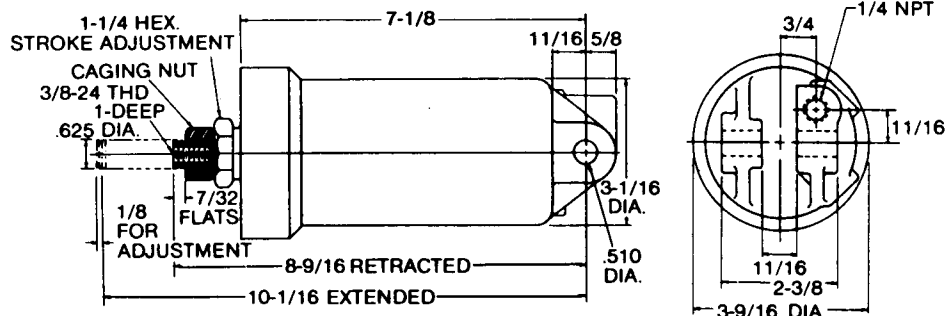






## Type “E” Linear Positioner

Linear diaphragm type, Model 12EC governor positioner

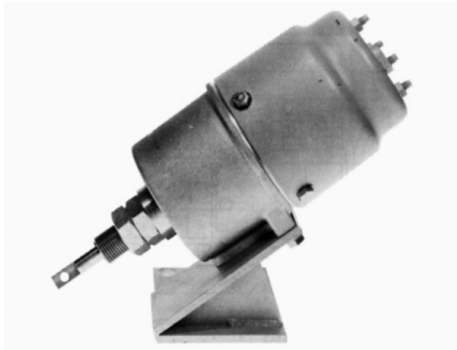

(Part number R431007099 shown)

### Application:

For control of engine speed from Idle to Full by positioning governor control arm in response to pneumatic pressure signals from a remotely located control station. Suitable for use with most diesel engines, brackets and linkage adapted for Caterpillar Tractor D398 and D399.

### Features:

- Rugged construction, -40°F to 165°F (-40°C to 74°C) operating temperature range.
- Rolling diaphragm actuation for accurate positioning and sensitive, low-hysteresis control.
- Control signal range 10 to 60 psi (0.69 to 4.14 bar) idle to full.
- Output rod travel of 2 inches (50.8 mm).
- Built-in yield spring for over-travel protection of engine governor.

### Operation:

Control signal pressure applied to the diaphragm is balanced against the calibrated positioning spring to produce a specific output rod position for each increment of pressure. Positioner travel is thus proportional to pressure delivered from a remotely located pressure graduation control valve. Engine speed is therefore controlled through its operating range in proportion to the movement and position of the control valve handle at the remote operating station.

**Type "E" Linear Positioner**  
 Linear diaphragm type, Model 12EC governor positioner




**Ordering Information**

Model	Part No. (Old Part No.)	Pressure Range psi (bar)	Weight lbs. (kg)
12EC, with Bracket*	R431007099 (P-067423-00000)	10 - 60 (0.69-4.14)	17 (7.71)
12EC	R431007101 (P-067424-K0000)	10 - 90 (0.69-6.21)	14.4 (6.53)
Adjustable connecting linkage kit (purchase separate)	R431007131 (P-067443-00000)		

\*Adapted for Caterpillar D398 and D399 engines.

For service information, see service manual SM-900.4413

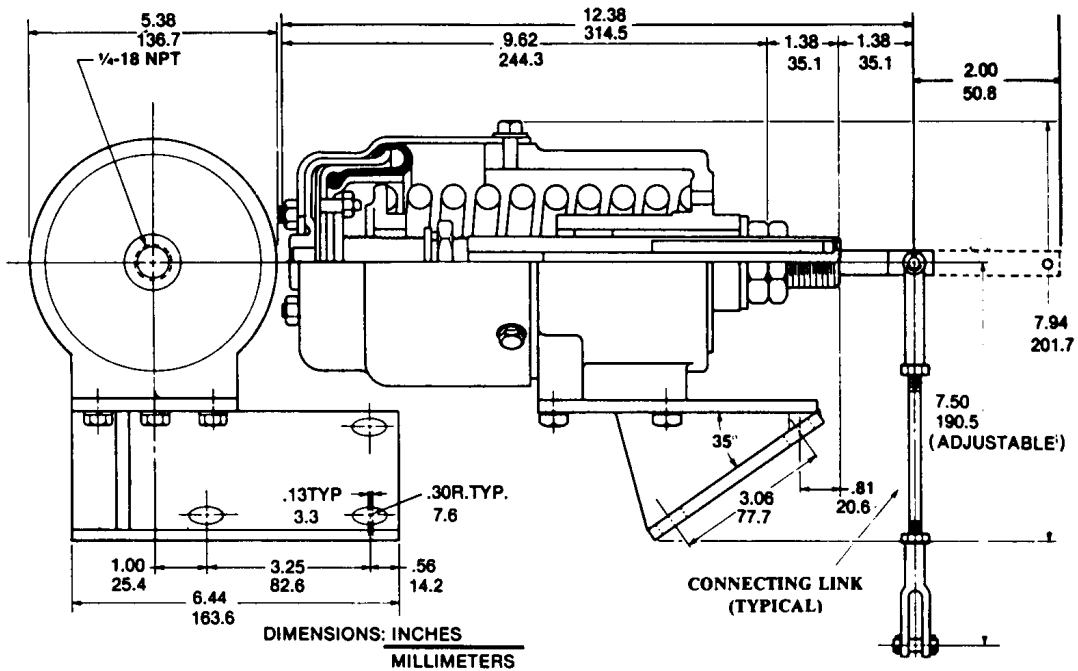

### Repair Kit List

Service Manual	Description	Repair Kit Part No.
SM-900.4401	AA1 Actuator Repair Kit	R431006220 (old P –063381-00000)
	AB1 Actuator Repair Kit	R431006218 (old P –063379-00000)
	BA1 Actuator Repair Kit	R431006219 (old P –063380-00000)
	AA1 & AB1 Actuator Conversion Kit (converts old style needle bearings to new style nylon bearings)	R431006221 (old P –063382-00000)
SM-900.4407	A-2-H Actuator Repair Kit, Major	R431006212 (old P –063286-00000)
SM-900.4409	“C” Linear Positioner, Small, Repair Kit (for P-59023 & P-64713 series)	R431005657 (old P –061051-00000)
	“C” Linear Positioner, Small, Repair Kit (for R431006434)	R431006593 (old P –065291-00000)
SM-900.4408	“C” Linear Positioner, Large, Repair Kit	R431004612 (old P –058613-00000)
SM-900.4413	Type “E” Linear Positioner	See service manual
SM-900.4404	Two Direction Positioner, Cast Body Type, Repair Kit	R431006440 (old P –064454-00000)

With these repair kits, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manuals listed above. Most service manuals can be downloaded from the web at [www.aventics.com/us](http://www.aventics.com/us).

**Two-Direction Positioners**  
Linear piston type, Cast body type




An extremely versatile type, the Two-Direction positioners move 1/2 their total stroke length in each direction from a center "zero" position. They are compact, accurate linear piston type with three total stroke lengths, 1", 1-1/2" and 2" (25.4, 38.1 and 50.8 mm). AVENTICS HC-2 Controlair® valves or MC-2 Type M Plus™ Pressure Control valves are natural partners with the Two-Direction positioners.

**Ordering Information**

Part No. (Old Part No.)	Pressure Range psi (bar)	Force Rating in.lb. deg. (m-N)	Weight lbs. (kg)
R431004748 (P-058822-00500)	5 - 80 (0.34 - 5.52)	410 (46)	2.5 (1.13)
R431004749 (P-058822-00750)	5 - 115 (0.34 - 7.93)	615 (69)	2.6 (1.18)
R431005261 (P-059833-01000)	10 - 60 (0.69 - 4.14)	820 (93)	2.7 (1.2)
R431006592 (P-065289-01000)	20 - 70 (1.38 - 4.83)	820 (93)	2.7 (1.2)
R431007074 (P-064076-01000)	10 - 90 (0.69 - 6.21)	820 (93)	2.7 (1.2)

Repair kit part number: R431006440 (old P-064454-00000)

For service information, see service manual SM-900.4404

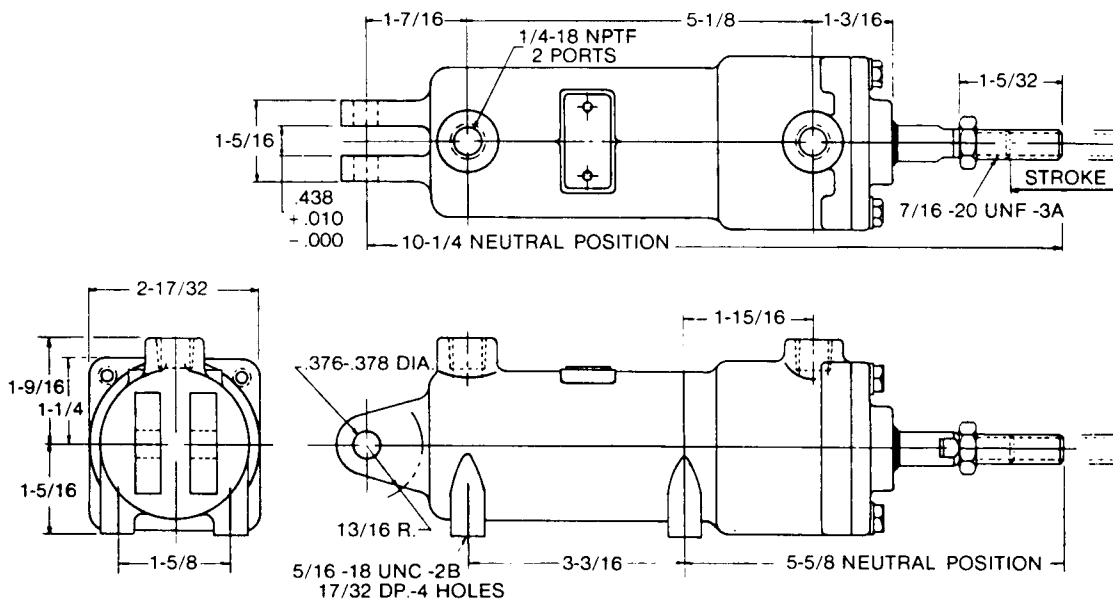

The two-direction positioner is a low-sensitivity, infinite positioning device that is controlled by a graduating control valve, such as our Type "H" Controlair® valve, Type M Plus™ Pressure Control valve or Flexair® valve as shown in the Special Duty Valves section in catalog SC-700. The positioner has a wide range of applications including positioning of 4-way hydraulic valves, over center hydraulic pumps and other low-force mechanisms. It is corrosion-resistant and constructed of lightweight, die-cast, anodized aluminum with a chrome-plated piston rod and long-wearing synthetic rubber seals.

Maximum stroke of the piston rod is one inch (25.4 mm) on each side of the center position, making a total piston rod travel of two inches (50.8 mm). External envelope dimensions of the positioner do not change.


NOTE: Control pressure should match the operating pressure of the positioner to eliminate any lost motion in the control valve.

**Two-Direction Positioners**  
Linear piston type, Cast body type



**Operation:**

Maximum pressure of the two-direction positioner is 150 psi (10.34 bar) at a temperature range of -40° F to 165° F (-40° C to 74° C). The positioner is held in its center position by a coil spring caged on the piston rod. When air pressure is supplied to the cap-end port, the piston rod moves to its extended position. When pressure is supplied to the head-end port, the piston rod moves to its retracted position.

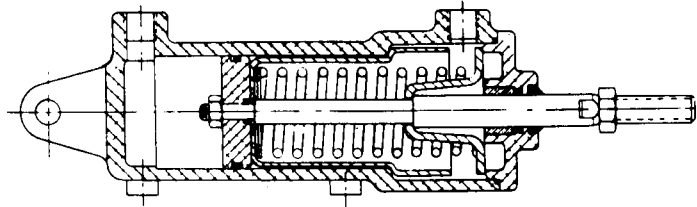

ASSEMBLY VIEW

**Available Forces:**


The accompanying graph shows pressure in psi required to overcome the force of the spring as the piston rod is retracted or extended from its center position. From the graph, pounds of spring force can be determined by multiplying the pressure (psi) by the piston area. The following force ratings are based on 3 psi x 2.4 square inches (piston area).

R431004748 410 in.-lb.-degrees (46 m-N) or 7 lbs. (31.1 N) through 1" (25.4 mm) travel.

R431004749 615 in.-lb.-degrees (69 m-N) or 7 lbs. (31.1 N) through 1 1/2" (38.1 mm) travel.

R431005261 820 in.-lb.-degrees (93 m-N) or 7 lbs. (31.1 N) through 2" (50.8 mm) travel.  
(same for R431006592 and R431007074)

To determine the control valve output pressure at any piston travel for either retracted or extended strokes, project across the graph from the appropriate stroke length point on the vertical line until the pressure line is intersected. Project down from this point to arrive at the pressure in psi. This is the no-load pressure required of the valve. Normally 3 psi (0.21 bar) above this is required to move a load of 7 lbs. (31.1N).

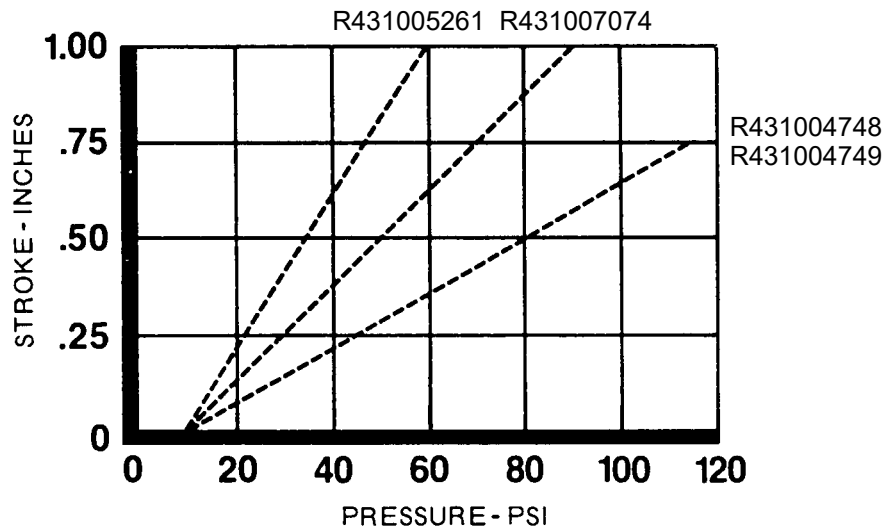


PISTON AREA: EXTENDED 2.4 sq. in. (1548 sq. mm)  
RETRACTED 2.2 sq. in. (1419 sq. mm)

Mounting kits to mount this two-direction positioner on Sunstrand hydraulic pumps are available, see catalog SC-1000. Consult factory for recommendations for other hydraulic pump brands.

## Two-Direction Positioners

Linear piston type, Tie rod type

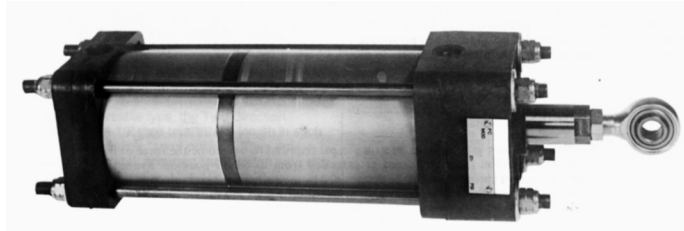

(Part number R431007074 shown)

### Application:

For infinite positioning control of: large hydraulic over-center pumps and motors, large hydraulic spool valves, ball and butterfly valves or other devices from a remotely located control station.

### Features:

- Rugged, corrosion resistant construction
- Accurate, low-hysteresis positioning
- Selection of 1", 2" or 3" (25.4, 50.8 or 76.2 mm) of stroke either side of center
- Spherical bearing rod eye standard
- Integral MS4 blind tapped hole mounting (other 3 1/4" TaskMaster® cylinder mounting kits adaptable)
- Control signal range 10 to 90 psi (0.69 to 6.21 bar), center to full extend or retract position
- Fully caged positioning spring allows easy, safe disassembly for servicing or installation of mounting kits with extended tie rods.

### Operation:


A graduated pressure control signal is applied to one side of the positioner piston and resulting force is balanced against the calibrated positioning spring to produce a specific output rod position for each increment of pressure. Piston rod travel in either direction is thus proportional to pressure delivered from a remote pressure graduation control valve. The controlled device therefore is positioned through its operating range in accordance with the position and direction selected for the remote control valve handle.

## Two-Direction Positioners

Linear piston type, Tie rod type



### Taskmaster Cylinder Detachable Clevis

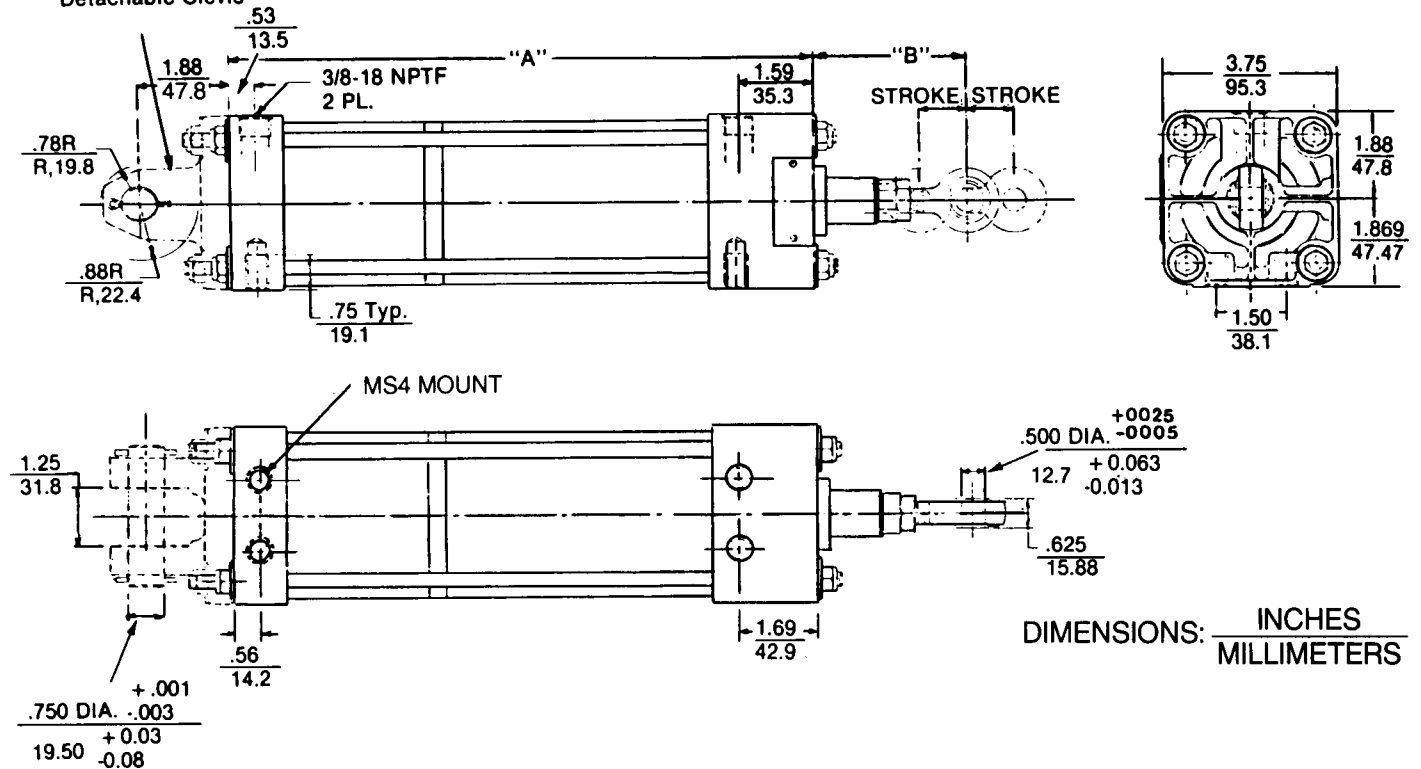

### Ordering Information

Part No. (Old Part No.)	Pressure Range psi (bar)	Optimum Force Rating based on total travel	Stroke (each side of ctr.)	"A" Dim. In. (mm)	"B" Dim. In. (mm)	Weight lbs. (kg)
R43100704 (P-067406-01000)	10 - 90 (0.69 - 6.21)	25 lbs. thru 2"/5.08 or 1620 in.-lb. deg (183 m-N)	1.00 (25.4)	11.25 (285.8)	3.25 (82.6)	6.8 (3.08)
R43100705 (P-067406-02000)	10 - 90 (0.69 - 6.21)	25 lbs. thru 4"/10.16 or 3240 in.-lb. deg (366 m-N)	2.00 (50.8)	16.12 (409.4)	4.25 (108.0)	7.8 (3.54)
R43100706 (P-067406-03000)	10 - 90 (0.69 - 6.21)	25 lbs. thru 6"/15.24 or 4860 in.-lb. deg (549 m-N)	3.00 (76.2)	21.00 (533.4)	5.25 (133.4)	8.8 (3.99)

For service information, see service manual SM-900.4404.

### How to Order:

1. Determine positioning requirements (force and length of travel, or degrees of rotation and level arm radius).
2. Select Two-Direction Positioner from above chart that equals, or exceeds, required stroke and provides adequate force/hysteresis trade-off.
3. Select appropriate TaskMaster® Cylinder Mounting Kit if desired. TaskMaster mounts MP2, MP4, MF2, MT2, MS2 and integral MS4 are suitable - see catalog SC-200 for details.
4. Select appropriate pressure graduating control valve such as AVENTICS HC-2 ControlAir®, MC-2 M PLUS™ Pressure Control Valve or Flexair® to suit application.
5. Adjust linkage to use the full stroke of the positioner, and adjust valve output (under rated load) to use full handle travel to match full positioner stroke for maximum sensitivity and "feel".



**CONSTRUCTION GRADE (CAST IRON) AIR CYLINDERS**

Air to 120 psi Cast Iron Body Construction  
2 1/2" thru 4 1/2" bore Double Acting  
Spring Returned Models  
Fixed & Limited Stroke Availability

Features & Specifications .....2  
List of Sizes & Ordering Information.....3  
Outlines & Dimensions .....3-8  
Repair Kits .....9

**MULTI-POSITION AIR CYLINDERS**

Air to 150 psi  
2, 3, 4, 5, 6, 7, & 8 Position Models  
Fixed Stroke Increments– Limited Mountings  
Cast Body Construction

**Two-Position Cylinders** ..... 10-12  
    1 3/4" Bore—Strokes to 2 9/16"  
    Double Acting & Spring Returned Models  
    Cast Aluminum Body

**Three-Position Spring Centered Cylinders** ..... 13-15  
    1 3/4" Bore– Selectable Fixed Strokes  
    Cast Aluminum Body

**Three-Position Air Centered Cylinders** ..... 16-17  
    1 3/4" Bore—Selectable Fixed Strokes  
    Cast Aluminum Body

**Four-Position Air Cylinders** ..... 18-19  
    1 3/4" Bore—Selectable Fixed Strokes  
    Block Aluminum Body

**Five-Position Air Cylinders** ..... 20  
    Cast Aluminum Body, Fixed Stroke, Transmission Control Type

**Six & Seven-Position Air Cylinders** ..... 21-23  
    Cast Aluminum Body, Fixed Stroke, Transmission Control Type

**Eight-Position Air Cylinders** ..... 24-27  
    Cast Aluminum Body, Fixed Stroke, Transmission Control Type

**Transmission Control Systems** ..... 28-34

**Mounting Kits for Seven-Position Cylinders** ..... 31

**Mounting Bracket Kit for Sundstrand Pumps** ..... 34

Note: Most service manuals can be downloaded from the web at: [www.aventics.com/us](http://www.aventics.com/us)

## Construction Grade Pneumatic Cylinders (Cast Iron Cylinders)



### Specifications:

Operating pressure:	120 psi (8.27 bar) max.
Temperature range:	-20° F to 160°F (-29° C to 71° C) 200° F (93° C) intermittently
Ports:	1/4" or 3/8" NPTF
Mounting:	integral female clevis

Construction grade (cast iron) cylinders are heavy-duty cylinders specially designed to meet your most severe applications.

Constructed of unyielding semi-steel, these durable cylinders are unequalled for clutch, brake and other medium-duty cycle applications. With their many dependability-plus features, you can be sure of long, reliable service.

**Efficient Design...** Efficient design keeps downtime to an absolute minimum.


**Resists External Damage...** Protection against dents is assured by the semi-steel body. Further rigidity is provided by the one-piece design of the body, cap and swivel mount. Damaging dirt is filtered by a metal strainer in the non-pressure port.

**Easily Maintained...** Grease lubricated at the factory before it comes to you. Maintenance-free service is prolonged because of the grease-retaining qualities of the semi-steel body.

All parts of the cylinder are accessible by disconnecting the rod end and removing only four screws. The entire internal assembly easily slides out as one unit. It is seldom necessary to remove the cylinder from its mounting.

External replacement of the rod bearing, seal and wiper is fast and simple (model with integral rod and rod eye requires routine disassembly).

**Built to Last...** Resistance to wear and corrosion is engineered into all parts of the cylinder, and its life

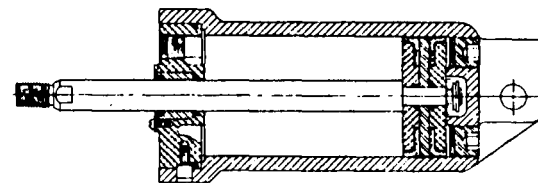

**Assembly View**

<b>Ordering Information</b>									
<b>Cylinder Part No.</b>		<b>B O R E</b>	<b>S T R O K E</b>	<b>M O D E L</b>	<b>Description</b>	<b>Spring Force (lbs.)</b>		<b>Weight lbs. (kg)</b>	<b>Ref. No.</b>
<b>Part No.</b>	<b>Old Part No.</b>					<b>At "0" Stroke</b>	<b>Increase Per Inch of Stroke</b>		
R431003154	P -053341-00000	2-1/2"	4"	DA	-----	--	--	9 (4.1)	1
R431003155	P -053342-00000	2-3/4"	2-3/4"	SA	Push - Spring Returned	10	8.0	9 (4.1)	2
R431003157	P -053343-00000	2-3/4"	2-3/4"	SA	Push - Spring Returned	10	8.0	9 (4.1)	2
R431003405	P -054640-00000	2-3/4"	2-3/4"	SA	Push - Spring Returned	23	9.18	9 (4.1)	3
R431003406	P -054640-00001	2-3/4"	2-3/4"	SA	Pull - Spring Extended	23	9.18	9 (4.1)	3
R431003158	P -053344-00000	2-3/4"	3"	DA	-----	--	--	9 (4.1)	2
R431003797	P -055521-00001	2-3/4"	3"	DA	-----	--	--	9 (4.1)	4
R431003327	P -054176-00002	3-1/2"	2-7/8"	SA	Push - Spring Returned	40	20.0	12 (5.4)	5
R431003908	P -055701-00001	3-1/2"	2-7/8"	SA	Push - Spring Returned	40	20.0	12 (5.4)	6
R431003195	P -053373-00001	3-1/2"	3-3/8"	DA	-----	--	--	10 (4.5)	7
R431003160	P -053345-00002	4-1/2"	2-3/4"	SA		60	16.0	15 (6.8)	8
R431003159	P -053345-00000	4-1/2"	3-1/4"	SA	Push - Spring Returned	40	16.0	15 (6.8)	8
R431003161	P -053346-00000	4-1/2"	3-1/4"	SA	Push - Spring Returned	40	16.0	15 (6.8)	8
R431003723	P -055433-00000	4-1/2"	3-3/16"	DA	-----	--	--	15 (6.8)	8
R431003724	P -055433-00001	4-1/2"	3-3/16"	DA	-----	--	--	15 (6.8)	8



SA = Single Acting

DA = Double Acting

Outline Dimensions

Reference 1: Part no. R431003154

Part No.	A in. (mm)	B in. (mm)	C in. (mm)
R431003154	10 (254.0)	7 1/8 (181.0)	3/4 (19.1)

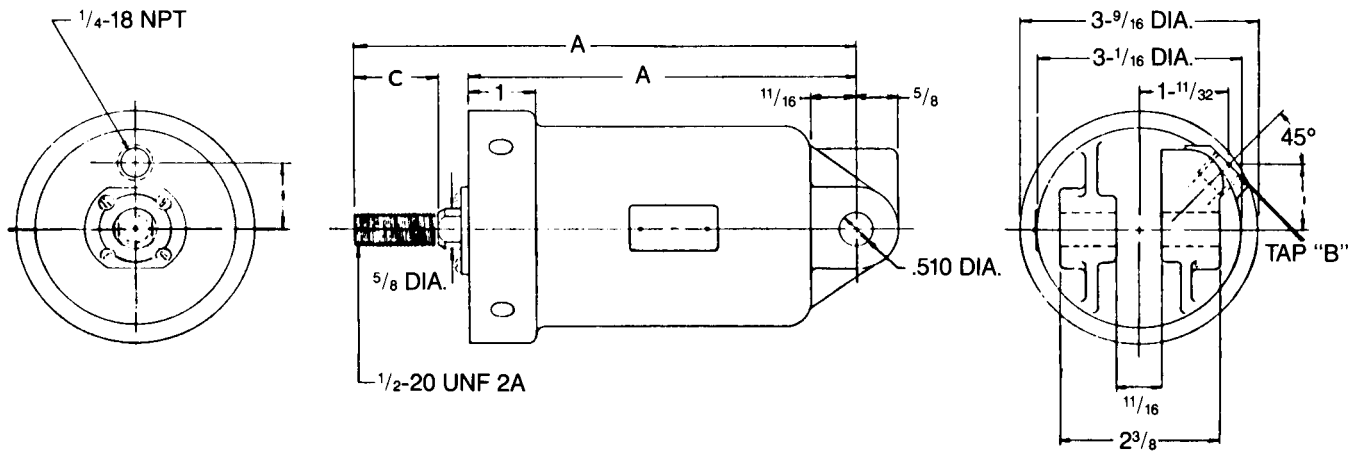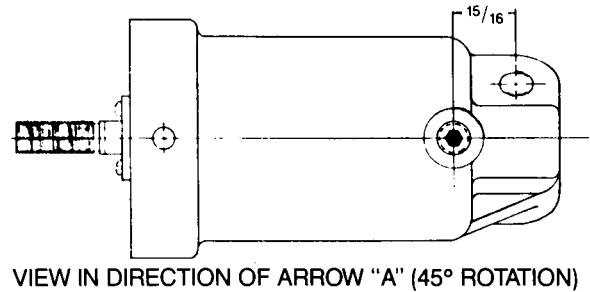


Reference 2: Part no. R431003155, R431003157, R431003158

Part No.	A in. (mm)	B in. (mm)	C in. (mm)	D in. (mm)	Remarks
R431003155*	8-9/32 (261.1)	7-1/16 (179.4)	0.510 (13.0)	0.510 (13.0)	Filter Plug Tap "A"
R431003157†	8-1/2 (215.9)	n/a	n/a	0.510 (13.0)	Filter Plug Tap "A", no rod eye
R431003158	9-27/32 (250.0)	8-5/8 (219.1)	0.635 (16.1)	0.635 (16.1)	

\* Tap "A" rotated 180° from illustration


† Male rod end: 5/8"-18 UNC-2 thread, 1-1/8" (28.6mm) in length.

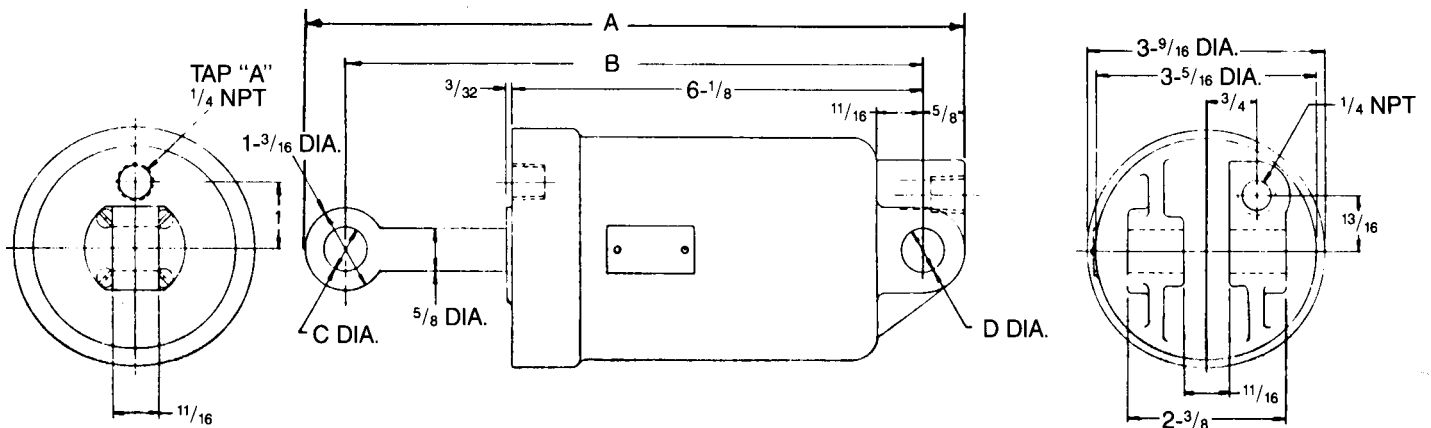


**Outline Dimensions**

**Reference 3: Part no. R431003405 & R431003406**

Part No.	Type	Remarks
R431003405	Spring Retracted	Filter Plug Tap "A"
R431003406	Spring Extended	Filter Plug Tap "B"

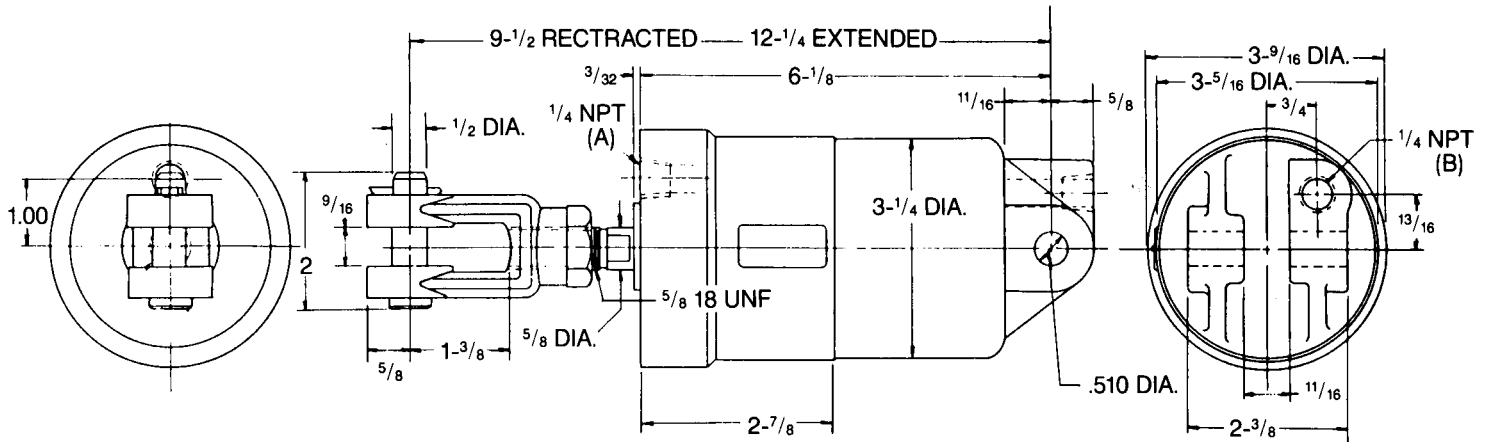


**Reference 4: Part no. R431003797**

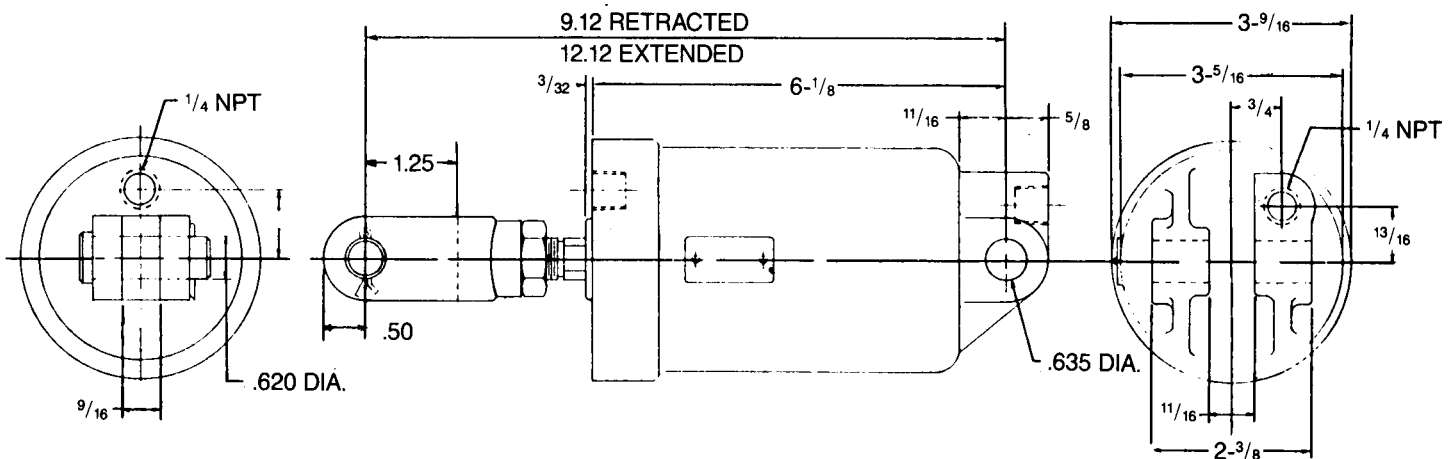


Outline Dimensions

Reference 5: Part no. R431003327

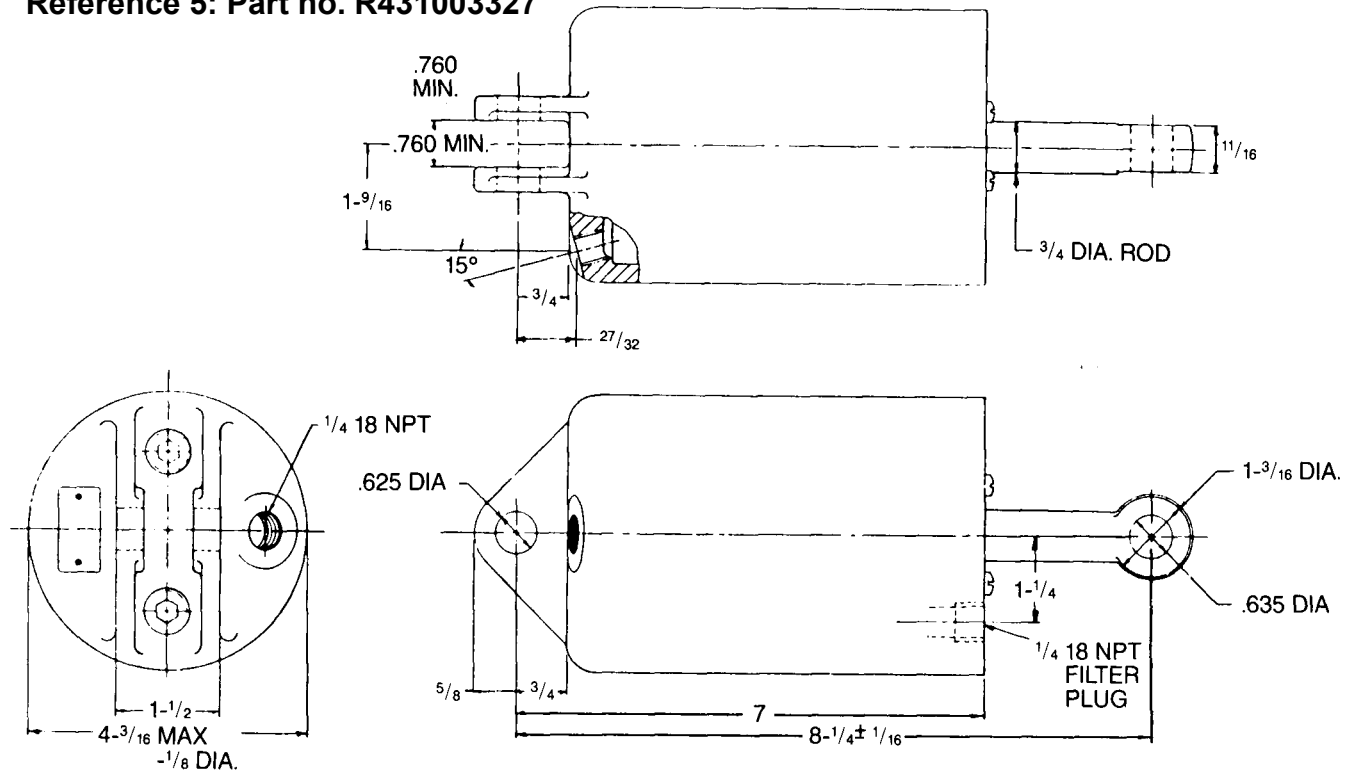


Reference 6: Part no. R431003908

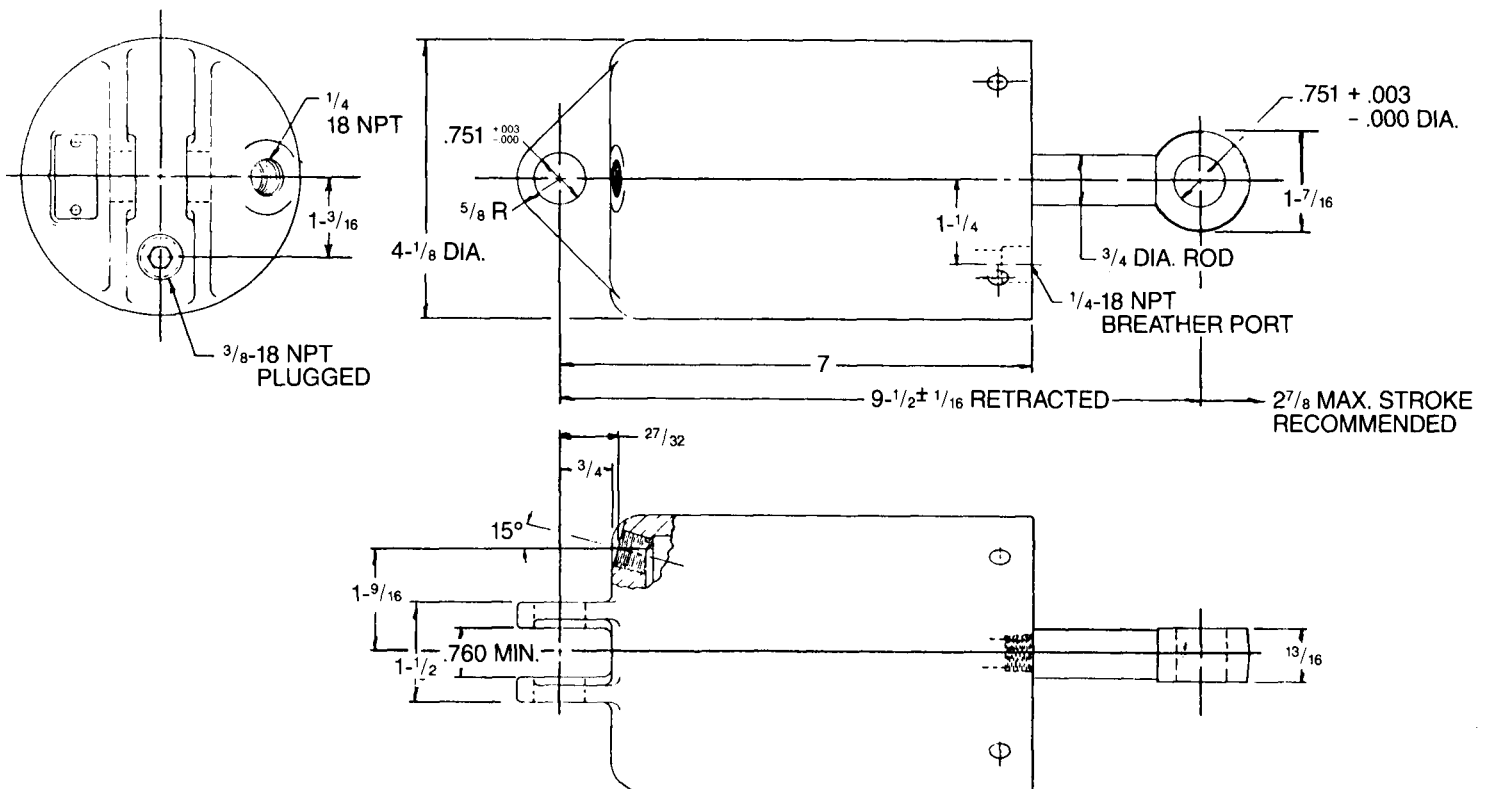

Outline Dimensions



Reference 7: Part no. R431003195

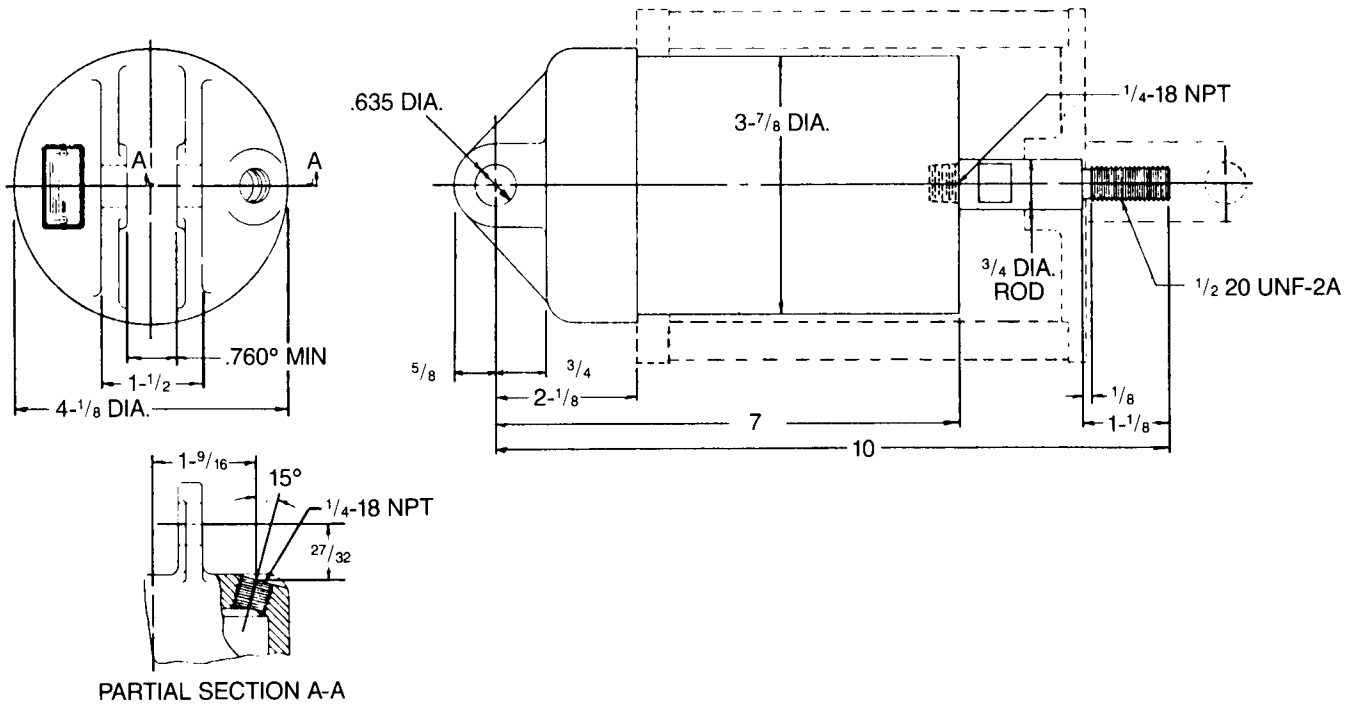

Outline Dimensions

Reference 8: Part no. R431003723, R431003724, R431003159, R431003160 & R431003161

Part No.	A in. (mm)	B in. (mm)	Remarks
R431003723	8-1/4 (209.6)	1/2 (12.7)	—
R431003724	8-1/4 (209.6)	3/4 (19.1)	—
R431003159	8-1/4 (209.6)	3/4 (19.1)	Filter Plug Tap "A"
R431003160	8-1/4 (209.6)	3/4 (19.1)	Filter Plug Tap "A", Spring 60s
R431003161	8-5/8 (219.1)	1/2 (12.7)	Filter Plug Tap "B"

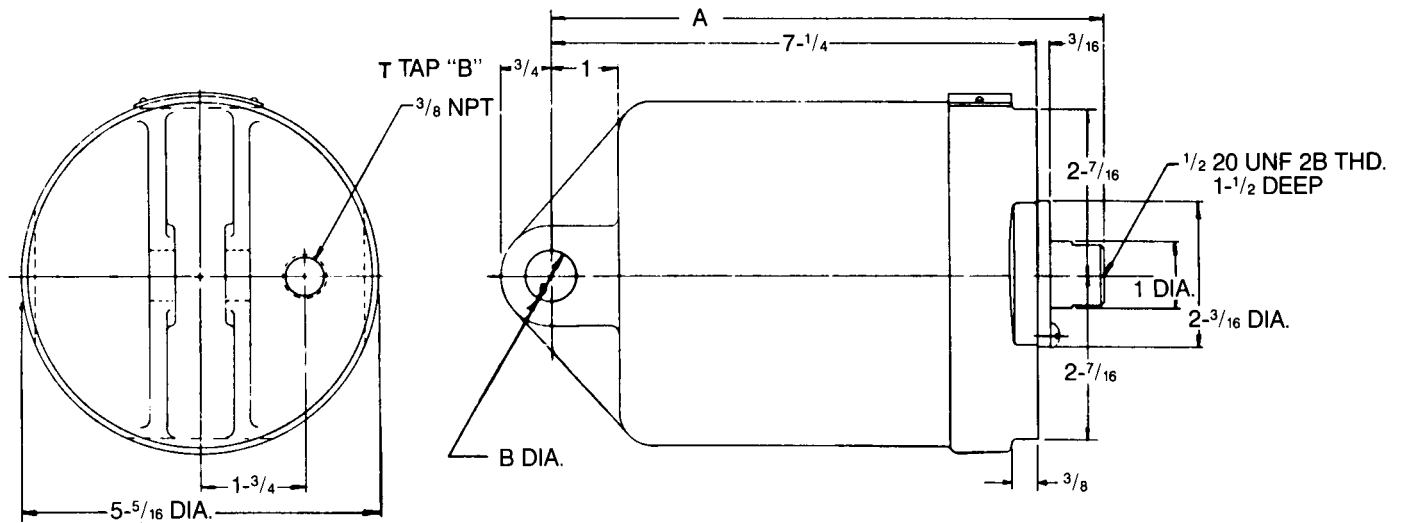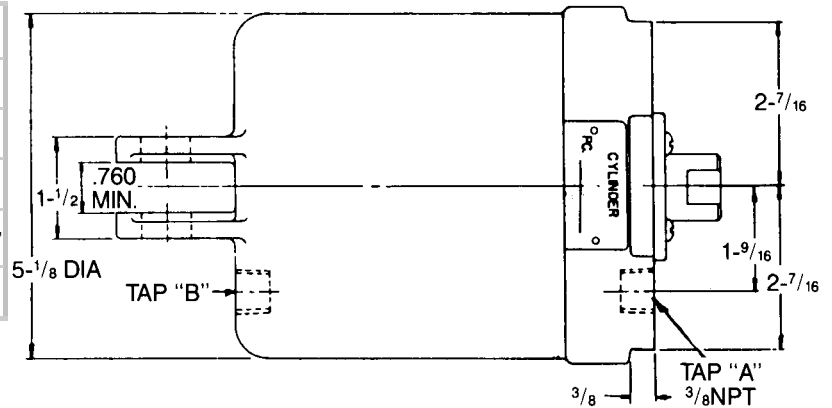



<b>Repair Kit List</b>			
<b>Cylinder Part No.</b>		<b>Repair Kits</b>	
<b>Part No.</b>	<b>Old Part No.</b>	<b>Part No.</b>	<b>Old Part No.</b>
R431003154	P -053341-00000	R431004928	P -059161-00000
R431003155	P -053342-00000	R431004930	P -059163-00000
R431003157	P -053343-00000	R431004930	P -059163-00000
R431003158	P -053344-00000	R431004931	P -059164-00000
R431003159	P -053345-00000	R431004934	P -059167-00000
R431003160	P -053345-00002	R431004934	P -059167-00000
R431003161	P -053346-00000	R431004935	P -059168-00000
R431003195	P -053373-00001	R431004933	P -059166-00000
Obsolete	P -054172-00000	R431004928	P -059161-00000
R431003327	P -054176-00002	R431004932	P -059165-00000
Obsolete	P -054190-00001	R431003316	P -059169-00000
Obsolete	P -054190-00002	R431003316	P -059169-00000
Obsolete	P -054198-00000	R431004929	P -059162-00000
R431003405	P -054640-00000	R431004930	P -059163-00000
R431003406	P -054640-00001	R431004931	P -059164-00000
R431003723	P -055433-00000	R431004935	P -059168-00000
R431003724	P -055433-00001	R431004935	P -059168-00000
R431003797	P -055521-00001	R431004931	P -059164-00000
R431003908	P -055701-00001	R431004932	P -059165-00000
Obsolete	P -057530-00000	R431004928	P -059161-00000

With these repair kits, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manual SM-1000-4200.

This and other service manuals can be downloaded from the web at [www.aventics.com/us](http://www.aventics.com/us).

## Multi-position Air Cylinders

### Two Position, Single & Double Acting



#### Specifications:

Operating pressure:	150 psi (10.3 bar) max.
Temperature range:	-40° F to 180° F (-40° C to 82° C)
Ports:	1/4" NPTF
Mounting:	integral female clevis

The two-position cylinder is a positioning device controlled by a three-way (single-acting model) or a four-way (double acting model), two-position, control valve such as the "A" or "D" Pilotair® valves. The cylinder has a wide range of applications, being particularly suited for shifting transmissions and positioning hydraulic valves. It is corrosion-resistant and constructed of lightweight, die-cast, anodized aluminum heads, pistons and body.

Cylinders with return springs can be used for infinite positioning, similar to an actuator, by selecting the proper graduating pressure control valve (see catalog SC-800 for H Controlair® and Flexair® valves). To select the required pressure range of the control valve, see the graph shown under "available Forces" on the following page.

Maximum stroke of the piston rod for each cylinder is shown, with shorter strokes available in 1/16" (1.6mm) increments only. External envelope dimensions of the cylinder do not change. The complete model number (same as old part number) for the cylinder and the piston stop will have an identical five-digit suffix. The first digit is always zero; the last four digits show the stroke in thousandths of an inch.

#### Installation & Adjustment

Because cylinders are installed at the end of an air system, they are vulnerable to dirt and moisture carried through the air lines. Therefore, before installing the two-position cylinder, all air lines in the system should be blown clean. It is recommended that the cylinder be mounted with the ports facing down. Gravity can then assist in preventing foreign material from accumulating in the cylinder by removing it through the control valve exhaust.


In providing a mounting for the cylinder, an adjustable link must be included between the piston rod and the lever to which the rod is connected.

#### Operation

Maximum operating pressure of the two-position

cylinder is 150 psi (10.3 bar) at a temperature range of -40° F to 180° F (-40° C to 82° C). On the single-acting model, supply pressure from a three-way control valve is piped through the cap-end port to move the piston rod to its extended position. When air pressure is exhausted, a spring returns the piston rod to its retracted position.

On the double-acting model, the return spring is omitted, and a four-way control valve is used. Pressure supplied to either the cap-end or head-end port will force the piston rod to its extended or retracted position, respectively.

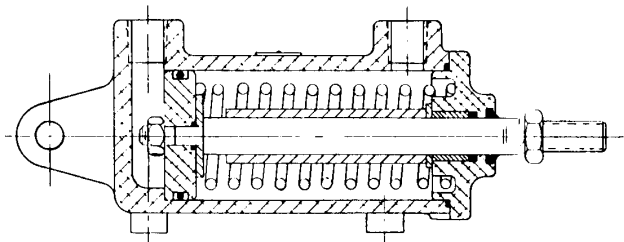


**Assembly View  
(Single-Acting Model)  
(Double-Acting Model has no spring)**

#### Maintenance

Periodically disassemble the cylinder for cleaning, inspection and lubrication. Clean all metal parts with a nonflammable solvent, and wash all rubber parts with soap and water. Rinse thoroughly and blow dry with a low-pressure air jet. Replace those part which are damaged or worn.

Reassemble the cylinder, using the exploded and assembly views as reference. No special tools are required. To avoid cutting or nicking the piston O-ring, carefully insert the piston rod assembly into the cylinder bore with the piston tilted at a slight angle. As the assembly proceeds, lubricate all O-rings with Dow Corning 55M grease.

**Multi-position Air Cylinders**  
Two Position, Single & Double Acting

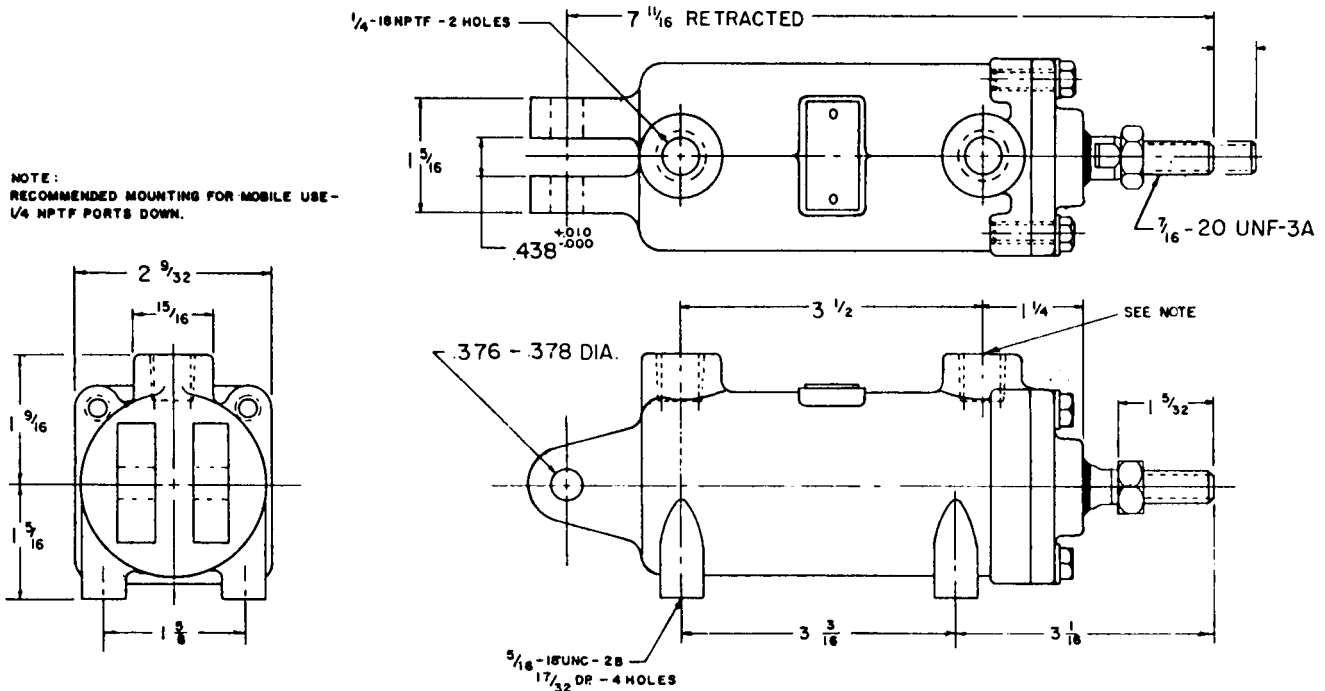

REFER TO AVAILABLE FORCE RATING ON NEXT PAGE

Part No.	Old Part No./ Model Code	Type of Operation	Effective Stroke in. (mm)
R431004025	P -057368-00500	Single Acting, Spring Returned	1/2 (12.7)
R431004026	P -057368-01000	Single Acting, Spring Returned	1 (25.4)
R431004027	P -057368-01125	Single Acting, Spring Returned	1-1/8 (28.6)
R431004874	P -058994-01500	Single Acting, Spring Returned	1-1/2 (38.1)
R431004875	P -058994-01812	Single Acting, Spring Returned	1-13/16 (46.0)
R431004876	P -058994-01875	Single Acting, Spring Returned	1-7/8 (47.6)
R431006041	P -062303-02125	Single Acting, Spring Returned	2-1/8 (54.0)
R431006042	P -062303-02250	Single Acting, Spring Returned	2-1/4 (57.2)
R434001974	P -057401-00625	Double Acting	5/8 (15.9)
R431004122	P -057401-00812	Double Acting	13/16 (20.6)
R431004123	P -057401-00875	Double Acting	7/8 (22.2)
R431004124	P -057401-01625	Double Acting	1-5/8 (41.3)
R431004125	P -057401-01875	Double Acting	1-7/8 (47.6)
R431004126	P -057401-02500	Double Acting	2-1/2 (63.5)
R431004127	P -057401-02562	Double Acting	2-9/16 (65.1)

Note: Last four digits in the suffix of the model code/old part number denotes effective stroke in thousandths of an inch.

Repair kit part number: R431005248 (old P -059818-00000). With this repair kit, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manual SM-1000-43.

**Multi-position Air Cylinders**  
Two Position, Single & Double Acting



**Available Forces:**

Force developed by the double-acting cylinder is determined by multiplying the applied air pressure by the exposed piston area.

Pounds of force (retracted stroke) = applied pressure (psi) x 2.2 square inches  
 Pounds of force (extended stroke) = applied pressure (psi) x 2.4 square inches

On either of the two single-acting, spring-retained models, spring force must be considered in determining force developed by the cylinder at different points in the stroke. On extended stroke:

Pounds of force = applied pressure (psi) x 2.4 square inches minus pounds of spring force


The accompanying graph shows pressure in psi required to overcome the force of the spring as the piston rod is extended. Opposing spring force increases as the stroke length of the piston rod increases and the spring is further compressed. From the graph, pounds of spring force can be determined by multiplying the pressure (psi) by the piston area. Thus, the initial force of the cylinder at zero stroke is:

Pounds of force (model codes P -057368...) = applied pressure (psi) x 2.4 square inches minus (20 psi x 2.4 square inches)

Pounds of force (model codes P -058994...) = applied pressure (psi) x 2.4 square inches minus (16 psi x 2.4 square inches)

For spring force at subsequent piston rod positions on extended stroke, project across the graph from the appropriate stroke length point on the vertical line until the pressure line is intersected. Project down from this point to arrive at pressure in psi. Multiply this figure by the 2.4 square inches of piston area.

On retracted stroke, only spring force is available.

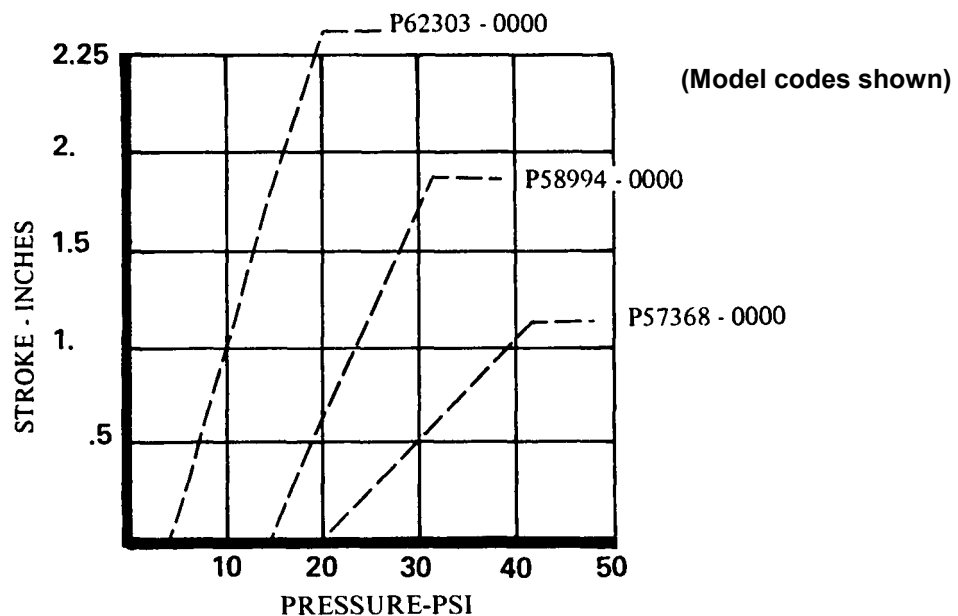

PISTON AREA: EXTENDING = 2.4 square inches (1548 sq. mm)  
 RETRACTING = 2.2 square inches (1419 sq. mm)

## Multi-position Air Cylinders

### Three Position, Spring Centered



#### Specifications:

Operating pressure:	150 psi (10.3 bar) max.
Temperature range:	-40° F to 180° F (-40° C to 82° C)
Ports:	1/4" NPTF
Mounting:	integral female clevis

The three-position cylinder is a positioning device controlled by a four-way, three-position, open-center control valve such as the "A" or "D" Pilotair® valves. The cylinder has a wide range of applications, being particularly suited for shifting transmissions and positioning hydraulic valves. It is corrosion-resistant and constructed of lightweight, die-cast, anodized aluminum heads, pistons and body.

Maximum stroke of the piston rod for each cylinder is 13/16" (20.6mm) on each side of the center position, making a total piston rod travel of 1 5/8" (41.3mm). External envelope dimensions of the cylinder do not change, but shorter strokes are available. The complete model number (same as old part number) for the cylinder and the piston stop will have an identical five-digit suffix. The first digit is always zero; the last four digits show the stroke in thousandths of an inch.

#### Installation & Adjustment

Because cylinders are installed at the end of an air system, they are vulnerable to dirt and moisture carried through the air lines. Therefore, before installing the three-position cylinder, all air lines in the system should be blown clean. It is recommended that the cylinder be mounted with the ports facing down. Gravity can then assist in preventing foreign material from accumulating in the cylinder by removing it through the control valve exhaust.

In providing a mounting for the cylinder, an adjustable link must be included between the piston rod and the lever to which the rod is connected. The cylinder stroke should be checked in its center position when aligned with the lever to be operated. Check for exact register, making sure the clevis pin is free from load in the center position.


This procedure will allow any inaccuracies in leverage ratio or manufacturing tolerance to be absorbed at the extremes of the stroke where exact registration is of least importance. Also, any inaccuracies will be divided between the extreme

positions. When alignment is done at one of the extreme positions, inaccuracies are all in the same direction.

#### Operation

Maximum operating pressure of the two-position cylinder is 150 psi (10.3 bar) at a temperature range of -40° F to 180° F (-40° C to 82° C). On the single-acting model, supply pressure from a three-way control valve is piped through the cap-end port to move the piston rod to its extended position. When air pressure is exhausted, a spring returns the piston rod to its retracted position.

On the double-acting model, the return spring is omitted, and a four-way control valve is used. Pressure supplied to either the cap-end or head-end port will force the piston rod to its extended or retracted position, respectively.

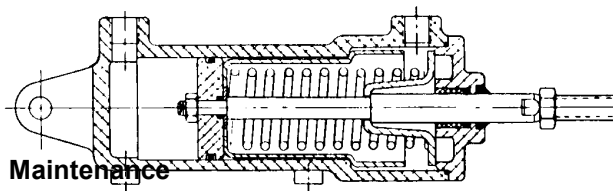

Maintenance

Assembly View


Periodically disassemble the cylinder for cleaning, inspection and lubrication. Clean all metal parts with a nonflammable solvent, and wash all rubber parts with soap and water. Rinse thoroughly and blow dry with a low-pressure air jet. Replace those part which are damaged or worn.

Reassemble the cylinder, using the exploded and assembly views as reference. No special tools are required. To avoid cutting or nicking the piston O-ring, carefully insert the piston rod assembly into the cylinder bore with the piston tilted at a slight angle. As the assembly proceeds, lubricate all O-rings with Dow Corning 55M grease.

**Multi-position Air Cylinders**  
Three Position, Spring Centered



**Note:** Recommended mounting for mobile use is 1/4" NPTF ports down.

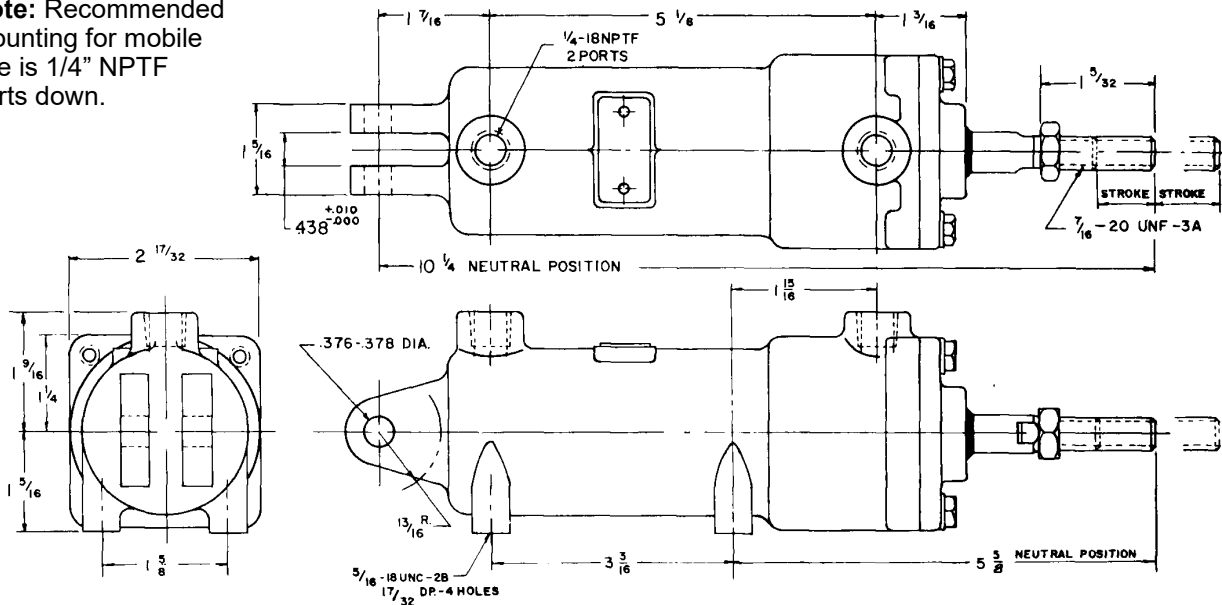

Refer to Available Force Rating on next page

Ordering Information			
Part No.	Old Part No./ Model Code	Mod- el Code	Stroke (each side of center) in. (mm)
R431004052	P-057378-00312		5/16 (7.9)
R431004053	P-057378-00375		3/8 (9.5)
R431004054	P-057378-00438		7/16 (11.1)
R431004055	P-057378-00500		1/2 (12.7)
R431004056	P-057378-00625		5/8 (15.9)
R431004057	P-057378-00688		11/16 (17.5)
R431004058	P-057378-00750		3/4 (19.1)
R431004059	P-057378-00875		7/8 (22.2)
R431004060	P-057378-01000		1 (25.4)
R431004943	P-059211-00000		1-1/16 (27.0)

Note: Last four digits in the suffix of the model code/old part number denotes effective stroke in thousandths of an inch.

Repair kit part number: R431005249 (old P-059819-00000). With this repair kit, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manual SM-1000-4916.

**Available Forces:**

Force developed by the cylinders are determined by multiplying the applied air pressure by the exposed piston area, less the spring force.


$$\text{Pounds of force (retracted stroke)} = \text{applied pressure (psi)} \times \text{piston area} - \text{pounds of spring force}$$

The accompanying graph shows pressure in psi required to overcome the force of the spring as the piston rod is retracted or extended from its center position. Opposing spring force increases as the stroke length of the piston rod increases and the spring is further compressed. From the graph, pounds of spring force can be determined by multiplying the pressure (psi) by the piston area. Thus, the initial force of the cylinder at zero stroke is:

$$\text{Pounds of force (retracted stroke)} = \text{applied pressure (psi)} \times 2.2 \text{ square inches} - (18 \text{ psi} \times 2.4 \text{ square inches})$$

$$\text{Pounds of force (extended stroke)} = \text{applied pressure (psi)} \times 2.4 \text{ square inches} - (18 \text{ psi} \times 2.4 \text{ square inches})$$

For spring force at subsequent piston rod positions on either retracted or extended stroke, project across the graph from the appropriate stroke length point on the vertical line until the pressure line is intersected. Project down from this point to arrive at pressure in psi. Multiply this figure by the 2.4 square inches of piston area.

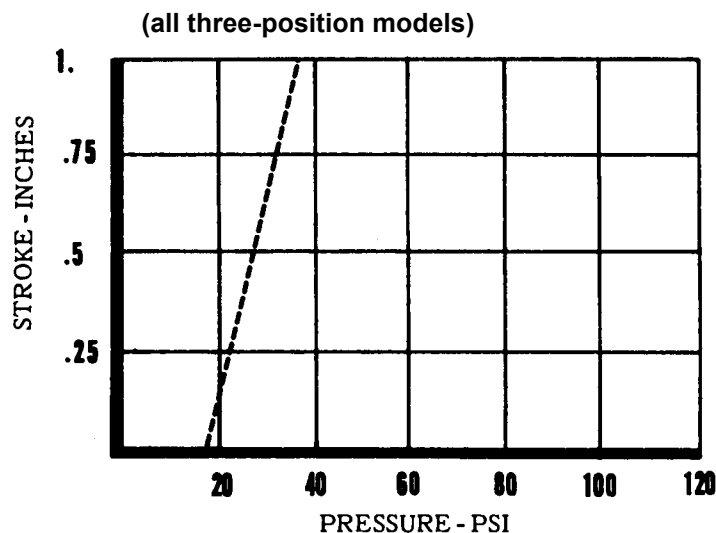

PISTON AREA: EXTENDING = 2.4 square inches (1548 sq. mm)  
 RETRACTING = 2.2 square inches (1419 sq. mm)

## Multi-position Air Cylinders

### Three Position, Air Centered



#### Specifications:

Operating pressure:	150 psi (10.3 bar) max.
Temperature range:	-40° F to 180° F (-40° C to 82° C)
Ports:	1/4" NPTF
Mounting:	integral female clevis

The three-position cylinder is a positioning device controlled by a four-way, three-position, open-center control valve such as the "A" or "D" Pilotair® valves. The cylinder has a wide range of applications, being particularly suited for shifting transmissions and positioning hydraulic valves. It is corrosion-resistant and constructed of lightweight, die-cast, anodized aluminum heads, pistons and body.

Maximum stroke of the piston rod for each cylinder is 13/16" (20.6 mm) on each side of the center position, making a total piston rod travel of 1-5/8" (41.3 mm). External envelope dimensions of the cylinder do not change, but shorter strokes are available in increments of 1/6" (1.6 mm) for each position. The complete model number (same as old part number) for the cylinder and the piston stop will have an identical five-digit suffix. The first digit is always zero; the last four digits show the stroke in thousandths of an inch.

#### Installation & Adjustment


Because cylinders are installed at the end of the air system, they are vulnerable to dirt and moisture carried through the air lines. Therefore, before installing the three-position cylinder, all air lines in the system should be blown clean. It is recommended that the cylinder be mounted with the ports facing down. Gravity can then assist in preventing foreign material from accumulating in the cylinder by removing it through the control valve exhaust.

In providing a mounting for the cylinder, an adjustable link must be included between the piston rod and the lever to which the rod is connected. The cylinder stroke should be checked in its center position when aligned with the lever to be operated. Supply air through Port One and Port Four, and check for exact register. In the center position, the clevis pin should be free from load.

#### Operation

Maximum operating pressure of the three-position

cylinder is 150 psi (10.3 bar) at a temperature range of -40° F to 180° F (-40° C to 82° C). The cylinder is held in its center position by equal pressure being applied to both sides of the piston through Port One and Port Four. Port Two and Port Three are open to atmosphere through breather plugs. When pressure is supplied through Port Four only, the piston rod moves to its extended position. When pressure is supplied through Port One only, the piston rod moves to its retracted position.

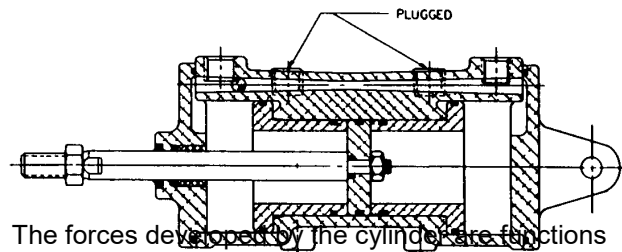


The forces developed by the cylinder are functions of piston exposed areas and amount of air pressure applied, and are shown in the following table according to rod position.

Net Force with 100 psi (6.9 bar) Air Pressure	Pounds (N)	Ports Supplied
Extended to Neutral	171 (761)	1 & 4
Neutral to Extended	207 (921)	4
Neutral to Retracted	188 (836)	1
Retracted to Neutral	210 (934)	1 & 4



Ordering Information			
Part No.	Old Part No./ Model Code	Model	Stroke (each side of center) in. (mm)
R431004114	P -057400-00312		5/16 (7.9)
R431004115	P -057400-00375		3/8 (9.5)
R431004116	P -057400-00438		7/16 (11.1)
R431004117	P -057400-00500		1/2 (12.7)
R431004118	P -057400-00562		9/16 (14.3)
R431004119	P -057400-00688		11/16 (17.5)
R431004120	P -057400-00750		3/4 (19.1)
R431004121	P -057400-00812		13/16 (20.6)

Repair kit part number: R431005087 (old P -059385-00000). With this repair kit, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manual SM-1000-4911.

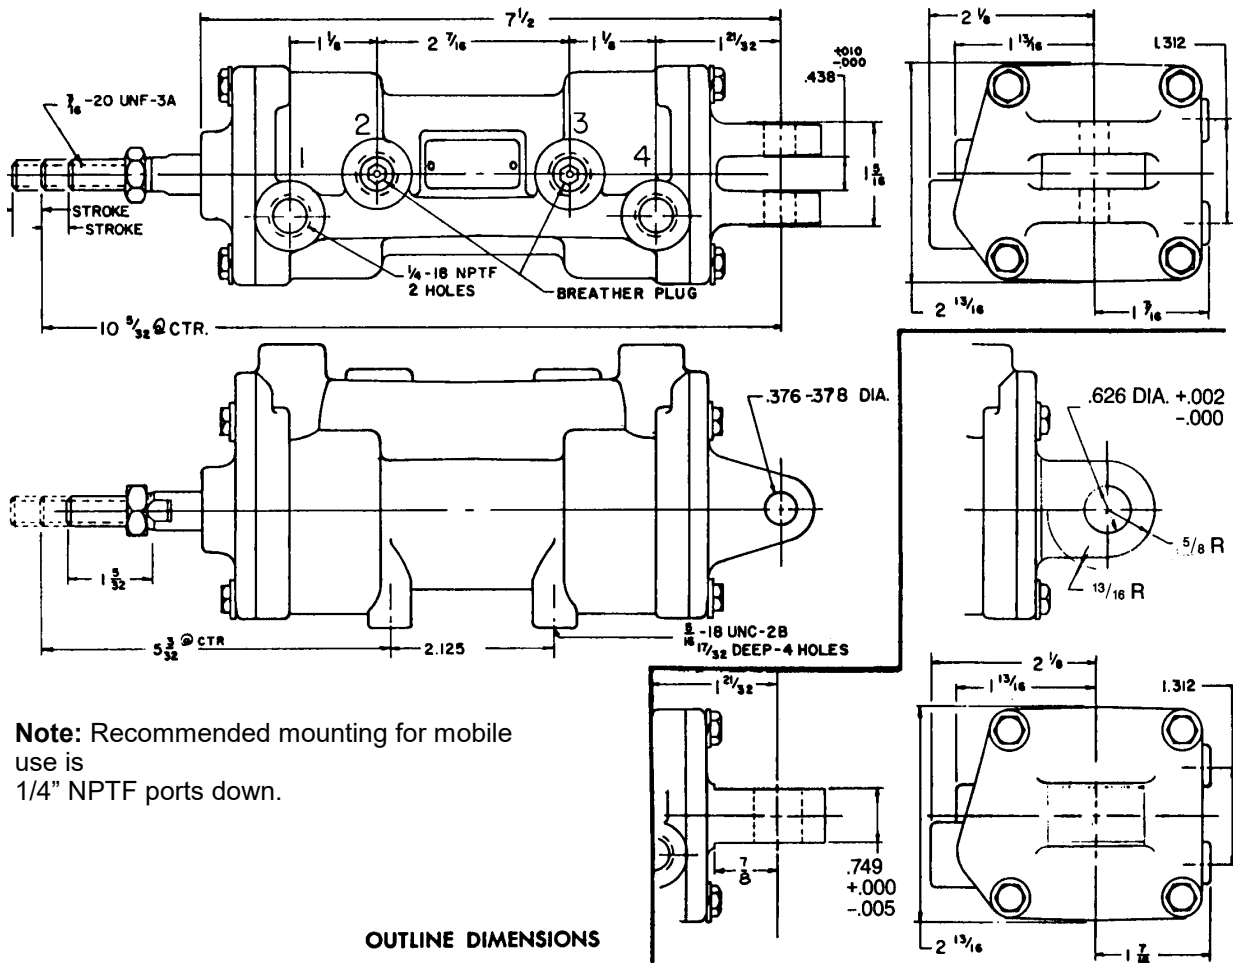

**Note:** Recommended mounting for mobile use is  $1/4$ " NPTF ports down.

**OUTLINE DIMENSIONS**

## Multi-position Air Cylinders

### Four Position, All Air



#### Specifications:

Operating pressure:	150 psi (10.3 bar) max.
Temperature range:	-40° F to 180° F (-40° C to 82° C)
Ports:	1/4" NPTF
Mounting:	integral female clevis

The four-position cylinder is a positioning device controlled by a four-position control valve such as the 2-HA-3 Pilotair® valve. The cylinder has a wide range of applications, being particularly suited for shifting transmissions and positioning hydraulic valves. It is corrosion-resistant and constructed of lightweight, die-cast, anodized aluminum heads, pistons and body.

Maximum stroke of the piston rod for each cylinder is 3/4" (19.1 mm) between each of the four positions, making a total piston rod travel of 2-1/4" (57.2 mm). External envelope dimensions of the cylinder do not change, but shorter strokes are available in increments of 1/6" (1.6 mm) for each position. The complete model number (same as old part number) for the cylinder and the piston stop for cylinders with equal-stroke increments will have an identical five-digit suffix. The first digit is always zero; the last four digits show the stroke in thousandths of an inch.

#### Installation & Adjustment

Because cylinders are installed at the end of the air system, they are vulnerable to dirt and moisture carried through the air lines. Therefore, before installing the four-position cylinder, all air lines in the system should be blown clean. It is recommended that the cylinder be mounted with the ports facing down. Gravity can then assist in preventing foreign material from accumulating in the cylinder by removing it through the control valve exhaust.


In providing a mounting for the cylinder, an adjustable link must be included between the piston rod and the lever to which the rod is connected. The cylinder stroke should be checked in one of its intermediate positions when aligned with the lever to be operated. Supply air as indicated in the "Rod Position - Ports Supplied" table on this page, and check for exact register. In this position, the clevis pin should be free from load.

This procedure will allow any inaccuracies in leverage ratio or manufacturing tolerance to be

absorbed at the extremes of the stroke where exact registration is of least importance. Also, any inaccuracies will be divided between the extreme positions. When alignment is done at one of the extreme positions, inaccuracies are all in the same direction.

#### Operation

Maximum operating pressure of the four-position cylinder is 150 psi (10.3 bar) at a temperature range of -40° F to 180° F (-40° C to 82° C). The cylinder assumes any one of its four positions when air pressure from the control valve is supplied in accordance with the table below.

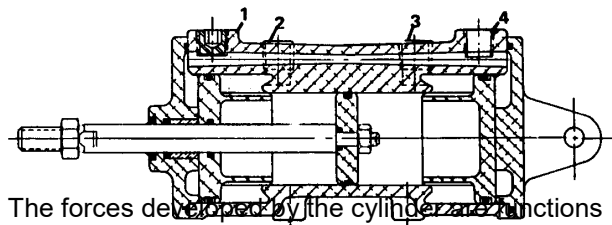

The forces developed by the cylinder are functions of piston exposed areas and amount of air pressure applied, and are shown in the following table according to rod position.


**Rod Position - Ports Supplied**

Net Force with 100 psi (6.9 bar) Air Pressure	Pounds (N)	Ports Supplied*
Pos. 1 (extended) to Pos. 2	171 (761)	3 & 4
Pos. 2 to Pos. 1	207 (921)	3
Pos. 2 to Pos. 3	188 (836)	2 & 4
Pos. 3 to Pos. 2	210 (934)	3 & 4
Pos. 3 to Pos. 4	188 (836)	2
Pos. 4 (retracted) to Pos. 3	210 (934)	2 & 4

\*Ports 1 & 4 are internally connected.

Ordering Information			
Part No.	Old Part No./ Code	Model	Stroke (each side of center) in. (mm)
R431004082	P -057386-00375		3/8 (9.5)
R431004083	P -057386-00500		1/2 (12.7)
R431004084	P -057386-00625		5/8 (15.9)
R431009110	P -057386-00688		11/16 (17.5)
R431004085	P -057386-00750		3/4 (19.1)

Repair kit part number: R431005250 (old P -059820-00000). With this repair kit, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manual SM-1000-4921.

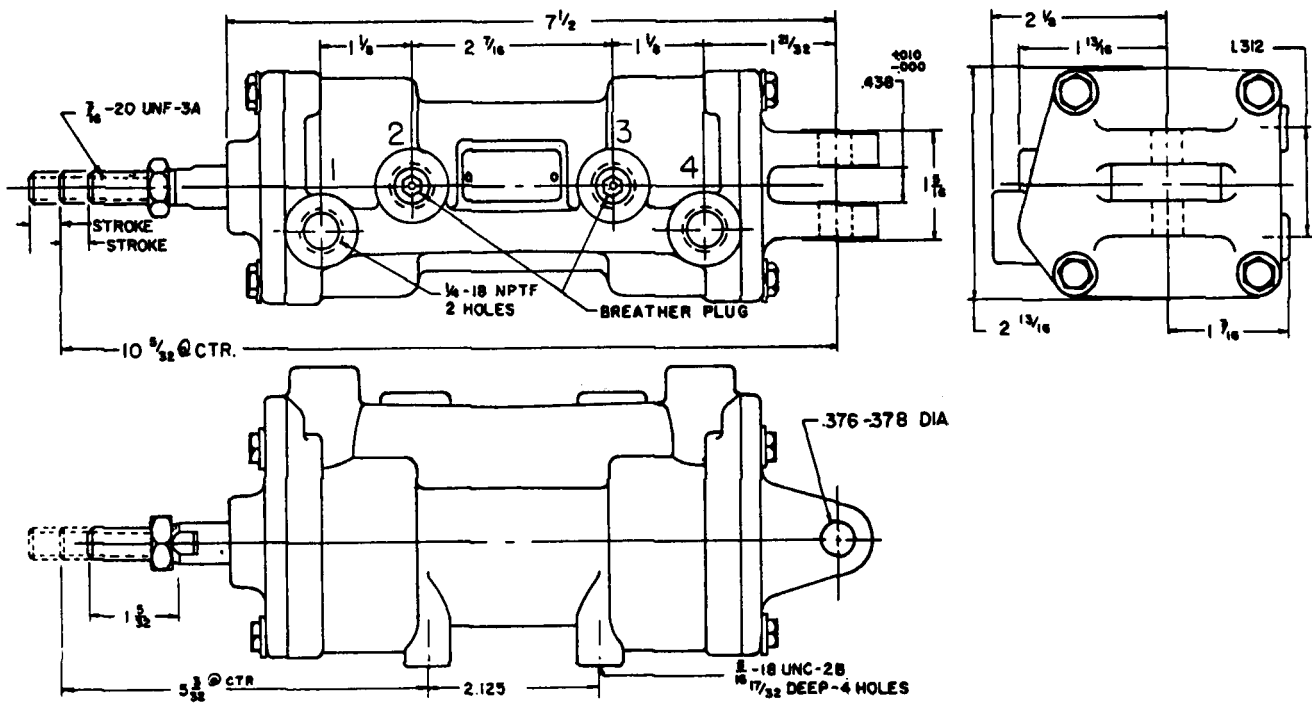

**Note:** Recommended mounting for mobile use is 1/4" NPTF ports down.

**OUTLINE DIMENSIONS**

**Multi-position Air Cylinders**  
Five Position, Block Type, Fixed Stroke



**Specifications:**

Operating pressure: 250 psi (17.2 bar) max.  
 Temperature range: -40° F to 160°F (-40° C to 71° C)  
 Ports: 1/4" NPTF  
 Mounting: mounting holes in body

The five-position cylinder is a positioning device which will assume five unique positions; part number R431005635 increments are 7/16" (11.1 mm), part number R431009120 increments are 1/4", 5/8", 5/8" and 1/4" (6.4, 15.9, 15.9 and 6.4 mm). The cylinder was designed primarily for transmission shifting, however, is easily adaptable for general use. The cylinder is constructed of rugged corrosion-resistant materials and is designed to operate at pressures up to 250 psi (17.2 bar).

The five-position cylinder is operated by a 2-HA-4 Pilotair® valve, part number R431004541 (see catalog SC-700). Install the valve and connect the four lines to the cylinder. Connect valve port 1R to cylinder port 2, valve port 2L to cylinder port 3, valve port 1L to cylinder port 4 and valve port 2R to cylinder ports 1 and 5 externally.

The following table illustrates the operation of the

cylinder in each of the five positions:

CYLINDER PARTS	PORTS TO WHICH PRESSURE IS SUPPLIED				
	1	2	3	4	5
F <sub>3</sub>		X			
F <sub>2</sub>		X		X	
F <sub>1</sub>	X	X			X
N	X		X		X


The thrust available at the end of the piston rod varies as it travels from one position to another. The following tabulation illustrates these thrusts according to the direction of travel while the cylinder is operating with a supply pressure of 100 psi (6.9 bar).

- F3 to F2 - 182 pounds (810)
- F2 to F1 - 182 pounds (810)
- F1 to N - 191 pounds (850)
- N to R - 191 pounds (850)
- R to N - 143 pounds (636)
- N to F1 - 172 pounds (765)
- F1 to F2 - 152 pounds (676)
- F2 to F3 - 172 pounds (765)

**Ordering Information**

Part No.	Old Part No./ Model Code	Stroke increments
R431005635	P -060960-00002	7/16"
R431009120	P -068501-00000	1/4", 5/8", 5/8" & 1/4"

Repair kit part number: R431005658 (old P -061067-00000). With this repair kit, the elastomer seals and some common wear parts on the component are renewed. On severely worn or damaged components, additional parts may be required. For additional parts, information and service instructions, refer to Service Manual SM-1000.4901.

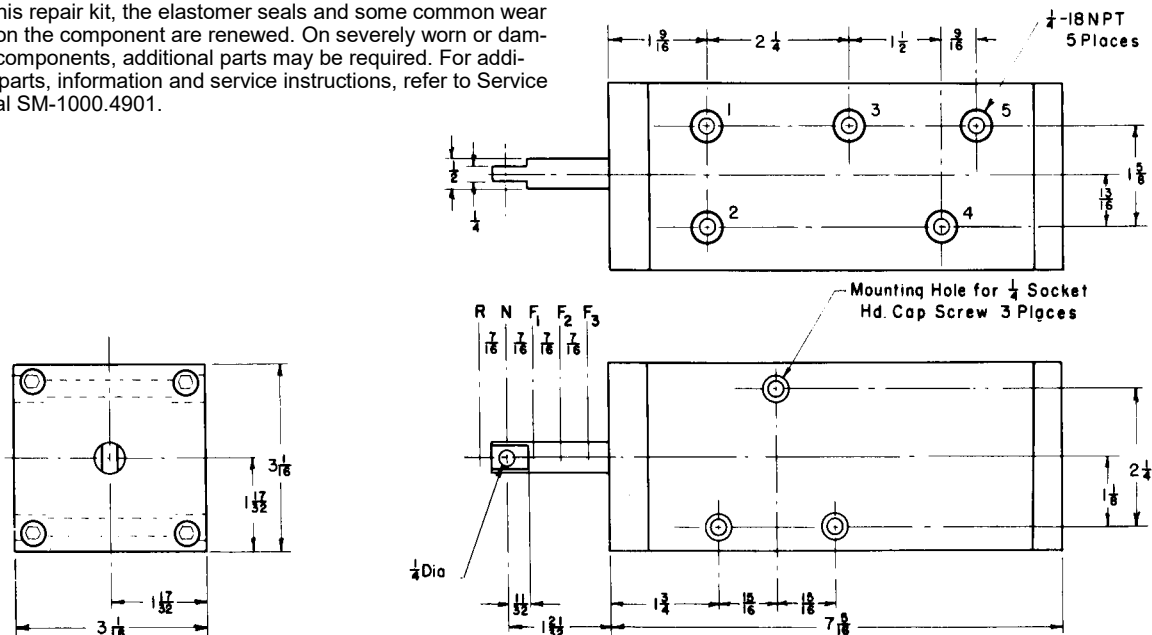

## Multi-position Air Cylinders Six and Seven Position



### Specifications:

Operating pressure:	150 psi (10.3 bar) max.
Temperature range:	-40° F to 160°F (-40° C to 71° C)
Ports:	1/4" NPTF
Mounting:	integral mounting lugs

The six and seven position cylinders are medium duty pneumatic positioning devices that operate through six or seven pre-determined positions of 1/2" (12.7 mm) increments with total strokes of 2-1/2" (63.5 mm) or 3" (76.2 mm) respectively. They were primarily designed for power-shift transmissions but may also be utilized for indexing and any other application where fixed stroke increments are required. The ideal companion valve for these cylinders is AVENTICS "P" Rotair® six or seven position valve. An alternative control is an electro-pneumatic switching circuit using 3-way solenoid valves. These cylinders are extremely rugged, having anodized, corrosion-resistant, lightweight aluminum body, pistons and piston stops. Seals are a Teflon coated nitrile compound.

### Installation

Mount the cylinders in any desirable plane to a sturdy, flat surface (preferably with the ports facing down) with three 3/8" bolts. Mounting lugs are cast in the body of the cylinders. Avoid misalignment with the load to be positioned since side thrust and binding will affect the service life of the rod bearing and piston stop seals.

All ports are 1/4"-18 NPTF. The following ports should be piped together with "T" connections: 3 with 3A on the six position cylinder, 3 with 3A and 6 with 6A on the seven position cylinder. Connections should be made as close to the cylinder as possible to reduce the number of lines from the control valve.

### Operation

Maximum operating pressure is 150 psi (10.3 bar) at a temperature range of -40° F to 160° F (-40° C to 71° C). The cylinder piston rod reaches its various positions in response to pressure being supplied to the cylinder ports as shown in the porting diagrams, V means air must be vented to atmosphere, S means air must be supplied and S/V means port can be supplied or vented, whichever is most convenient in the control valve. Each cylinder has reverse at full extended position of the rod and is spring returned to neutral (next position in from reverse) from any position. The transmissions which these cylinders usually control have the full automotive or drive position adjacent to neutral. The corresponding position is 5 on the seven position and 4 on the six position cylinder.

The sequential order of cylinder position is a function of the "P" Rotair valve.

**Control Valve Notes:** "P" Rotair valve R431006324 was designed to control six position cylinder R431006322 and valve R431006326 was designed to control seven position cylinder R431006321. Both of the Rotair valves have first gear position adjacent to neutral and progress toward full automatic at the extreme position of valve handle travel (see catalog SC-700).

Six position Rotair R431006324 should be connected as follows: ports no. 1 & no. 5 plugged, exhaust port is 1/8" NPTF, pressure is supplied to unnumbered port in the side of the pipe bracket, valve port no. 2 to cylinder port no. 2, valve no. 4 to cylinder no. 5, valve no. 3 to cylinder no. 3 and 3A, and valve port no. 6 to cylinder port no. 6A in six position cylinder R431006322.

Seven position Rotair R431006326 should be connected as follows: port no. 1 plugged, exhaust port is no. 4, pressure is supplied to unnumbered port in the side of the pipe bracket, valve port no. 2 to cylinder port no. 2, valve no. 5 to cylinder no. 5, valve no. 3 to cylinder no. 3 and 3A, and valve port no. 6 to cylinder no. 6 and 6A in seven position cylinder R431006321.

The forces developed by the cylinder are functions of the air pressure applied to the exposed piston area and are tabulated for rod movement at the various stroke positions as shown on the charts on following pages. The internal spring returns the piston rod to its "Neutral" position when air pressure is intentionally or unintentionally exhausted from all control lines. This safety feature returns the transmission to neutral if the air supply is lost.

### Repair Kit:


R431006546 (old part no. P -064997-00001)

### Replacement Spring:


R431006375 (old part no. P -064191-00000)

**Service Manual:** SM-1000.4905

**SIX POSITION CYLINDER**  
**M4-N-1B CYLINDER**  
Cast Aluminum Body

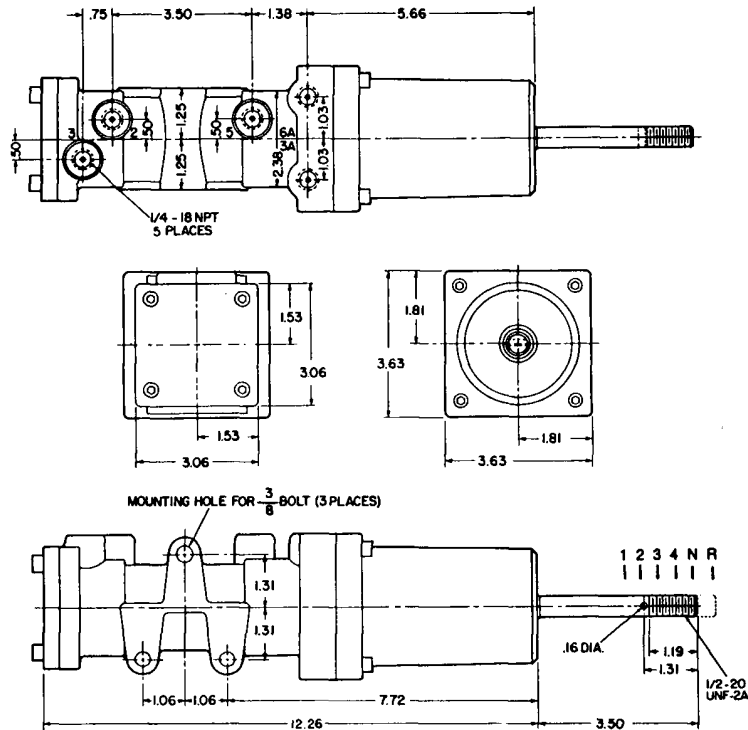


CONDITION OF PORTS					
CYLINDER POSITION	CAVITY				
	3	2	5	3A	6A
R	S/V	S	V	V	V
N	S/V	V	V	V	V
4	SV	V	V	V	S
3	SV	V	V	S	V
2	S	V	S	SV	SV
1	V	V	S	SV	SV
S SUPPLIED			V VENTED		

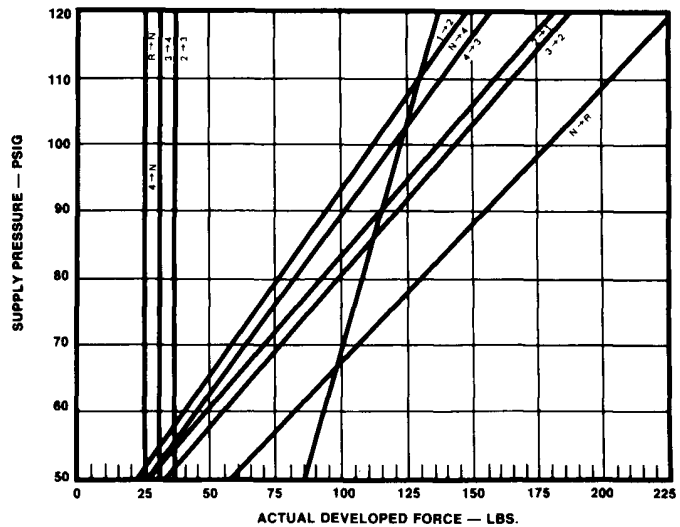

**ASSEMBLY VIEW**

PORT & CAVITY NUMBERS



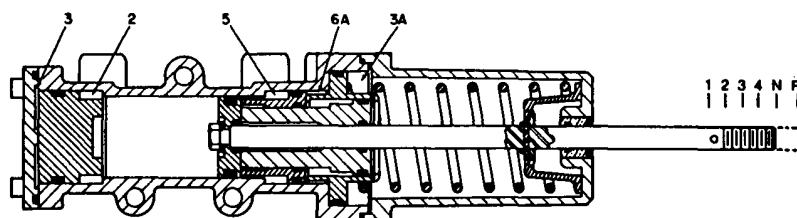


R431006322 (old part no. P -063982-00001)


**SEVEN POSITION CYLINDER**

**M5-N-1B CYLINDER**

Cast Aluminum Body

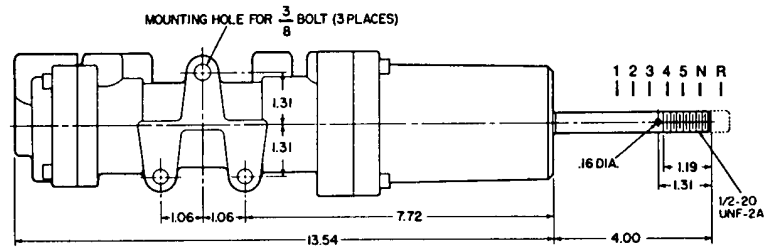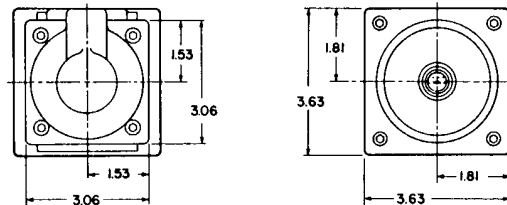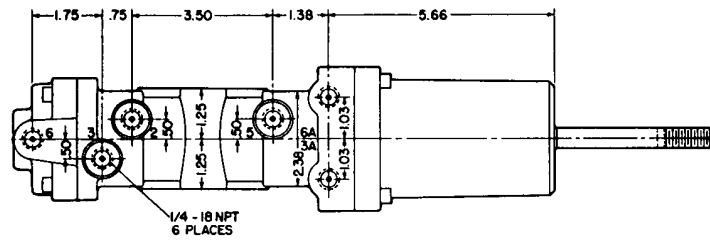


CONDITION OF PORTS						
CYLINDER POSITION	CAVITY					
	6	3	2	5	3A	6A
R	SV	SV	S	V	V	V
N	SV	SV	V	V	V	V
5	SV	SV	V	V	V	S
4	SV	SV	V	V	S	V
3	SV	S	V	V	SV	SV
2	S	V	V	S	SV	SV
1	V	V	V	S	SV	SV
S SUPPLIED			V VENTED			

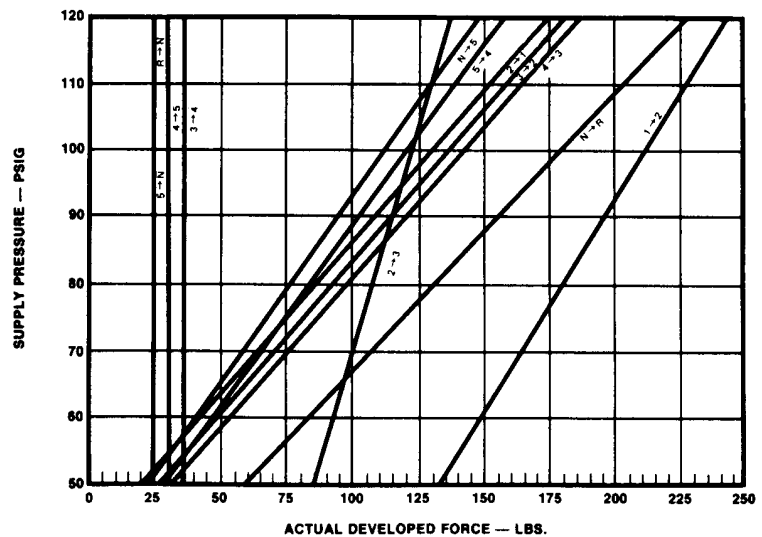

**ASSEMBLY VIEW**

PORT & CAVITY NUMBERS

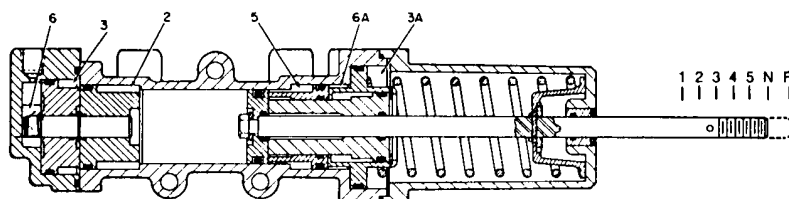

R431006321 (old part no. P-063981-00002)



**Specifications:**

Operating pressure:	150 psi (10.3 bar) max.
Temperature range:	-40° F to 160° F (-40° C to 71° C)
Ports:	1/4" NPTF
Mounting:	integral mounting lugs
Weight:	11.5 lbs. (5.2 kg)

The eight position cylinder is a medium duty pneumatic positioning device that operates through eight pre-determined positions of 3/8" (9.5 mm) increments with a total stroke length of 2-5/8" (66.7 mm). Although it was primarily designed for power-shift transmissions, it may also be utilized for indexing and any other application where fixed stroke increments are required. The ideal companion valve for the cylinder is AVENTICS "P" Rotair® eight position valve. An alternative control is an electro-pneumatic switching circuit using 3-way solenoid valves. The cylinder is extremely rugged, having anodized, corrosion-resistant, lightweight aluminum body, pistons and piston stops. Seals are a Teflon coated nitrile compound.

**Installation**

Mount the cylinder in any desirable plane to a sturdy, flat surface (preferably with the ports facing down) with three 3/8" bolts. Mounting lugs are cast in the body of the cylinders. Avoid misalignment with the load to be positioned since side thrust and binding will affect the service life of the rod bearing and piston stop seals.

All ports are 1/4"-18 NPTF pipe size. The following ports should be piped together with "T" connections: 1 with 1A , 3 with 3A and 6 with 6A. Connections should be made as close to the cylinder as possible to reduce the number of lines from the control valve.

**Control Valve Notes:** When the "P" Rotair valve R431003806 or R431003807 is used, the ports on cylinder R431003808 correspond directly to the port numbers on the valve. When cylinder R431003967 is utilizing port no. 2 on the valve, it should be connected to port no. 5 on the cylinder; and port no. 5 on the valve should be connected to port no. 2 on the cylinder to provide the reversal of the neutral position in that cylinder.

**Operation**

Maximum operating pressure of the eight-position

cylinder is 150 psi (10.3 bar) at a temperature range of -40° F to 160° F (-40° C to 71° C). The cylinder assumes any one of its eight positions when air pressure from the control valve is supplied in accordance with the tables on the following pages.

The forces developed by the cylinder are functions of the air pressure applied to the exposed piston area and are tabulated for rod movement at the various stroke positions as shown on the charts on following pages. The internal spring returns the piston rod to its "Neutral" position when air pressure is intentionally or unintentionally exhausted from all control lines. This is a safety feature that insures against operation in case of loss of air supply.

In the event that an application may not need the above feature, cylinder R431005699 with no return spring is available.

These cylinders should be mounted with the pipe ports pointed down to avoid accumulation of condensate in the cylinder pressure spaces. Drain holes are also provided on the port side in the front spring housing for the same reason on R431003808 and R431003967.

**Repair Kit for R431003808:**

R431003973 (old part no. P -056556-00005)

**Repair Kit for R431003967:**

R431003972 (old part no. P -056556-00004)

**Repair Kit for R431005699:**

R431006462 (old part no. P -064556-00001)

**Service Manual:** SM-1000.4904




Multi-position Air Cylinders  
Eight Position



ORDERING REFERENCE  
M6-N-1B EIGHT POSITION CYLINDER

Part no. R431003808 (old part no. P-05557-00003)

ASSEMBLY VIEW




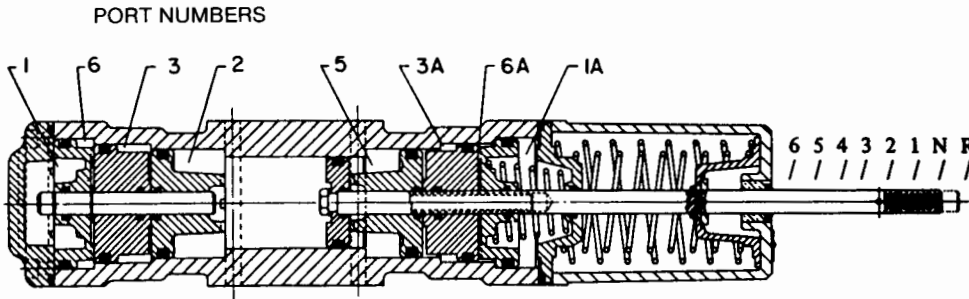


PORTING DIAGRAM

Cyl. Position	CAVITY							
	1	6	3	2	5	3A	6A	1A
R	S/V	S/V	S/V	S	V	V	V	V
N	S/V	S/V	S/V	S	V	V	V	S
F1	S/V	S/V	S/V	V	V	V	S	S/V
F2	S/V	S/V	S/V	V	V	S	S/V	S/V
F3	S/V	S/V	S	V	S	S/V	S/V	S/V
F4	S/V	S	V	V	S	S/V	S/V	S/V
F5	S	V	V	V	S	S/V	S/V	S/V
F6	V	V	V	V	S	S/V	S/V	S/V


S = Supplied, V = Vented, S/V = Supply or Vented

OUTLINE DIMENSIONS

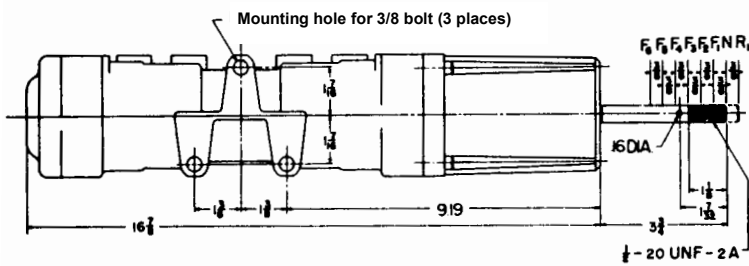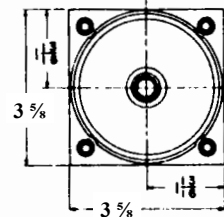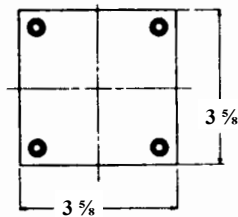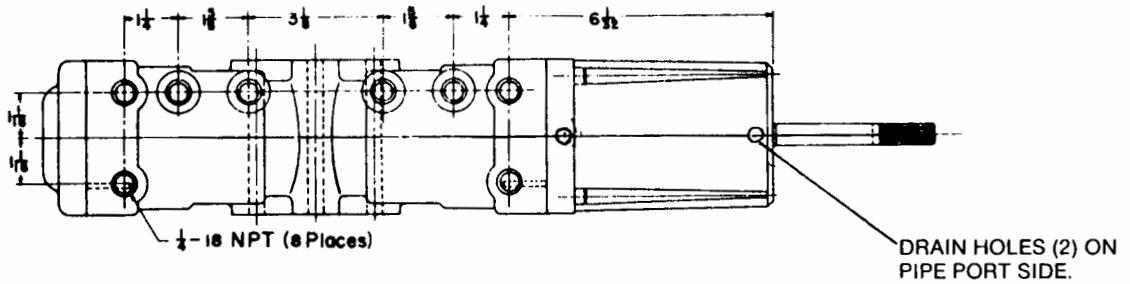

REVERSE IN EXTENDED POSITION

AVAILABLE FORCES

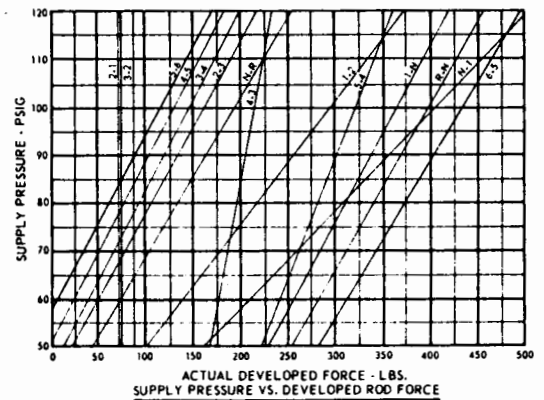

Denotes rod travel from position 5 to position 6 (typical)

Note: Actual force in lbs. available in position N (zero air pressure) 70 lbs.

Figure 5

**Multi-position Air Cylinders**  
Eight Position




**ORDERING REFERENCE**  
**M1-N-6B EIGHT POSITION CYLINDER**

Part no. R431003967 (old part no. P-056426-00004)

**ASSEMBLY VIEWS**




**PORTING DIAGRAM**

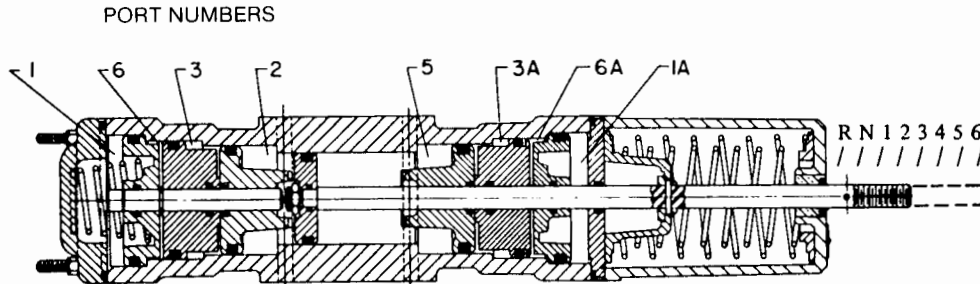

Cyl. Position	CAVITY							
	1A	6A	3A	2	5	3	6	1
R	S/V	S/V	S/V	V	S	V	V	V
N	S/V	S/V	S/V	V	S	V	V	S
F1	S/V	S/V	S/V	V	V	V	S	S/V
F2	S/V	S/V	S/V	V	V	S	S/V	S/V
F3	S/V	S/V	S	S	V	S/V	S/V	S/V
F4	S/V	S	V	S	V	S/V	S/V	S/V
F5	S	V	V	S	V	S/V	S/V	S/V
F6	V	V	V	S	V	S/V	S/V	S/V



S = Supplied, V = Vented, S/V = Supply or Vented

**OUTLINE DIMENSIONS**

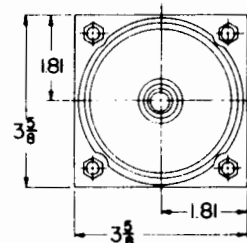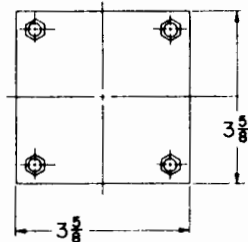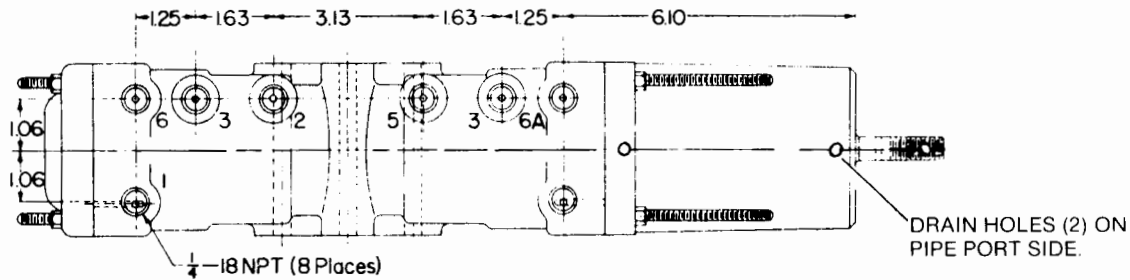

REVERSE IN RETRACTED POSITION

**AVAILABLE FORCES**

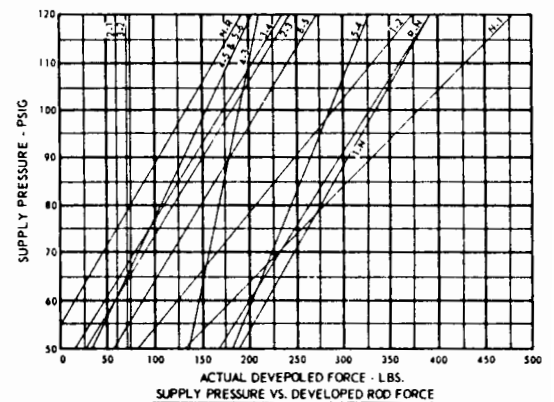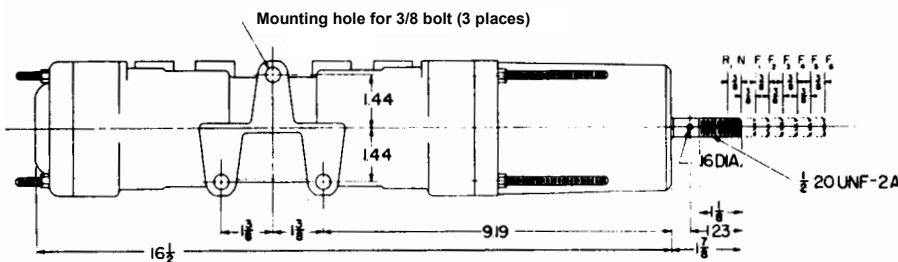

Denotes rod travel from position N to position R (typical)

Note: Actual force in lbs. available in position N (zero air pressure) 70 lbs.

**Figure 6**

# Multi-position Air Cylinders

## Eight Position



### ORDERING REFERENCE

### M8 EIGHT POSITION CYLINDER

Part no. R431005699 (old part no. P -061185-00002)

#### PORTING DIAGRAM

Cyl. Position	CAVITY							
	1	6	3	2	5	3A	6A	1A
1	S/V	S/V	S/V	S	V	V	V	V
2	S/V	S/V	S/V	S	V	V	V	S
3	S/V	S/V	S/V	S	V	V	S	S/V
4	S/V	S/V	S/V	S	V	S	S/V	S/V
5	S/V	S/V	S	V	S	S/V	S/V	S/V
6	S/V	S	V	V	S	S/V	S/V	S/V
7	S	V	V	V	S	S/V	S/V	S/V
8	V	V	V	V	S	S/V	S/V	S/V

S = Supplied, V = Vented, S/V = Supply or Vented

#### PORT NUMBERS





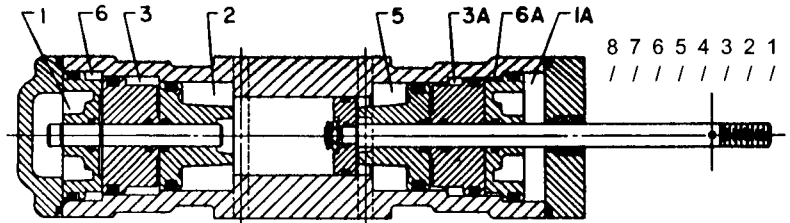


Figure 4

#### OUTLINE DIMENSIONS

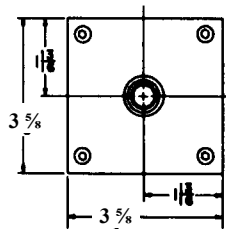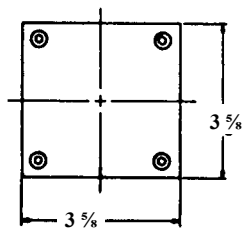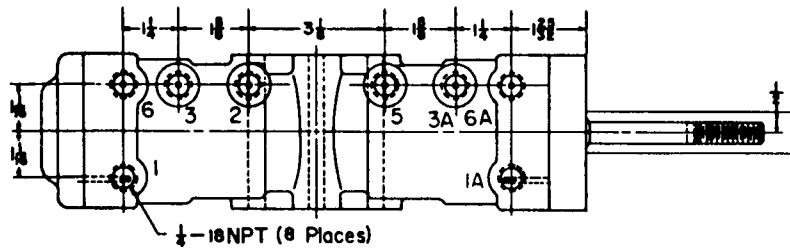

Mounting hole for 3/8 bolt (3 places)

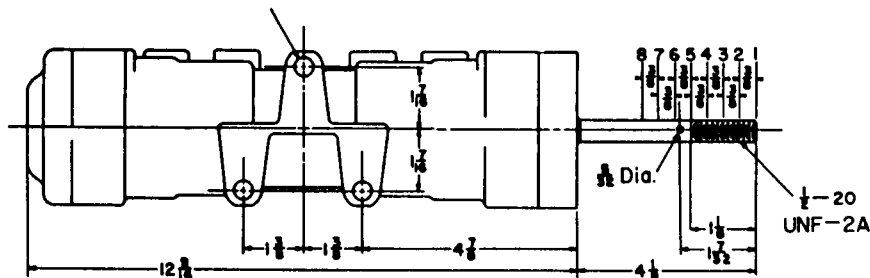


#### Available Forces

Movement	Net Area	Ff
2 ← 1	3.12	28.1
2 → 1	3.14	19.9
3 ← 2	2.06	2.4
3 → 2	3.14	19.9
4 ← 3	1.06	10.1
4 → 3	3.14	16.6
5 ← 4	2.95	8.4
5 → 4	3.14	10.0
6 ← 5	2.95	16.9
6 → 5	1.25	16.4
7 ← 6	2.95	16.9
7 → 6	2.25	11.6
8 ← 7	2.95	18.1
8 → 7	3.31	15.6

P = Pressure  
A = Net Area in<sup>2</sup>  
Ff = Approximate Friction in lbs.  
Force = (P x A) - Ff

The basic AVENTICS pneumatic multi-position control system consists of a multi-position power cylinder and a rotary type selector valve connected by only air lines. An air supply pressure in the range of 90 - 150 psig (6.2 - 10.3 bar) is connected to the rotary valve. For each handle position of the rotary valve, a different combination of the air lines is pressurized - causing the cylinder to move to corresponding positive positions and hold in these positions. A typical single circuit for seven position cylinders is diagrammed below. (see pages 30-34 for other circuits)

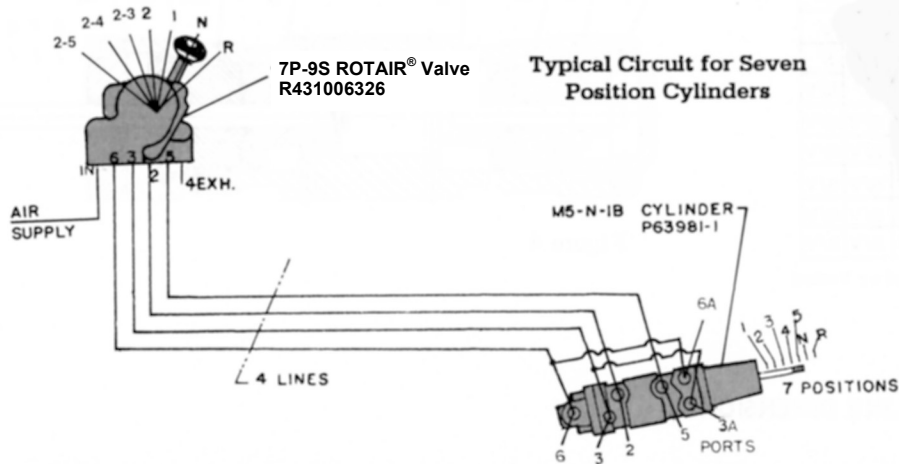






**7P-9S ROTAIR® Pneumatic Directional Valve - R431006326**


Consists of a subplate portion containing air strainers in each port connection, a seat and rotary disc valve section, a handle operating section containing the handle labyrinth and position detents, and an interlock switch section with a SPDT switch depressed only when the handle is in N position. Note the open labyrinth design which permits the handle to be moved quickly between desired positions and to N Position. Detents for each position permit the operator to feel the handle location for each selection. When the handle is released, it spring offsets between two pins to help prevent inadvertent operation. A complete description, dimensions, parts and service information is contained in service manual SM-700.7600.

Porting Diagram  
Part no. R431006326 7P-9S ROTAIR Valve

HDL. POS.	PRESSURE SUPPLIED TO PORTS			
	6	3	2	5
R			X	
N				
1				X
2	X			X
2-3	X	X		X
2-4		X		
2-5	X			

Port in side of the pipe bracket is "IN" port. Port #4 is exhaust. #1 is plugged.

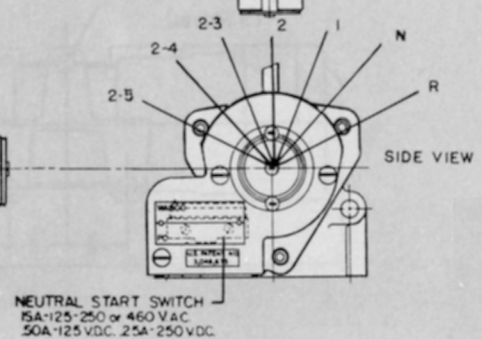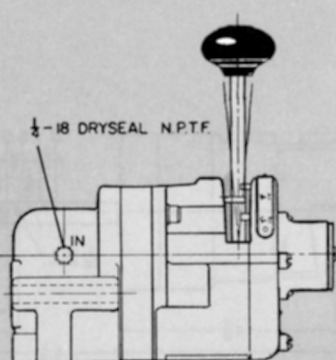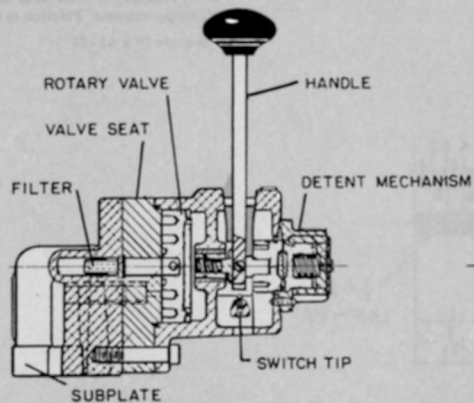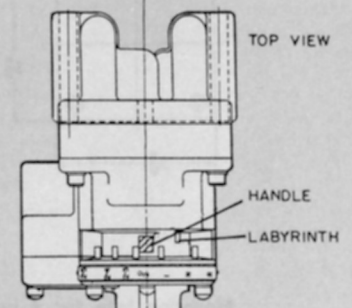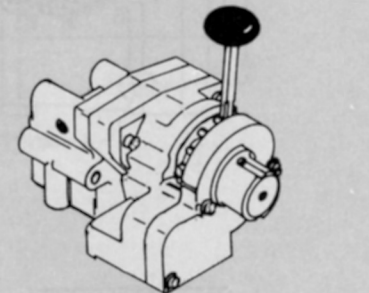

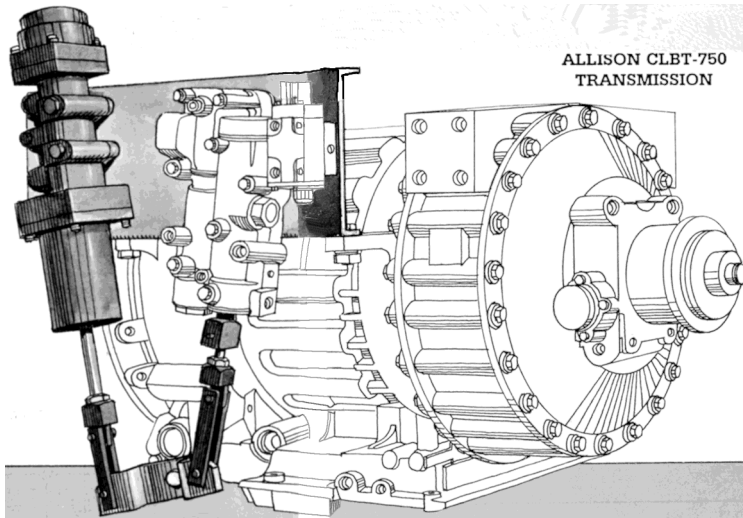

LINEAR POSITIONING CYLINDER

- Positive linear positioning
- Each position held with rated forces
- Six or seven positions
- Cylinder forces can position both automatic selection lever and manual step control valve
- Spring return to neutral on loss of air pressure
- Minimum number of parts
- Easy service

ROTARY CONTROL VALVE

- Multi-position valve handle permits quick selection of any speed
- Valve position sequence: R-N-F1-F2-F3-F4-F5 (manual mode); R, N, 1, 2, 2-3, 2-4, 2-5 (automatic mode)
- Quick shift to N with open labyrinth & detents on valve handle
- Neutral position interlock switch
- SPDT switch built in valve for starting interlock
- Compact, subplate mounting for easy servicing
- Integral line filters in valve assembly



NO ELECTRICAL CONNECTIONS OR CABLE REQUIRED FOR OPERATION

- Only four (4) air line connections from cylinder to valve
- Wiring is required for neutral start switch (interlock)

MULTIPLE STATION CONTROL • EASY MOUNTING

**M5-N-1B Seven Position Cylinder - R431006321**

Consists of a main body section containing piston and piston stops, and a nose section containing a caged spring assembly for control of the cylinder to neutral position. The cylinder has six ports which are interconnected to the four lines from the control valve. Each positive position is determined by the internal stop and sleeves as shown. A complete description, dimensions, parts and service information is contained in service manual SM-700.4905.

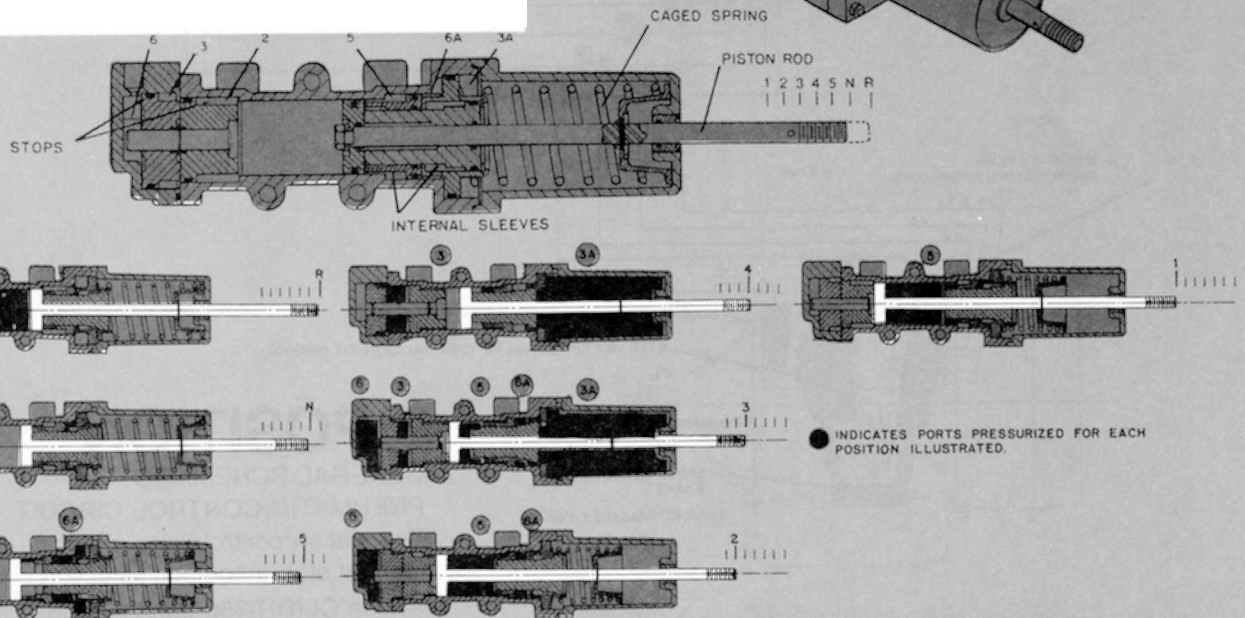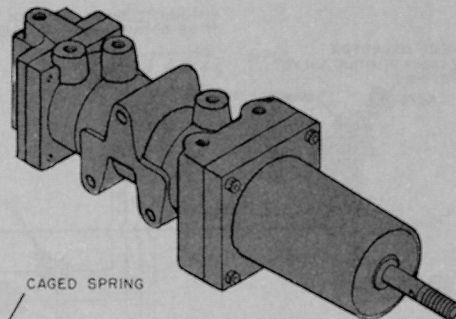

## ALLISON 750 SERIES TRANSMISSION FOR MANUAL/AUTOMATIC OPERATION ON OILFIELD EQUIPMENT


Allison Transmission obsoleted the model CLT 4460 transmission used widely on mobile oil well drilling and servicing equipment. It was replaced with the 750 series transmission.

The CLT 4460 transmission was a manual power-shift model and the CL(B)T-750 is basically an automatic shift model. In response to oilfield requirements, Allison developed a manual/automatic kit for the CL(B)T-750 transmission which permits the selection of either full automatic or manual step operation. This permits a mobile rig to be "roaded" in full automatic and "worked" with manual step control for speed selection.

This dual mode kit is Allison part 6883932 and is fully described in Allison instruction sheet 109 and drawing AS45-052. For manual/automatic control 6883940 and two additional components must be installed and operated in conjunction with the normal speed selector shaft. The separate step governor valve must be operated in synchronization with the speed selector shaft, and a mode shift valve connected in the transmission hydraulic system must be operated to change the mode

of operation. Modifications to the transmission hydraulic system piping are necessary and specified in the Allison kit instructions. The special step governor valve is supplied in the Allison kit. The mode shift hydraulic valve is specified but is furnished by the customer. The dealer, or customer, is instructed to mount and pipe these valves on the transmission.

AVENTICS, in cooperation with Allison Transmission, developed a pneumatic control system for this dual mode operation of the transmission, CL(B)T-750. Allison instructions permit "roading" a vehicle only in automatic mode. They suggest an interlock be provided to prevent manual step operation when the vehicle is being "roaded". The AVENTICS system provides this feature in the form of a station select system which shifts to automatic mode whenever the driving control valve is supplied with air pressure. The system shifts to manual step mode whenever the draw works control valve is pressurized. A general schematic of the AVENTICS control system is shown below.


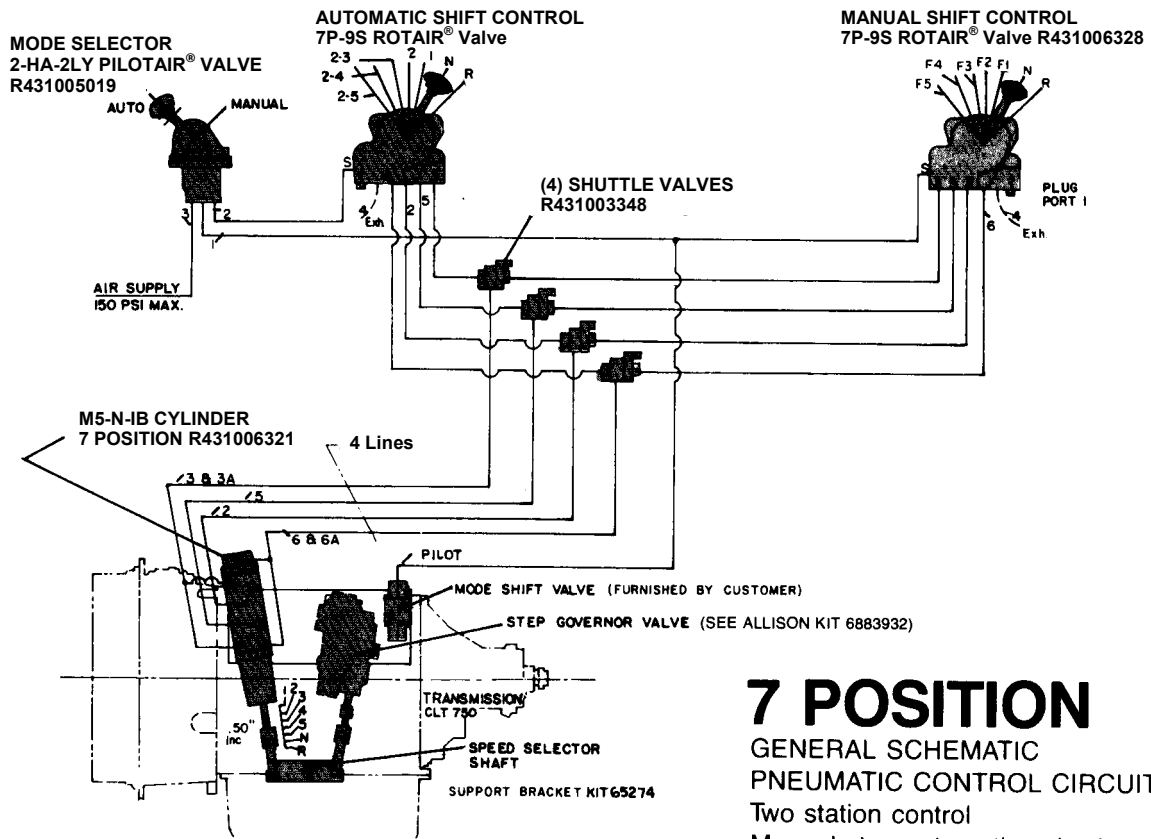



**7 POSITION**  
 GENERAL SCHEMATIC  
 PNEUMATIC CONTROL CIRCUIT  
 Two station control  
 Manual step-automatic selection  
 Allison CL(B)T-750 transmission







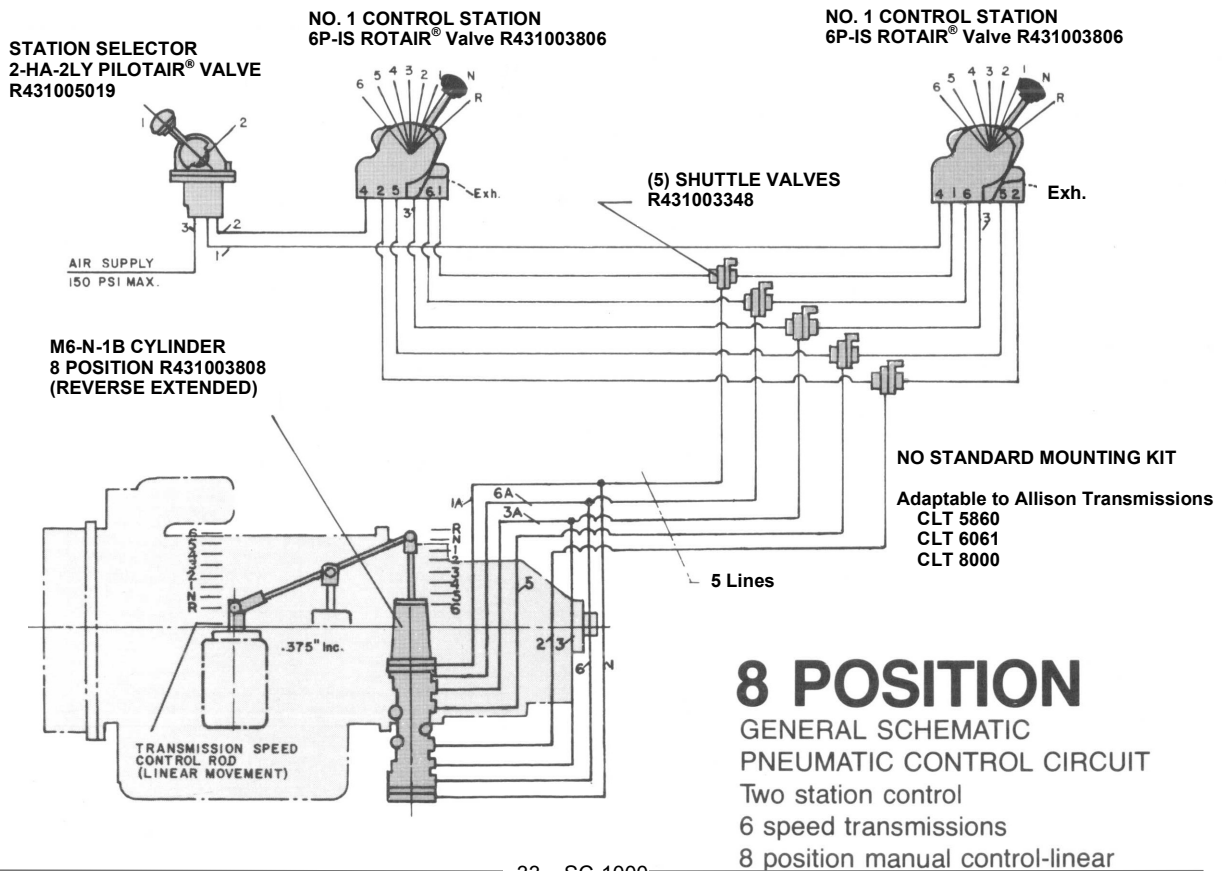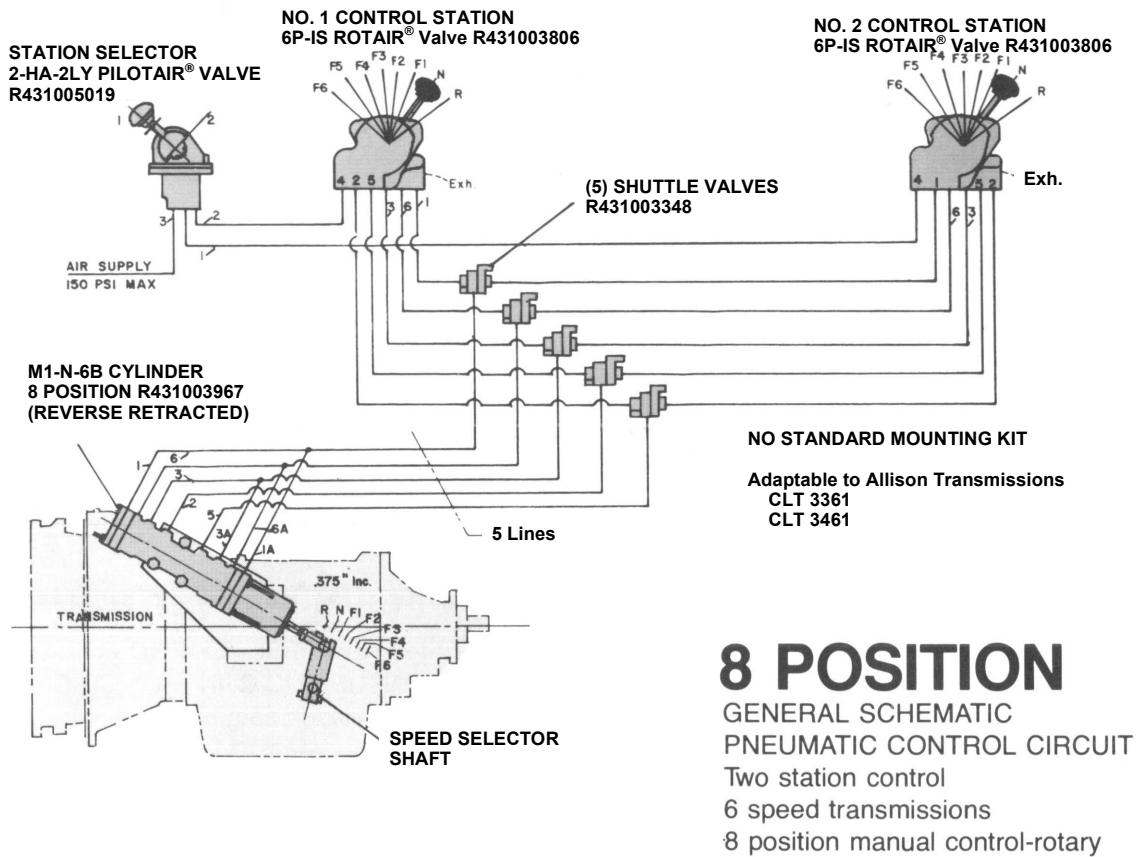

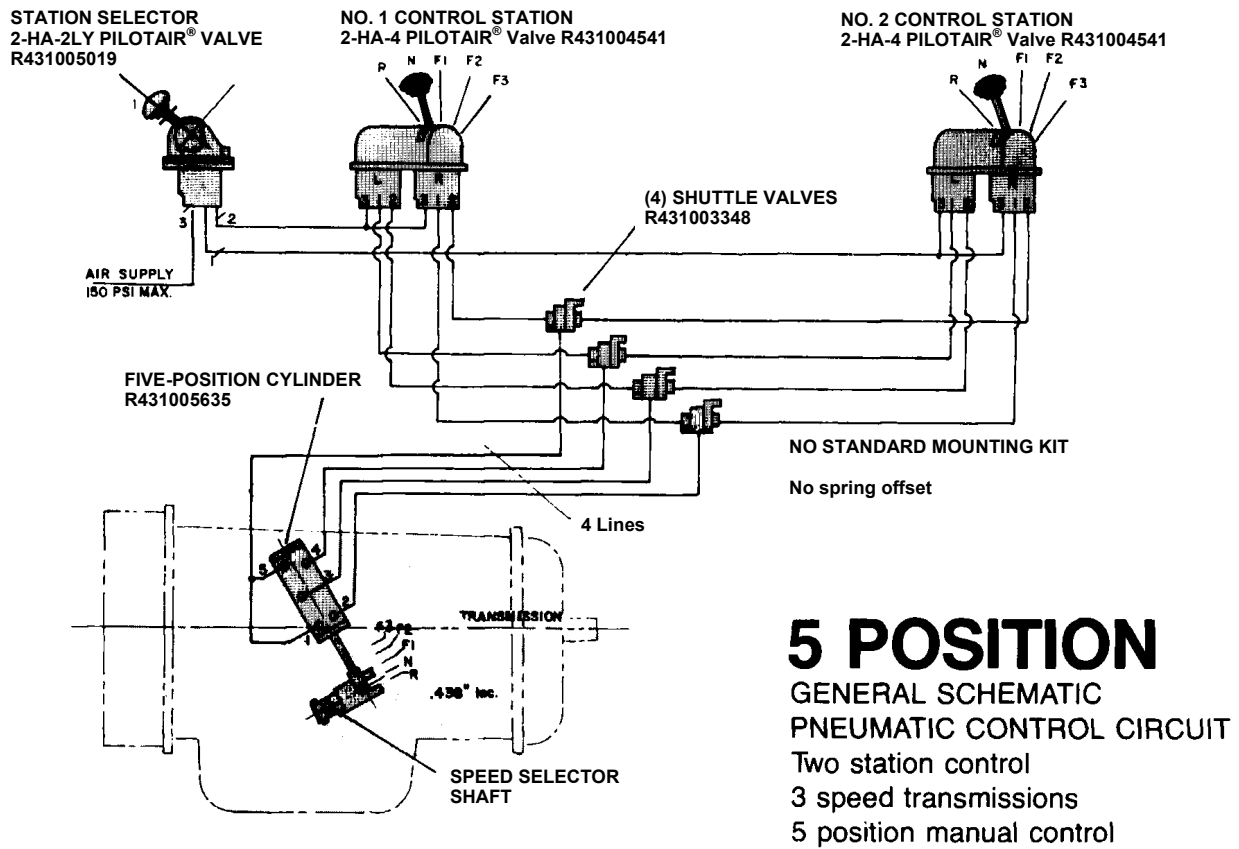


### Mounting Bracket Kit for Sundstrand Pumps

Part Number R431006426 (old part no. P-064424-00000)

Bracket and hardware for mounting AVENTICS positioner part number R431005261 to Sundstrand pump models 20 through 28.

### Dimension Reference

Mounting Bracket  
 R431006426

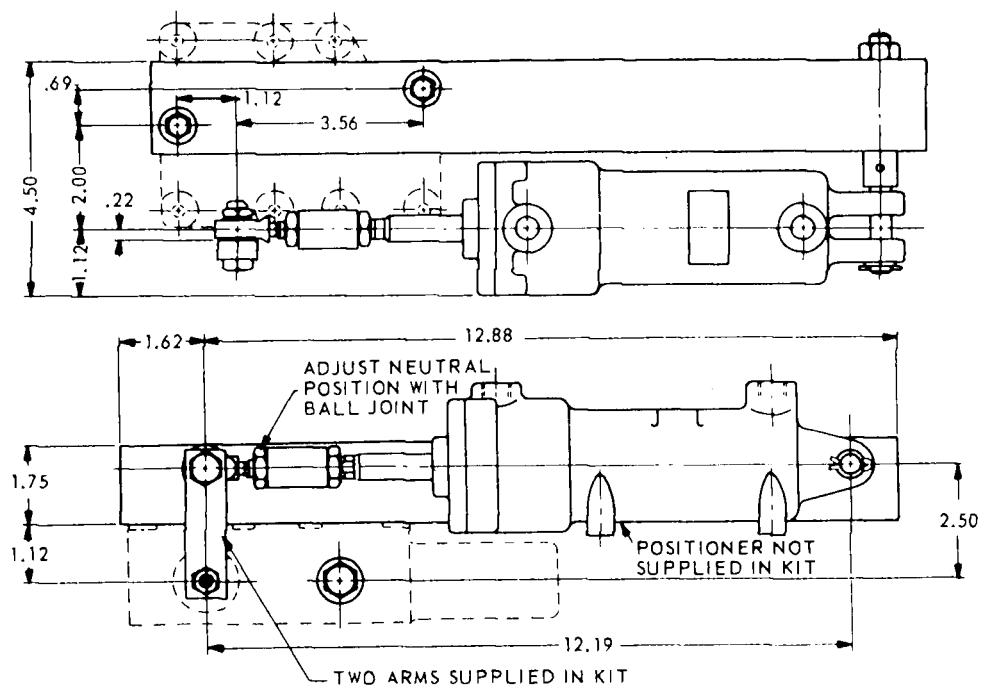

# NOTICE TO PRODUCT USERS

## 1. WARNING: FLUID MEDIA

AVENTICS pneumatic devices are designed and tested for use with filtered, clean, dry, chemical free air at pressures and temperatures within the specified limits of the device. For use with media other than air or for human life support systems, AVENTICS must be consulted. Hydraulic cylinders are designed for operation with filtered, clean, petroleum based hydraulic fluid; operation using fire-resistant or other special types of fluids may require special packing and seals. Consult the factory.

## 2. WARNING: MATERIAL COMPATIBILITY

Damage to product seals or other parts caused by the use of non-compatible lubricants, oil additives or synthetic lubricants in the air system compressor or line lubrication devices voids the AVENTICS warranty and can result in product failure or other malfunction. See lubrication recommendations below.

**AIR LINE LUBRICANTS!** In service higher than 18 cycles per minute or with continuous flow of air through the device, an air line lubricator is recommended.\* (Do not use line lubrication with vacuum products.) However, the lubricator must be maintained since the oil will wash out the grease, and lack of lubrication will greatly shorten the life expectancy. The oils used in the lubricator must be compatible with the elastomers in the device. The elastomers are normally BUNA-N, NEOPRENE, VITON, SILICONE and HYTREL. AVENTICS recommends the use of only petroleum based oils without synthetic additives, and with an aniline point between 180° F and 210° F.

**COMPRESSOR LUBRICANTS!** All compressors (with the exception of special "oil free" units) pass oil mist or vapor from the internal crankcase lubricating system through to the compressed air. Since even small amounts of non-compatible lubricants can cause severe seal deterioration (which could result in component and system failure) special care should be taken in selecting compatible compressor lubricants.

## 3. WARNING: INSTALLATION AND MOUNTING

The user of these devices must conform to all applicable electrical, mechanical, piping and other codes in the installation, operation or repair of these devices.

**INSTALLATION!** Do not attempt to install, operate or repair these devices without proper training in the technique of working on pneumatic or hydraulic systems and devices, unless under trained supervision. Compressed air and hydraulic systems contain high levels of stored energy. Do not attempt to connect, disconnect or repair these products

when a system is under pressure. Always exhaust or drain the pressure from a system before performing any service work. Failure to do so can result in serious personal injury.

**MOUNTING!** Devices should be mounted and positioned in such a manner that they cannot be accidentally operated.

## 4. WARNING: APPLICATION AND USE OF PRODUCTS

The possibility does exist for any device or accessory to fail to operate properly through misuse, wear or malfunction. The user must consider these possibilities and should provide appropriate safe guards in the application or system design to prevent personal injury or property damage in the event of a malfunction.

## 5. WARNING: CONVERSION, MAINTENANCE AND REPAIR

When a device is disassembled for conversion to a different configuration, maintenance or repair, the device must be tested for leakage and proper operation after being reassembled and prior to installation.

**MAINTENANCE AND REPAIR!** Maintenance periods should be scheduled in accordance with frequency of use and working conditions. All AVENTICS products should provide a minimum of 1,000,000 cycles of maintenance free service when used and lubricated as recommended. However, these products should be visually inspected for defects and given an "in system" operating performance and leakage test once a year. Where devices require a major repair as a result of the one million cycles, one year, or routine inspection, the device must be disassembled, cleaned, inspected, parts replaced as required, rebuilt and tested for leakage and proper operation prior to installation. See individual catalogs for specific cycle life estimates.

## 6. PRODUCT CHANGES

Product changes including specifications, features, designs and availability are subject to change at any time without notice. For critical dimensions or specifications, contact factory.

\*Many AVENTICS pneumatic valves and cylinders can operate with or without air line lubrication; see individual sales catalogs for details.

-Refer to the appropriate service manual for parts and service information, most are available for download from [www.aventics.com/us/downloads](http://www.aventics.com/us/downloads)

## WARRANTIES

7.1 Emerson warrants that:

- Emerson will transfer title to the Goods (excluding Software and Firmware) to Customer under Clause 4 of our Terms and Conditions of Sale\*;
- Goods, Documentation and Services will conform with the Specification;
- Goods made by Emerson or its Affiliates will, under normal use and care, be free from defects in materials or workmanship; and
- Emerson and its Affiliates' Personnel delivering Services are trained and will use reasonable skill and care.

7.2 **Warranty Periods.** Unless otherwise specified by Emerson, the warranties in Clause 7.1 apply as follows:

- Goods:** until the earlier of 12 months from the first installation or 18 months from delivery (90 days from delivery in the case of consumables);
- Services:** for 90 days from completion of the Services;
- Goods repaired, replacement items and Services re-performed:** from delivery of the replacement or completion of the repair or re-performance, for 90 days or until the end of the original warranty period (if later).

7.3 **Warranty Procedure.** Clause 7.3 applies if, within the warranty period, Customer discovers any non-conformity with a warranty in Clause 7.1, tells Emerson in writing and, in the case of Goods, returns the non-conforming items at Customer's cost, freight and insurance pre-paid, to the repair facility chosen by Emerson. Where this Clause applies, Emerson will, at its sole option, either:

- correct any non-conforming Documents and Services; or
- repair or replace non-conforming Goods FCA (Incoterms® 2010) at the repair location; or
- instead refund the price of the non-conforming item.

### 7.4 Exclusions from Warranty.

- The warranties in Clause 7.1(b), (c) and (d) exclude and Customer will pay the cost of all repairs and replacements caused by any of the following: normal wear and use; inadequate maintenance; unsuitable power sources or environmental conditions; improper handling, storage, installation, or operation; misuse or accident caused by anybody except Emerson; a modification or repair not approved by Emerson in writing; materials or workmanship made, provided or specified by Customer; contamination; the use of unapproved parts, firmware or software; Cyber Attack; any other cause not the fault of Emerson.
- Emerson will not pay any costs relating to non-compliance with a warranty in Clause 7.1, except where agreed in writing in advance. Unless accepted in writing by Emerson, Customer will pay:
  - all costs of dismantling, freight, reinstallation and the time and expenses of Emerson Personnel for travel under Clause 7; and
  - all costs incurred by Emerson in correcting nonconformities for which Emerson is not responsible under Clause 7 and in examining items that comply with the warranties in Clause 7.1.
- If Emerson relies on wrong or incomplete information supplied by Customer, all warranties are void unless Emerson agrees otherwise in writing.
- Customer alone is responsible for the selection, maintenance and use of the Goods.
- Resale Products carry only the warranty given by the original manufacturer. Emerson has no liability for Resale Products beyond making a reasonable commercial effort to arrange procurement and shipping of the Resale Products.

7.5 **Disclaimer.** The limited warranties set out in this Clause 7 are the only warranties made by Emerson and can be changed only with Emerson's signed written agreement. THE WARRANTIES AND REMEDIES IN CLAUSE 7 ARE EXCLUSIVE. THERE ARE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ABOUT MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE OR ANYTHING ELSE FOR ANY OF THE GOODS, DOCUMENTATION OR SERVICES.

\*Additional conditions apply - for full details, visit our website to download our Terms and Conditions of Sale:

For U.S.: [www.aventics.com/us/downloads](http://www.aventics.com/us/downloads) | For Canada: [www.aventics.com/ca](http://www.aventics.com/ca) | (AVENTICS Corporation is owned by Emerson Electric Co.)

**AVENTICS Corporation**

1953 Mercer Road  
Lexington, KY 40514  
Tel 859.254.8031  
Fax 800.489.1488  
www.aventics.com/us  
info.us@aventics.com



**AVENTICS Incorporated**

5515 North Service Rd  
Suite #104  
Burlington, Ontario L7L 6G4  
Tel 905.332.0399  
Fax 905.332.8596  
www.aventics.com/ca  
info.ca@aventics.com

Further contacts:

[www.aventics.com/en/contact](http://www.aventics.com/en/contact)

The data specified only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.