

RECTIFIER

PSR308

(Incl. Version 2)

USER MANUAL



Notes on this manual

ATTENTION! Read this manual very carefully before installing and commissioning the specified module. This manual is a part of the delivered module. Familiarity with the contents of this manual is required for installing and operating the specified module. The rules for prevention of accidents for the specific country and the general safety rules in accordance with IEC 364 must be observed.

The function description in this manual corresponds to the date of publishing. Technical changes and changes in form and content can be made at any time by the manufacturer without notice. There are no obligations to update the manual continually.

The module is manufactured in accordance with applicable DIN and VDE standards such as VDE 0106 (part 100) and VDE 0100 (part 410). The CE marking on the module confirms compliance with EU standards 2006-95-EG (low voltage) and 2004-108-EG (electromagnetic compatibility) if the installation and operation instructions are followed.

Changes and errors excepted.

Supplier:

	ELTEK DEUTSCHLAND GmbH BU Industrial Schillerstraße 16 D-32052 Herford
	+ 49 (0) 5221 1708-210
FAX	+ 49 (0) 5221 1708-222
Email	Info.industrial@eltek.com
Internet	http://www.eltek.com

Please note: No part of this document may be reproduced or transmitted in any form or by any means - electronic or mechanical, including photocopying and recording- for whatever reason without the explicit written permission of Eltek Deutschland GmbH.

Changes and errors excepted.

©2014. ELTEK DEUTSCHLAND GmbH. All rights reserved.

Revision history:

Revision	Description of change	Writer	Date
01	First edition	RTH	2006-12-04
02	Page "Current revision status" inserted, correction of the connector drawing, minor text modification point 4.3.	RTH	2007-06-29
03	Layout change, several additional pictures inserted	RTH	2007-11-05
04	Minor text modification, section "Commissioning" reworked	RTH	2008-04-07
05	Minor text modification, section 3.6	SP	2008-07-31
06	Minor text modifications, "Output is not SELV" inserted in section 8, "Index of figures" inserted	RTH	2008-10-09
1.0	New revision status numbering (X.X) introduced, values for adjustable output voltage range corrected.	RTH	2008-12-08
2.0	Indication of the input voltage range/tolerance changed.	RTH	2009-01-22
3.0	Minor changes for technical data inserted.	RTH	2009-02-25
4.0	Minor changes for technical data inserted.	RTH	2009-04-22
5.0	Minor text modifications, section 4.7 "Default value setting for NiCd batteries" inserted.	RTH	2009-07-10
6.0	"Version 2" integrated.	RTH	2010-03-23
7.0	Table "Pin assignment of the rear side connector" corrected.	RTH	2010-04-29
8.0	Minor layout changes; Technical Specifications: "Cooling"	RTH	2012-10-09
8.1	Input frequency range updated	RTH	2014-04-28

Table of Contents

1A. Safety Instructions	5
1B. Notes to Electronic Waste Disposal.....	5
2. General Information.....	6
2.1 Information about version 2	6
3. Type Range/Equipment.....	6
3.1 Main data.....	6
3.2 Available options and assembly equipment:	7
3.3 Front view/front LED panel	8
3.4 Rear side connection	9
3.5 Cooling/air flow direction.....	10
3.6 Communication interface	10
4. Handling	11
4.1 Storage	11
4.2 Commissioning	11
4.3 Charge characteristic/output power diagram	12
4.4 LED indications	13
4.5 Internal monitoring.....	13
4.6 Threshold & default values.....	14
4.7 Default value setting for NiCd batteries	14
5. External Functions.....	15
6. Maintenance	15
7. Troubleshooting	15
8. Technical Specifications.....	16
8.1 Dimensional drawings:.....	18
9. Notes	19

Index of Figures

Figure 1.) DC Power Rack DCR PSR308-4.0.....	7
Figure 2.) DC Power Rack DCR PSR308-4.8.....	7
Figure 3.) Front view	8
Figure 4.) Male connector.....	9
Figure 5.) Sub rack air flow.....	10
Figure 6.) Output power diagram.....	12
Figure 7.) Screenshot "PC software for CAN-Dongle"	14
Figure 8.) Module dimensions	18

1A. Safety Instructions



Warning!

Because several components of operating electrical modules are charged by dangerous voltage, the improper handling of electrical modules may cause accidents involving electrocution, injury, or material damages.

- Operation and maintenance of electrical modules must be performed by qualified skilled personnel such as electricians in accordance with EN 50110-1 or IEC 60950-1.
 - Install the device only in areas with limited access to unskilled personnel.
 - Before starting work, the device must be disconnected from mains. Make sure that the device is earthed.
 - Do not touch connector pins as they can be charged with dangerous voltage up to 30 seconds after disconnection.
 - Only spare parts approved by the manufacturer must be used.
-

1B. Notes to Electronic Waste Disposal

The correct disposal of electronic waste is the responsibility to recycle discarded electronic equipment and is necessary to achieve the chosen level to protect human health and the environment.

In the case of waste disposal of your discarded equipment we recommend to contact a professional waste management company.

2. General Information

The rectifier PSR308 rectifies sinusoidal AC input voltage to DC output voltage. The PSR308 is a hot-plug-in module with rear side connectors and is designed to be mounted in an assembly set 19" sub rack according to section 3.2. Due to its state-of-the-art circuitry design, the unit has very low losses and therefore very compact dimensions, low weight and high power density. The PSR308 can be used in all DC applications with or without battery (the module is suitable for lead acid batteries as well as for NiCd batteries). The rectifier is delivered with factory set default values for **lead acid batteries**. If the rectifier is to be used for **NiCd batteries**, the default values must be parameterized accordingly using a CAN dongle and special software.

The nominal output power per unit is 800W (600W at input voltage <173V_{AC}). Up to a maximum of 48 modules can be switched in parallel to increase the system output power or to build redundant power supply systems (n + x-principle).

2.1 Information about version 2

At PSR308 version 2 the firmware has been upgraded to get an optimized load sharing for parallel working rectifiers.

Backward compatibility: The new version should not be paralleled with units with older firmware because the current sharing will be poor which means, that a mix of old and new versions can cause bad current sharing between the units.

NOTE: It will not cause any harm to the unit if they are mixed; only the current sharing is affected.

3. Type Range/Equipment

The following table shows the available versions of the PSR308 rectifiers:

	Type description	Article code	Nominal output voltage	Maximum output current
Version 1	PSR308/24-30 WIR	101-008-947.00	24V _{DC}	30A _{DC}
	PSR308/48-16.6 WIR	101-008-957.00	48V _{DC}	16.7A _{DC}
	PSR308/60-13.5 WIR	101-008-967.00	60V _{DC}	13.5A _{DC}
	PSR308/110-7.5 WIR	101-008-977.00	108V _{DC}	7.5A _{DC}
	PSR308/220-3.7 WIR	101-008-987.00	216V _{DC}	3.7A _{DC}
Version 2	PSR308/24-30 WIR	101-008-947.02	24V _{DC}	30A _{DC}
	PSR308/48-16.6 WIR	101-008-957.02	48V _{DC}	16.7A _{DC}
	PSR308/60-13.5 WIR	101-008-967.02	60V _{DC}	13.5A _{DC}
	PSR308/110-7.5 WIR	101-008-977.02	108V _{DC}	7.5A _{DC}
	PSR308/220-3.7 WIR	101-008-987.02	216V _{DC}	3.7A _{DC}

3.1 Main data

AC input voltage:	110 up to 250V _{AC} (WIR= Wide Input Range)
AC input voltage tolerance:	-20/+10%
AC input current:	5.5A _{AC} @120V _{AC} /3.9A _{AC} @230V _{AC}
Input Frequency:	16.7 to 60 Hz (+5 %)
Nominal Output Power:	800W (600W @ Vi < 173V _{AC})

For more specific data, see section 8.

3.2 Available options and assembly equipment:

Designation	Material Code
DC Power Rack DCR PSR308-4.8 LV (assembly set 19" sub rack 4U incl. backplane for max. six rectifiers PSR308/24V up to 60V; incl. fan rack)	102-308-607.LV02
DC Power Rack DCR PSR308-4.8 HV (assembly set 19" sub rack 4U incl. backplane for max. six rectifiers PSR308/110V or 220V; incl. fan rack)	102-308-607.HV02
DC Power Rack DCR PSR308-4.0 LV (assembly set 19" sub rack 4U incl. backplane for max. five rectifiers PSR308/24V up to 60V and one DC controller UPC3S-24 up to 60V; incl. fan rack)	102-308-517.LV02
DC Power Rack DCR PSR308-4.0 HV (assembly set 19" sub rack 4U incl. backplane for max. five rectifiers PSR308/110V or 220V and one DC controller UPC3S-110V or 220V; incl. fan rack)	102-308-517.HV02
Fan rack 19" 1U incl. 6 fans, for DC voltage from 24 up to 60 V (spare part)	102-308-FR1.LV02
Fan rack 19" 1U incl. 6 fans, for DC voltage from 110 up to 220 V (spare part)	102-308-FR1.HV02
Cover plate, with handle, necessary to cover empty slots, 1/6 x 19", 3U; RAL 7035	881-MEC-BPL.03.14.B
Monitoring, controlling and signalling unit (DC controller) UPC3S 24V	301-003-497.02
Monitoring, controlling and signalling unit (DC controller) UPC3S 48/60V	301-003-597.02
Monitoring, controlling and signalling unit (DC controller) UPC3S 110V	301-003-797.02
Monitoring, controlling and signalling unit (DC controller) UPC3S 220V	301-003-897.02
CAN dongle, incl. PC software; necessary to change the internal default values of the rectifier (e.g. for NiCd application).	880-CAN-DNG.00



Figure 1.) DC Power Rack DCR PSR308-4.0 fully equipped with five rectifiers PSR308 and one DC controller UPC3S



Figure 2.) DC Power Rack DCR PSR308-4.8 fully equipped with six rectifiers PSR308

3.3 Front view/front LED panel

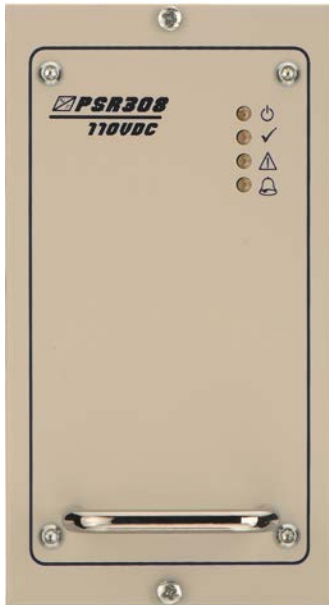


Figure 3.) Front view

The PSR308 rectifier is equipped with the following four LED indicators:

- INPUT OK
- OUTPUT OK
- Vout>
- ALARM

For more information about the LED indicators, see section 4.4

Two captive screws at the top and the bottom of the module are used for each module to secure it to the subrack (components of the module).

3.4 Rear side connection

The rear side male connections (AC input, DC output & signals) are shown in Figure 4.) and defined in the following table.

Pin assignment of the rear side connector:

Pin	Function
2b	-
5b	(-) -Output
8b	-
11b	(+) -Output
13a	CAN-CVSS
13c	(-) output voltage sense link
14a	CAN-H
14c	CAN-L
15a	-
15c	CAN-CVCC
16a	AGND
16c	-
17a	Hardware coding CODE2
17c	Hardware coding CODE1
18a	General fault (alarm) NC
18c	General fault (alarm) COM
19a	General fault (alarm) NO
19c	-
20a	-
20c	(+) output voltage sense link
22b	PE
25b	-
28b	N-Input
31b	L1-Input

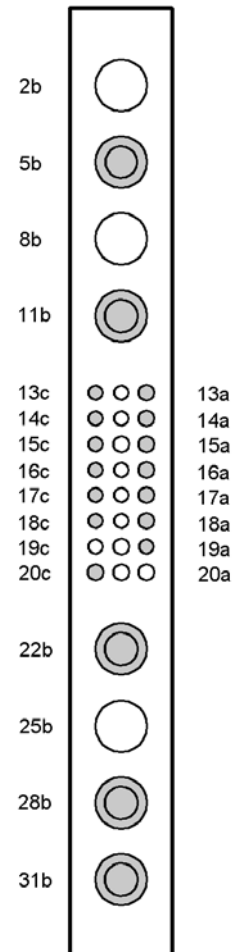


Figure 4.) Male connector (shown from the rear side of the module)

3.5 Cooling/air flow direction

It is recommended to operate the PSR308 forced cooled with fan rack according to section 3.2 (the fan rack is a component of the sub rack). The air flows in vertical direction through the module. To provide sufficient air flow, a minimum space (see item “A” in figure 5) of 2U (approx. 90 mm) between the unit and the top cover of the cabinet as well as an unobstructed supply of air from the bottom is necessary.

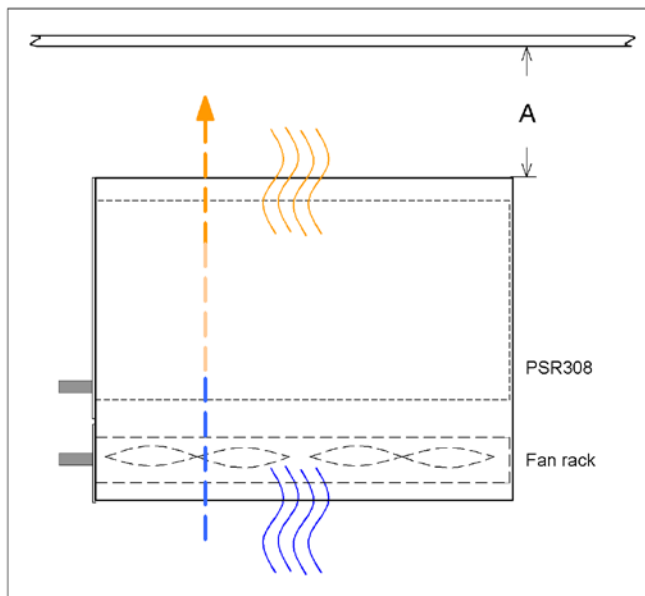


Figure 5.) Sub rack air flow

3.6 Communication interface

The PSR308 rectifier is equipped with a serial data interface in accordance with the Controller Area Network (CAN) specification. The CAN-Bus connection is integrated into the rear side connector. Via CAN-Bus, several devices in a system or parallel connection can be controlled and monitored by a central DC controller of the UPC model range.

Following parameters of a specific rectifier unit can be controlled and monitored:

- Output voltage
- Output current
- Module temperature
- Module status

Furthermore the rectifier unit receives all threshold values through the CAN-Bus from the DC controller unit.

REMARK: The CAN-Bus is not suitable for external use!

4. Handling

4.1 Storage

The modules must be stored in a dry, dust free environment with a storage temperature in accordance with the specific technical data (see section 8).

4.2 Commissioning

Note: Before commissioning the module make sure that the input voltage corresponds to the input voltage range of the unit as specified on the type plate and that the output voltage of paralleled units matches.

1. Carefully unpack the unit
2. Fill the rack beginning with the left slot.
3. Put the unit into an empty slot.
4. Carefully slide in the unit until the module connector touched the backplane connector.
5. Increase the force until the unit fits in completely. Avoid using too much force. If the unit does not fit in, begin again at step 3.
6. Secure the module using the two captive screws (M3x12) provided with the module.

Note: The PSR308 is serially equipped with an internal output side decoupling diode. This ensures hot plug-in capability for the module and enables the operator to **add** modules under operating conditions.

Note: Before a module is to be **removed**, it must be **switched off** by the external input fuse!

Caution: After switching off the module the internal capacitors are still fully charged. Do not touch connector pins as they can still be charged with dangerous voltage after disconnection.

4.3 Charge characteristic/output power diagram

The charge characteristic of the PSR308 is a power limited IV characteristic curve in accordance with DIN 41772/DIN 41773.

For modules in parallel operation mode a load distribution of approx. ±10% is attained due to a sloping output voltage line (-1% at 100% Inom).

The module is continuous short circuit proof due to constant current control.

Output power (example PSR308/48-16.7) @ input voltage >173V_{Ac}, forced cooling

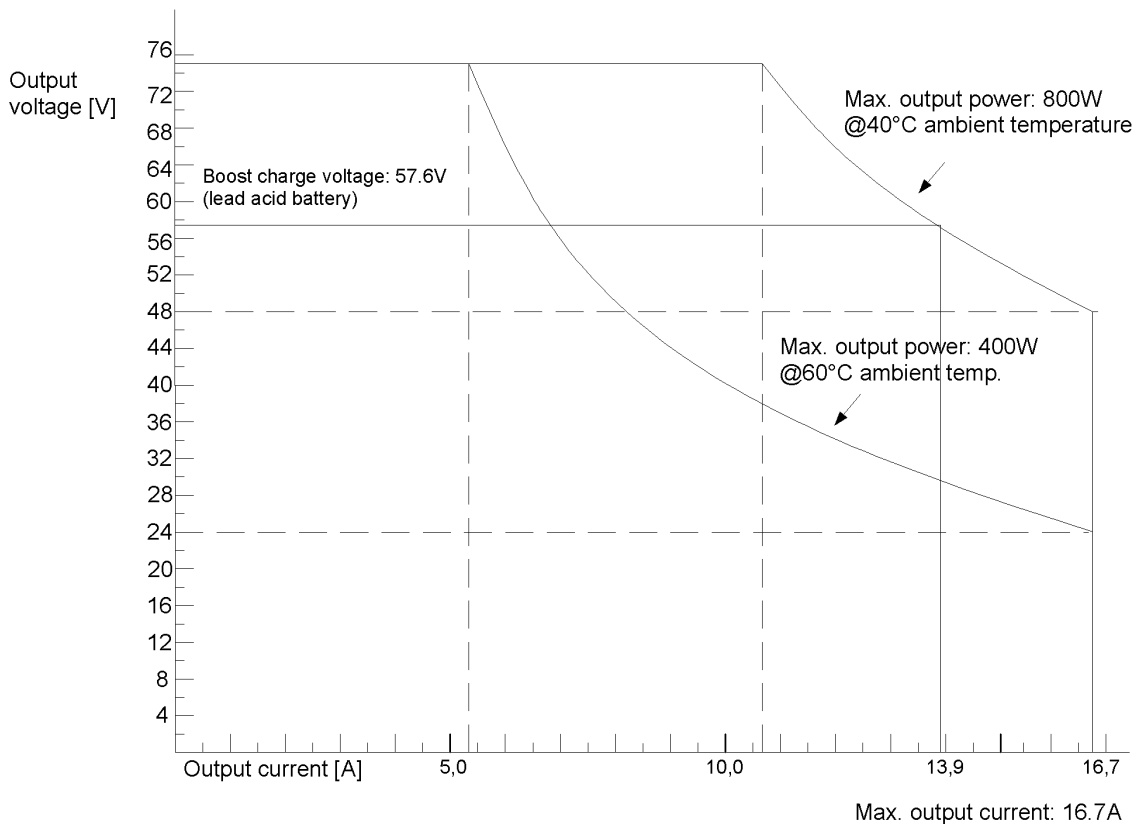


Figure 6.) Output power diagram (example PSR308/48-16.7)

Example: Calculation of the output current at different output voltage values

$$V_{nom} \times I_{nom} = P_{nom} \quad (48V \times 16.7A = \underline{800W})$$

As you can see on the basis of the above example (see figure 6.), the maximum output current (16.7A) is available at ≤ nominal output voltage (48.0V).





At output voltage values according to the float or boost charging mode, the output current is corresponding to the following formula: $I_o = P_{nom} : V_o$

$$\text{Float charge voltage for lead acid batteries (24 cells) = 54.5V; } I_o = 800W : 54.5V = \underline{14.7A}$$

$$\text{Boost charge voltage for lead acid batteries (24 cells) = 57.6V; } I_o = 800W : 57.6V = \underline{13.9A}$$

4.4 LED indications

Functions of front panel LED indicators

LED	Colour	Function
	green	INPUT OK - Mains input voltage ok (criteria: $80V_{AC} \leq V_n \leq 287V_{AC}$)
	green	OUTPUT OK - Vout ok (criteria: Vout \geq 85% of adjusted value)*
	red	Vout > (criteria: Vout \geq than adjusted over voltage threshold)*
	red	ALARM – Collective alarm**: Vin incorrect, Vout incorrect, module over temperature and short circuit

*For factory set output voltage threshold values, see section 4.6

**The module is equipped with an isolated signalling contact (normally open contact). The maximum load is 60V_{dc}/500mA. The contact is time-delayed and reacts after approx. 10 sec.

4.5 Internal monitoring

Monitored values	Criteria	Function
AC input voltage	I.) Mains input voltage less than 173V II.) Mains input voltage $80V \leq V_{in} \leq 287V$	I.) The module reduces the output power to 600W. II.) The module switches off automatically.
DC output voltage	Output voltage higher than the adjusted over voltage threshold*	The module switches off automatically (self-locking if output current is flowing). The unit must be restarted manually.
Module temperature	Cooling plate temperature $\geq 80^{\circ}C$	The device switches off automatically. It switches on automatically if the cooling plate is cooled down to $\leq 70^{\circ}C$.

*For factory set output voltage threshold values, see section 4.6

4.6 Threshold & default values

The following table shows the factory set threshold/default values internally stored in the PSR308 unit (for **lead acid batteries**):

Default values	24V version	48V version	60V version	110V version	220V version
V ₀ (V _{DC})	27.24	54.5	68.1	122.6	245.2
V> (V _{DC})	30.0	60.0	75.0	135.0	270.0
I _{const} (A _{bc})	30.0	16.7	13.5	7.5	3.7

Note: The threshold/default values can only be changed in combination with a DC controller of the UPC model range.

If a DC controller of the UPC model range is controlling the power supply unit through the CAN-Bus, the charge voltage is completely controlled by the UPC based on its configuration values and momentary charge status (for example temperature compensation, boost charge, or battery test). That means that the values sent from the UPC over CAN-Bus have top priority. During CAN-Bus communication the internally stored values of the rectifier are invalid.

But when the CAN-Bus connection is inactive for more than five seconds (e. g. due to trouble), the PSR308 automatically switches back to the internally stored default values. In this case it is ensured that the battery is charged by float charge mode.

4.7 Default value setting for NiCd batteries

If the rectifier is to be used to charge **NiCd batteries** the default/threshold values must be set according to the individual battery type using a CAN dongle and PC software (see section 3.2 “Available Options and Assembly Equipment”). A specific manual is available on request. For the adjusting range of the output voltage please see section 8 “Technical Specifications”.

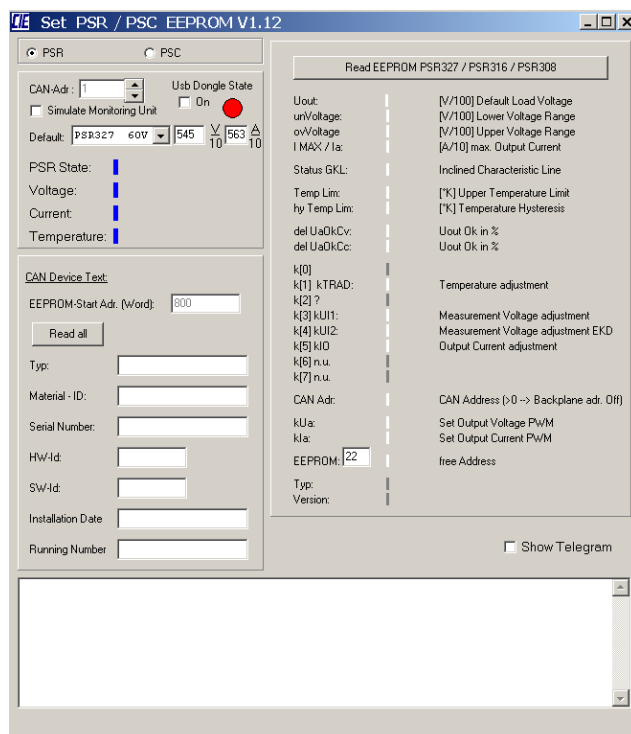


Figure 7.) Screenshot “PC software for CAN-Dongle”

5. External Functions

If the rectifier works together with a UPC3S DC controller unit, the following external functions can be used:

- Compensation of output voltage
- Temperature compensation of charge voltage
- Discharge test
- Boost charge mode

For more information about these functions, read the UPC3S user manual.

6. Maintenance

In general, the PSR308 is maintenance-free.

By way of precaution a yearly inspection with following checks is recommended:

- Mechanical inspection
- Removal of dust and dirt, especially on radiator surfaces
- Check for internal dust or humidity

Attention! Dust combined with moisture or water may influence or destroy the internal electronic circuits.

Dust inside the unit can be blown out with dry compressed air.

The interval between the checks depends on ambient conditions of the installed module.

7. Troubleshooting

Symptom	Possible reason	Corrective action
No output voltage	Is mains voltage present?	→ Check
	Mains switched to "ON" position?	→ Check
	PSR308 module plugged in securely?	→ Check
	Incorrect polarity or short circuit at the output?	→ Check
	LED V> on?	1.) Switch the module off and on. 2.) Check the settings for V> (see section 4.6).
Deviation of the output voltage	Is the unit operating in current limiting mode due to overload?	Reduce the load
	Is the output voltage setting Vout at the DC controller incorrect?	Adjust output voltage to nominal values (see section 4.6)
	If an external sensor lead is used for the output voltage, is the connection faultless?	→ Check

If the unit still does not work even though all checks have been done, contact your sales agent or the service department of ELTEK DEUTSCHLAND GmbH.

8. Technical Specifications

Type designation	PSR308/24-30 WIR	PSR308/48-16.7 WIR	PSR308/60-13.5 WIR	PSR308/110-7.5 WIR	PSR308/220-3.7 WIR
Article code (version 1)	101-008-947.00	101-008-957.00	101-008-967.00	101-008-977.00	101-008-987.00
Article code (version 2)	101-008-947.02	101-008-957.02	101-008-967.02	101-008-977.02	101-008-987.02
AC input:					
Input voltage	110 - 250V _{AC}	←	←	←	←
Input voltage tolerance	-20/+10%	←	←	←	←
Input current @ 230V _{AC}	3.9A _{AC}	3.9A _{AC}	3.9A _{AC}	3.9A _{AC}	3.9A _{AC}
Input current @ 120V _{AC}	5.5A _{AC}	5.5A _{AC}	5.5A _{AC}	5.5A _{AC}	5.5A _{AC}
Input frequency range	16.7to 60 Hz (+5 %)		←	←	←
Power factor	≥0.99 @ P _{nom} ≥50%				
Total harmonic distortion	<5%	←	←	←	←
Efficiency	≥90%	←	←	←	←
Internal input fusing	10A (5x20mm)	←	←	←	←
DC output:					
Nominal output voltage	24V _{DC}	48V _{DC}	60V _{DC}	108V _{DC}	216V _{DC}
ATTENTION: The output does not correspond to SELV!					
Maximum output current	30A _{DC}	16.7A _{DC}	13.5A _{DC}	7.5A _{DC}	3.7A _{DC}
Nominal output power	800W (600W @ input voltage <173V _{AC}); power derating at higher temperatures				
Charge characteristic	IV characteristic according to DIN41772/DIN41773; power limited				
Adjustable output voltage range	19- 36V _{DC}	38- 75V _{DC}	48- 88.5V _{DC}	87- 160V _{DC}	172- 313V _{DC}
Factory set default value of the charging voltage for lead acid batteries*	27.24V _{DC} (2.27 V/cell; lead acid battery)	54.5V _{DC} (2.27 V/cell; lead acid battery)	68.1V _{DC} (2.27 V/cell; lead acid battery)	123V _{DC} (2.27 V/cell; lead acid battery)	245V _{DC} (2.27 V/cell; lead acid battery)
Output over voltage V> (factory set, 2.5V/cell; lead acid battery*)	≥30V _{DC}	≥60V _{DC}	≥75V _{DC}	≥135V _{DC}	≥270V _{DC}
Output under voltage V< (factory set, 1.7V/cell; lead acid battery*)	20.4V _{DC}	40.8V _{DC}	51V _{DC}	91.8V _{DC}	183.6V _{DC}

*Default/threshold values to charge **NiCd batteries** are settable using a CAN dongle and PC software.

Type designation	PSR308/24-30 WIR	PSR308/48-16.7 WIR	PSR308/60-13.5 WIR	PSR308/110-7.5 WIR	PSR308/220-3.7 WIR
Voltage ripple / psophometric acc. to CCITT-A	≤20mVpp/ ≤1.2mV	≤20mVpp/ ≤1.8mV	←	≤100mVpp/ n/a	≤200mVpp/ n/a
Dynamic accuracy of the charge voltage	<3% Vnom at load changes between 10%-90%-10% Inom; transient time ≤1ms				
Short circuit protection	continuous short circuit proof; 1 x Inom				
Parallel operation	yes (max. 48 units with DC controller unit UPC3S); current sharing ≤10% Inom				
Internal decoupling at the output	yes; active low loss decoupling circuit in the negative output line				
Internal output fuse	40A	25A	20A	10A	5A
Standard Features:					
LED signalling	Operation (green), Vo OK (green), Vo > (red), Alarm (red)				
Main processor	16 Bit Fujitsu	←	←	←	←
Isolated signalling contact	"General fault"; maximum load: 60Vdc/500mA				
Communication interface	CAN-Bus (not suitable for external use), proprietary protocol				
Environmental:					
Ambient temperature	Operation: -20°C to +45°C; storage: -40°C to +85°C				
Climatic conditions	according to IEC 721-3-3 class 3K3/3Z1/3B1/3C2/3S2/3M2				
Max. installation altitude	1500m	←	←	←	←
Audible noise	30dBA	←	←	←	←
Mechanical:					
Type of construction	1/6 x 19", 3U	←	←	←	←
Cooling	Forced-cooled by fan rack 1U				
Connections	AC input, DC output and signalization: DIN41612-M-connector				
Dimensions (W/H/D)	71/128/285mm	←	←	←	←
Min. installation depth	368mm with sub rack				
Weight	approx. 2.2kg	←	←	←	←
Type of enclosure / Protection class	IP20 (front panel)/1				
Colour	Front panel: RAL 7035, neutral, black print RAL 9005				

Compliances:

CE conformity	yes	←	←	←	←
Compliance to safety standards	EN60950-1; VDE0100 T410; VDE0110; EN50178; EN60146				
Compliance to EMC standards	EN55022/24 class "B", ITE Devices; EN61000-4 T2-5				

8.1 Dimensional drawings:

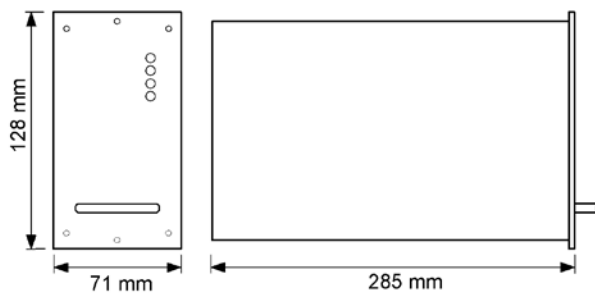


Figure 8.) Module dimensions



Supplier:

	ELTEK DEUTSCHLAND GmbH BU Industrial Schillerstraße 16 D-32052 Herford
	+ 49 (0) 5221 1708-210
FAX	+ 49 (0) 5221 1708-222
Email	Info.industrial@eltek.com
Internet	http://www.eltek.com