



T100 Pulse Amplifiers for Mechanical Flow Meter Control drawing for hazardous areas

Manual-Version

T100_D_EN_230130_E001



Index

Index

1.	HAZARDOUS AREA INSTALLATION INSTRUCTIONS	4
1.1.	Special Conditions of Use (Schedule of Limitations)	4
1.2.	Standards	5
1.3.	Approval Information	6
1.4.	Entity Parameters	6
1.5.	Installation Diagram	7

1. Hazardous Area Installation Instructions

- 1. The equipment may be used in a hazardous area with flammable gases and vapors, groups and temperature classes as specified in the equipment specification.
- 2. The equipment is certified for use in Ambient Temperature (Tamb) and Process Temperature (Tproc) as specified in the equipment specification and is not allowed to be used outside of the specified temperature range.
- 3. Installation shall be carried out in accordance with the applicable code of practice by suitably trained personnel.
- 4. The equipment is not intended to be repaired by the user. If repair is required, please contact service.
- 5. If the equipment come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection is not compromised.
 - Aggressive Substances e.g. acidic liquids or gases that may attack metals or solvents that may affect polymericmaterials.
 - Suitable Precautions e.g. regular checks as part of routine inspections or establishing from the material's datasheet that it is resistant to specific chemicals.

1. 1. Special Conditions of Use (Schedule of Limitations)

- The Modular Pulse Amplifier is supplied by three Diode Safety Barriers (one for the Power Circuit, one for Frequency Output Circuit 1 and one for Frequency Output Circuit 2). These circuits must be kept separate in the field wiring by grounded metal shields. The terminations in the cable connector (not supplied with the apparatus) must maintain 2 mm separation. The cable shall provide an insulation min. 0.25 mm thickness.
- 2. Ambient and Process Temperature Limitation (see table page 5)
- 3. In order to avoid a possible ignition hazard, the versions with an aluminum enclosure must not be subjected to impact or friction.

Hazardous Area Installation Instructions

Mounting Requirement		Ambient Temperature (Tamb)	Process Temperature (Tproc)		
	Without mounting requirement	-40°C ≤ Tamb ≤ +60°C	-40°C ≤ Tproc ≤ +60°C		
Mechanical Meter	Minimum distance of 30mm between the T100 housing and the mechanical meter.	-40°C ≤ Tamb ≤ +50°C	-40°C ≤ Tproc ≤ +80°C		
Mechanical Meter	Minimum distance of 30mm between the T100 housing and the mechanical meter. A top mounted T100 is prohibited!	-40°C ≤ Tamb ≤ +50°C	-40°C ≤ Tproc ≤ +95°C		

1. 2. Standards

CAN/CSA C22.2 No. 61010-1-12:18, CAN/CSA-C22.2 No.60079-0:19, CAN/CSA-C22.2 No. 60079-11:14

ANSI/UL-61010-1 (2018), ANSI/UL-60079-0 (2019), ANSI/UL-60079-11 (2013)

IEC/EN 60079-0:2019, IEC/EN 60079-11:2012

NOTE:

The apparatus complies with the Dielectric Strength Requirements of IEC 60079-11, Clause 6.3.13 (500 Vrms applied between the circuits and the housing).

WARNING!

Explosion Hazard – Can cause death or serious injury

Danger of explosion in hazardous areas.

The equipment shall not be opened when energized.

To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing. Substitution of components may impair Intrinsic Safety. May lead to danger for the equipment and to danger for health and life of the user.

1. 3. Approval Information


Approval		Certificate Number		
CSA-c	Ex ia IIC T4 Class I, Division 1, Groups A, B, C & D	CSA 23CA80090651X		
CSA-us	Class I, Zone 0 AEx ia IIC T4	CSA 23CA80090651X		
IECEx	Ex ia IIC T4 Ga	IECEx CSA 23.0019X		
ATEX	II 1G Ex ia IIC T4 Ga	CSACa 23ATEX1003X		
UKCA	II 1G Ex ia IIC T4 Ga	CSAE 23UKEX1069X		

1. 4. Entity Parameters

Description	Connection ¹⁾	U _i (V)	l _i (mA)	P _i (mW)	C _i (nF)	L _i (µH)
Power Supply	+24V / Loop+	28V	93	650	74.75	470
Digital Output 1	Dig. Out 1	28V	93	650	74.75	470
Digital Output 2	Dig. Out 2	28V	93	650	74.75	470

1)to common ground [GND / Loop-]

1. 5. Installation Diagram

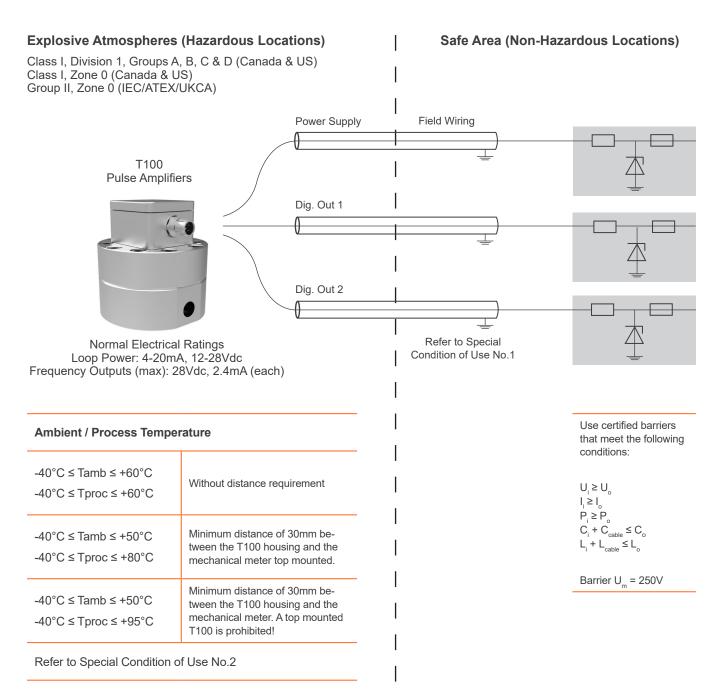



KEM Headquarters

Liebigstraße 5 85757 Karlsfeld Germany

T. +49 8131 59391-0 F. +49 8131 92604

info@kem-kueppers.com

KEM Sales

Liebigstraße 5 85757 Karlsfeld Germany

T. +49 8131 59391-100 F. +49 8131 92604

sales@kem-kueppers.com

KEM Manufacturing Center

Wettzeller Straße 22 93444 Bad Kötzting Germany

T. +49 9941 9423-0 F. +49 9941 9423-23

production@kem-kueppers.com

KEM Service & Repairs

Wettzeller Straße 22 93444 Bad Kötzting Germany

T. +49 9941 9423-37 F. +49 9941 9423-24

service@kem-kueppers.com

More distributors & partners can be found at: www.kem-kueppers.com

KEM Küppers Elektromechanik GmbH | Liebigstraße 5 | D-85757 Karlsfeld | Tel +49 8131 59391 - 0 | Fax +49 8131 92604